



# D22M Camera Manual Part 1

---

## MOBOTIX Camera Data

Enter the data of your camera here!

Camera Model: \_\_\_\_\_

Camera Name: \_\_\_\_\_

Factory IP Address:  .  .  .

Current IP Address:  .  .  .

DHCP:                      activated      deactivated

Admin User Name: \_\_\_\_\_

Admin Password: \_\_\_\_\_



D22M Basic



D22M Secure



D22M with Vandalism Set

**Note:** MOBOTIX offers inexpensive seminars that include a workshop and practical exercises: **Basic Seminar** 3 days, **Advanced Seminar** 2 days. For more information, see [www.mobotix.com](http://www.mobotix.com)

## D22M CAMERA MANUAL PART 1

<b>1</b>	<b>INTRODUCTION</b>	<b>6</b>
1.1	MOBOTIX Cost Benefits	12
1.2	MOBOTIX Technical Advantages	13
1.3	MOBOTIX D22M Concept	14
1.4	Lens Options, Hardware and Software Features	20
1.5	Important Notes	24
1.5.1	Weatherproofness	24
1.5.2	Password for the Administration Menu	24
1.5.3	Irreversibly Deactivating the Microphone	24
1.5.4	Starting the Camera Using the Factory IP Address	25
1.5.5	Resetting the Camera to Factory Defaults	25
1.5.6	Activating Event Control for Security Applications	25
1.5.7	Deactivating Text and Logo Options	25
1.5.8	Deactivating the Automatic Daily Reboot of the Camera	26
1.5.9	ISDN Compatibility Notes	26
1.5.10	Using Internet Browsers	26
1.5.11	Cleaning Instructions	26
1.5.12	Safety Notes for Operating MOBOTIX Cameras	26
1.5.13	Additional Information	27
<b>2</b>	<b>MOUNTING THE CAMERA</b>	<b>28</b>
2.1	Preparing the Installation	28
2.1.1	Mounting to a Ceiling or Wall	28
2.1.2	Additional Mounting Options for IT/Secure Models	29
2.1.3	Network Connection and Power Supply, UPS	30
2.1.4	Providing the Camera Connections, Wall Outlets	31
2.1.5	Directions for Mounting	32
2.2	D22M-IT/Secure: Delivered Parts, Components and Dimensions	34
2.2.1	Delivered Parts and Components D22M-IT/Secure	34
2.2.2	Camera Housing and Connectors D22M-IT/Secure	35
2.2.3	Dimensions of the D22M-IT/Secure	36
2.2.4	Drilling Template for the D22M-IT/Secure Mounting Ring	37
2.3	D22M-Basic: Delivered Parts, Components and Dimensions	38
2.3.1	Delivered Parts and Components D22M-Basic	38
2.3.2	Camera Housing and Connectors D22M-Basic	39
2.3.3	Dimensions of the D22M-Basic	40
2.2.4	Drilling Template for the D22M-Basic	41

<b>2.4</b>	<b>Camera Accessories: Delivered Parts, Components and Dimensions</b>	<b>42</b>
2.4.1	D22M On-Wall Set	42
2.4.2	D22M In-Ceiling Set	44
2.4.3	D22M Vandalism Set	46
2.4.4	D22M Wall Mount	48
2.4.5	D22M Corner and Pole Mount	50
<b>2.5</b>	<b>Mounting the Camera</b>	<b>52</b>
2.5.1	D22M-IT/Secure	52
2.5.2	D22M-Basic	53
2.5.3	Finishing the Mounting Process	56
2.5.4	Notes on Mounting the Camera to a Wall Without the Wall Mount	58
<b>2.6</b>	<b>Mounting the D22M to a Ceiling Using the On-Wall Set</b>	<b>60</b>
<b>2.7</b>	<b>Mounting the D22M to a Ceiling Using the In-Ceiling Set</b>	<b>62</b>
<b>2.8</b>	<b>Mounting the D22M Vandalism Set</b>	<b>64</b>
<b>2.9</b>	<b>Mounting the D22M to a Wall Using the Wall Mount</b>	<b>66</b>
<b>2.10</b>	<b>Notes</b>	<b>68</b>
2.10.1	Cleaning Instructions	68
2.10.2	Wiring, Fire Prevention, Lightning and Surge Protection	68
<b>2.11</b>	<b>Camera Accessories</b>	<b>70</b>
<b>3</b>	<b>OPERATING THE CAMERA</b>	<b>74</b>
<b>3.1</b>	<b>General Procedure</b>	<b>74</b>
3.1.1	Establishing the Power Supply to the Camera	74
3.1.2	Connecting the Camera	74
<b>3.2</b>	<b>Overview of the Configuration Settings</b>	<b>76</b>
<b>3.3</b>	<b>Connecting the Camera, Power Supply</b>	<b>78</b>
3.3.1	Notes on Cable Lengths and Power Supply	78
3.3.2	Camera Startup Sequence	79
3.3.3	Power Supply (MxPoE) Using a Switch	80
3.3.4	Power Supply (MxPoE) When Connected Directly to a Computer	80
3.3.5	Power Supply (MxPoE) Using a Network Power Rack or Network Power Box	81
3.3.6	Power Supply (PoE IEEE 802.3af) Using Power-over-Ethernet Products	81
<b>3.4</b>	<b>The First Image from the Camera</b>	<b>82</b>
3.4.1	Preparing the Ethernet Connection	82
3.4.2	The First Image in the Browser	84
3.4.3	Camera Screens in the Browser	86
3.4.4	Access Using Zeroconf/Bonjour	88
3.4.5	Browser Settings	92
3.4.6	The First Image in MxControlCenter	94
<b>3.5</b>	<b>Starting the Camera With an Automatic IP Address (DHCP)</b>	<b>100</b>
<b>3.6</b>	<b>Starting the Camera Using the Factory IP Address</b>	<b>101</b>















































































































































































































