


## First Steps

After the MxDisplay has been connected, it starts and shows the date and time (stand-by mode). Tap on the screen and select the Installation Wizard. The wizard leads you through several steps to add and configure door stations and cameras. It assists you in selecting the language, installing the network, searching for devices and changing the user name and password. The wizard also assists you in assigning door bells and setting the time server. The MxDisplay automatically switches off after one minute in order to conserve energy. You can change this behavior in **Settings > MxDisplay Settings > Screensaver**.

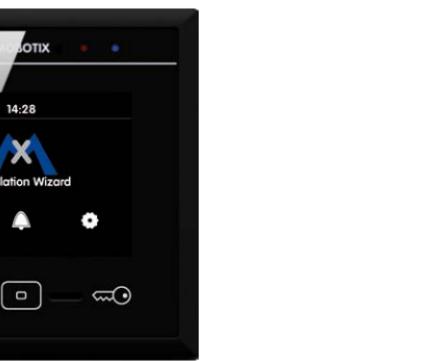

## At a Glance

In stand-by mode, you see at one glance:

1. the time and date of the selected time server
2. the temperature of the selected sensor (only available if an MX-GPS-Box has been attached)
3. how many visitors rang the door bell, when this happened and how many events occurred (tapping on the corresponding icon shows the event image to the last event)
4. the WiFi status
5. if the bell is muted (the display periodically switches between this icon and stand-by mode)



## The Main Menu


From stand-by mode, you can enter the main menu either by tapping on the screen ( 1 ) or by tapping on the **Home** button ( 2 ).

In the main menu, you activate the “Do not disturb” function ( 3 ) for all connected devices and the “Mute bell” function ( 4 ) only for this device. In addition, you see the reference image ( 5 ) of the first camera in the camera list and you can select cameras from the camera list ( 6 ) by pulling down the camera bar at the top and tapping on the desired camera. You see the different camera status ( 7 ), will be informed about events ( 8 ) and can open the system settings ( 9 ). The system settings include the basic settings as well as all settings for day-to-day operation of the MxDisplay, from bell behavior to camera configuration and access control.



## The Live View

In the live view, you can see the live image of each camera integrated in the system and control the cameras using sliders. Sliders are used to change the speaker volume, the image brightness, to select preconfigured image sections, adjust the volume of the ringing tone, start a snapshot recording, talk to visitors at the door, open the door and switch lights. To show the sliders, tap on the live image. To see another camera image, either pull down the camera strip ( 1 ) and tap on the desired camera image or tap on the camera image in the main menu.

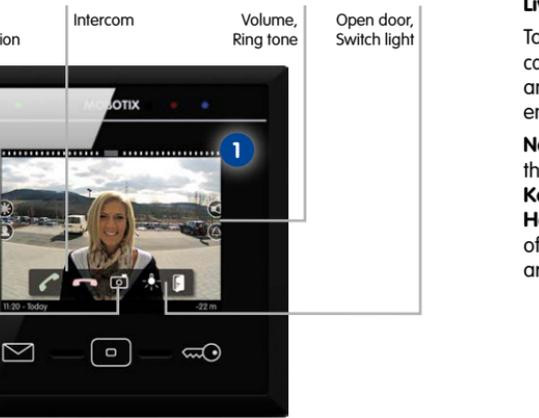

## The Event List

MxDisplay shows the number of new events in the top left corner of the screen ( 1 ). The **Event** list shows all recorded events with a preview image, the date and time of the event, the event type that triggered the recording and the camera name. To open this list, tap on the **Envelope** button ( 2 ). All mailbox messages are listed in one list and all other events are listed in another list. Tap again on the **Envelope** button ( 2 ) to switch between lists. If you want to show only specific cameras or time ranges, simply tap on the magnifying glass, select the camera(s) and the time range, then tap on **Search** ( 3 ). Use the **List/Single image** switch to change the event list display accordingly.



## Live – Door Bell is Ringing

When the door bell rings, MxDisplay shows the live image of the door camera with the corresponding controls.


### Live – Push-to-talk, Opening Doors and Switching Lights

To speak to a visitor at the door, tap and hold the green receiver button ( 1 ). To listen to the visitor, release the button. To close the audio connection, tap on the red receiver. If you want to open the door, tap on the **Door** button ( 2 ) and to switch light, tap on the **Light** button ( 3 ), if this camera can switch lights.

### Live – Selecting Other Cameras and the Detailed View


Tap on the **Key** button ( 4 ) to show a different camera. Double-tapping into the live image shows an enlarged detail view. Double-tap again to end the detail view.

**Note:** The camera list can show different cameras than the cameras you see when tapping on the **Key** button. Open the camera list, tap on the **Home** button and hold it to define the content of the camera list as well as the “favorites” that are shown when tapping on the **Key** button.

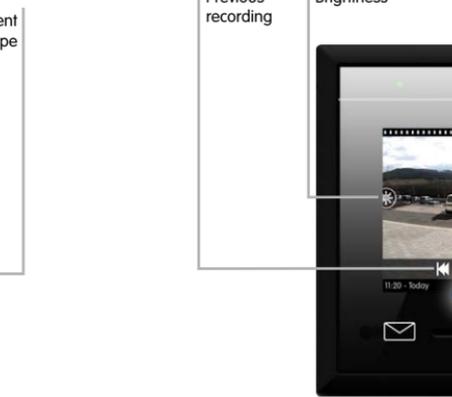

## The Player

To play back a recording, tap on an event image in the event list. The player to this event list opens. You can now play back the recordings of the events in this list. Or you can open the camera strip, then tap and hold on one of the live images. Several icons are shown. Tap on **Playback** to open the player. In the player, tap on **Playback** ( 1 ) again to play back the recording. Tap on the **Fast Forward/Rewind** buttons to move within one recording ( 2 ) and tap on the **Next** and **Previous** buttons to move between recordings ( 3 ).

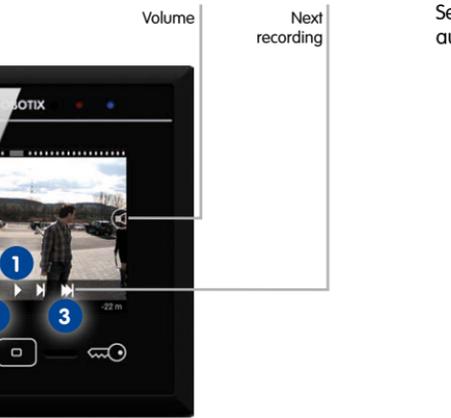

## System Settings All at One Location

Regardless of whether you want to change the bell behavior, adjust device-specific settings, configure the cameras or the system, everything is clearly located in one menu. To open this menu, tap on **Settings** ( 1 ) in the main menu.

### Bell Behavior

Configures the desired bell behavior for each bell. The bell behavior includes, for example, the ringing tone or the selection of the mailbox announcement.

### MxDisplay Settings

Sets device-specific parameters for this MxDisplay: screen saver, language and brightness, audio settings and illumination of the buttons.



## Installation

This menu item contains the **Camera List** to add and delete cameras, the **Camera Configuration** with the options to lock the auto configuration for door cameras, to set up recordings and to configure the bell buttons of the door station modules. In addition, the **Display Configuration** allows to assign door bells, to configure the network, to set up a time server and to manage settings. The **Installation Wizard** opens with the first start of the MxDisplay, however, you can open it any time later in this menu.



