

Quick Installation

MOBOTIX MOVE NVR-64

© 2021 MOBOTIX AG



HEVC Advance™



BeyondHumanVision

MOBOTIX

Table of Contents

Table of Contents	2
Before You Start	5
Support	6
Safety Notes	6
Legal Notes	7
Installation	9
Package Contents	9
Front Panel	10
Rear Panel	11
HDD Installation	13
List of Tested Hard Disks	14
Configuration	17
Power On the NVR	18
Login/Logout NVR System	18
Power Off the NVR	19
Function Tabs	19
Language and Date/Time Setup	19
Language Setup	19
Date/Time Setup	20
Network Setup	20
IP Camera Connection	20
Add Device	21
Check IP Camera Status	21
Playback/Export	22
Local Playback by Time	22
Local Playback By Event	22
Video Export By Time	23
Video Export By Event	23
Snapshot	23

Snapshot Export	24
Playback Control Icons	24
Video Export Function Icons	24
Snapshot Function Icons	24
Technical Specifications	25

Before You Start

This section contains the following information:

Support	6
Safety Notes	6
Legal Notes	7

Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates. Please visit:

www.mobotix.com > [Support](#) > [Help Desk](#)



Safety Notes

- This product must not be used in locations exposed to the dangers of explosion.
- Electrical systems and equipment may only be installed, modified and maintained by a qualified electrician or under the direction and supervision of a qualified electrician in accordance with the applicable electrical guidelines. Make sure to properly set up all electrical connections.
- Make sure to install this product in a well-ventilated spot and do not close off any vent openings.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Make sure that you install this product as outlined in this document. A faulty installation can damage the product!
- Do not replace batteries of the product. Batteries can explode if they are replaced by an incorrect type.
- This equipment is not suitable for use in locations where children are likely to be present.
- If using a Class I adapter, the power cord shall be connected to a socket-outlet with proper ground connection.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for powering the product.
- This equipment is to be connected only to PoE networks without routing to other networks.

Legal Notes

Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on www.mobotix.com under **Support > Download Center > Certificates & Declarations of Conformity**.

RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see www.mobotix.com, **Support > Download Center > Documentation > Brochures & Guides > Certificates**).

Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at www.mobotix.com by clicking on the corresponding link at the bottom of every page.

FCC Disclaimer

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

Before You Start

Legal Notes

interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Installation

Package Contents

Make sure the delivered box contains the following items:


MOBOTIX MOVE NVR-64

Power Cord

**HDD
Fixing
Screw
(24)**

**HDD
Key (8)**

**19"
Mounting
Bracket (2)**

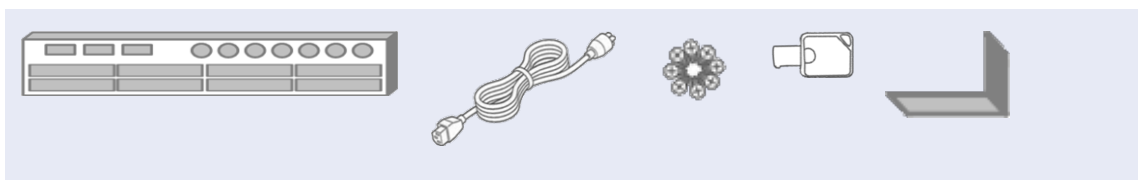


Documentation

Scan the QR code or follow the link to find the MOBOTIX MOVE NVR-64 documentation:



www.mobotix.com > [Support](#) > [Download Center](#) > [Marketing & Documentation](#) > [Manuals](#) > [Accessories](#) > MOVE NVR-64.


Front Panel

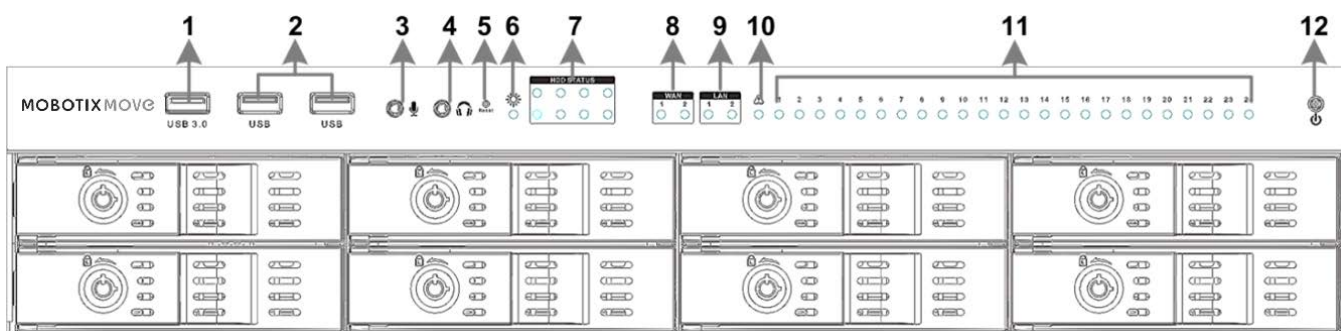

Item	Name	Description
1	USB 3.0 Port x1	USB 3.0 port supports 3.0, 2.0 or 1.0 devices. Data can be transmitted and backed up via external hard drive or USB Thumb drive.
2	USB 2.0 Port x2	USB 2.0 ports allow users to connect external USB devices, such as a USB mouse, a USB keyboard, a USB storage device, etc
3	Mic In	A 3.5 mm phone jack is provided to input/output audio.
4	Audio Out	
5	Reset Button	Press with a proper tool to restore the factory defaults of the NVR system.
6	Power LED	Lights up when the power is on.
7	HDD LED (RAID)	<ul style="list-style-type: none"> ▪ Flashing: The HDD is reading/writing data. ▪ OFF: The HDD is not running.

Item	Name	Description
8	WAN LED	<ul style="list-style-type: none"> ▪ Orange: Network speed is 1000Mbps. ▪ Green: Network speed is 10/100Mbps.
9	LAN LED	
10	P. Max	Lights up when there are 10 watts left to reach the power budget of PoE switch.
11	Camera LED	Lights up when the camera is powered up and has good network connection. <ul style="list-style-type: none"> ▪ Lights up in Green when the power source is from NVR. ▪ Lights up in Orange when the camera is powered by external power supply.
12	Power Button	Press to power on the NVR system. <ul style="list-style-type: none"> ▪ Press for 3 seconds to open the power option (power off/cancel/reboot) on screen. ▪ Press for 10 seconds to trigger forced shutdown.

Rear Panel

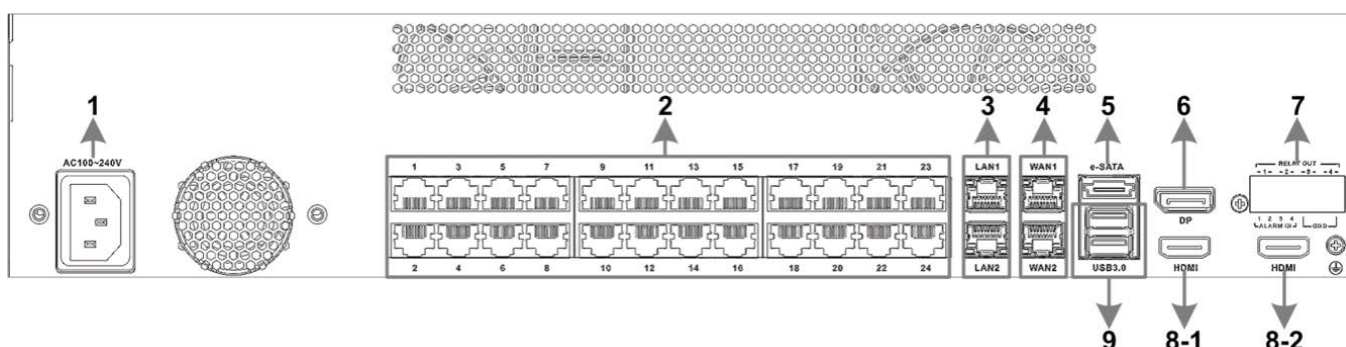

Item	Name	Description
1	Power Jack	Connect the power cord shipped with the NVR to power on the NVR system.
2	PoE Switch	Provides network connectivity and power supply for up to 24 IP cameras.
3	LAN (RJ-45) 10/100/1000 Mbps	The NVR is capable of connecting the Smart PoE Switch via LAN port. <ul style="list-style-type: none"> ▪ Green LED: Flashes when data is being transmitted via network. ▪ Orange LED: <ul style="list-style-type: none"> — Lights up in green when network speed is 10/100 Mbps. — Lights up in orange when network speed is 1000 Mbps.
4	WAN (RJ-45)	This port is for connecting to the Internet (i.e., DSL router).


Installation

Rear Panel

Item	Name	Description
	10/100/1000 Mbps	<ul style="list-style-type: none"> ▪ Green LED: Flashes when data is being transmitted via network. ▪ Orange LED: <ul style="list-style-type: none"> — Lights up in green when network speed is 10/100 Mbps. — Lights up in orange when network speed is 1000 Mbps
5	eSATA	This port is for connecting an external SATA device
6	DisplayPort (DP1)	For connecting a monitor using its DisplayPort connector.
7	Alarm I/O Connectors	For connecting other devices to the NVR (see pin definition below).
8-1, 8-2	HDMI 2, HDMI 3	For connecting monitors using their HDMI connectors.
9	2 x USB 3.0 Port	USB 3.0 ports support all 3.0/2.0/1.0 devices. Data can be transmitted and backed up via external hard drives or USB Thumb drives.

Alarm I/O Connectors

Pin Definition of Alarm I/O

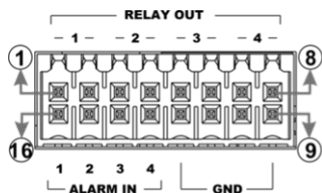

Pin	Definition	Pin	Definition	Pin	Definition	Pin	Definition
1	Relay Out 1	5	Relay Out 3	9	GND 1	13	Alarm In 4
2		6		10	GND 2	14	Alarm In 3
3	Relay Out 2	7	Relay Out 4	11	GND 3	15	Alarm In 2
4		8		12	GND 4	16	Alarm In 1


HDD Installation

CAUTION! Before you start:


- Make sure the device is powered off!
- Remove the power supply from the device!

Follow the steps below to install an HDD to the NVR:

1. Unlock the HDD mobile rack using the HDD key and pull it from the MOVE NVR-64.
2. Slide the HDD into the mobile rack.
3. Fasten the HDD with the four supplied HDD fixing screws as shown below.

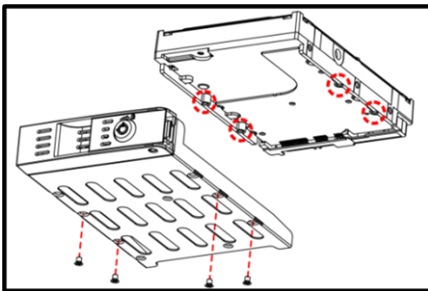

4. Insert the HDD mobile rack into the MOVE NVR-64 and lock it using the HDD key as shown below.

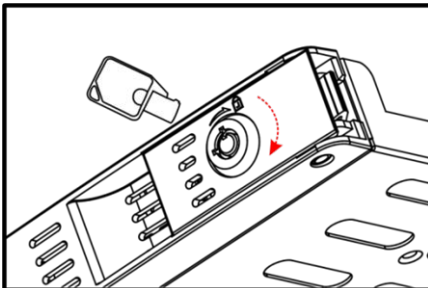

List of Tested Hard Disks

NOTE! To ensure long-term reliable operation, make sure that you are using **server-grade hard disks** from the manufacturers' series listed below.

Brand	Series	Model Number	Capacity
Seagate	Skyhawk	ST1000VX005	1 TB
		ST2000VX008	2 TB
		ST2000VX015	2 TB
		ST3000VX009	3 TB
		ST4000VX007	4 TB
		ST4000VX013	4 TB
		ST6000VX001	6 TB
		ST8000VX004	8TB
	SkyHawk AI	ST8000VE000	8 TB
		ST10000VE001	10 TB
		ST14000VE0008	14 TB
		ST16000VE000	16 TB
		ST18000VE002	18 TB
	Ironwolf	ST12000VN0008	12 TB
	Ironwolf Pro	ST16000NE000	16 TB

Brand	Series	Model Number	Capacity
Western Digital	Purple	WD10PURZ	1 TB
		WD20PURZ	2 TB
		WD30PURZ	3 TB
		WD40PURZ	4 TB
		WD60EJRX	6 TB
		WD60PURZ	6 TB
		WD62PURZ	6 TB
		WD82PURZ	8 TB
		WD84PURZ	8 TB
		WD102PURZ	10 TB
		WD121PURZ	12 TB
		WD140PURZ	14 TB
		WD180EJRX	18 TB
		WD180PURZ	18 TB
	Purple pro	WD8001PURP	8 TB
		WD141PURP	14 TB
	Gold (Ultrastar)	WD102KRYZ	10 TB
		WD121KRYZ	12 TB
		WD141KRYZ	14 TB
		WD161KRYZ	16 TB
		WD181KRYZ	18 TB
		WUH721818ALE6L4	18TB

Configuration

NOTE!

Out of the box, the firmware of the MOVE NVR-64 supports its primary function as a Network Video Recorder.

By using an alternative firmware, the MOVE NVR-64 can be used as *Failover/Backup* server. Make sure to load this firmware on the target NVR **before setting up and configuring** the device. Open the MOBOTIX Download Center www.mobotix.com > **Support > Download Center > Software Downloads** and click on **MOVE NVR** to download the firmware.

If the MOVE NVR-64 is used as Failover/Backup server, it will no longer support the direct recording functionality.

For more information on the Failover/Backup server functionality, see the section ***NVR Failover Service*** in the *MOVE NVR-64 User Guide*.

Power On the NVR

1. **Before powering on the NVR, connect the necessary devices first:**

- USB Mouse & USB Keyboard
- Internet (WAN)
- Monitor (HDMI and/or DisplayPort)
- eSATA Storage Device (Optional)
- IP Cameras via PoE ports

2. Be sure to check the type of power source before plugging the power cord into the NVR.

3. Press the Power Key on the front panel to power up the NVR system.

NOTE! If you want to use temporary USB storage media, make sure those devices are connected only **after** the NVR has been powered on.

Login/Logout NVR System

First Login

When logging in for the first time, you need to set the password for the Admin account. Make sure to store this password information in a safe place.

NOTE!

- Password length is 6 to 12 characters.
- These characters are allowed: A-Z, a-z, 0-9, !#\$%&'-.@^_~

At this point, you can also choose your preferred user interface language.

Login

Once the NVR is powered on, a popup window will appear:

- Click on OK to continue as user **Guest**.




NOTE! As guest user, you can only see live video. It is not possible to change any settings or to export data.

- Select a different user and enter the password.

Logout

To log out, click on the user name and select **LogOut**.

Power Off the NVR

1. Click Power icon  at the top-right corner of the monitor, and the Power Panel will show up.
2. Click Power Off icon , and the NVR system will start the shutdown procedure.
3. Otherwise, click Cancel icon  to abort.

NOTE! Do not remove the power source until the NVR is completely off.

Function Tabs

There are six function tabs including **Live View**, **Playback/Export**, **Add Device**, **Record**, **Setup** and **Log**.

- **Live View:** This function tab allows users to watch the live view of the connected IP devices and configure camera settings, such as PTZ control, image setup, video format, motion detection setup, etc.
- **Playback/Export:** Users can playback/export the recorded videos filtered by time/event and review/export the saved snapshots.
- **Add Device:** Users can search and add the IP devices to the NVR via network and through PoE ports.
- **Record:** The Record function tab allows users to arrange recording schedule, configure circular recording, and setup alarm behavior configuration.
- **Setup:** Under Setup function tab, users can setup the basic NVR settings, such as language, factory default, date/time setup, network setup, storage setup, user account management, etc.
- **Log:** The NVR divides the log data into four categories, User Operation Log, IP Camera Event, VA Detected Event and PoE Switch Event. Users can view, search and export the log data under this function tab.



Language and Date/Time Setup

Language Setup

1. Under **Setup** function tab, select **Language** to enter the language setting menu.
2. Select the preferred language from the language drop-down list and click **Apply** to save the setting.
3. Otherwise, click **Cancel** to cancel the setting.

Date/Time Setup

The Date/Time setting menu can be found under this path: **Setup > System > Date/Time**.

1. To set a date, select the correct date from the calendar and click **Apply** to save the setting.
2. To set up time, click on the target position in the time field (hour:minute:second AM/PM).
3. Click buttons  or  or scroll the mouse wheel up/down to adjust the time values.
4. Click **Apply** to save the setting.

Network Setup

Configure the network setup for the NVR to properly function with Ethernet connection. The Network setting menu can be found in this path: **Setup > Network**.

- **Interface:** Users can setup WAN and LAN configuration under this setting menu. Select "WAN1" to enter the WAN1 configuration menu, and select "WAN2" to enter the WAN2 configuration menu. Select "LAN1/2" to configure LAN1 and LAN2.

NOTE! LAN1 and LAN2 share the same network setting because they are combined to work as redundant network interfaces.

- **DHCP Setup:** In the WAN configuration menu, the DHCP function allows users to obtain a dynamic IP address from DHCP (Dynamic Host Configuration Protocol) server when the NVR boots up.
- For DHCP users, check **Enable DHCP** box and click **Restart**. The IP address, Subnet Mask, Gateway and DNS settings listed in IPv4 will be retrieved from network servers. DHCP is dynamic that the settings change from time to time.
- For Non-DHCP users, uncheck **Enable DHCP** box, and fill out the required values listed in IPv4 by clicking on the box next to each item and using the displayed number pad or the USB keyboard. Please obtain the information from the network service provider.
- Click **Apply** to save the setting.

NOTE! For more details regarding LAN configuration, refer to User's Manual.

IP Camera Connection

Users can connect the IP cameras to the NVR via the network connection or through the PoE ports on the rear panel.


Follow the instructions below to connect IP cameras to the NVR.

Add Device

NOTE!

- **By default, the cameras connected to the integrated PoE ports will get their IP addresses from the integrated DHCP server.** The default IP address range is 192.168.51.x, network mask is 255.255.255.0, with the first IP address set to **192.168.51.2**.
- To edit the IP address range assigned by the NVR and the IP address of a particular camera, open **Setup > PoE/IP Port Management > DHCP Server**.
- For more details regarding camera IP addresses and the DHCP setup for the PoE ports, refer to the **PoE Management Setup** section in the *User Manual*.

Adding a Camera

1. Activate the DHCP client of the camera (this is the default behavior on most cameras).
2. Attach the camera to a PoE port of the MOVE NVR-64 or to a PoE switch that is attached to a LAN port of the MOVE NVR.
3. Enter the **Add Device** function tab.
4. Select the preferred device type, e.g. MOBOTIX MOVE, Onvif, from the **Device Filter** drop-down list.
5. Click **Re-scan Device** icon  and the NVR will start to search and list the connected devices meeting the searching criteria.
6. Check **Device add to view** box in front of the desired IP device(s) to add it to the MOVE NVR.
7. To see the camera IP, open **Setup > PoE/IP Port Management > DHCP Server**.

Check IP Camera Status

In the Live View function tab, the camera title bar is above each channel grid. The IP camera connection status can be examined by the color of the title bar.


Title Bar Color	IP Camera Status
Grey	Not connected
Green	Connecting
Blue	In good connection
Red	Failed connection

Playback/Export

The NVR is capable of playing back the recorded videos by time/event and exporting the recorded videos and snapshots under Playback/Export function tab.

Follow the instructions below to operate the functions.

Local Playback by Time



1. Select any underlined date from the calendar, which indicates the recording data are available from these dates. The yellow stripe(s) in the time bar at the bottom of the function tab indicates available recorded videos for users to playback.
2. Then, click and drag the time bar below to assign a preferred time from the time bar. Move the mouse cursor to the time bar and scroll up/down the mouse wheel to adjust the time scale to select the exact desired time. The selected time will be displayed above the time bar.
3. Click Playback icon  to start playing back the recorded videos.

Local Playback By Event

1. In the Event Search Filter, check **Search By Time** box and specify the Start and End time of the desired time interval. Check **Search By Channel** box to select the desired channel. Check **Search By Type** box to select the preferred event type including Motion, Video Loss or Alarm.
2. Click **Search** and the event videos, which meet the searching criteria will be listed next to the Event Search Filter.
3. The Event List displays events by date/time, event type, and triggered camera channel in chronological order.
4. Click on any event; the NVR will automatically start playing back the selected event video.

Video Export By Time

Before starting the video export, make sure an external USB storage device is installed.



1. Click and drag the Time Interval icon  to the time bar to select the desired time interval of the recorded video.
2. Adjust the preferred time segment by dragging the Time Range Adjustment icon .
3. Click **Start Export**. An Export window will be displayed.
4. Check the desired channel(s) and the exportation data including data size will be shown.
5. Select the preferred video format.
6. Click **Confirm** in the Export window to start the video export.
7. Otherwise, click **Cancel** to abort.

Video Export By Event

Before starting the video export, make sure an external USB storage device is installed.


1. Choose the preferred event video from the Event List.
2. Click **Start Export**. An Export window will be displayed.
3. The exportation data including data size will be shown.
4. Select the preferred video format.
5. Click **Confirm** in the Export window to start the video export.
6. Otherwise, click **Cancel** to abort.

Snapshot









1. Click **Snapshot** setting menu and select the preferred snapshot from the Snapshot List to check its preview.
2. The information of the selected file, including the file created date/time, image resolution and image size, will be displayed next to the snapshot viewing window.
3. Check the preferred file(s) to be deleted and then click Delete icon  to remove the selected file(s) from the Snapshot List.
4. Otherwise, click Select All icon  to choose all the files at once.

Snapshot Export




 

 
Before starting the snapshot export, make sure an external USB storage device is installed.

1. Select the desired snapshot(s) from the Snapshot List.
2. Click Export icon , and an Export window will be displayed.
3. Click **Confirm** to start exporting the file(s); otherwise, click **Cancel** to abort.




Playback Control Icons

Icon	Description	Icon	Description	Icon	Description
	Forward Playback		Pause Playback		Backward Playback
	Playback Speed x 1/4		Playback Speed x 1/2		Playback Speed x 1
	Playback Speed x 2		Playback Speed x 4		

Video Export Function Icons

Icon	Description	Icon	Description
	Time Interval Pin		Time Range Adjustment
	Clear Tag		Start Export Video
	Data Erase/Protect		Instruction of Time Bar Adjustment

Snapshot Function Icons

Icon	Description	Icon	Description
	Delete Snapshot		Export Snapshot
	Select All Snapshots		

Technical Specifications

Type	Mx-S-NVR1A-64-POE
System	
Operating System	Embedded Linux
CPU	Intel Skylake i5-6500
RAM	2 x 4 GB, DDR4
Boot Drive	32 GB 2.5" SSD for Linux
Graphics	Intel HD Graphics 530
DISPLAY PORT Output	Up to 4096x2304 @60Hz
HDMI Output	Up to 4096x2160 @24Hz or 2560x1600 @60Hz (HDMI 1.4)
Audio Input	3.5 mm TRS phone jack
Audio Output	3.5 mm TRS phone jack
USB Ports	USB 2.0 x 2 ; USB 3.0 x 3 (1 front, 2 rear)
Recording/Playback	
IPCAM Throughput	Average: 480 Mbps Peak: 540 Mbps
GPU Hardware Decoding	64 CH real-time display, up to 1920 fps@D1 decoding
Compression Format	H.264/H.265
Storage & I/O	
Build-in SATA Interface	1 x 2.5" SATA 8 x 3.5" SATA (Hot-swappable)
Build-in RAID	RAID 0/1/5/10
eSATA	1 x eSATA
Digital Input	Input level 24V (H: $V_{in} \geq 2.4V$, L: $V_{in} \leq 1.6V$) 4 x Terminal Block
Digital Output	24V, 1A, Relay NC 4 x Terminal Block
Network	
WAN Uplink	2 x RJ-45, 10/100/1000 Mbps

Technical Specifications

Playback/Export

Type

Mx-S-NVR1A-64-POE

LAN Uplink 2 x RJ-45, 10/100/1000 Mbps

LAN ports with PoE 24 x RJ-45, 10/100Mbps

PoE Level 24 x IEEE 802.3 af/at

PoE & switch management Linux SDK

Supported protocols TCP/IP, UDP/IP, RTP (UDP), RTP (TCP), RTSP, NTP, HTTP, DHCP (Server, Client), PPPoE, SMTP, ICMP, ARP, DNS, DDNS, HTTPS, ONVIF

Maximum Remote Users **Playback:** 4
Live unicast & multicast: Unlimited

IP IPv4/IPv6

Security User access log, 802.1x authentication, Encryption

Functions/Performance

Language support English, French, German, Russian, Turkish, Arabic, Traditional Chinese, Japanese

Browser Support Internet Explorer, Safari, Chrome, Firefox

Viewer Software Webviewer

Camera Setup **Register:** Auto, Manual
Setup Items: IP address, PTZ control, Image setup, Video Format, Motion Detection, Audio detection, Schedule, Video Analytics, Fisheye, Mask, Text Overlay, Alarm, IR exposure, Reboot, Default

PTZ Control Local, Via GUI, Webviewer

App Support **Operating Systems:** iOS/Android
Protocols: TP, RTSP, HTTP, WebAPI
Control: Control Live (6 channel)/Playback (6 channel)

Redundancy **Failover:** N + M (include fallback) supported with alternative firmware

System Control Mouse, Web

System Log max 20.000 entries

Type	Mx-S-NVR1A-64-POE
Recording	<p>Resolution: CIF ~ 12 MP</p> <p>Compression: H.264/H.265</p> <p>Mode: Schedule (Continuous/Event), Event (Pre/Post)</p> <p>Event Trigger: Camera event (MD, Video analytics, Alarm In, Network Failure detection, Periodical Event, Manual Trigger)</p> <p>Event Action: E-mail, PTZ preset, Event full screen, Push notification, Alarm Out</p>
Search & Playback	<p>Playback Bandwidth: 64Mbps (64 channels simultaneously)</p> <p>Performance: Local 1, Remote 4</p> <p>Mode: Date & Time (Calendar)/Event log list</p> <p>Simultaneous Playback: Maximum 64 channels (Local monitor, Remote, CMS)</p> <p>Resolution: CIF ~ 12 MP</p> <p>Fish-eye Dewarping: Yes</p> <p>Playback Control: Fast/Slow Forward/Backward</p>
Backup	<p>Export format: MP4,AVI, MKV, MOV, Raw</p> <p>Function: Multi-channel (Up to 64 channel) play, customized OSD display</p>
Video	<p>Channels: total up to 64 (Network/IP), max. 24 via integrated PoE ports</p> <p>Local Display: 1x HDMI, 1x display port dual monitor</p> <p>Multi-Screen Display: [Local monitor] 1/64, [Web] 1/64</p> <p>Performance (Local Display): 12 MP (30fps), 8.3 MP (120fps), 1080p (480fps), 720P (960fps), D1 (1560fps)</p>
Audio	<p>Input: 64 channels via camera network stream</p> <p>Audio Communication: 2-way with camera</p>
Indicator/Display	
Front Indicator	LED Status Indicator (38EA): 8 x HDD action, 1 x Power, 2 x WAN status, 2 x LAN status, 24 x PoE power status, 1 x PoE power shortage
Display port/HDMI	<p>Both monitors: Live/Playback/Setup</p> <p>Extended Mode: main/sub monitor control</p>
General	
Unit Dimensions (mm)	428 x 435 x 88
Unit Weight (kg)	7.5

Technical Specifications

Playback/Export

Type	Mx-S-NVR1A-64-POE
Package Dimensions (mm)	575 x 575 x 175
Package Weight (kg)	9.5
19" Rack Mounting	19" rack mounting kit included
Operating Temperature	0 to 40 °C/32 to 104 °F
Operating Relative Humidity	10 to 90 % non-condensing
System Power Supply	AC 100~240V, ATX 520W (53V/360W for PoE; 12V/160W for HDD/System)
PoE Budget per Port	max. 30 W
Total PoE Budget	360 W
Color/Material	Black/Metal

MOBOTIX

BeyondHumanVision

[EN_10/21](#)

MOBOTIX AG • Kaiserstrasse • D-67722 Langmeil • Tel.: +49 6302 9816-103 • sales@mobotix.com • www.mobotix.com

MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX AG 2021