

Guideline

MOBOTIX Vaxtor UIC - Railway Code Recognition App

© 2022 MOBOTIX AG



Table of Contents

Table of Contents	2
Before You Start	3
Support	4
Legal Notes	4
About Vaxtor UIC - Railway Code Recognition App	6
Smart Data Interface to MxManagementCenter	6
Technical Specifications	8
Licensing Certified Apps	11
License Activation of Certified Apps in MxManagementCenter	11
Managing Licenses in MxManagementCenter	15
Camera, image and scene requirements	18
Recommendations on mounting and adjusting	20
Troubleshooting	21
Activation of the Certified App Interface	23
Configuration of Vaxtor UIC - Railway Code Recognition App	25
Basic Settings	25
Recognition Areas	26
List Management	27
Video	29
OCR	29
Reporting	30
Template Fields	31
Advanced	32
Storing the Configuration	33
MxMessageSystem	34
What is MxMessageSystem?	34
Facts about MxMessages	34
MxMessageSystem: Processing the automatically generated app event	35
Checking automatically generated app events	35
Action handling - Configuration of an action group	40
Action settings - Configuration of the camera recording	44
Advanced Configuration: Processing the meta data transmitted by apps	46
Meta data transferred within the MxMessageSystem	46
Creating a Custom Message Event	48
Examples for message names and filter values of the Vaxtor UIC - Railway Code Recognition App	50

Before You Start

This section contains the following information:

Support	4
Legal Notes	4

Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates. Please visit:

www.mobotix.com > **Support** > **Help Desk**



Legal Notes

Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on www.mobotix.com under **Support** > **Download Center** > **Certificates & Declarations of Conformity**.

RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see www.mobotix.com, **Support** > **Download Center** > **Documentation** > **Brochures & Guides** > **Certificates**).

Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at www.mobotix.com by clicking on the corresponding link at the bottom of every page.

About Vaxtor UIC - Railway Code Recognition App

Recognition of International Union of Railways Wagon and Coach Numbers (UIC)

The certified Vaxtor UIC - Railway Code Recognition App recognizes, based on deep learning processes UIC codes (International Union of Railways Wagon and coach numbers) which adhere to the International standard. The OCR engine takes advantage of many current integrations and publishing capabilities that have been developed over many years.

- Recognition of the UIC Codes
- Real time results for UIC Code, Country Code, Vehicle Type, Control Digit, Direction of travel
- Stop / Go and slow speed (<10 km/h) applications (depending on installation and module selection)
- MOBOTIX events via MxMessageSystem
- Consolidated event search via MxManagementCenter Smart Data Interface and / or MOBOTIX HUB
- meta data transfer through generic transmission protocols and / or pre-defined 3rd party interfaces
- Two lists for individual actions (e.g. access granted/denied, alarm, etc.)
- Free flow and signaled mode

CAUTION! Thermal sensors are not supported by this app.

Smart Data Interface to MxManagementCenter

This app has a Smart Data interface to MxManagementCenter.

With the MOBOTIX Smart Data System, transaction data can be linked to the video recordings made at the time of the transactions. Smart Data source can be e.g. MOBOTIX Certified Apps (no license required) or general Smart Data sources (license required) like POS systems or license plate recognition systems.

The Smart Data System in MxManagementCenter enables you to quickly find and review any suspicious activities. The Smart Data Bar and the Smart Data View are available for searching and analyzing transactions. The Smart Data Bar provides a direct overview of the most recent transactions (from the last 24 hours) and for this reason it is convenient to use it for reviews and searches.

NOTE! For information on how to use the Smart Data System, see the corresponding online help of the camera software and MxManagementCenter.

Playback - Eisdiele

Search

Eiscafé

Tisch #8 geschloss...
Bon #465
Bediener #2 / 30
2x Cola 0,5 8,00 €
Limonade 0,5 4,00 €
Tafelwasser ... 3,00 €
Spezi 0,5 4,00 €
Bar 19,00 €
Gesamtbetrag 19,00 €
Rechnung #392
Bediener #2 / 30
Tisch #39 geoeffnet
2x Zwiebels... 11,00 €
2x Tomatens... 11,00 €
Cola 0,5 4,00 €
Limonade 0,5 4,00 €
Tafelwasser ... 3,00 €
Tisch #39 geschlos...
Bon #467
Bediener #2 / 30
Tisch #39 geoeffnet
Bar 50,00 €
Rueckgeld 17,00 €
Gesamt... Heute 13:28:55 €
Rechnung #393
Bediener #2
Tisch #8 geoeffnet
Bar 13,60 €
Gesamtbetrag 13,60 €
Rechnung #394
Bediener #2

Heute 14:01:23 Eisdiele 6:40 min

Do. 05.10.17 13:28:54

5.10.17 13:28:54

Fig. 1: : Smart Data Bar in MxManagementCenter (Example: POS System)

Technical Specifications

Product Information

Product Name	Vaxtor UIC - Railway Code Recognition App
Order Code	Mx-APP-VX-UIC
Supported MOBOTIX Cameras	Mx-M73A, Mx-S74A
Minimum Camera Firmware	v7.1.4.x
MxManagementCenter compatibility	<ul style="list-style-type: none">min. MxMC v2.4.3Configuration: Advanced Config license requiredEvent Search: Smart Data Interface license included
MOBOTIX HUB compatibility.	<ul style="list-style-type: none">min. MOBOTIX HUB version: 2020 R3min. MOBOTIX HUB license level (Analytics Events): L2min. MOBOTIX HUB license level for Event Search Plug-In : L4

Product Features

App Features	<ul style="list-style-type: none">Recognition of cargo container codes according to ISO 6346Real time results:<ul style="list-style-type: none">Container CodeOwner and corresponding originContainer TypeContainer DimensionsControl DigitControl Digit ValidationRecognition log (Smart Data / Event Search via MxManagementCenter)MOBOTIX events via MxMessageSystemTwo lists for individual actions (e.g. access granted/denied, alarm, etc.)Free flow and Signaled mode
Maximum number of recognition areas	1
Maximum number of enrolled UIC codes	5000 per list

Meta Data / Statistic formats	JSON, XML
Trial License	30-day trial license pre-installed
MxMessageSystem supported	Yes
Integration Interfaces	<ul style="list-style-type: none"> ■ MxMC Smart Data ■ IP Notification ■ Milestone X-Protect (Analytics Events, Transmission Plug-In) ■ Vaxtor Helix ■ Genetec Security Center (Custom Events, Bookmarks) ■ generic 3rd party integration through FTP and / or XML / JSON via HTTP(S) ■ compare supported camera's interfaces
MOBOTIX Events	Yes
ONVIF Events	Yes (Generic Message event)

Supported Railway Codes

Supported Railway Codes	Wagon numbers / codes according to the specification of the International Union of Railways
-------------------------	---

Scene Requirements

Character Height	20px - 50px
Maximum Vertical Angle	30°
Maximum Horizontal Angle	< 25°
Maximum Tilt Angle	< 25°

Technical App Specifications

Synchronous / Asynchronous App	asynchronous
Simultaneous execution of other apps	No
Accuracy	min. 99% (considering scene requirements)

Technical Specifications

Smart Data Interface to MxManagementCenter

Processed frame rate	typ. 2 fps
Detection time	typ. 900 ms per wagon

Licensing Certified Apps

The following licenses are available for the Vaxtor UIC - Railway Code Recognition App:

- **30-day test license** pre-installed
- **permanent commercial license**

The usage period begins with activation of the app interface (see [Activation of the Certified App Interface, p. 23](#))

NOTE! For buying or renewing a license, contact your MOBOTIX Partner.

NOTE! Apps are usually pre-installed with the firmware. In rare cases, apps must be downloaded from the website and installed. In this case see www.mobotix.com > **Support** > **Download Center** > **Marketing & Documentation**, download and install the app.

License Activation of Certified Apps in MxManagementCenter

After a test period commercial licenses must be activated for use with a valid license key.

Online-Activation

After receiving the activation IDs, activate them in MxMC as follows:

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

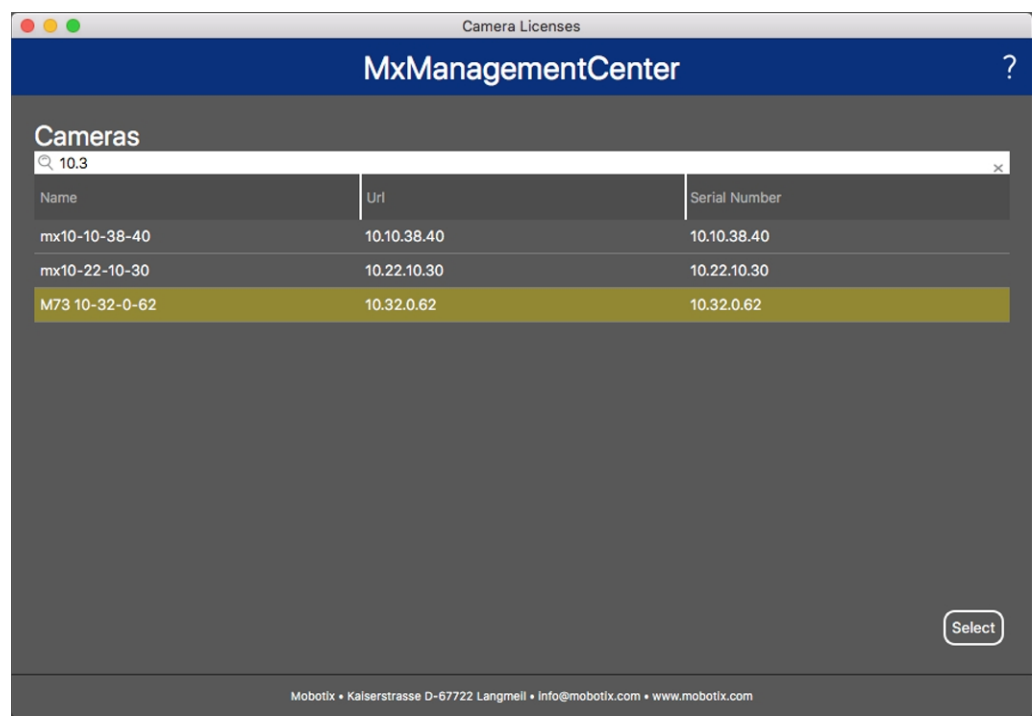


Fig. 2: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

1. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

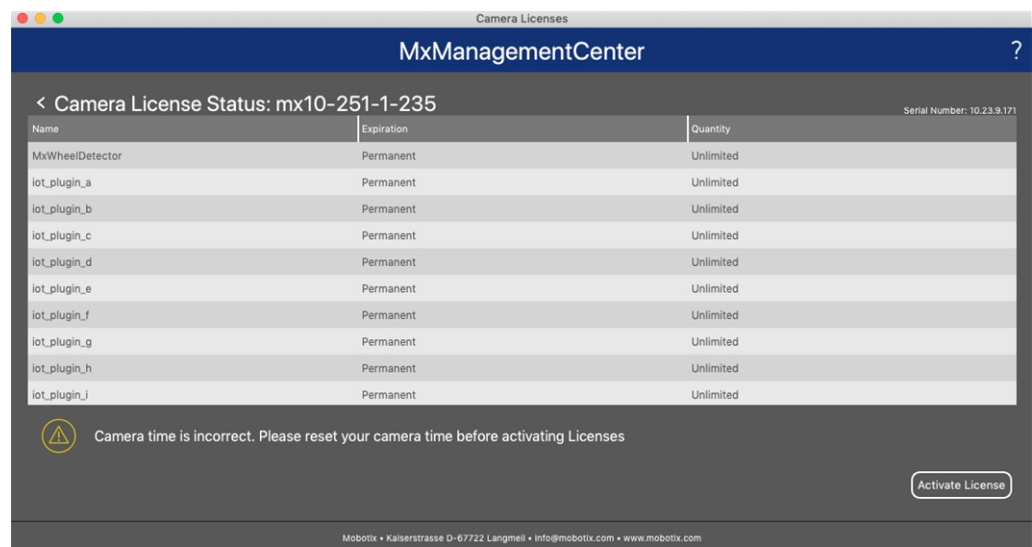



Fig. 3: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

2. Enter a valid Activation ID and specify the number of licenses to install on this computer.
3. If you want to license another product, click on . In the new row, enter the appropriate Activation ID and the number of licenses you want.

4. To remove a line click .
5. When you have entered all Activation IDs, click **Activate License Online**. During activation, **MxMC** connects to the license server. This requires an Internet connection.

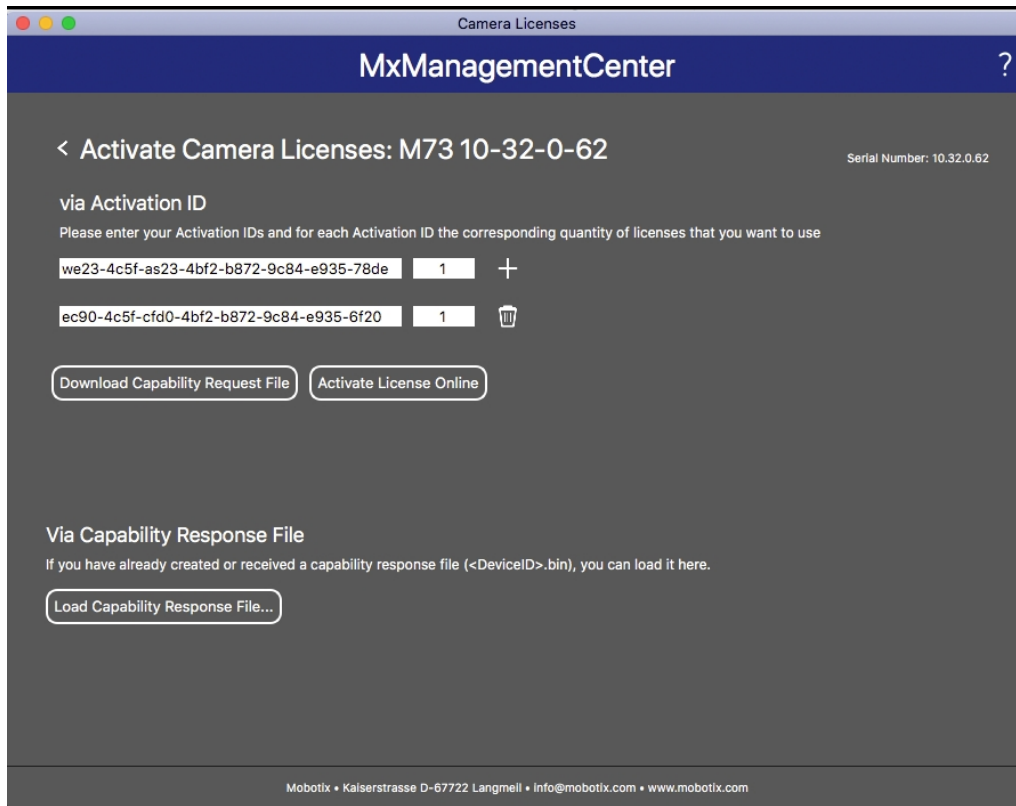


Fig. 4: Adding licenses

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Failed activation (missing internet connection)

If the license server cannot be reached, e.g. due to a missing internet connection, apps can also be activated offline. (see [Offline Activation](#), p. 13).

Offline Activation

For offline activation, the partner/installer from whom you purchased the licenses can generate a capability response (.bin file) on the license server to activate their licenses.

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

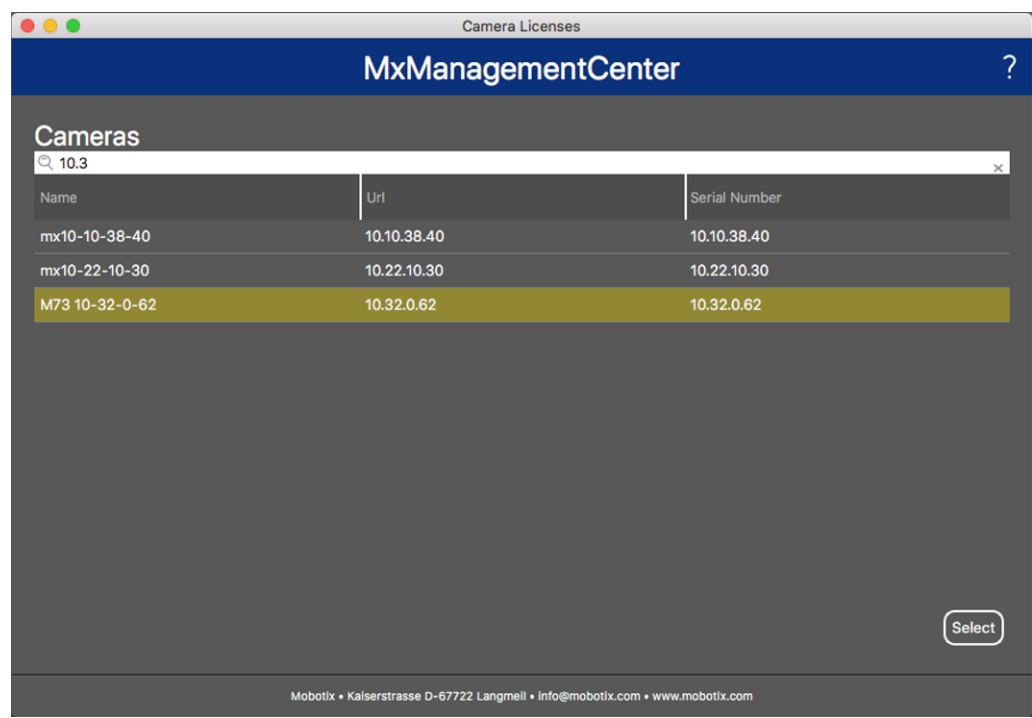


Fig. 5: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

3. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

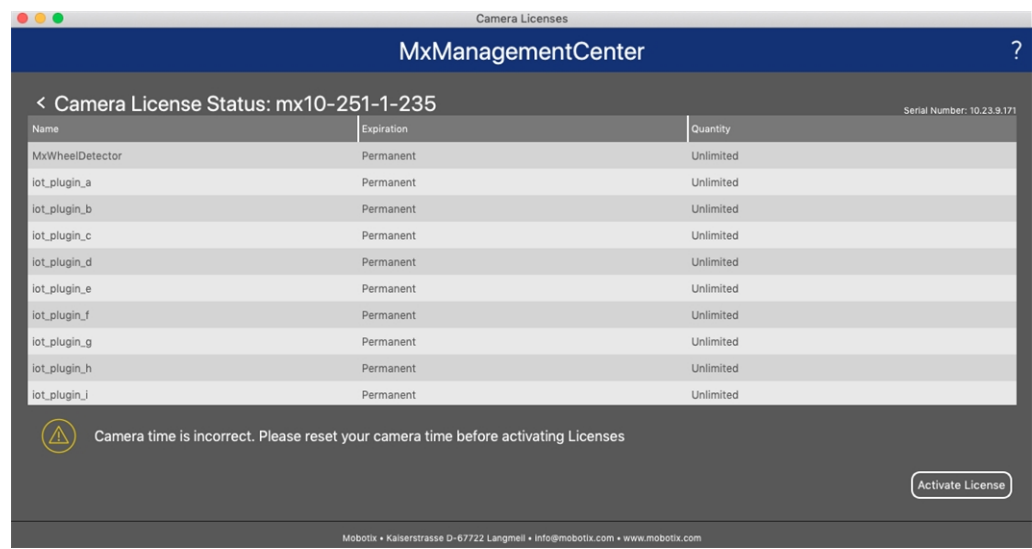




Fig. 6: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

4. Enter a valid Activation ID and specify the number of licenses to install on this computer.
5. If you want to license another product, click on . In the new row, enter the appropriate **Activation ID** and the number of licenses you want.
6. If necessary, click  to remove a line.
7. When you have entered all Activation IDs, click **Download Capability Request File (.lic)** and send it to your partner/installer.

NOTE! This file allows the partner / installer from whom you purchased the licenses to generate a capability response file (.bin) on the license server.

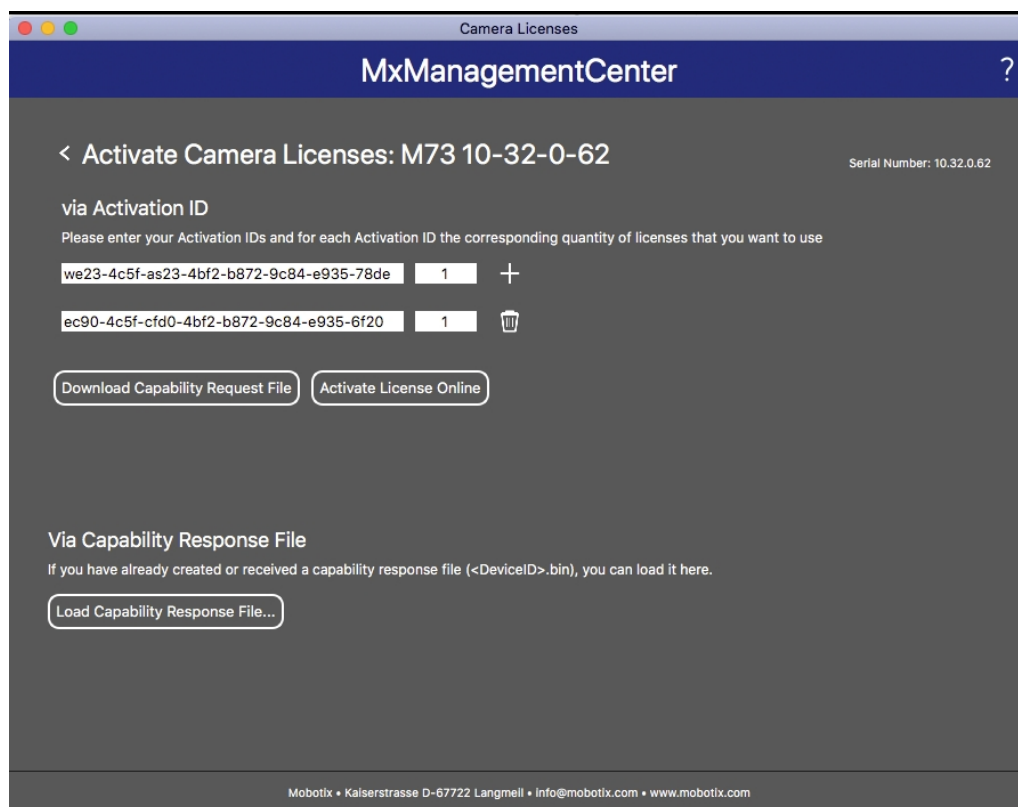


Fig. 7: Adding licenses

8. Click Load Capability Response File and follow the instructions.

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Managing Licenses in MxManagementCenter

In MxManagementCenter you can comfortably manage all licenses that have been activated for a camera.

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

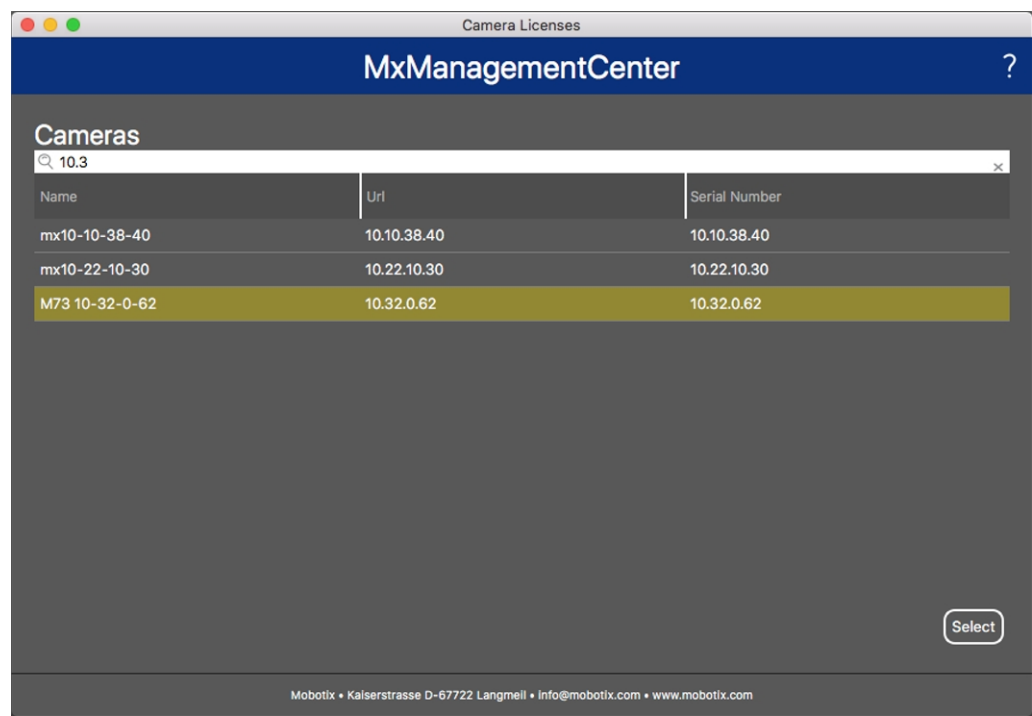


Fig. 8: Overview of Camera App Licenses in MxManagementCenter

An overview of the licenses installed on the camera may be displayed.



Fig. 9: Overview of the licenses installed on the camera

NOTE!

If necessary, correct the time set on the camera.

Column	Explanation
Name	Name of the licensed app
Expiration	the time limit of the license
Quantity	Number of licenses purchased for a product.
Serial Number	Unique identification determined by MxMC for the device used. If problems occur during licensing, please have the device ID ready.

Synchronize licenses with server

When the program starts, there is no automatic comparison of the licenses between the computer and the license server. Therefore, click **Update** to reload the licenses from the server.

Update licenses

To update temporary licenses, click **Activate Licenses**. The dialog for updating/activating licenses opens.

NOTE!

You need administrator rights to synchronize and update licenses.

Camera, image and scene requirements

The camera should be setup so that the combination of the distance, the lens's focal length and the camera's resolution provide an image that can be accurately analyzed by the OCR engine. Therefore the following pre-requisites must be fulfilled for the scene:

Quality of the UIC code to be captured in the image

- The UIC code must be high-contrast and clearly legible, i.e. as clean as possible, without dents or holes and well illuminated.
- The code must comply with the UIC standard
- Character height
 - To reliably recognize the code in the best possible quality, the height of the characters in the image must be between 20 px and 50 px.

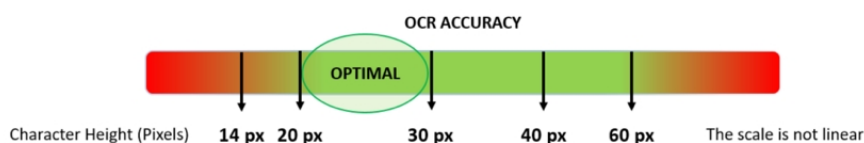


Fig. 10: Minimum character height

- Maximum rotation angle:
 - Vertical: $< 25^\circ$
 - Slope: $< 15^\circ$
 - Horizontal: $< 25^\circ$

Frame rate

The selection of the correct frame rate influences the recognition quality significantly.

Recommended frame rate: 10 fps

Shutter Speed (Exposure time)

Shutter speed, also known as the “exposure time”, is the length of time a camera shutter is open for in order to expose light onto the camera sensor. The shutter speed is measured in seconds, or fractions of a second. The bigger the denominator, the faster the speed. For example, $1/250^{\text{th}}$ means one two-hundred-and-fiftieth of a second or four milliseconds.

(1 second = 1000 milliseconds)

Examples for recommended exposure times

Wagon speed	minimum exposure time (sec)
Stationary	1/125 th (8 milliseconds)
Very slow	1/500 th (2 milliseconds)
Slow	1/1000 th (1 milliseconds)

NOTE! UIC codes are always read perpendicular to the camera and across the field of view, so that higher shutter speeds are required than, for example, for vehicles moving towards the camera. Fast-moving wagons can therefore not be read.

Resolution

The resolution of the camera determines the amount of detail that can be captured. The smaller the object detail, the higher the resolution that is required. There are several factors that determine the detail captured:

- The resolution (pixel size) of the camera sensor. This sensor (normally CMOS) where the light eventually falls and a typical IP camera has a sensor resolution of 2 or 4 Megapixels.
- The resolution of the camera's electronics. Most CCTV cameras can support a minimum of 1920 x 1080 – but may be set to a lower resolution if not needed.
- The quality and focal length of the lens. The quality of the optics can play a part in challenging circumstances. The focal length (zoom factor) determines the field of view that can be seen.
- The quality of the images can be influenced by factors such as the type of lighting used.

Recommended resolution: max. 1920 x 1080 px

Focal length

The focal length of the lens determines how “zoomed in” the image is. It is usually expressed in millimeters (e.g. 6 mm, 25 mm, or 50 mm).

The focal length defines the angle of view (how much of the scene will be captured) and the magnification (how large individual elements will be). The longer the focal length, the narrower the angle of view and the higher the magnification. The shorter the focal length, the wider the angle of view and the lower the magnification.

In the case of zoom lenses, both the minimum and maximum focal lengths are stated, for example 10–40 mm.

Examples for recommended focal length

Scene (Street type)	Distance between camera and container code (m)	recommended lens
Barrier or Gate	2 - 6 m	2 - 8 mm or similar
Access road	15 - 30 m	15 - 50 mm or similar

NOTE! The lens should be **IR corrected** to avoid out of focus images. IR Corrected lenses should be used on both day/night and monochrome cameras in all lighting conditions in order to achieve a crisp sharp image.

Illumination

UIC Codes are normally painted on to the wagons and are not reflective. Therefore sufficient ambient lighting must be used to adequately illuminate the text so that it can be read at a reasonably fast shutter speed without the camera adding too much gain to brighten the image. (a maximum gain of about 12 is advised).

NOTE! Adding gain effectively amplifies the video signal, including any noise which can result in a very grainy image which is prone to OCR errors.

Recommendations on mounting and adjusting

- Depth of focus is a very important parameter. If you are using a camera with a CS-mount lens, use a fixed lens. Fixed lens are better for container code recognition due to greater depth of focus. Megapixel lens is also strongly recommended.
- Respect changing light conditions (e. g. due to sunrises and sunset) when choosing the place of mounting. Direct sunlight beams can distort a picture. If the code is facing a direct sunlight consider using a lens with auto iris mode.
- If mounting a camera on a roadside or trackside pole check how the pole reacts to heavy cars or a convoy of cars. Some poles have tangible tremor, this could make container code recognition almost impossible.
- It is recommended to turn down WDR and BLC. In most cases, they will make the picture more pretty, but at the cost of smudging details like an edges of letters in the container code. For the same reason keep digital noise reduction as low as possible.
- On certain rare conditions there may be a cases of false detections e. g. because of recognizing image parts that structurally or semantically look similar to a container code(e. g. fences or ads). To minimize this:
 - Adjust the region of interest accordingly. It may be a good idea to make it smaller, or change it's shape, omitting the parts, which potentially may be false detected.
 - There may be cases, when the best performance will occur by changing angle of lens or moving the camera. In some cases, shooting a front container code is better.

Troubleshooting

Correct OCR-based reading of codes printed on rail wagons is difficult or impossible if the captured images have any of the following characteristics:

- Over- or under exposed
- Blurred or distorted
- Unevenly lit
- Acute camera angle
- Low contrast
- Damaged or badly painted text
- Bad weather conditions like fog, snow or heavy rain



Fig. 11: Low contrast text is almost impossible to read correctly



Acute angle increases the risks of OCR errors

Activation of the Certified App Interface

CAUTION! The Vaxtor UIC - Railway Code Recognition App does not consider obscure areas defined for the live image. Therefore there is no pixelation in obscure areas while configuring the app and during image analysis by the app.

NOTE! The user must have access to the setup menu ([http\(s\)://<Camera IP address>/control](http(s)://<Camera IP address>/control)). Therefore check the user rights of the camera.

Activation of Certified Apps and events

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<Camera IP address>/control/app_config](http(s)://<Camera IP address>/control/app_config)).

MOBOTIX

S74 mx10-32-24-156 Certified App Settings

General Settings

Arming ☒ Active Activate app service.

Note: It is not recommended to activate more than 2 apps.

Resource monitor ☐ Active Display camera actual load in live image.

Note: High performance impact. Use for testing purposes only.

Custom font ☐ Active Use custom font for the text displays in live image. To select or upload a custom font please go to [Manage Font File](#).

App Settings

App	Activation	License	Explanation	Version	Delete	Delete application
AIBiodeep	<input type="checkbox"/> Trial	Trial available.	Please update the license.	3.0.6	<input type="button" value="Data"/>	<input type="button" value="Delete application"/>
Vaxtor Containers	<input type="checkbox"/> Trial	Trial available.	Please update the license.	1.3.1	<input type="button" value="Data"/>	<input type="button" value="Delete application"/>
<u>Vaxtor UIC Settings</u>	<input checked="" type="checkbox"/> 2	2021-09-11 (30 day trial).	Vaxtor UIC	1.3.1	<input type="button" value="Data (4.0K)"/>	<input type="button" value="Delete application"/>

Fig. 12: Activation of Certified Apps

2. Under **General Settings** activate the **Arming** ① of the app service.
3. Under **App Settings** check the **Active** option ② and click **Set** ③ .
4. Click on the name of the App to be configured to open the Apps user interface.
5. For configuration of the App see [Configuration of Vaxtor UIC - Railway Code Recognition App](#), p. 25.

Configuration of Vaxtor UIC - Railway Code Recognition App

NOTE! For best performance and results in UIC code processing make sure to have scene set up to meet the [Camera, image and scene requirements, p. 18](#).

NOTE! The user must have access to the setup menu ([http\(s\)://<Camera IP address>/control](http(s)://<Camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<Camera IP address>/control/app_config](http(s)://<Camera IP address>/control/app_config)).
2. Click on the name of the **Vaxtor UIC - Railway Code Recognition App**.

The configuration window of the app appears with the following options:

Basic Settings

The following configurations should be taken into account:

The screenshot shows the 'Vaxtor UIC Settings' window. The title bar includes the MOBOTIX logo and window controls. The main content area has a header 'Vaxtor UIC' and a list of settings:

- Same Code Delay:** A numeric input field set to '60'. A tooltip indicates: 'Minimum elapsed time to report the same code twice (seconds)'.
- Working Mode:** A dropdown menu set to 'freeflow'. A tooltip explains: 'Signaled: The application will only attempt to read an UIC code when the signal is activated. Freeflow: The application continuously captures UIC codes.'
- Enable MxMessage:** A checkbox that is checked. A tooltip states: 'Send a mxmessage when an UIC code is read'.
- Enable Overlay:** A checkbox that is checked. A tooltip states: 'Display an overlay on all the sensors when an UIC code is read'.

Below these settings is a section titled 'Recognition Areas' with a checkbox. At the bottom of the window are four buttons: 'Set' (highlighted in blue), 'Factory', 'Restore', and 'Close'.

Fig. 13: Basic settings

Same code delay: Define the minimum elapsed time to report the same code twice (seconds).

Working mode: The following modes are available:

Free flow: The application continuously captures UIC codes.

Signaled: The application will only attempt to read an UIC code when a signal is triggered accordingly.

NOTE! In signaled mode an signal ID will be sent with the signal event.

Enable MxMessage: Check to enable the processing of UIC code events in the MxMessageSystem..

Enable Overlay: Check to enable the display of the UIC code recognition result in the live view.

Recognition Areas

A Recognition Area is an area within the video frame where the OCR analytics takes place. You can draw a polygon and choose whether the area to look for plates in Inside or Outside this region. You can set multiple areas to respect complex situations.

NOTE! Using Recognition Areas can decrease OCR processing time and also reduce false positives. The whole UIC code must be in or out the Recognition Area to pass the test.

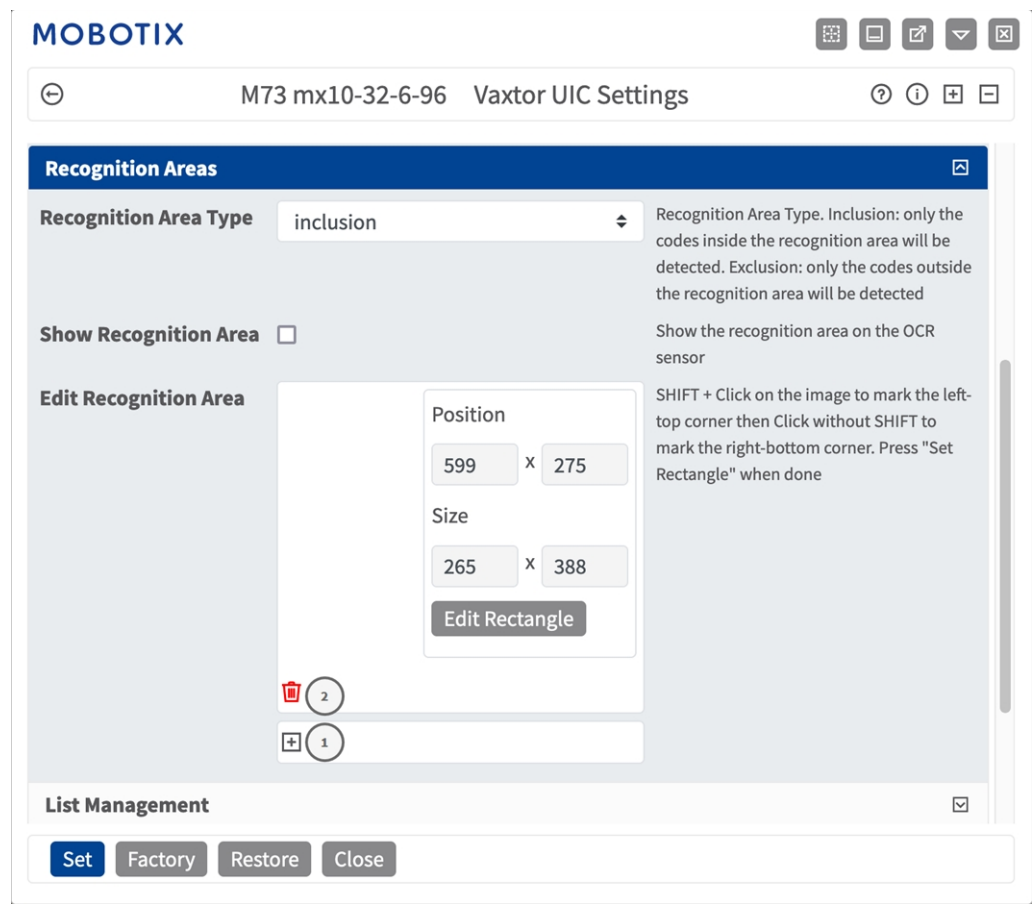


Fig. 14: Recognition Areas

Recognition Area Type: Check to activate the sending of events according to the following configuration

Inclusion: only the plates inside the recognition area will be detected.

Exclusion: only the plates outside the recognition area will be detected.

Show Recognition Area: Check to display the recognition area in the camera image.

Drawing a Recognition Area

1. Click the **plus** icon ① to switch into the live image.
2. In the live view simply click and drag a rectangular recognition area.
3. Drag the corner points to refine the recognition area.
4. In the top right corner of the live view click **Submit** to adopt the coordinates of the rectangle.
5. Optionally click the **bin** icon ② to delete the recognition area.

List Management

You can define a black list and a white list with up to 1000 UIC codes per list. If an UIC code from one of the lists is recognized, a corresponding event is sent within the MxMessageSystem of the camera.

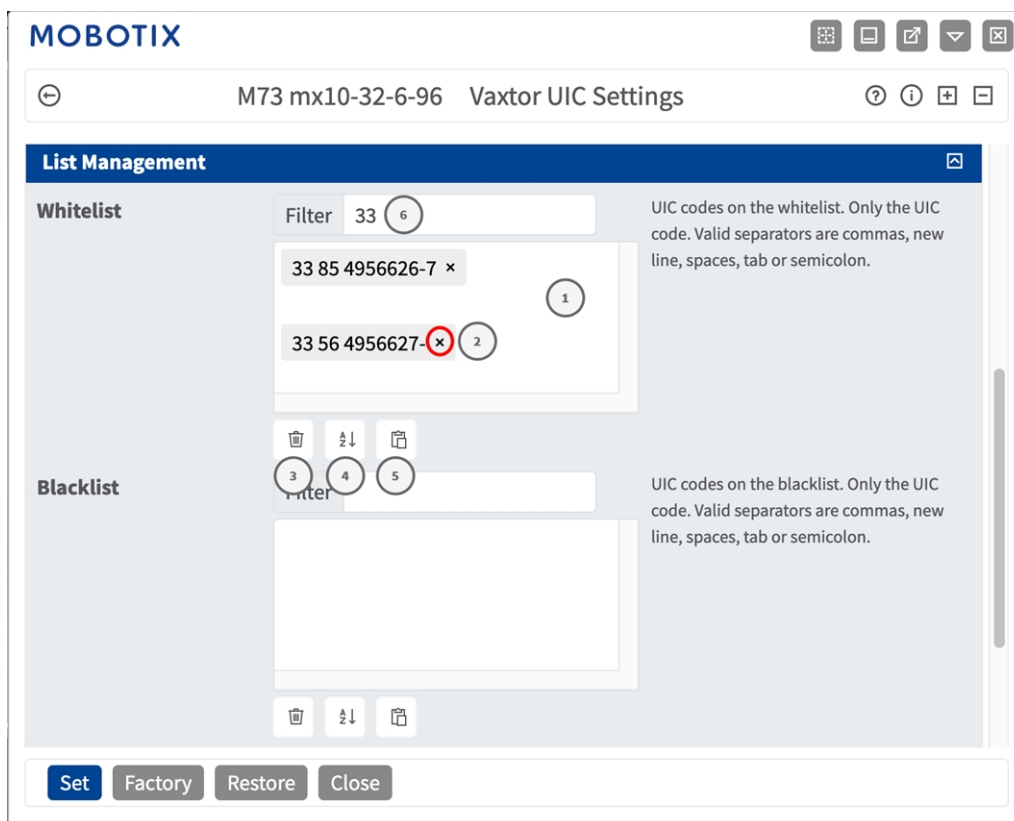


Fig. 15: Black and white lists

Adding an UIC code to a list

1. Enter the UIC code text into the text field ① and click **Enter**.

Adding multiple UIC codes from a text file

1. Make sure that your text file contains one license plate per line.
2. Copy the relevant codes from the text file and paste them into the text field ① .

Deleting an UIC code from a list

1. Click on the small **x**② to the right of the UIC code.

Deleting all codes from a list

1. Click the trash icon ③ .

Sorting all UIC codes from a list alphabetically

1. Click the sort icon ④ .

Copy all codes from a list to the clip board

1. Click the copy to clipboard icon ⑤ .

Filtering UIC codes

1. Enter the UIC code or parts of it into the filter text field ⑥ . Only codes containing the filter text are displayed accordingly.

Video

In the video tab you can specify video quality of the video to be analyzed.

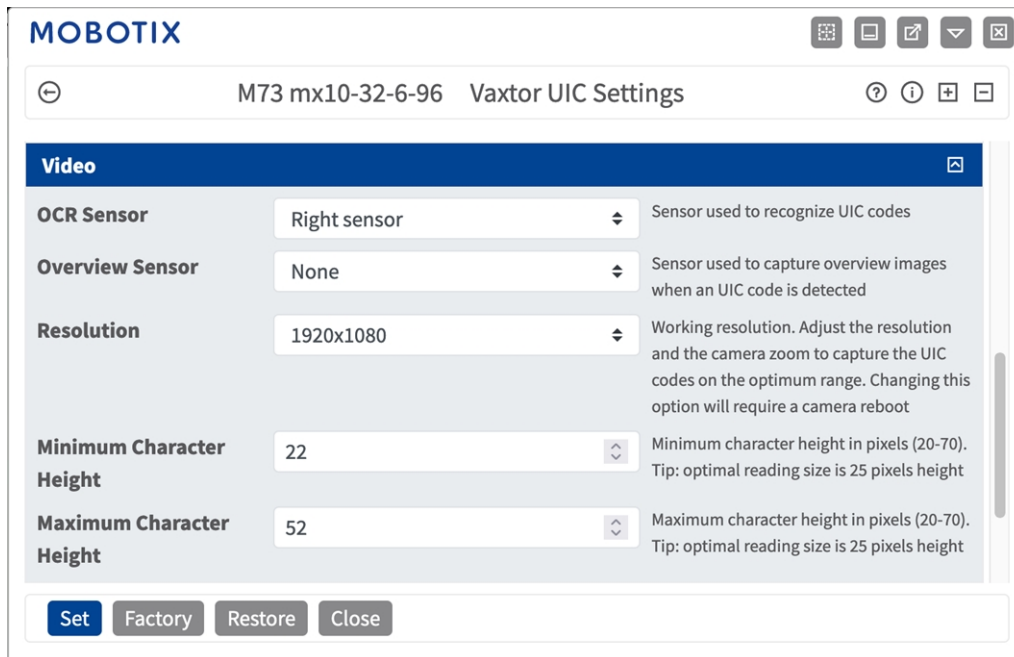


Fig. 16: Video

OCR sensor: Select the camera sensor to be used for UIC code recognition.

NOTE! Changing this option requires a camera reboot.

Overview Sensor: Optionally select a sensor used to capture overview images when an UIC code is detected.

Resolution: Set the working resolution (current maximum is 1080p). Adjust the resolution and the camera zoom to capture the codes on the optimum range.

NOTE! Changing this option requires a camera reboot.

Minimum Character Height: the minimum height that an UIC code's characters should be before being read. The characters should be about 20-30 pixels high.

Maximum Character Height: the maximum height is about 20-30 pixels.

NOTE! The recommended difference between the min and max heights is about 10 pixels.

OCR

In the OCR (Optical Character Recognition) tab you can set parameters to ensure the best possible recognition results.

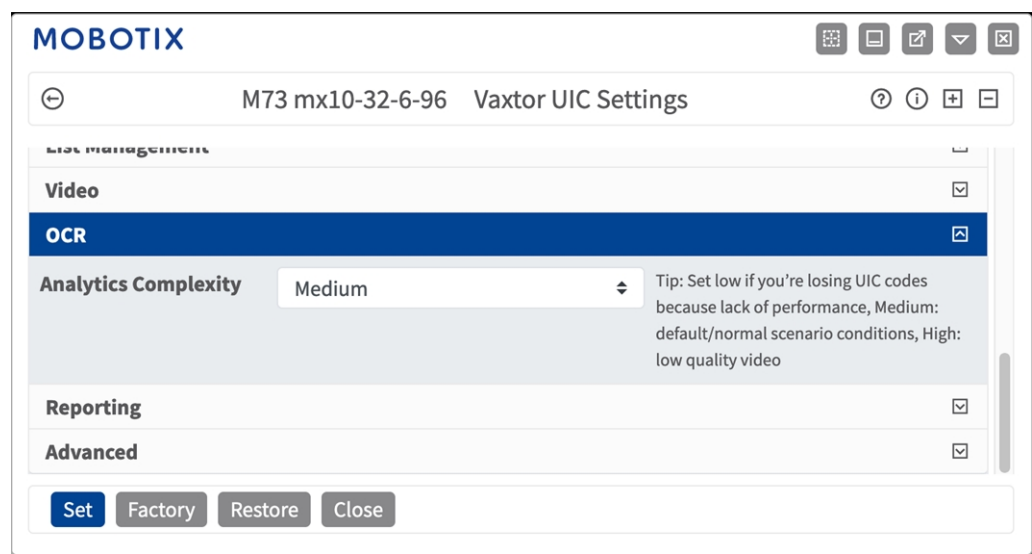


Fig. 17: OCR

Analytics Complexity: This is the complexity of the analytics to be applied during the OCR engine’s stage of UIC code reading. Set this according to the OCR mode and type of traffic expected. There are three options.

Low: Recommended for very high-speed traffic where the OCR needs to work faster and your preference is for UIC code detection over perfect recognition.

Medium (Default) Recommended when the OCR mode is set to free-flow.

High: Recommended when the OCR mode is set to signal (triggered).

CAUTION! Higher complexities give more accurate reading but make the OCR engine run slower.

Reporting

NOTE! For best performance and results in UIC code processing make sure to have scene set up to meet the [Camera, image and scene requirements, p. 18](#).

NOTE! The user must have access to the setup menu ([http\(s\)://<Camera IP address>/control](http(s)://<Camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<Camera IP address>/control/app_config](http(s)://<Camera IP address>/control/app_config)).
2. Click on the name of the **Vaxtor UIC - Railway Code Recognition App**.

The configuration window of the app appears with the following options:

Template Fields

Template fields are used to create customized reports, messages and image-overlays (see [Reporting, p. 30](#)).

UIC only reserved variables

Template field	Description
\$countrycode\$	UIC Country code
\$direction\$	(0: unknown, 1: left, 2: right)
\$directionstr\$	(Unknown, Left, Right)
\$serialnumber\$	UIC Serial number
\$uiccode\$	
\$vehicletype\$	

Shared reserved variables

Template field	Description
\$absolutebottom\$	Absolute bottom position of the code 0..1 with 2 decimal places
\$absoluteleft\$	Absolute left position of the code 0..1 with 2 decimal places
\$absoluteright\$	Absolute right position of the code 0..1 with 2 decimal places
\$absolutetop\$	Absolute top position of the code 0..1 with 2 decimal places
\$blacklist\$	If the UIC code is on the blacklist, the text in the 'if clause' will be displayed
\$bottom\$	Bottom coordinate for the UIC code on the image (pixels)
\$charheight\$	Average charheight (pixels)
\$codeimage\$	Code cropped image
\$codeimagesize\$	Code cropped image size in bytes
\$confidence\$	Global confidence (0-100)
\$date\$	Timestamp in ISO8601 format
\$etx\$	Character control ETX in HEX for End of Text (03)
\$country\$:	3 letter country code
\$height\$	OCR image height
\$image\$	JPEG encoded in base64
\$imagesize\$	Size of saved complete image
\$left\$	Left coordinate for the UIC code on the image (pixels)

Template field	Description
\$nolist\$	If the UIC code in not on a list, the test in the ‘if clause’ will be displayed
\$overviewimage\$	Overview JPEG image encoded in base64
\$overviewimagesize\$	Overview image size in bytes
\$processingtime\$	Processing time in milliseconds
\$right\$	Right coordinate for the UIC code on the image (pixels)
\$sensor\$	Sensor (0, 1)
\$signalid\$	ID string specified when a read is triggered via http request
\$stx\$	Character control STX in HEX for Start of Text (02)
\$timestamp\$	yyyy-MM-ddTHH:mm:sszzz
\$top\$	Top coordinate for the UIC code on the image (pixels)
\$width\$	OCR image width
\$whitelist\$	If the UIC code is on the whitelist, the text in the ‘if clause’ will be displayed

Advanced

In this section you find useful tools for calibration and trouble shooting.

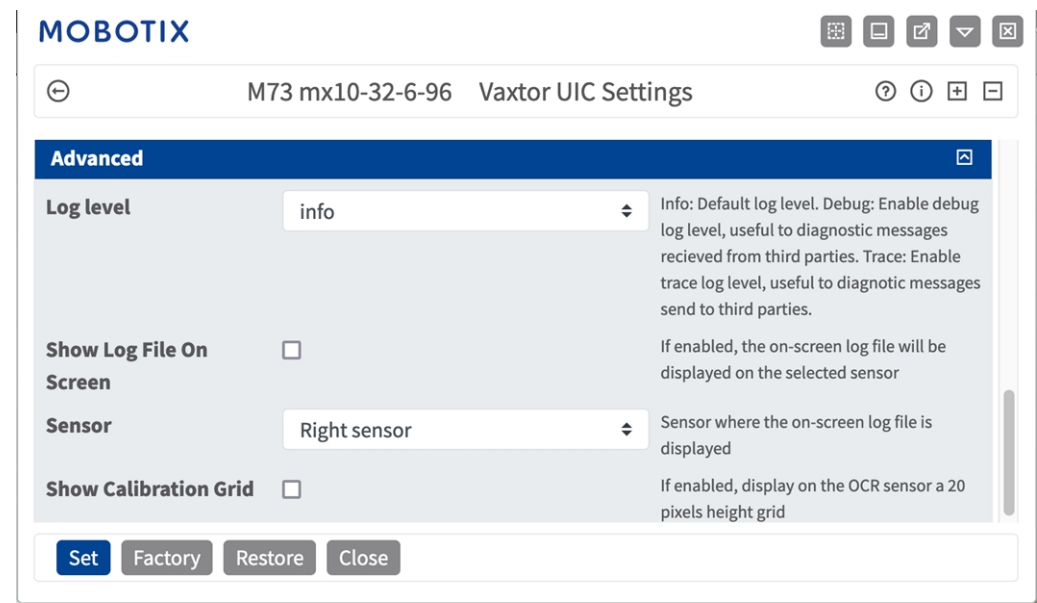


Fig. 18: Advanced

Log level: Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

Info: Default log level

Trace: Select e. g. for diagnostic messages received from third parties

Debug: Select for complete log files for debug purposes

Show log file on screen: Check to display the on-screen log file on the selected sensor

Sensor: Select the sensor on which the on-screen log file is displayed

Show Calibration Grid: Check to display on the OCR sensor a 20 pixels height grid

Storing the Configuration

To store the configuration you have the following options:



Fig. 19: Storing the configuration

- Click on the **Set** button to activate your settings and to save them until the next reboot of the camera.
- Click on the **Factory** button to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click on the **Restore** button to undo your most recent changes that have not been stored in the camera permanently.
- Click on the **Close** button to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

MxMessageSystem

What is MxMessageSystem?

MxMessageSystem is a communication system based on name oriented messages. This means that a message must have a unique name with a maximum length of 32 bytes.

Each participant can send and receive messages. MOBOTIX cameras can also forward messages within the local network. This way, MxMessages can be distributed over the entire local network (see Message Area: Global).

For example, a MOBOTIX 7 series camera can exchange an MxMessage generated by a camera app with an Mx6 camera that does not support certified MOBOTIX apps.

Facts about MxMessages

- 128-bit encryption ensures privacy and security of message content.
- MxMessages can be distributed from any camera of the Mx6 and 7 series.
- The message range can be defined individually for each MxMessage.
 - **Local:** Camera expects an MxMessage within its own camera system (e.g. through a Certified App).
 - **Global:** the camera expects an MxMessage that is distributed in the local network by another MxMessage device (e.g. another camera of the 7 series equipped with a certified MOBOTIX app).
- Actions that the recipients are to perform are configured individually for each participant of the MxMessageSystem.

MxMessageSystem: Processing the automatically generated app event

Checking automatically generated app events

NOTE! After successfully activating the app (see [Activation of the Certified App Interface, p. 23](#)), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. VaxOCRUIIC).

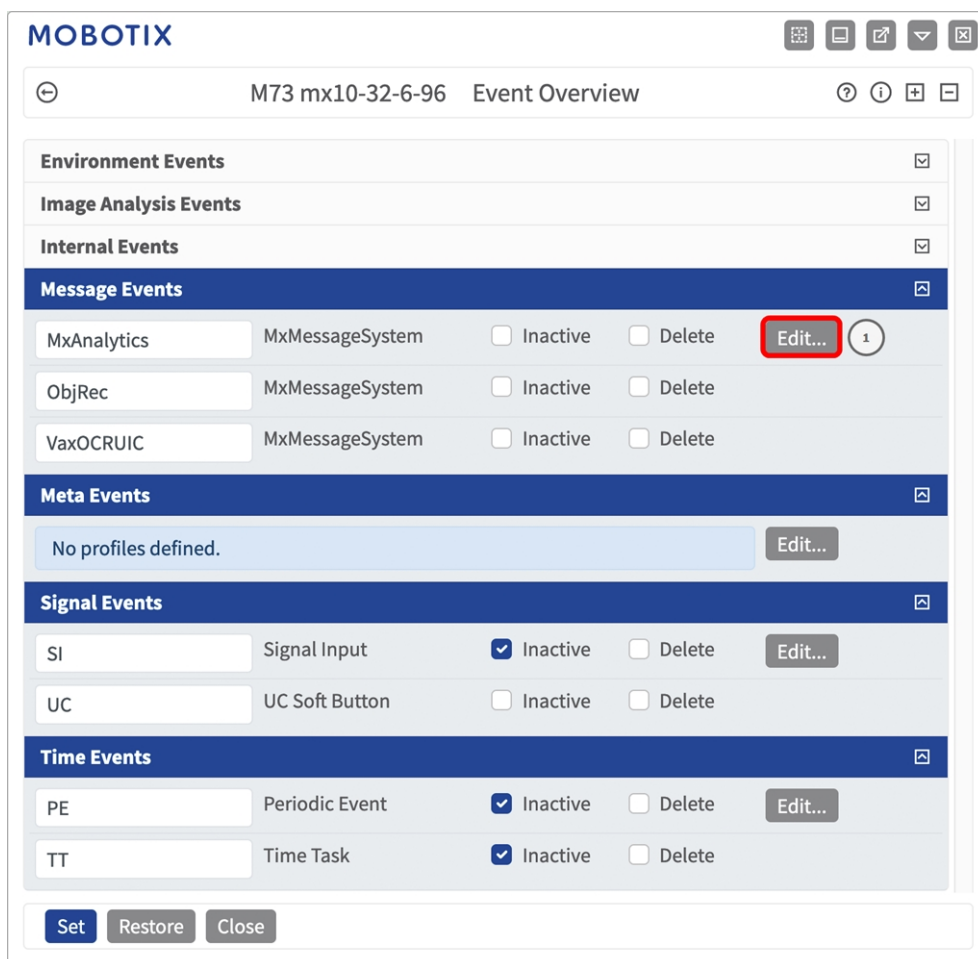


Fig. 20: Example: Generic message event from Vaxtor UIC - Railway Code Recognition App

2. Click **Edit**^① to display a selection of all configured message events.

The screenshot shows the MOBOTIX web interface for configuring message events. The title bar indicates 'M73 mx10-32-6-96 Message Events'. A table lists three events: MxAnalytics, ObjRec, and VaxOCRUIIC. The VaxOCRUIIC event is selected, and its configuration is displayed below. The configuration includes a dead time of 5 seconds, an event sensor type of MxMessageSystem, a message name of VaxOCRUIIC, a message range of Local, and a filter message content of No Filter. The interface also has buttons for 'Add new profile', 'Set', 'Factory', 'Restore', and 'Close'.

Fig. 21: Example: Generic message event details - no filter

Action handling - Configuration of an action group

CAUTION! To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)://<Camera IP address>/control/settings](http(s)://<Camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor UIC - Railway Code Recognition App event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<Camera IP address>/control/actions](http(s)://<Camera IP address>/control/actions)).

The screenshot shows the MOBOTIX M73 mx10-32-6-96 Action Group Overview interface. It displays two action groups: VisualAlarm and VXUIAction. Each group has an Arming section with dropdown menus for 'Off' and '(No time table)', an Events & Actions section with a dropdown for '(select all)' and 'VA', and an Edit button. The 'Add new group' button is highlighted with a red box and a circled '1'. The 'Edit...' button for the VXUIAction group is also highlighted with a red box and a circled '2'. At the bottom, there are buttons for 'Set', 'Restore', and 'Close'.

VisualAlarm	VXUIAction
Arming Off (No time table)	Arming Enabled (No time table)
Events & Actions (select all) VA	Events & Actions -
Edit Edit...	Edit Edit... (2)

Add new group (1)

Set Restore Close

Fig. 22: Defining Action Groups

2. Click **Add new group**① and give a meaningful name.
3. Click **Edit**②, to configure the group.

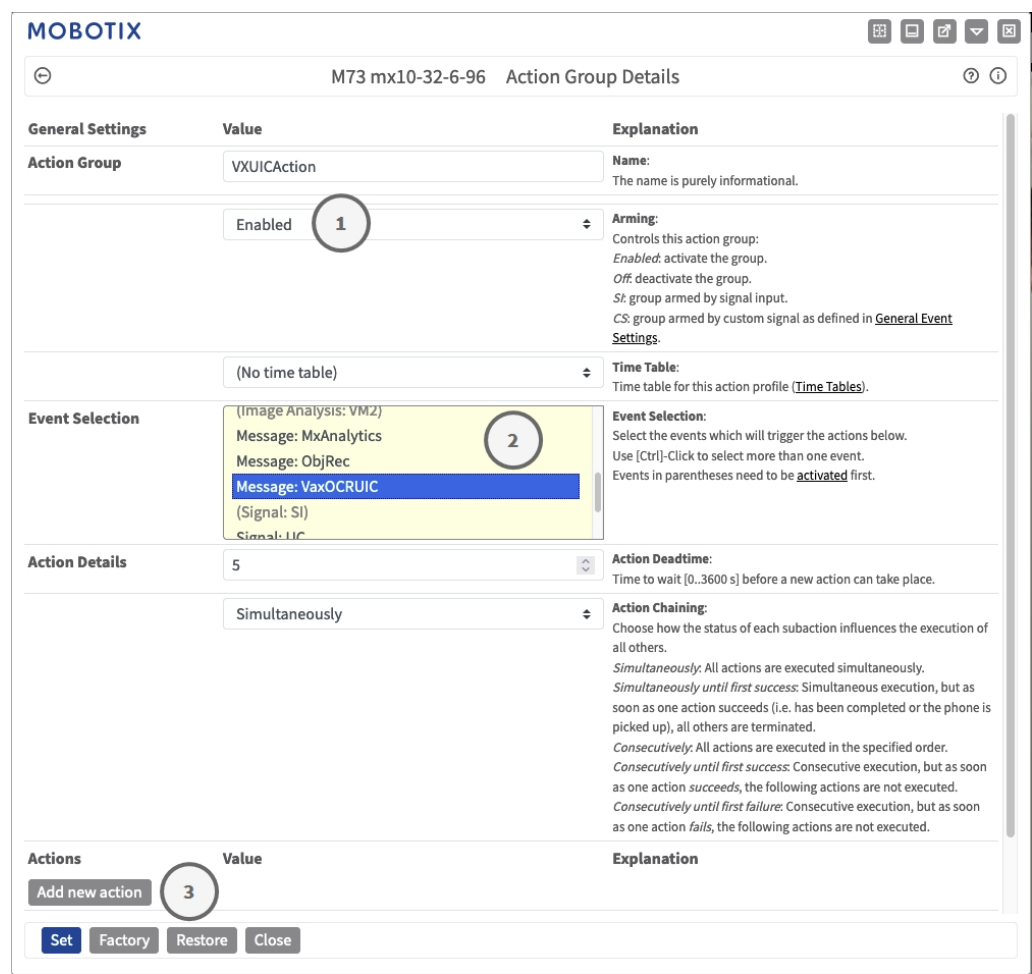


Fig. 23: Configuring an Action Group

1. Enable **Arming**① of the Action Group.
2. Select your message event in the **Event selection** list ② . To select multiple events, hold the shift key.
3. Click **Add new Action**③ .
4. Select a proper action from list **Action Type and Profile**④ .

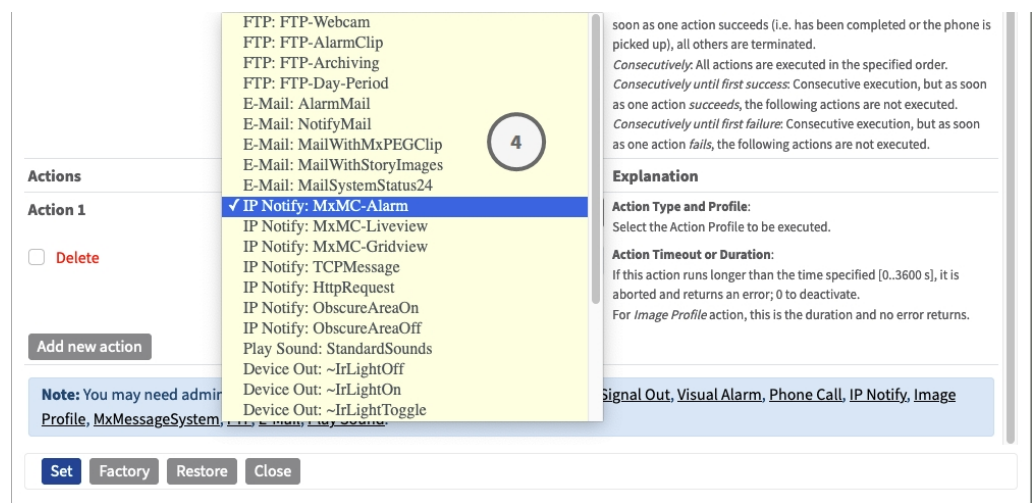


Fig. 24: Select Action Type- and Profile

NOTE! If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can+ add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- Click on the **Set** button at the end of the dialog box to confirm the settings.

Action settings - Configuration of the camera recordings

- In the camera web interface, open: **Setup Menu / Event Control / Recording**([http\(s\)/<Camera IP address>/control/recording](http(s)/<Camera IP address>/control/recording)).

The screenshot shows the MOBOTIX web interface for configuring camera recording settings. The page title is "M73 mx10-32-6-96 Recording". The interface is divided into several sections:

- General Settings:**
 - Arming:** Set to "Enabled" (circled 1). The explanation states: "Arm Recording: Controls camera recording. Enabled: activate recording. Off: deactivate recording. St: recording armed by signal input. CS: recording armed by custom signal as defined in General Event Settings. From Master: copies recording arming state from master camera."
 - Time Table Profile:** Set to "(No time table)". The explanation states: "Time table profile for time-controlled recording (Time Tables)."
- Storage Settings:**
 - Recording (REC):** Set to "Event Recording" (circled 2). The explanation states: "Recording Mode: Type of event and story recording. Snap Shot Recording: stores single JPEG pictures. Event Recording: stores stream files for every event using MxPEG codec. Continuous Recording: continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using Start Recording, Retrigger Recording and Stop Recording."
 - Include audio:** Checked. The explanation states: "Record Audio Data: Store audio data in stream file if available. Enable and configure microphone."
- Start Recording:**
 - Start Recording:** A dropdown menu is open, showing "Message: VaxOCRUIIC" selected (circled 3). The explanation states: "Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first."
 - Event Frame Rate:** Set to "Max fps". The explanation states: "Recording speed if an event is detected, in frames per second."
 - Recording Time Before Event:** Set to "0". The explanation states: "Additional recording time before an event in seconds."
 - Recording Time:** Set to "10 s". The explanation states: "Time to include in recorded stream after an event has occurred."

At the bottom of the page, there are buttons: "Set" (circled 4), "ry", "Restore", "Close" (circled 5), and "More".

Fig. 25: Configuration of camera recording settings

- Activate **Arm Recording** ① .
- Under **Storage Settings / Recording (REC)** select a **Recording mode** ② . The following modes are available:

- Snap Shot Recording
- Event Recording
- Continuous Recording

4. In list **Start recording** ③ select the message event just created.
5. Click on the **Set** ④ button at the end of the dialog box to confirm the settings.
6. Click on **Close** ⑤ to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Action handling - Configuration of an action group

CAUTION! To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)://<Camera IP address>/control/settings](http(s)://<Camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor UIC - Railway Code Recognition App event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<Camera IP address>/control/actions](http(s)://<Camera IP address>/control/actions)).

The screenshot shows the MOBOTIX M73 mx10-32-6-96 Action Group Overview interface. It features a top navigation bar with the MOBOTIX logo and a title bar with a back arrow, the device name 'M73 mx10-32-6-96', the title 'Action Group Overview', and icons for help, info, add, and delete. Below the title bar, there are two main configuration sections. The first section is for 'VisualAlarm' and the second is for 'VXUIAction'. Each section has a 'Delete' button and an 'Edit' button. The 'VisualAlarm' section has an 'Arming' dropdown set to 'Off' and an 'Events & Actions' dropdown set to '(select all)'. The 'VXUIAction' section has an 'Arming' dropdown set to 'Enabled' and an 'Events & Actions' dropdown set to '-'. At the bottom of the interface, there is an 'Add new group' button with a circled '1' next to it, and a row of buttons: 'Set', 'Restore', and 'Close'. The 'Edit...' button in the 'VXUIAction' section is highlighted with a red box and a circled '2' next to it.

Arming	Events & Actions	Edit
Off	(select all)	Edit...
(No time table)	VA	

Arming	Events & Actions	Edit
Enabled	-	Edit... 2
(No time table)		

Add new group 1

Set Restore Close

Fig. 26: Defining Action Groups

2. Click **Add new group**^① and give a meaningful name.
3. Click **Edit**^②, to configure the group.

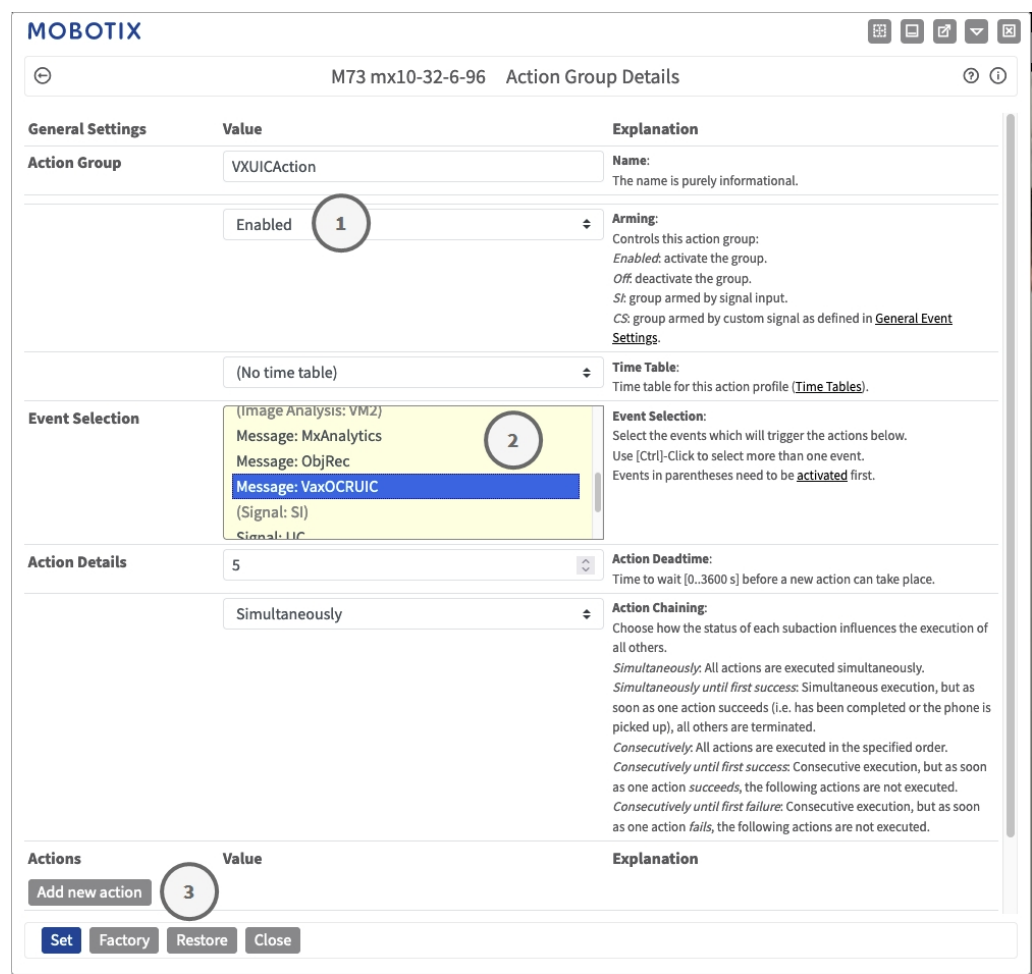


Fig. 27: Configuring an Action Group

1. Enable **Arming**① of the Action Group.
2. Select your message event in the **Event selection** list ② . To select multiple events, hold the shift key.
3. Click **Add new Action**③ .
4. Select a proper action from list **Action Type and Profile**④ .

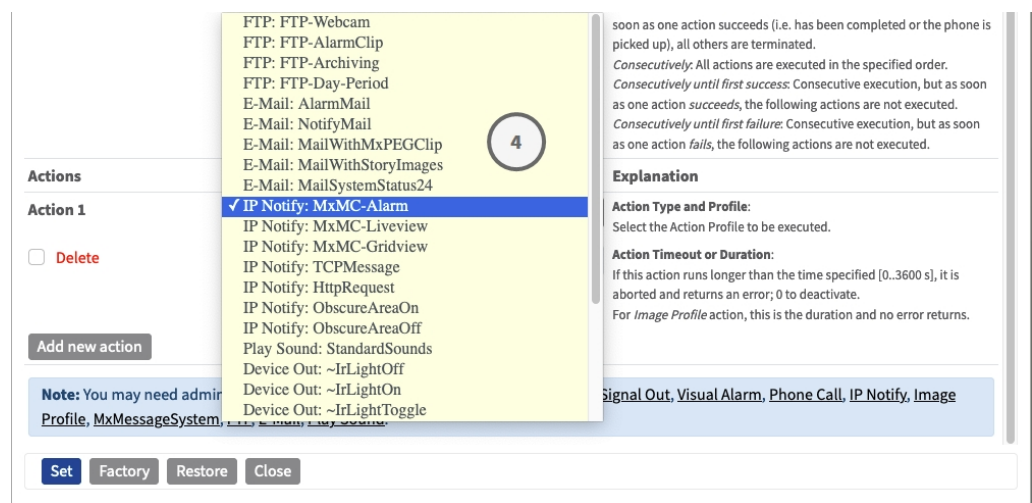


Fig. 28: Select Action Type- and Profile

NOTE! If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- Click on the **Set** button at the end of the dialog box to confirm the settings.

Action settings - Configuration of the camera recordings

- In the camera web interface, open: **Setup Menu / Event Control / Recording**(http(s)/<Camera IP address>/control/recording).

MOBOTIX M73 mx10-32-6-96 Recording

General Settings

Value	Explanation
Arming: Enabled (1)	Arm Recording: Controls camera recording. <i>Enabled:</i> activate recording. <i>Off:</i> deactivate recording. <i>St:</i> recording armed by signal input. <i>CS:</i> recording armed by custom signal as defined in General Event Settings . <i>From Master:</i> copies recording arming state from master camera.
(No time table)	Time Table Profile: Time table profile for time-controlled recording (Time Tables).

Storage Settings

Value	Explanation
Recording (REC): Event Recording (2)	Recording Mode: Type of event and story recording. <i>Snap Shot Recording:</i> stores single JPEG pictures. <i>Event Recording:</i> stores stream files for every event using MxPEG codec. <i>Continuous Recording:</i> continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using <i>Start Recording</i> , <i>Retrigger Recording</i> and <i>Stop Recording</i> .
Include audio	Record Audio Data: Store audio data in stream file if available. Enable and configure microphone .

Start Recording

(Message: MxAnalytics) Message: ObjRec Message: VaxOCRUIIC (3) (Signal: SI) Signal: UC	Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first.
Max fps	Event Frame Rate: Recording speed if an event is detected, in frames per second.
0	Recording Time Before Event: Additional recording time before an event in seconds.
10 s	Recording Time: Time to include in recorded stream after an event has occurred.

Set (4) ry Restore Close (5) More

Fig. 29: Configuration of camera recording settings

- Activate **Arm Recording** ① .
- Under **Storage Settings / Recording (REC)** select a **Recording mode** ② . The following modes are available:

- Snap Shot Recording
- Event Recording
- Continuous Recording

4. In list **Start recording** ③ select the message event just created.
5. Click on the **Set** ④ button at the end of the dialog box to confirm the settings.
6. Click on **Close** ⑤ to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Action settings - Configuration of the camera recording

CAUTION! To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)/<Camera IP address>/control/settings](http(s)/<Camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor UIC - Railway Code Recognition App event.

1. In the camera web interface, open: **Setup Menu / Event Control / Recording**([http\(s\)/<Camera IP address>/control/recording](http(s)/<Camera IP address>/control/recording)).

MOBOTIX M73 mx10-32-6-96 Recording

General Settings

Value	Explanation
Arming: Enabled (1)	Arm Recording: Controls camera recording. <i>Enabled:</i> activate recording. <i>Off:</i> deactivate recording. <i>SI:</i> recording armed by signal input. <i>CS:</i> recording armed by custom signal as defined in General Event Settings . <i>From Master:</i> copies recording arming state from master camera.
(No time table)	Time Table Profile: Time table profile for time-controlled recording (Time Tables).

Storage Settings

Value	Explanation
Recording (REC): Event Recording (2)	Recording Mode: Type of event and story recording. <i>Snap Shot Recording:</i> stores single JPEG pictures. <i>Event Recording:</i> stores stream files for every event using MxPEG codec. <i>Continuous Recording:</i> continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using <i>Start Recording</i> , <i>Retrigger Recording</i> and <i>Stop Recording</i> .
Include audio	Record Audio Data: Store audio data in stream file if available. Enable and configure microphone .
Start Recording: (Message: VaxOCRUC) (3)	Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first.
Max fps	Event Frame Rate: Recording speed if an event is detected, in frames per second.
0	Recording Time Before Event: Additional recording time before an event in seconds.
10 s	Recording Time: Time to include in recorded stream after an event has occurred.

Buttons: Set (4), Try, Restore, Close (5), More

Fig. 30: Configuration of camera recording settings

2. Activate **Arm Recording**① .
3. Under **Storage Settings / Recording (REC)** select a **Recording mode**② . The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
4. In list **Start recording**③ select the message event just created.
5. Click on the **Set**④ button at the end of the dialog box to confirm the settings.
6. Click on **Close**⑤ to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Advanced Configuration: Processing the meta data transmitted by apps

Meta data transferred within the MxMessageSystem

For each event, the app also transfers meta data to the camera. This data is sent in the form of a JSON schema within an MxMessage.



Fig. 31: UIC code on a railroad wagon

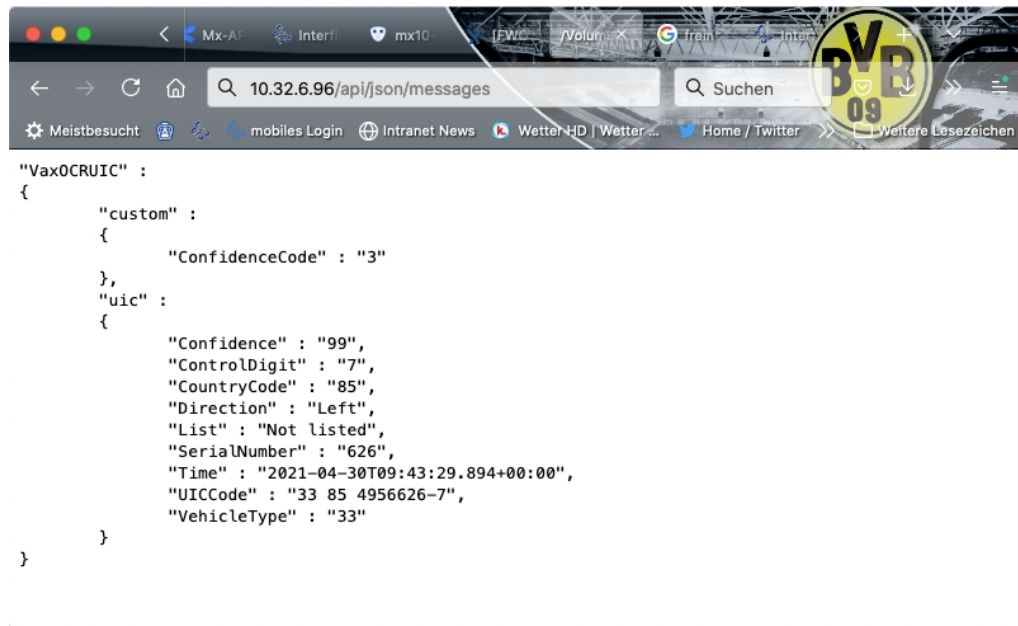


Fig. 32: Example: Meta data transmitted within an MxMessage of the Vaxtor UIC - Railway Code Recognition App

NOTE! To view the meta data structure of the last App event, enter the following URL in the address bar of your browser: `http(s)/IPAdresseOfYourCamera/api/json/messages`

Creating a Custom Message Event

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. VaxOCRUIC).

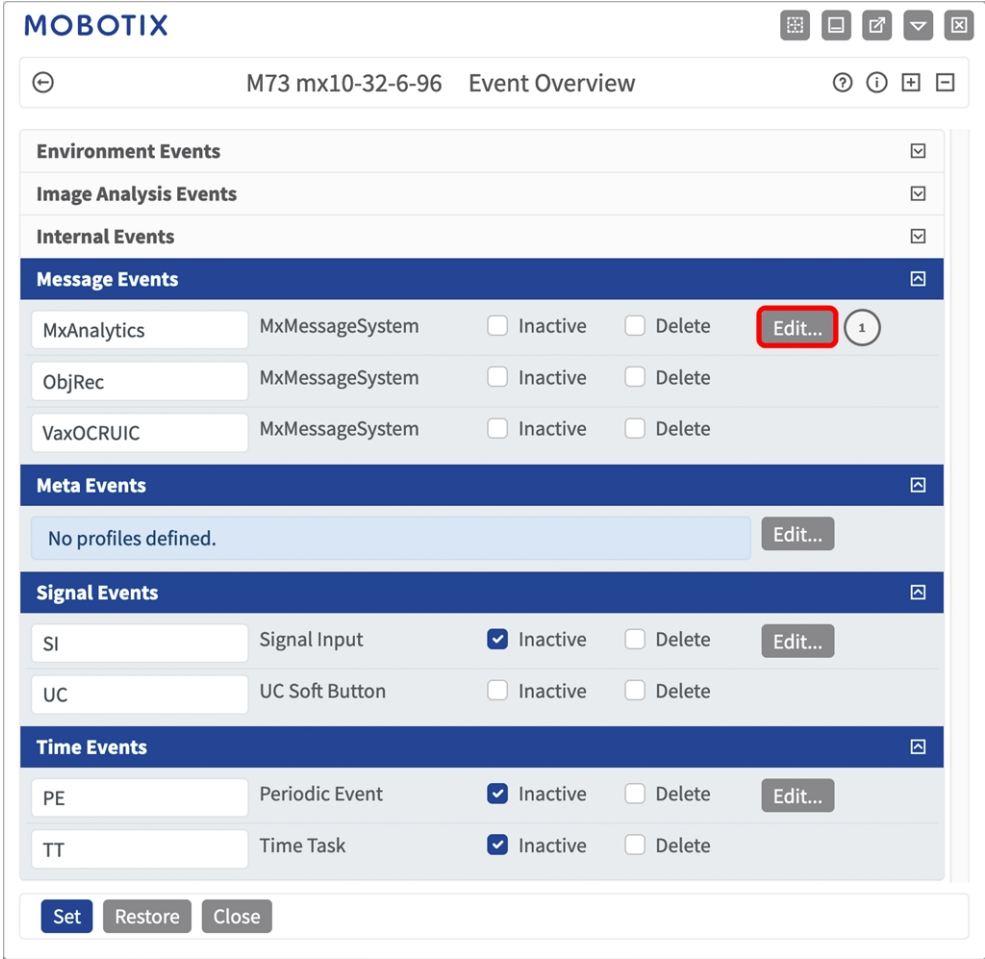


Fig. 33: Example: Generic message event from Vaxtor UIC - Railway Code Recognition App

- Click **Edit** ① to display a selection of all configured message events.

MOBOTIX

M73 mx10-32-6-96 Message Events

Attribute	Value	Explanation
IP Receive	8000	Port: TCP port to listen on.

Events	Value	Explanation
MxAnalytics	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete	
ObjRec	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete	
VaxOCRUC ①	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete	

5

Event Dead Time:
Time to wait [0..3600 s] before the event can trigger anew.

Event Sensor Type:
Choose the message sensor.

☐ IP Receive
☒ MxMessageSystem

Event on receiving a message from the MxMessageSystem.

VaxOCRUC.uic.List ②

Message Name:
Defines an MxMessageSystem name to wait for.

Local

Message Range:
There are two different ranges of message distribution:
Global: across all cameras within the current LAN.
Local: camera internal.

JSON Comparison

Filter Message Content:
Optionally choose how to ignore messages containing *Filter Value*. Select *No Filter* to trigger on any message with defined *Message Name*.

"White List" ③

Filter Value:
Define either a valid reference value as a string (in JSON format) without line breaks, or an extended regular expression. Open help for examples.
This parameter allows using **variables**.

Add new profile

Set ④ Factory Restore Close

Fig. 34: Example: Blacklist message event

- Click on the event (e. g. VaxOCRUC) ① to open the event settings.
- Configure the parameters of the event profile as follows:
 - **Message Name:** Enter the "Message Name" ② according to the event documentation of the corresponding app (see [Examples for message names and filter values of the Vaxtor UIC - Railway Code Recognition App](#), p. 50)

- **Message Range:**
 - Local: Default settings for the Vaxtor UIC - Railway Code Recognition App
 - Global: (MxMessage is forwarded from another MOBOTIX camera in the local network.
 - **Filter Message Content:**
 - Generic Event: “No Filter”
 - Filtered Event: “JSON Equal Compare”
- Filter Value:** ③ see [Examples for message names and filter values of the Vaxtor UIC - Railway Code Recognition App](#), p. 50.

CAUTION! “Filter Value” is used to differentiate the MxMessages of an app / bundle. Use this entry to benefit from individual event types of the apps (if available).

Choose “No Filter” if you want to use all incoming MxMessages as generic event of the related app.

2. Click on **Set** ④ at the end of the dialog box to confirm the settings.

Examples for message names and filter values of the Vaxtor UIC - Railway Code Recognition App

	MxMessage-Name	Filter value
Generic Event	VaxOCRUIC	
Whitelist Event	VaxOCRUIC.uic.List	“White list”
Blacklist Event	VaxOCRUIC.uic.List	“Black list”
Not listed Event	VaxOCRUIC.uic.List	“Not listed”
Unique container code event	VaxOCRUIC.uic.UICCode	UIC code as “STRING” e.g. “33 85 4956626-7 (compare Meta data transferred within the MxMessageSystem , p. 46)
Owner Code Event	VaxOCRUIC.uic.Direction	e.g. “left”
Vehicle Type Event	VaxOCRUIC.uic.VehicleType	e.g. “33”



EN_04/22

MOBOTIX AG • Kaiserstrasse • D-67722 Langmeil • Tel.: +49 6302 9816-103 • sales@mobotix.com • www.mobotix.com

MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX AG 2021