



# Guideline

## Vaxtor Container Code Recognition App

© 2022 MOBOTIX AG



# Table of Contents

---

<b>Table of Contents</b>	<b>2</b>
<b>Before You Start</b>	<b>3</b>
Support	4
Safety Notes	4
Legal Notes	5
<b>About Vaxtor Container Code Recognition App</b>	<b>6</b>
Smart Data Interface to MxManagementCenter	6
<b>Technical Specifications</b>	<b>8</b>
<b>Licensing Certified Apps</b>	<b>10</b>
License Activation of Certified Apps in MxManagementCenter	10
Managing Licenses in MxManagementCenter	14
<b>Camera, image and scene requirements</b>	<b>17</b>
Recommendations on mounting and adjusting.	19
<b>Activation of the Certified App Interface</b>	<b>21</b>
<b>Configuration of Vaxtor Container Code Recognition App</b>	<b>23</b>
Basic Settings	23
Recognition Areas	24
List Management	26
Video	27
OCR	28
Reporting	28
Variables / Template Fields	30
Advanced	33
Storing the Configuration	34
<b>MxMessageSystem</b>	<b>35</b>
What is MxMessageSystem?	35
Facts about MxMessages	35
<b>MxMessageSystem: Processing the automatically generated app event</b>	<b>36</b>
Checking automatically generated app events	36
Action handling - Configuration of an action group	41
Action settings - Configuration of the camera recordings	44
<b>Advanced Configuration: Processing the meta data transmitted by apps</b>	<b>46</b>
Meta data transferred within the MxMessageSystem	46
Creating a Custom Message Event	47
Examples for message names and filter values of the Vaxtor Container Code Recognition App	49

---

## Before You Start

<b>Support .....</b>	<b>4</b>
<b>Safety Notes .....</b>	<b>4</b>
<b>Legal Notes .....</b>	<b>5</b>

## Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates. Please visit:

[www.mobotix.com](http://www.mobotix.com) > [Support](#) > [Help Desk](#)



## Safety Notes

- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- This equipment is not suitable for use in locations where children are likely to be present.
- When using a Class I adapter, the power cord shall be connected to a socket-outlet with proper ground connection.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.
- This equipment is to be connected only to PoE networks without routing to other networks.

**NOTE!** Observe the [MOBOTIX MOVE Installation Hints](#) document to ensure optimum performance of the camera features.

# Legal Notes

## Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

## Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on [www.mobotix.com](http://www.mobotix.com) under **Support > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

## RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see [www.mobotix.com](http://www.mobotix.com), **Support > Download Center > Marketing & Documentation > Brochures & Guides > Certificates**).

## Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

## Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at [www.mobotix.com](http://www.mobotix.com) by clicking on the corresponding link at the bottom of every page.



# About Vaxtor Container Code Recognition App

## Recognition of cargo container codes according to ISO 6346

Based on deep learning processes the certified Vaxtor Container Code Recognition App recognizes container codes and delivers realtime results about the container owner, type dimensions and much more. The app is able to detect container codes within 900 ms and an extremely high hit probability of over 99 percent. Via blocking or permission lists, authorized, or containers with unauthorized content can be defined specifically. Possible areas of use for the application are harbor & airport logistics, container inventory & surveillance, border control, access control or logistic management.

- Recognition of cargo container codes according to ISO 6346 standard
- with over 99% accuracy optimally suited for detection and logging of container codes on entry, between zones, during processes or exit
- Two lists for individual actions (e.g. access granted/denied, alarm, etc.)
- Integrated Smart Data Interface for data retrieval with MxManagementCenter from version 2.4.3.

**CAUTION!** Thermal sensors are not supported by this app.

## Smart Data Interface to MxManagementCenter

This app has a Smart Data interface to MxManagementCenter.

With the MOBOTIX Smart Data System, transaction data can be linked to the video recordings made at the time of the transactions. Smart Data source can be e.g. MOBOTIX Certified Apps (no license required) or general Smart Data sources (license required) like POS systems or license plate recognition systems.

The Smart Data System in MxManagementCenter enables you to quickly find and review any suspicious activities. The Smart Data Bar and the Smart Data View are available for searching and analyzing transactions. The Smart Data Bar provides a direct overview of the most recent transactions (from the last 24 hours) and for this reason it is convenient to use it for reviews and searches.

**NOTE!** For information on how to use the Smart Data System, see the corresponding online help of the camera software and MxManagementCenter.

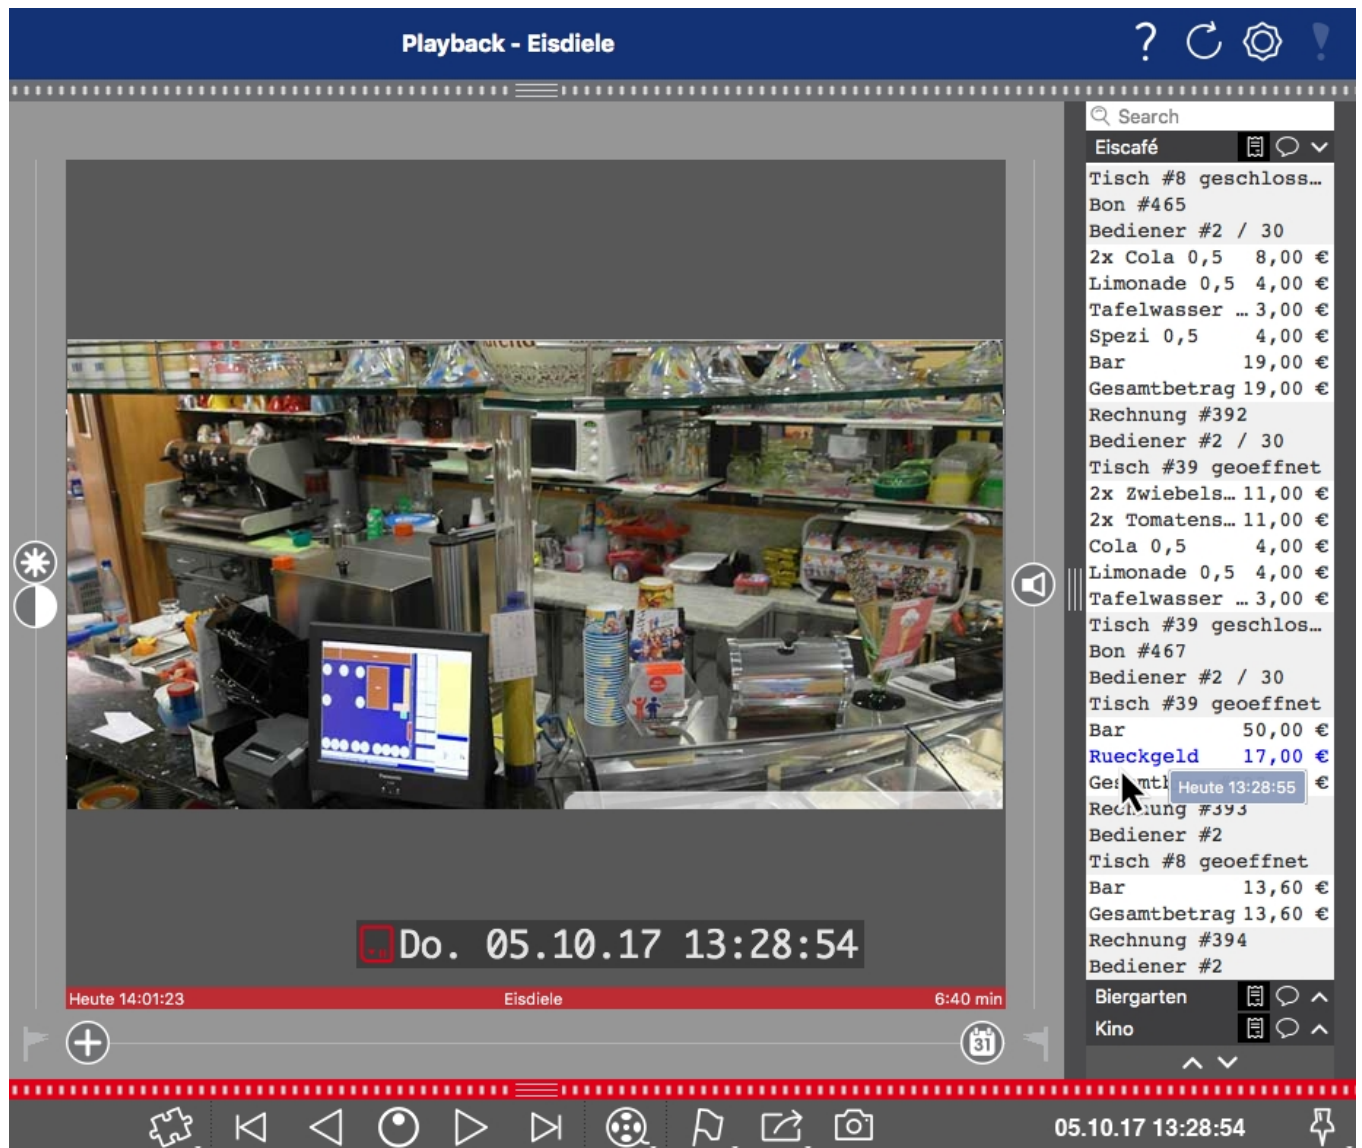


Fig. 1: : Smart Data Bar in MxManagementCenter (Example: POS System)

# Technical Specifications

## Product Information

Product Name	Vaxtor Container Code Recognition App
Order Code	Mx-APP-VX-CON
Supported MOBOTIX Cameras	Mx-M73A, Mx-S74A
Minimum Camera Firmware	v7.1.3.x
MxManagementCenter Integration	<ul style="list-style-type: none"><li>min. MxMC v2.4.3</li><li>Configuration: Advanced Config license required</li><li>Event Search: Smart Data Interface license included</li></ul>

## Product Features

App Features	<ul style="list-style-type: none"><li>Recognition of cargo container codes according to ISO 6346</li><li>Real time results:<ul style="list-style-type: none"><li>Container Code</li><li>Owner and corresponding origin</li><li>Container Type</li><li>Container Dimensions</li><li>Control Digit</li><li>Control Digit Validation</li></ul></li><li>Recognition log (Smart Data / Event Search via MxManagementCenter)</li><li>MOBOTIX events via MxMessageSystem</li><li>Two lists for individual actions (e.g. access granted/denied, alarm, etc.)</li><li>Free flow and Signaled mode</li></ul>
Maximum number of recognition areas	1
Maximum number of enrolled license plates	1000 per list
Meta Data / Statistic formats	JSON



Trial License	30-day trial license pre-installed
MxMessageSystem supported	Yes
Integration Interfaces	<ul style="list-style-type: none"> <li>■ MxMC Smart Data</li> <li>■ IP Notification</li> <li>■ Milestone X-Protect</li> <li>■ Vaxtor Helix</li> <li>■ generic 3rd party integration via XML</li> <li>■ compare supported camera's interfaces</li> </ul>
MOBOTIX Events	Yes
ONVIF Events	Yes (Generic Message event)

## Supported Container Codes

Supported Container Codes	Container code specification according to ISO 6346
---------------------------	--

## Scene Requirements

Character Height	20px - 50px
Maximum Vertical Angle	30°
Maximum Horizontal Angle	< 25°
Maximum Tilt Angle	< 25°

## Technical App Specifications

Synchronous / Asynchronous App	asynchronous
Simultaneous execution of other apps	No
Accuracy	min. 99% (considering scene requirements)
Processed frame rate	typ. 10 fps
Detection time	typ. 900 ms per Container

# Licensing Certified Apps

The following licenses are available for the Vaxtor Container Code Recognition App:

- **30-day test license** pre-installed
- **permanent commercial license**

The usage period begins with activation of the app interface (see [Activation of the Certified App Interface](#), p. 21)

**NOTE!** For buying or renewing a license, contact your MOBOTIX Partner.

**NOTE!** Apps are usually pre-installed with the firmware. In rare cases, apps must be downloaded from the website and installed. In this case see [www.mobotix.com](http://www.mobotix.com) > **Support** > **Download Center** > **Marketing & Documentation**, download and install the app.

## License Activation of Certified Apps in MxManagementCenter

After a test period commercial licenses must be activated for use with a valid license key.

### Online-Activation

After receiving the activation IDs, activate them in MxMC as follows:

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

Name	Url	Serial Number
mx10-10-38-40	10.10.38.40	10.10.38.40
mx10-22-10-30	10.22.10.30	10.22.10.30
M73 10-32-0-62	10.32.0.62	10.32.0.62

Fig. 2: Overview of Camera App Licenses in MxManagementCenter

**NOTE!** If necessary, correct the time set on the camera.

1. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

Name	Expiration	Quantity
MxWheelDetector	Permanent	Unlimited
iot_plugin_a	Permanent	Unlimited
iot_plugin_b	Permanent	Unlimited
iot_plugin_c	Permanent	Unlimited
iot_plugin_d	Permanent	Unlimited
iot_plugin_e	Permanent	Unlimited
iot_plugin_f	Permanent	Unlimited
iot_plugin_g	Permanent	Unlimited
iot_plugin_h	Permanent	Unlimited
iot_plugin_i	Permanent	Unlimited
iot_plugin_j	Permanent	Unlimited

Fig. 3: Overview of the licenses installed on the camera


**NOTE!** If necessary, correct the time set on the camera.

2. Enter a valid Activation ID and specify the number of licenses to install on this computer.
3. If you want to license another product, click on . In the new row, enter the appropriate Activation ID and the number of licenses you want.

## Licensing Certified Apps

### License Activation of Certified Apps in MxManagementCenter

---

4. To remove a line click .
5. When you have entered all Activation IDs, click **Activate License Online**. During activation, **MxMC** connects to the license server. This requires an Internet connection.

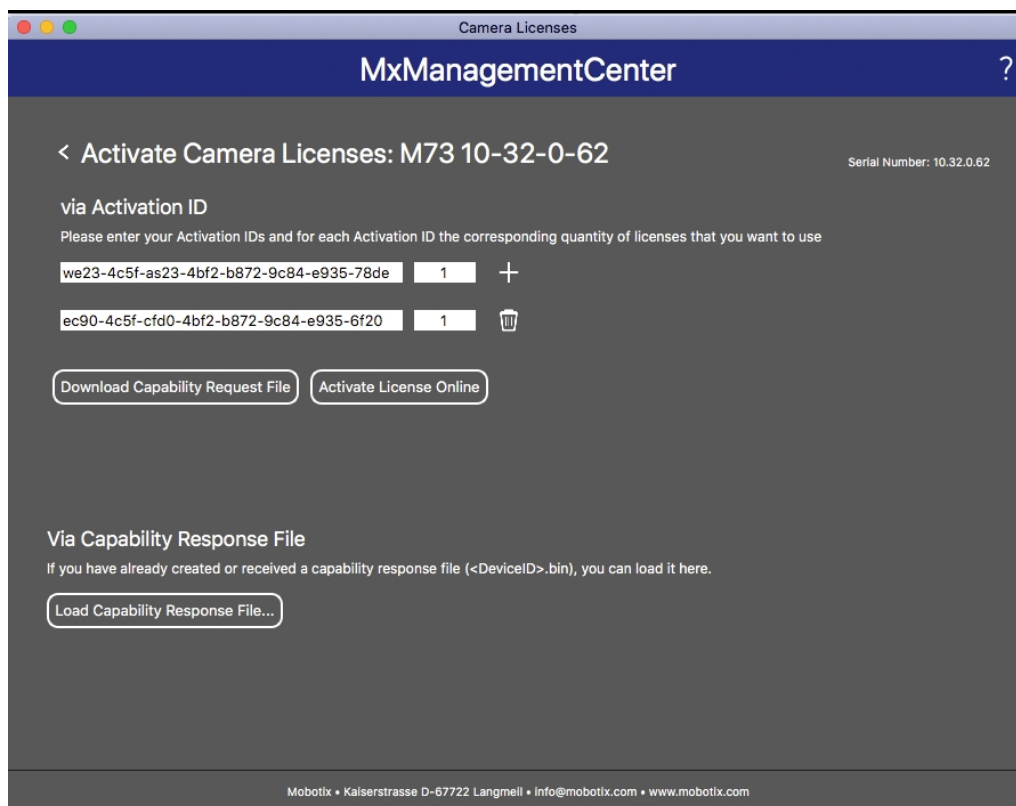


Fig. 4: Adding licenses

#### Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

#### Failed activation (missing internet connection)

If the license server cannot be reached, e.g. due to a missing internet connection, apps can also be activated offline. (see [Offline Activation](#), p. 12).

## Offline Activation

For offline activation, the partner/installer from whom you purchased the licenses can generate a capability response (.bin file) on the license server to activate their licenses.

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

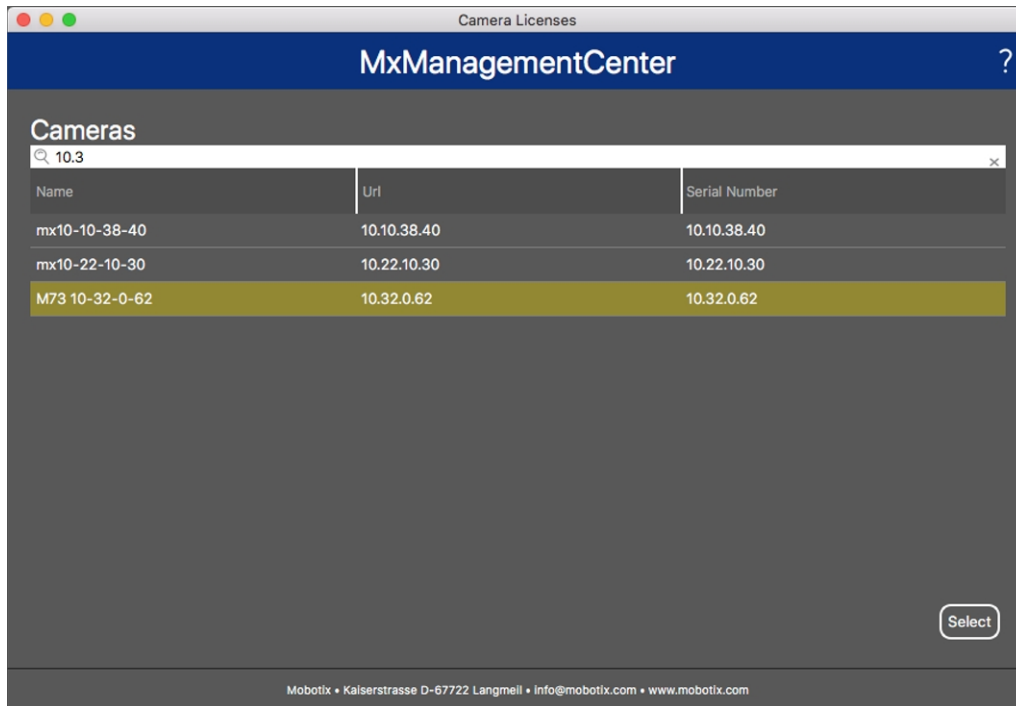


Fig. 5: Overview of Camera App Licenses in MxManagementCenter

**NOTE!** If necessary, correct the time set on the camera.

3. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

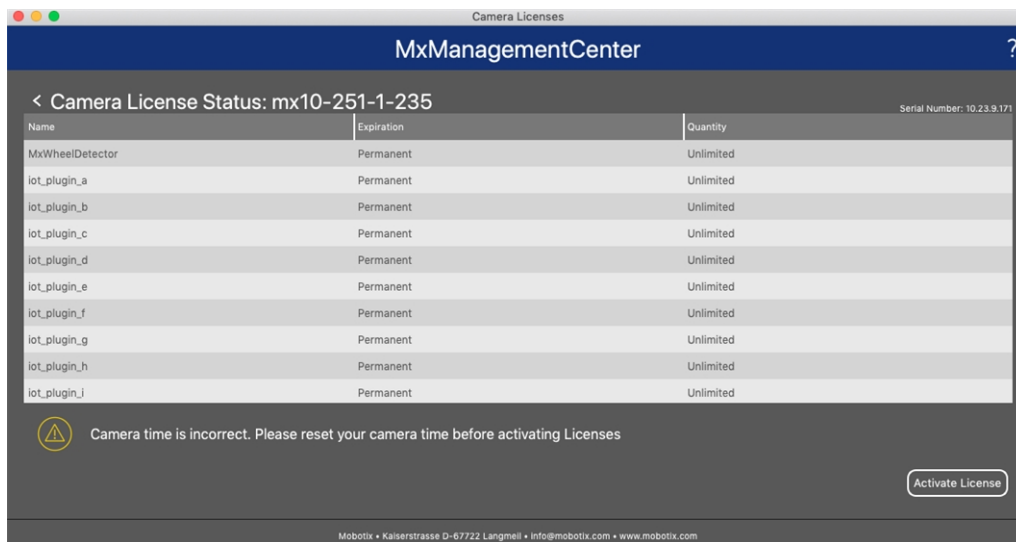


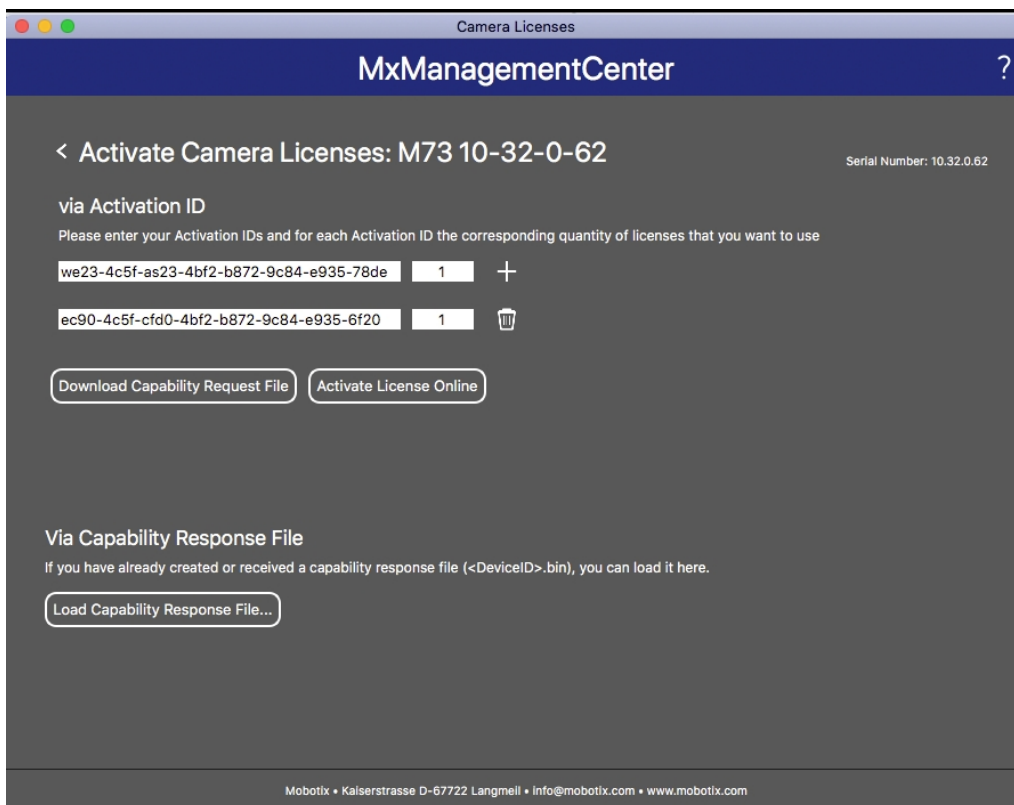


Fig. 6: Overview of the licenses installed on the camera

**NOTE!** If necessary, correct the time set on the camera.

4. Enter a valid Activation ID and specify the number of licenses to install on this computer.
5. If you want to license another product, click on . In the new row, enter the appropriate **Activation ID** and the number of licenses you want.
6. If necessary, click  to remove a line.
7. When you have entered all Activation IDs, click **Download Capability Request File (.lic)** and send it to your partner/installer.

**NOTE!** This file allows the partner / installer from whom you purchased the licenses to generate a capability response file (.bin) on the license server.



**Fig. 7: Adding licenses**

8. Click Load Capability Response File and follow the instructions.

### Successful activation


After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

## Managing Licenses in MxManagementCenter

In MxManagementCenter you can comfortably manage all licenses that have been activated for a camera.




1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

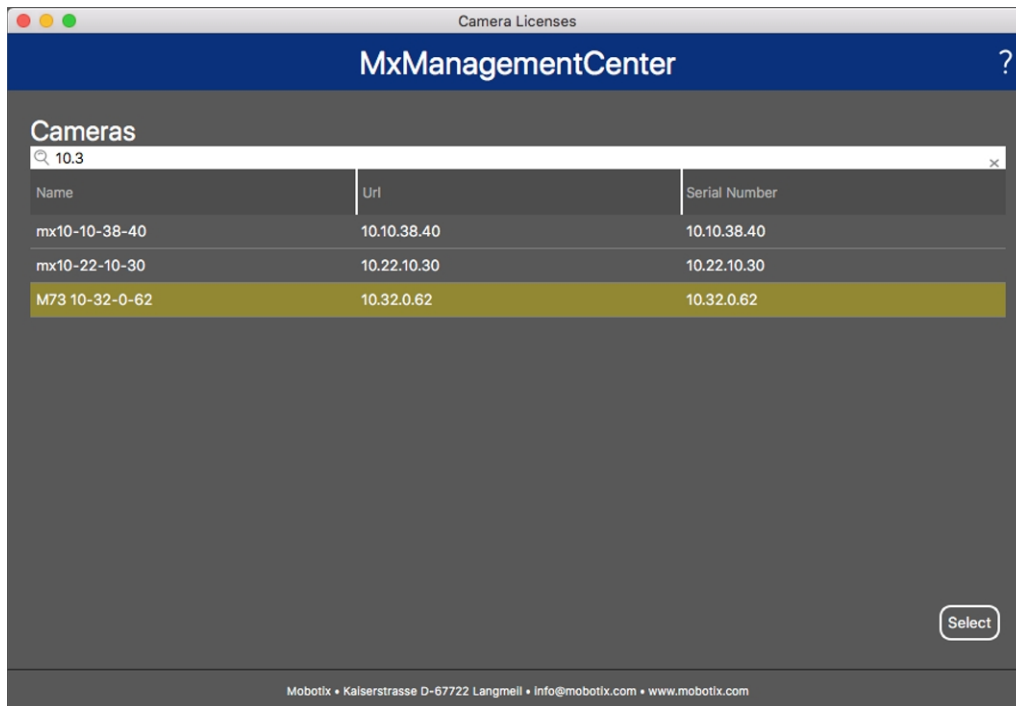

**Fig. 8: Overview of Camera App Licenses in MxManagementCenter**

An overview of the licenses installed on the camera may be displayed.

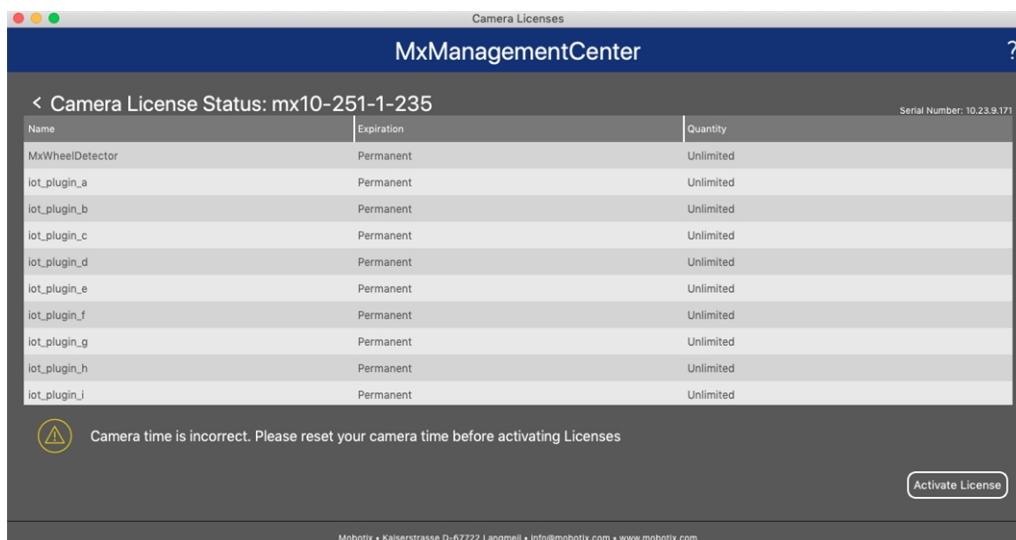

**Fig. 9: Overview of the licenses installed on the camera**

**NOTE!** If necessary, correct the time set on the camera.

Column	Explanation
Name	Name of the licensed app
Expiration	the time limit of the license
Quantity	Number of licenses purchased for a product.
Serial Number	Unique identification determined by MxMC for the device used. If problems occur during licensing, please have the device ID ready.

---

**Synchronize licenses with server**

When the program starts, there is no automatic comparison of the licenses between the computer and the license server. Therefore, click **Update** to reload the licenses from the server.

**Update licenses**

To update temporary licenses, click **Activate Licenses**. The dialog for updating/activating licenses opens.

**NOTE!** You need administrator rights to synchronize and update licenses.

# Camera, image and scene requirements

The camera should be setup so that the combination of the distance, the lens's focal length and the camera's resolution provide an image that can be accurately analyzed by the OCR. Therefore the following pre-requisites must be fulfilled for the scene:

## Quality of the container code to be captured in the image

- The container code must be high-contrast and clearly legible, i.e. as clean as possible, without dents or holes and well illuminated.
- The code must comply with the standard ISO 6346
- Minimum character height
  - The objective of a container code recognition system is to capture an image with a good container code. In order to achieve this all characters of container code should have a height between 20 and 50 pixels.

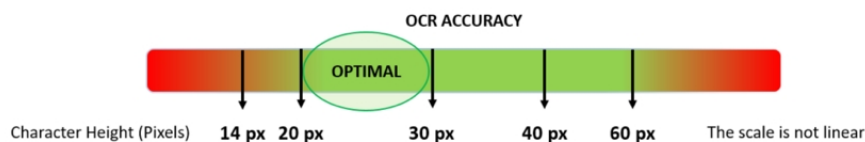


Fig. 10: Minimum character height

- Maximum rotation angle:
  - Vertical: < 30°
  - Slope: < 25°
  - Horizontal: < 25°

## Frame rate

The selection of the correct frame rate influences the recognition quality significantly. The recommendation is 10 fps.

## Shutter Speed (Exposure time)

Shutter speed, also known as the “exposure time”, is the length of time a camera shutter is open for in order to expose light onto the camera sensor. The shutter speed is measured in seconds, or fractions of a second. The bigger the denominator, the faster the speed. For example, 1/250th means one two-hundred-and-fiftieth of a second or four milliseconds.

(1 second = 1000 milliseconds)

## Examples for recommended exposure times

Scene (Street type)	minimum exposure time (sec)
Barrier or Gate	1/250 <sup>th</sup> (4 milliseconds)

**NOTE!** The exposure time must be adjusted according to the light conditions.

## Resolution

The resolution of the camera determines the amount of detail that can be captured. The smaller the object detail, the higher the resolution that is required. There are several factors that determine the detail captured:

- The resolution (pixel size) of the camera sensor. This sensor (normally CMOS) where the light eventually falls and a typical IP camera has a sensor resolution of 2 or 4 Megapixels.
- The resolution of the camera's electronics. Most CCTV cameras can support a minimum of 1920 x 1080 – but may be set to a lower resolution if not needed.
- The quality and focal length of the lens. The quality of the optics can play a part in challenging circumstances. The focal length (zoom factor) determines the field of view that can be seen.
- The quality of the images can be influenced by factors such as the type of lighting used.

## Examples for recommend resolutions

Scene (Street type)	minimum resolution
Barrier or Gate	800 x 600 px
Roadside Deployment	1280 x 720 px

## Focal length

The focal length of the lens determines how “zoomed in” the image is. It is usually expressed in millimeters (e.g., 6 mm, 25 mm, or 50 mm).

The focal length defines the angle of view (how much of the scene will be captured) and the magnification (how large individual elements will be). The longer the focal length, the narrower the angle of view and the higher the magnification. The shorter the focal length, the wider the angle of view and the lower the magnification.

In the case of zoom lenses, both the minimum and maximum focal lengths are stated, for example 10–40 mm.

## Examples for recommended focal length

Scene (Street type)	Distance between camera and container code (m)	recommended lens
Barrier or Gate	2 - 6 m	2 - 8 mm or similar
Access road	15 - 30 m	15 - 50 mm or similar

**NOTE!** The lens should be **IR corrected** to avoid out of focus images. IR Corrected lenses should be used on both day/night and monochrome cameras in all lighting conditions in order to achieve a crisp sharp image.

## Illumination

Container codes are normally painted onto the containers and are not reflective. Therefore sufficient ambient lighting must be used to adequately illuminate the text so that it can be read at a reasonably fast shutter speed without the camera adding too much gain to brighten the image. (a maximum gain of about 12 is advised).

**NOTE!** Adding gain effectively amplifies the video signal, including any noise which can result in a very grainy image which is prone to OCR errors.

## Recommendations on mounting and adjusting.

- If you want to recognize container codes on multiple lanes it is generally recommended to mount the camera on a crossbar.
- Shutter speed must be high enough to cut the light from car's headlights at night (usually it's about 1/1000). Keep in mind, that too high shutter speed may obscure the edges of the lines (especially shadows).
- Depth of focus is a very important parameter. If you are using a camera with a CS-mount lens, use a fixed lens. Fixed lens are better for container code recognition due to greater depth of focus. Megapixel lens is also strongly recommended.
- Respect changing light conditions (e. g. due to sunrises and sunset) when choosing the place of mounting. Direct sunlight beams can distort a picture. If the code is facing a direct sunlight consider using a lens with auto iris mode.
- If mounting a camera on a roadside pole check how the pole reacts to heavy cars or a convoy of cars. Some poles have tangible tremor, this could make container code recognition almost impossible.
- It is recommended to turn down WDR and BLC. In most cases, they will make the picture more pretty, but at the cost of smudging details like an edges of letters in the container code. For the same reason keep digital noise reduction as low as possible.

## Camera, image and scene requirements

### Recommendations on mounting and adjusting.

---

- On certain rare conditions there may be a cases of false detections e. g. because of recognizing image parts that structurally or semantically look similar to a container code(e. g. fences or ads). To minimize this:
- Adjust the region of interest accordingly. It may be a good idea to make it smaller, or change it's shape, omitting the parts, which potentially may be false detected.
- There may be cases, when the best performance will occur by changing angle of lens or moving the camera. In some cases, shooting a front container code is better.



# Activation of the Certified App Interface

**CAUTION!** The Vaxtor Container Code Recognition App does not consider obscure areas defined for the live image. Therefore there is no pixelation in obscure areas while configuring the app and during image analysis by the app.

**NOTE!** The user must have access to the setup menu ([http\(s\)://<Camera IP address>/control](http(s)://<Camera IP address>/control)). Therefore check the user rights of the camera.

## Activation of Certified Apps and events

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<Camera IP address>/control/app\\_config](http(s)://<Camera IP address>/control/app_config)).

**MOBOTIX**

M73 mx10-32-6-96 Certified App Settings

### General Settings

**Arming** ☒ Active Activate app service.

**Note:** It is not recommended to activate more than 2 apps.

**Resource monitor** ☐ Active Display camera actual load in live image.

**Note:** High performance impact. Use for testing purposes only.

**Custom font** ☐ Active Use custom font for the text displays in live image. To select or upload a custom font please go to [Manage Font File](#).

### App Settings

App	Activation	License	Explanation	Version	Delete	Delete application
Vaxtor Aircraft Identification Number	Trial	Trial available.	Please update the license.	1.3.6	Data	Delete application
<u>Vaxtor Containers Settings</u>	<input checked="" type="checkbox"/> 2	2022-04-15 (30 day trial).	Vaxtor Containers	1.3.6	Data (8.0K)	Delete application
Vaxtor UIC	Trial	Trial available.	Please update the license.	1.3.6	Data	Delete application

Set 3 factory Restore Close

Fig. 11: Activation of Certified Apps

## Activation of the Certified App Interface

### Recommendations on mounting and adjusting.

---

2. Under **General Settings** activate the **Arming** ① of the app service.
3. Under **App Settings** check the **Active** option ② and click **Set** ③ .
4. Click on the name of the App to be configured to open the Apps user interface.
5. For configuration of the App see [Configuration of Vaxtor Container Code Recognition App](#), p. 23.

# Configuration of Vaxtor Container Code Recognition App

**NOTE!** For best performance and results in container code processing make sure to have scene set up to meet the [Camera, image and scene requirements](#), p. 17.

**CAUTION!** The user must have access to the setup menu ([http\(s\)://<Camera IP address>/control](http(s)://<Camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<Camera IP address>/control/app\\_config](http(s)://<Camera IP address>/control/app_config)).
2. Click on the name of the **Vaxtor Container Code Recognition App**.

The configuration window of the app appears with the following options:

## Basic Settings

The following configurations should be taken into account:

**MOBOTIX**

D71 mx10-32-75-149 Vaxtor Containers Settings

**Vaxtor Containers**

<b>Read size and type</b>	<input type="checkbox"/>	Read container size and type information
<b>Layout</b>	Both	Read horizontal codes, vertical codes or both
<b>Same Code Delay</b>	60	Minimum elapsed time to report the same code twice (seconds)
<b>Working Mode</b>	freeflow	Signaled: The application will only attempt to read a container code when the signal is activated. Freeflow: The application continuously captures container codes.
<b>Enable MxMessage</b>	<input checked="" type="checkbox"/>	Send a mxmessage when a container code is read
<b>Enable Overlay</b>	<input checked="" type="checkbox"/>	Display an overlay on all the sensors when a container code is read
<b>Recognition Areas</b>	<input checked="" type="checkbox"/>	
<b>List Management</b>	<input checked="" type="checkbox"/>	

Set Factory Restore Close

Fig. 12: Basic settings

**Read size and type:** Check to read container size and type information

**Layout:** Select the which code layout types should be read. The options are.

**Both**

**Horizontal codes**

**Vertical codes**

**Same code delay:** Define the minimum elapsed time to report the same code twice (seconds).

**Working mode:** The following modes are available:

**Free flow:** The application continuously captures container code numbers.

**Signaled:** The application will only attempt to read a license plate number when the signal (trigger) is activated.

**NOTE!** In signaled mode an signal ID will be sent with the signal event.

**Enable MxMessage:** Check to enable the processing of container code events in the MxMessageSystem.

**Enable Overlay:** Check to enable the display of the container code recognition result in the live view.

## Recognition Areas

A Recognition Area, an area within the video frame where the OCR analytics takes place. You can draw a polygon and choose whether the area to look for plates in Inside or Outside this region. You can set multiple areas to respect complex situations.

**NOTE!** Using Recognition Area can decrease OCR processing time and also reduce false positives. The whole container code must be in or out the Recognition Area to pass the test.

**Recognition Areas**

**Recognition Area Type** inclusion   
 Recognition Area Type. Inclusion: only the usdots inside the recognition area will be detected. Exclusion: only the usdots outside the recognition area will be detected

**Show Recognition Area** ☐   
 Show the recognition area on the USDOT sensor

**Edit Recognition Area**   
 Define multiple detection zones as a rectangle. To do this, press the "Edit Rectangle" button. You can draw a rectangle in the camera image with the mouse. The corners are moved using the large handles.

Position: 599 x 275

Size: 265 x 388

Edit Rectangle

2

1

Fig. 13: Recognition Areas

**Recognition Area Type:** Check to activate the sending of events according to the following configuration

**Inclusion:** only the plates inside the recognition area will be detected.

**Exclusion:** only the plates outside the recognition area will be detected.

**Show Recognition Area:** Check to display the recognition area in the camera image.

**Edit Recognition Area:** Click Edit Rectangle to define one or more detection areas where Container Codes are expected will facilitate detection.

### Drawing a Recognition Area

1. Click the **plus** ① icon to switch into the live image.
2. In the live view simply click and drag a rectangular recognition area.
3. Drag the corner points to refine the recognition area.
4. In the top right corner of the live view click **Submit** to adopt the coordinates of the rectangle.
5. Optionally click the **bin** icon ② to delete the recognition area.

# List Management

You can define a black list and a white list with up to 1000 container codes per list. If a container code from one of the lists is recognized, a corresponding event is sent within the MxMessageSystem of the camera.

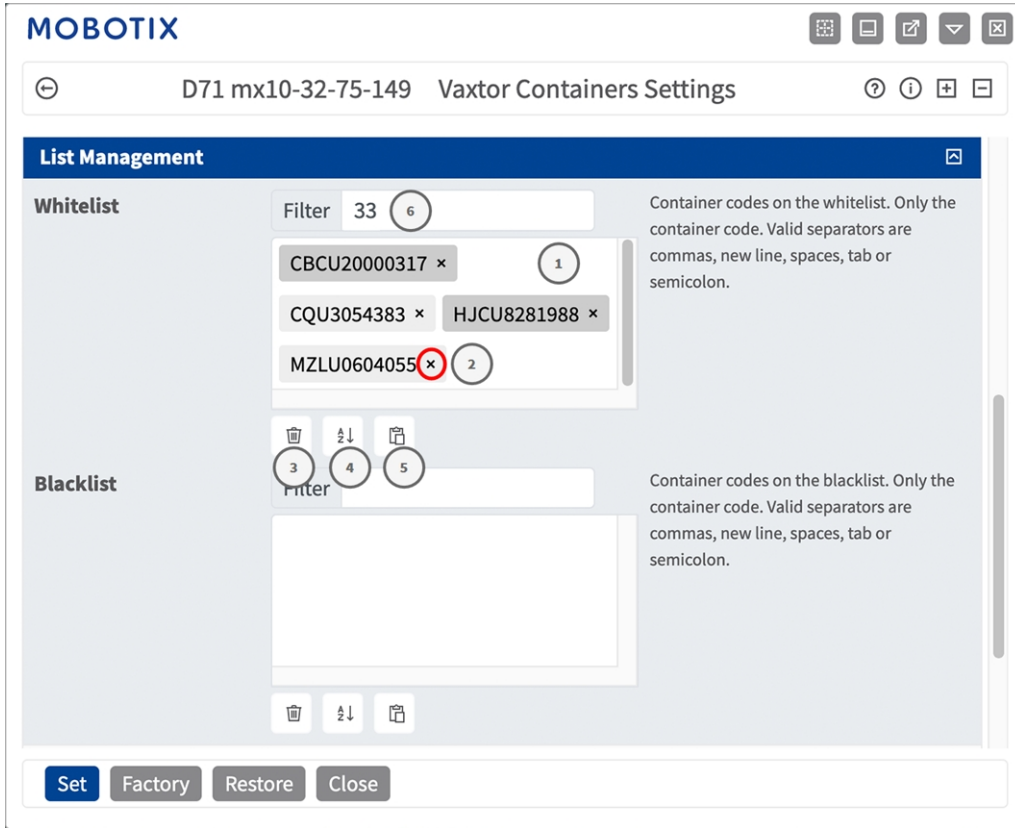


Fig. 14: Black and white lists

## Adding a container code to a list

1. Enter the container code text into the text field ① and click **Enter**.

## Adding multiple license plates from a text file

1. Make sure that your text file contains one license plate per line.
2. Copy the relevant license plates from the text file and paste them into the text field ① .

## Deleting a container code from a list

1. Click on the small x ② to the right of the license plate number.

## Deleting all container codes from a list

1. Click the trash icon ③ .



### Sorting all container codes from a list alphabetically

1. Click the sort icon ④ .

### Copy all container codes from a list to the clip board

1. Click the copy to clipboard icon ⑤ .

### Filtering container codes

1. Enter the license plate or parts of it into the filter text field ⑥ . Only license plates containing the filter text are displayed accordingly.

## Video

In the video tab you can specify video quality of the video to be analyzed.

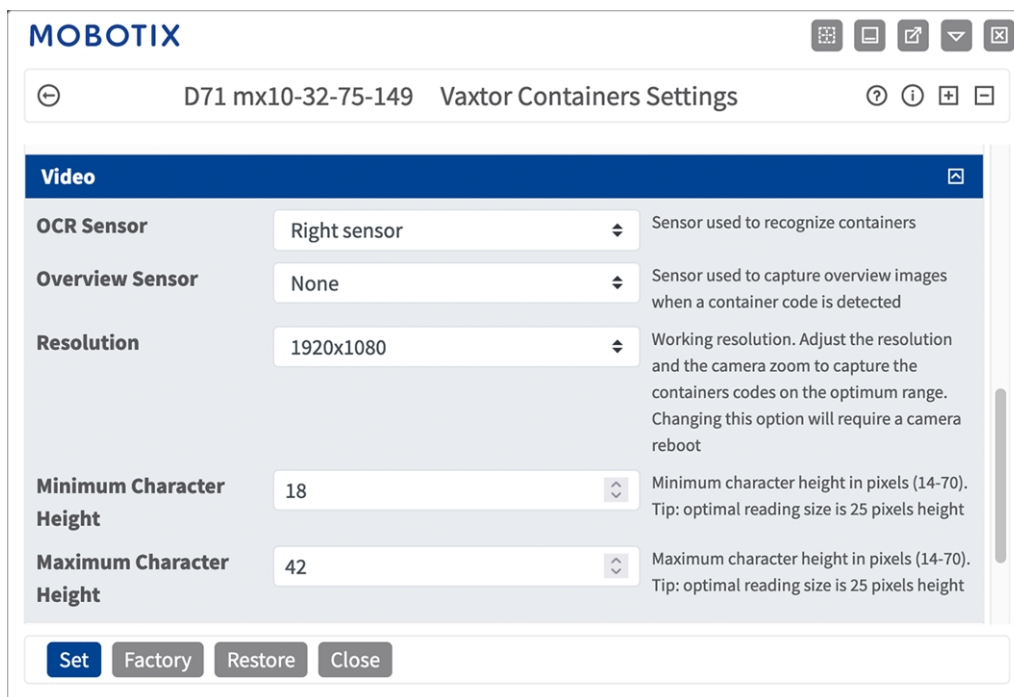


Fig. 15: Video

**OCR sensor:** Select the camera sensor to be used for container code recognition.

**NOTE!** Changing this option requires a camera reboot.

**Overview Sensor:** Optionally select a sensor used to capture overview images when a plate is detected.

**Resolution:** Set the working resolution (current maximum is 1080p). Adjust the resolution and the camera zoom to capture the codes on the optimum range.

**NOTE!** Changing this option requires a camera reboot.

**Minimum Character Height:** the minimum height that a container code’s characters should be before being read. The characters should be about 20-30 pixels high.

**Maximum Character Height:** the maximum height is about 20-30 pixels.

**NOTE!** The recommended difference between the min and max heights is about 10 pixels.

# OCR

In the OCR (Optical Character Recognition) tab you can set parameters to ensure the best possible recognition results.



Fig. 16: OCR

**Analytics Complexity:** This is the complexity of the analytics to be applied during the OCR engine’s stage of plate reading. Set this according to the OCR mode and type of traffic expected. There are three options.

**Low:** Recommended for very high-speed traffic where the OCR needs to work faster and your preference is for plate detection over perfect recognition.

**Medium (Default)** Recommended when the OCR mode is set to free-flow.

**High:** Recommended when the OCR mode is set to signal (triggered).

**CAUTION!** Higher complexities give more accurate reading but make the ALPR engine run slower.

# Reporting

Vaxtor Container Code Recognition App is able to output all plate reads in real time using a variety of standard protocols so that the plate reads can be accepted remotely by a variety of programs including Vaxtor’s powerful Back Office - Helix, which can accept and store plate reads in real time from hundreds cameras. By selecting one of the listed protocols, a sub-menu will appear with fields for setting up parameters such as remote IP addresses etc.

▼ Reporting		
Retry Notifications	<input checked="" type="checkbox"/>	Retry failed notifications (Helix-6 and JSON only)
Retry Period	1	Amount of seconds between notification retries
Send Test	<input type="checkbox"/>	Send a fake read (TEST) when settings are stored or when the camera is started
<b>Text Overlay</b>		
Overlay Template	\$date\$ - \$containercode\$	Template to use on the overlay, check the manual for available keywords
Fade out timer	0	Amount of seconds that the overlay will be visible or 0 to make it perpetual
Show container code image	<input type="checkbox"/>	Display a small image with the container code detected
Image position (x)	5	Coordinate position for the image (x)
Image position (y)	50	Coordinate position for the image (y)
<b>MxMessage</b>		
MxMessage Template	de": "\$confidencecode\$"	Defines the template of customized part of the MxMessage. Check the manual for available keywords
Subpath		
<b>Vaxtor Helix-6</b>		
Enable	<input type="checkbox"/>	Send all results to the configured Helix-6 server
<b>JSON</b>		
Enable	<input type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
<b>XML</b>		
Enable	<input type="checkbox"/>	Enable XML HTTP/HTTPS POST reporting
<b>Milestone Analytic Event</b>		
Enable	<input type="checkbox"/>	Enable analytic event reporting
<b>TCP Server</b>		
Enable	<input type="checkbox"/>	Enable TCP server reporting

Fig. 17: Reporting

**Retry notifications:** Check to retry failed notifications (Helix-6 and JSON only).

**Retry period:** Amount of seconds between notification retries

**Send test:** Check to send a fake read (TEST) when settings are stored or when the camera is started.

#### Text Overlay

**Overlay Template:** Define template to use on the overlay. Check the [Template Fields](#) for available keywords.

**Fade out timer:** Set the amount of seconds that the overlay will be visible or 0 to make it perpetual.

**Show container code image:** Check to display a small image with the container code detected.

**Image position (x):** x coordinate position for the image.

**Image position (y):** y coordinate position for the image.

### MxMessage

**MxMessage Template:** Define template of customized part of the MxMessage . Check the [Template Fields](#) for available keywords.

**Subpath:** Define a subpath for the MxMessage. Check the [Template Fields](#) for available keywords.

**Vaxtor Helix-6** : Helix-6 protocol is an encrypted version of the Vaxtor protocol.

**Enable** : Check to send all results to the configured Helix-6 server.

**JSON** : JSON is a compact data format in an easy-to-read text form for data exchange between applications.

**Enable** : Check to enable JSON HTTP/HTTPS POST reporting.

**XML** : XML is a compact data format in an easy-to-read text form for data exchange between applications.

**Enable** : Enable XML HTTP/HTTPS POST reporting

**Milestone Analytic Event** : With the Analytics Events feature it is possible to send MAD (Milestone Alert Data) formatted alerts to the Milestone XProtect event server over TCP/IP.

**Enable** : Enable analytic event reporting

**TCP Server:**

**Enable** : Enable TCP server reporting

## Variables / Template Fields

### Vaxtor Container Code Recognition App only reserved variables

Template field	Description
\$confidencecode\$	Validation digit. (1=unverified, 2=Owner verified, 3=Owner and CD verified)
\$containercode\$	Container code number
\$controldigit\$	Container Code Control digit
\$direction\$	(0: unknown, 1: left, 2: right)
\$directionstr\$	(Unknown, Left, Right)
\$numdigits\$	Number of digits in the code
\$ownercity\$	Allocated city of the owner
\$ownercode\$	Allocated code of the owner
\$ownercompany\$	Owner company name
\$serialcode\$	Container Serial Code
\$sizetypecode\$	Container size & type code

### Shared reserved variables

Variable	Description
\$absolutebottom\$	Absolute bottom position of the code 0..1 with 2 decimal places
\$absoluteleft\$	Absolute left position of the code 0..1 with 2 decimal places
\$absoluteright\$	Absolute right position of the code 0..1 with 2 decimal places
\$absolutetop\$	Absolute top position of the code 0..1 with 2 decimal places
\$blacklist\$	If the code is on the black list, the text in the 'if clause' will be displayed
\$bottom\$	Bottom coordinate for the code on the image (pixels)
\$charheight\$	Average charheight (pixels)
\$codeimage\$	Code cropped image
\$codeimagesize\$	Code cropped image size in bytes
\$confidence\$	Global confidence (0-100)
\$date\$	Timestamp in ISO8601 format
\$etx\$	
\$country\$:	3 letter country code
\$day\$	UTC day
\$height\$	OCR image height
\$hour\$	UTC hour
\$image\$	JPEG encoded in base64
\$imagesize\$	Size of saved complete image
\$ip\$	Camera IP address
\$left\$	Left coordinate for the code on the image (pixels)
\$localday\$	Camera local time day
\$locahour\$	Camera local time hours
\$localmin\$	Camera local time minutes
\$localmonth\$	Camera local time month
\$localsec\$	Camera local time seconds
\$localyear\$	Camera local time year
\$min\$	UTC minute

Variable	Description
\$month\$	UTC month
\$nolist\$	If the code is not on a list, the test in the ‘if clause’ will be displayed
\$ocrtime\$	OCR analytic time in milliseconds
\$overviewimage\$	Overview JPEG image encoded in base64\$month\$
\$overviewimagesize\$	Overview image size in bytes
\$patch\$	JPEG of the plate crop image encoded in base64
\$patchsizeinbytes\$	Size of the image of recognised text (the patch image)
\$processingtime\$	Processing time in milliseconds
\$readconfidence\$	Global confidence value
\$right\$	Right coordinate for the code on the image (pixels)
\$sec\$	UTC seconds
\$sensor\$	Sensor (0, 1)
\$signalid\$	ID string specified when a read is triggered via http request
\$stx\$	Character control STX in HEX for Start of Text (02)
\$timestamp\$	yyyy-MM-ddTHH:mm:sszzz
\$top\$	Top coordinate for the code on the image (pixels)
\$width\$	OCR image width
\$whitelist\$	If the code is on the white list, the text in the ‘if clause’ will be displayed
\$year\$	UTC year

Advanced

In this section you find useful tools for calibration and trouble shooting.

▼ Advanced

Log level

info

Info: Default log level. Debug: Enable debug log level, useful to diagnostic messages recieved from third parties. Trace: Enable trace log level, useful to diagnostic messages send to third parties.

Show Log File On Screen

☐

If enabled, the on-screen log file will be displayed on the selected sensor

Sensor

Right sensor

Sensor where the on-screen log file is displayed

Show Calibration Grid

☐

If enabled, display on the OCR sensor a 20 pixels height grid

Fig. 18: Advanced



**Log level:** Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

**Info:** Default loge level

**Trace:** Select e. g. for diagnostic messages received from third parties

**Debug:** Select for complete log files for debug purposes

**Show log file on screen:** Check to display the on-screen log file on the selected sensor

**Sensor:** Select the sensor on which the on-screen log file is displayed

**Show Calibration Grid:** Check to display on the OCR sensor a 20 pixels height grid

## Storing the Configuration

To store the configuration you have the following options:



Fig. 19: Storing the configuration

- Click on the **Set** button to activate your settings and to save them until the next reboot of the camera.
- Click on the **Factory** button to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click on the **Restore** button to undo your most recent changes that have not been stored in the camera permanently.
- Click on the **Close** button to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

## Advanced

In this section you find useful tools for calibration and trouble shooting.

▼ Advanced		
Log level	info	Info: Default log level. Debug: Enable debug log level, useful to diagnostic messages recieved from third parties. Trace: Enable trace log level, useful to diagnostic messages send to third parties.
Show Log File On Screen	<input type="checkbox"/>	If enabled, the on-screen log file will be displayed on the selected sensor
Sensor	Right sensor	Sensor where the on-screen log file is displayed
Show Calibration Grid	<input type="checkbox"/>	If enabled, display on the OCR sensor a 20 pixels height grid

Fig. 20: Advanced

**Log level:** Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

**Info:** Default loge level

**Trace:** Select e. g. for diagnostic messages received from third parties

**Debug:** Select for complete log files for debug purposes

**Show log file on screen:** Check to display the on-screen log file on the selected sensor

**Sensor:** Select the sensor on which the on-screen log file is displayed

**Show Calibration Grid:** Check to display on the OCR sensor a 20 pixels height grid

## Storing the Configuration

To store the configuration you have the following options:



**Fig. 21: Storing the configuration**

- Click on the **Set** button to activate your settings and to save them until the next reboot of the camera.
- Click on the **Factory** button to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click on the **Restore** button to undo your most recent changes that have not been stored in the camera permanently.
- Click on the **Close** button to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

# MxMessageSystem

## What is MxMessageSystem?

MxMessageSystem is a communication system based on name oriented messages. This means that a message must have a unique name with a maximum length of 32 bytes.

Each participant can send and receive messages. MOBOTIX cameras can also forward messages within the local network. This way, MxMessages can be distributed over the entire local network (see Message Area: Global).

For example, a MOBOTIX 7 series camera can exchange a MxMessage generated by a camera app with an Mx6 camera that does not support certified MOBOTIX apps.

## Facts about MxMessages

- 128-bit encryption ensures privacy and security of message content.
- MxMessages can be distributed from any camera of the Mx6 and 7 series.
- The message range can be defined individually for each MxMessage.
  - **Local:** Camera expects a MxMessage within its own camera system (e.g. through a Certified App).
  - **Global:** the camera expects a MxMessage that is distributed in the local network by another MxMessage device (e.g. another camera of the 7 series equipped with a certified MOBOTIX app).
- Actions that the recipients are to perform are configured individually for each participant of the MxMessageSystem.

# MxMessageSystem: Processing the automatically generated app event

## Checking automatically generated app events

**NOTE!** After successfully activating the app (see [Activation of the Certified App Interface, p. 21](#)), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. VaxOCRContainer).

MOBOTIX S74 mx10-32-24-156 Event Overview

Environment Events

PI

The selected sensor is currently not available!

☒ Inactive

☐ Delete

Edit...

Image Analysis Events

AS

MxActivitySensor

☐ Inactive

☐ Delete

Edit...

VM

Video Motion

☒ Inactive

☐ Delete

VM2

Video Motion

☒ Inactive

☐ Delete

Internal Events

No profiles defined.

Edit...

Message Events

VaxOCRContainer

MxMessageSystem

☐ Inactive

☐ Delete

Edit...

MxAnalytics

MxMessageSystem

☐ Inactive

☐ Delete

FFLPRAM

MxMessageSystem

☐ Inactive

☐ Delete

Meta Events

No profiles defined.

Edit...

Signal Events

SI

Signal Input

☒ Inactive

☐ Delete

Edit...

UC

UC Soft Button

☐ Inactive

☐ Delete

Time Events

PE

Periodic Event

☒ Inactive

☐ Delete

Edit...

Set

Restore

Close

Fig. 22: Example: Generic message event from Vaxtor Container Code Recognition App

- Click **Edit**<sup>①</sup> to display a selection of all configured message events.

Attribute	Value	Explanation
IP Receive	8000	Port: TCP port to listen on.
Events	VaxOCRContainer	Inactive Delete
	5	Event Dead Time: Time to wait [0..3600 s] before the event can trigger anew.
Event Sensor Type	<input type="radio"/> IP Receive <input checked="" type="radio"/> MxMessageSystem	Event Sensor Type: Choose the message sensor.
	VaxOCRContainer	Event on receiving a message from the MxMessageSystem.
	Local	Message Name: Defines an MxMessageSystem name to wait for.
	No Filter	Message Range: There are two different ranges of message distribution: Global: across all cameras within the current LAN. Local: camera internal.
		Filter Message Content: Optionally choose how to ignore messages containing Filter Value. Select No Filter to trigger on any message with defined Message Name.

Fig. 23: Example: Generic message event details - no filter

## Action handling - Configuration of an action group

### CAUTION!

To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)://<Camera IP address>/control/settings](http(s)://<Camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor Container Code Recognition App event.

- In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<Camera IP address>/control/actions](http(s)://<Camera IP address>/control/actions)).

Name	Arming	Events & Actions	Edit
VisualAlarm <input type="checkbox"/> Delete	Off (No time table)	(select all) VA	Edit...
Vax_Container_Action <input type="checkbox"/> Delete	Enabled (No time table)	MSG SD	Edit... <sup>②</sup>

Add new group<sup>①</sup>

Set Restore Close

Fig. 24: Defining Action Groups

2. Click **Add new group**① and give a meaningful name.
3. Click **Edit**②, to configure the group.

MOBOTIX S74

mx10-32-24-156 Action Group Details

?

i

General Settings	Value	Explanation
<b>Action Group</b>	<div>Vax_Container_Action</div> <div>Enabled ①</div> <div>(No time table)</div>	<b>Name:</b> The name is purely informational.  <b>Arming:</b> Controls this action group: <i>Enabled:</i> activate the group. <i>Off:</i> deactivate the group. <i>SI:</i> group armed by signal input. <i>CS:</i> group armed by custom signal as defined in <a href="#">General Event Settings</a> .  <b>Time Table:</b> Time table for this action profile ( <a href="#">Time Tables</a> ).
<b>Event Selection</b>	<div>(Image Analysis: VM2)</div> <div>Message: VaxOCRContainer ②</div> <div>Message: MxAnalytics</div> <div>Message: FFLPRAM</div> <div>(Signal: SI)</div>	<b>Event Selection:</b> Select the events which will trigger the actions below. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <a href="#">activated</a> first.
<b>Action Details</b>	<div>5</div> <div>Simultaneously</div>	<b>Action Deadtime:</b> Time to wait [0..3600 s] before a new action can take place.  <b>Action Chaining:</b> Choose how the status of each subaction influences the execution of all others. <i>Simultaneously:</i> All actions are executed simultaneously. <i>Simultaneously until first success:</i> Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated. <i>Consecutively:</i> All actions are executed in the specified order. <i>Consecutively until first success:</i> Consecutive execution, but as soon as one action <i>succeeds</i> , the following actions are not executed. <i>Consecutively until first failure:</i> Consecutive execution, but as soon as one action <i>fails</i> , the following actions are not executed.
Actions	Value	Explanation
<div>Add new action ③</div>		

Set

Factory

Restore

Close

Fig. 25: Configuring an Action Group

1. Enable **Arming**① of the Action Group.
2. Select your message event in the **Event selection** list ②. To select multiple events, hold the shift key.
3. Click **Add new Action**③.
4. Select a proper action from list **Action Type and Profile**④.

**Action Details**

FTP: FTP-Day-Period  
 E-Mail: AlarmMail  
 E-Mail: NotifyMail  
 E-Mail: MailWithMxPEGClip  
 E-Mail: MailWithStoryImages  
 E-Mail: MailSystemStatus24  
 IP Notify: MxMC-Alarm  
 IP Notify: MxMC-Liveview  
 IP Notify: MxMC-Gridview  
 IP Notify: TCPMessage  
 IP Notify: HttpRequest  
 IP Notify: ObscureAreaOn  
 IP Notify: ObscureAreaOff  
 Play Sound: StandardSounds  
 Visual Alarm: Red Frame  
 Image Profile: Ultra HD  
 Image Profile: QXGA

**Actions**

**Action 1**  
☐ Delete  
 0

**Set** **Factory** **Restore** **Close**

**Action Deadttime:**  
 Time to wait [0..3600 s] before a new action can take place.

**Action Chaining:**  
 Choose how the status of each subaction influences the execution of all others.  
*Simultaneously:* All actions are executed simultaneously.  
*Simultaneously until first success:* Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated.  
*Consecutively:* All actions are executed in the specified order.  
*Consecutively until first success:* Consecutive execution, but as soon as one action succeeds, the following actions are not executed.  
*Consecutively until first failure:* Consecutive execution, but as soon as one action fails, the following actions are not executed.

**Explanation**

**Action Type and Profile:**  
 Select the Action Profile to be executed.

**Action Timeout or Duration:**  
 If this action runs longer than the time specified [0..3600 s], it is aborted and returns an error; 0 to deactivate.

Fig. 26: Select Action Type- and Profile

**NOTE!**

If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- Click on the **Set** button at the end of the dialog box to confirm the settings.

## Action settings - Configuration of the camera recordings

- In the camera web interface, open: **Setup Menu / Event Control / Recording**([http\(s\)/<Camera IP address>/control/recording](http(s)/<Camera IP address>/control/recording)).

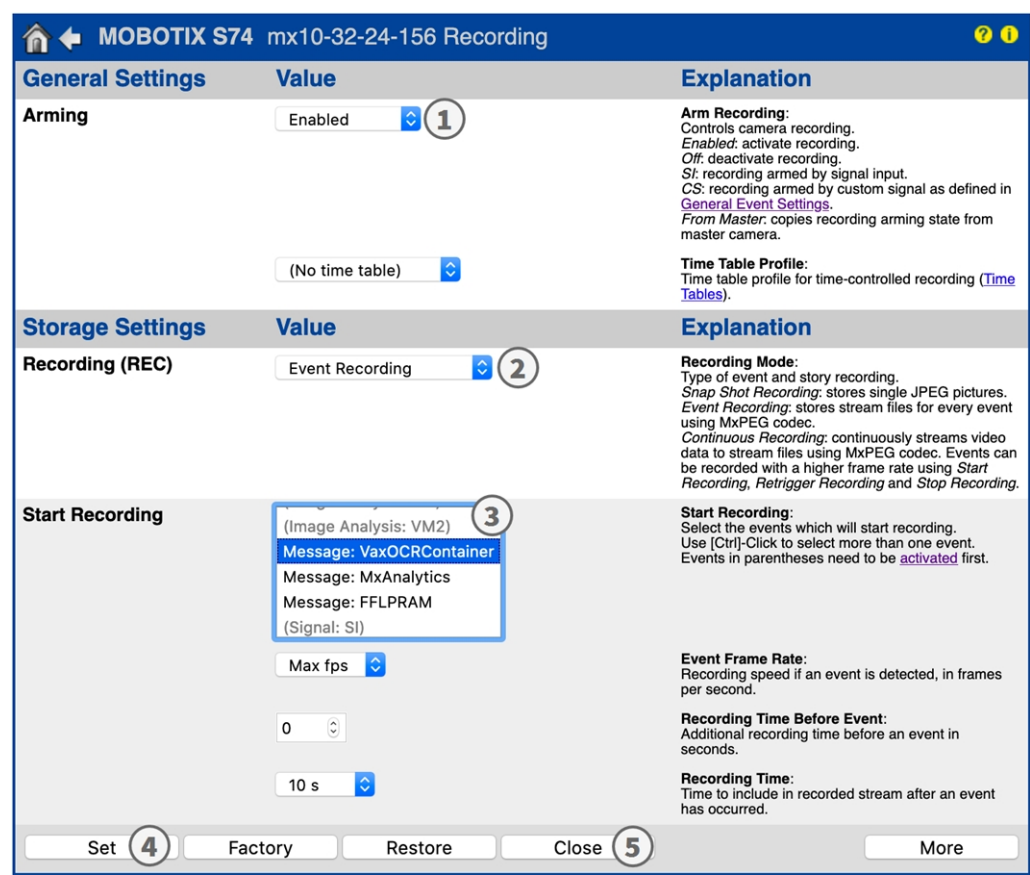


Fig. 27: Configuration of camera recording settings

2. Activate **Arm Recording** ① .
3. Under **Storage Settings** / **Recording (REC)** select a **Recording mode** ② . The following modes are available:
  - Snap Shot Recording
  - Event Recording
  - Continuous Recording
4. In list **Start recording** ③ select the message event just created.
5. Click on the **Set** ④ button at the end of the dialog box to confirm the settings.
6. Click on **Close** ⑤ to save your settings permanently.

**NOTE!**  
Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.



# Action handling - Configuration of an action group

**CAUTION!** To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)/<Camera IP address>/control/settings](http(s)/<Camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor Container Code Recognition App event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<Camera IP address>/control/actions](http(s)://<Camera IP address>/control/actions)).

Name	Arming	Events & Actions	Edit
VisualAlarm <input type="checkbox"/> Delete	Off (No time table)	(select all) VA	Edit...
Vax_Container_Action <input type="checkbox"/> Delete	Enabled (No time table)	MSG SD	Edit... ②

Add new group ①

Set   Restore   Close

**Fig. 28: Defining Action Groups**

2. Click **Add new group**① and give a meaningful name.
3. Click **Edit**②, to configure the group.

MOBOTIX S74

mx10-32-24-156

Action Group Details

General Settings	Value	Explanation
Action Group	<div>Vax_Container_Action</div> <div>Enabled 1</div> <div>(No time table)</div>	<p><b>Name:</b> The name is purely informational.</p> <p><b>Arming:</b> Controls this action group: <i>Enabled:</i> activate the group. <i>Off:</i> deactivate the group. <i>SI:</i> group armed by signal input. <i>CS:</i> group armed by custom signal as defined in <a href="#">General Event Settings</a>.</p> <p><b>Time Table:</b> Time table for this action profile (<a href="#">Time Tables</a>).</p>
Event Selection	<div>(Image Analysis: VM2)</div> <div>Message: VaxOCRContainer 2</div> <div>Message: MxAnalytics</div> <div>Message: FFLPRAM</div> <div>(Signal: SI)</div>	<p><b>Event Selection:</b> Select the events which will trigger the actions below. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <a href="#">activated</a> first.</p>
Action Details	<div>5</div> <div>Simultaneously</div>	<p><b>Action Deadtime:</b> Time to wait [0..3600 s] before a new action can take place.</p> <p><b>Action Chaining:</b> Choose how the status of each subaction influences the execution of all others. <i>Simultaneously:</i> All actions are executed simultaneously. <i>Simultaneously until first success:</i> Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated. <i>Consecutively:</i> All actions are executed in the specified order. <i>Consecutively until first success:</i> Consecutive execution, but as soon as one action <i>succeeds</i>, the following actions are not executed. <i>Consecutively until first failure:</i> Consecutive execution, but as soon as one action <i>fails</i>, the following actions are not executed.</p>

Actions

Value

Explanation

Add new action 3

Set

Factory

Restore

Close

Fig. 29: Configuring an Action Group

1. Enable **Arming**1 of the Action Group.
2. Select your message event in the **Event selection** list 2 . To select multiple events, hold the shift key.
3. Click **Add new Action**3 .
4. Select a proper action from list **Action Type and Profile**4 .

Action Details

FTP: FTP-Day-Period

E-Mail: AlarmMail

E-Mail: NotifyMail

E-Mail: MailWithMxPEGClip

E-Mail: MailWithStoryImages

E-Mail: MailSystemStatus24

IP Notify: MxMC-Alarm

IP Notify: MxMC-Liveview

IP Notify: MxMC-Gridview

IP Notify: TCPMessage 4

IP Notify: HttpRequest

IP Notify: ObscureAreaOn

IP Notify: ObscureAreaOff

Play Sound: StandardSounds

Visual Alarm: Red Frame

Image Profile: Ultra HD

Image Profile: QXGA

Actions

Action 1

FTP: FTP-Webcam

0

Set 5

Factory

Restore

Close

**Action Deadtime:**  
Time to wait [0..3600 s] before a new action can take place.

**Action Chaining:**  
Choose how the status of each subaction influences the execution of all others.  
*Simultaneously:* All actions are executed simultaneously.  
*Simultaneously until first success:* Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated.  
*Consecutively:* All actions are executed in the specified order.  
*Consecutively until first success:* Consecutive execution, but as soon as one action *succeeds*, the following actions are not executed.  
*Consecutively until first failure:* Consecutive execution, but as soon as one action *fails*, the following actions are not executed.

**Action Type and Profile:**  
Select the Action Profile to be executed.

**Action Timeout or Duration:**  
If this action runs longer than the time specified [0..3600 s], it is aborted and returns an error; 0 to deactivate.

Fig. 30: Select Action Type- and Profile

**NOTE!**

If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- Click on the **Set** button at the end of the dialog box to confirm the settings.

## Action settings - Configuration of the camera recordings

- In the camera web interface, open: **Setup Menu / Event Control / Recording**(http(s)/<Camera IP address>/control/recording).

General Settings	Value	Explanation
Arming	Enabled <span>1</span>	<b>Arm Recording:</b> Controls camera recording. <i>Enabled:</i> activate recording. <i>Off:</i> deactivate recording. <i>SI:</i> recording armed by signal input. <i>CS:</i> recording armed by custom signal as defined in <a href="#">General Event Settings</a> . <i>From Master:</i> copies recording arming state from master camera.
	(No time table)	<b>Time Table Profile:</b> Time table profile for time-controlled recording ( <a href="#">Time Tables</a> ).
Storage Settings	Value	Explanation
Recording (REC)	Event Recording <span>2</span>	<b>Recording Mode:</b> Type of event and story recording. <i>Snap Shot Recording:</i> stores single JPEG pictures. <i>Event Recording:</i> stores stream files for every event using MxPEG codec. <i>Continuous Recording:</i> continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using <i>Start Recording</i> , <i>Retrigger Recording</i> and <i>Stop Recording</i> .
Start Recording	(Image Analysis: VM2) <span>3</span> Message: VaxOCRContainer Message: MxAnalytics Message: FFLPRAM (Signal: SI) Max fps 0 10 s	<b>Start Recording:</b> Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <a href="#">activated</a> first.  <b>Event Frame Rate:</b> Recording speed if an event is detected, in frames per second.  <b>Recording Time Before Event:</b> Additional recording time before an event in seconds.  <b>Recording Time:</b> Time to include in recorded stream after an event has occurred.

Set 4 Factory Restore Close 5 More

Fig. 31: Configuration of camera recording settings

- Activate **Arm Recording** 1 .
- Under **Storage Settings / Recording (REC)** select a **Recording mode** 2 . The following modes are available:
  - Snap Shot Recording
  - Event Recording

- Continuous Recording
- In list **Start recording** ③ select the message event just created.
  - Click on the **Set** ④ button at the end of the dialog box to confirm the settings.
  - Click on **Close** ⑤ to save your settings permanently.

**NOTE!** Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

# Action settings - Configuration of the camera recordings

- In the camera web interface, open: **Setup Menu / Event Control / Recording**(http(s)/<Camera IP address>/control/recording).

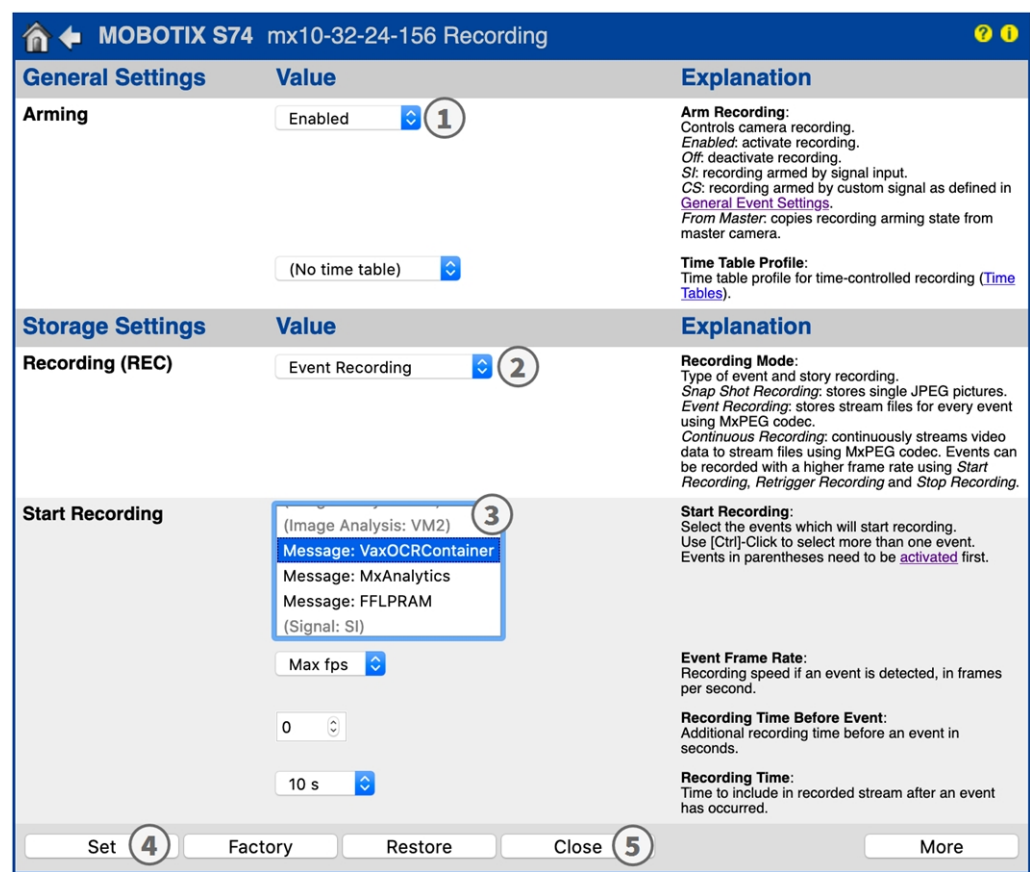


Fig. 32: Configuration of camera recording settings


2. Activate **Arm Recording**<sup>①</sup> .
3. Under **Storage Settings / Recording (REC)** select a **Recording mode**<sup>②</sup> . The following modes are available:
  - Snap Shot Recording
  - Event Recording
  - Continuous Recording
4. In list **Start recording**<sup>③</sup> select the message event just created.
5. Click on the **Set**<sup>④</sup> button at the end of the dialog box to confirm the settings.
6. Click on **Close**<sup>⑤</sup> to save your settings permanently.

**NOTE!** Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

# Advanced Configuration: Processing the meta data transmitted by apps
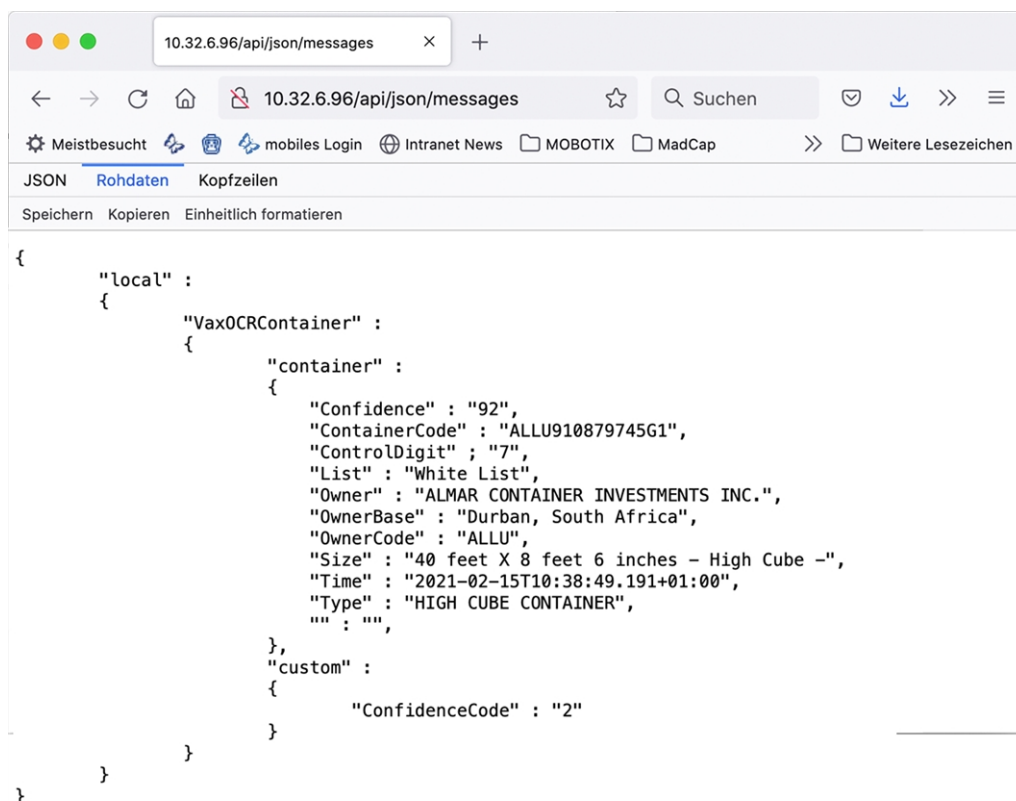
## Meta data transferred within the MxMessageSystem

For each event, the app also transfers meta data to the camera. This data is sent in the form of a JSON schema within a MxMessage.



The screenshot shows a web browser window with the address bar displaying `10.32.6.96/api/json/messages`. The browser's address bar includes navigation icons, a search bar with the text "Suchen", and a download icon. Below the address bar, there are several bookmarks: "Meistbesucht", "mobiles Login", "Intranet News", "MOBOTIX", "MadCap", and "Weitere Lesezeichen". The main content area displays a JSON object with the following structure:

```
{
  "local" :
  {
    "VaxOCRContainer" :
    {
      "container" :
      {
        "Confidence" : "92",
        "ContainerCode" : "ALLU910879745G1",
        "ControlDigit" : "7",
        "List" : "White List",
        "Owner" : "ALMAR CONTAINER INVESTMENTS INC.",
        "OwnerBase" : "Durban, South Africa",
        "OwnerCode" : "ALLU",
        "Size" : "40 feet X 8 feet 6 inches - High Cube -",
        "Time" : "2021-02-15T10:38:49.191+01:00",
        "Type" : "HIGH CUBE CONTAINER",
        "" : ""
      },
      "custom" :
      {
        "ConfidenceCode" : "2"
      }
    }
  }
}
```

Fig. 33: Example: Meta data transmitted within a MxMessage of the Vaxtor Container Code Recognition App

**NOTE!** To view the meta data structure of the last App event, enter the following URL in the address bar of your browser: `http(s)/IPAdresseOfYourCamera/api/json/messages`

# Creating a Custom Message Event

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. VaxOCRContainer).

The screenshot shows the 'MOBOTIX S74 mx10-32-24-156 Event Overview' interface. It is divided into several sections for configuring different types of events:

- Environment Events:** Contains a single entry 'PI' with a status of 'Inactive' and a 'Delete' button. A note states: 'The selected sensor is currently not available!'.
- Image Analysis Events:** Contains three entries:
  - 'AS' (MxActivitySensor) - Inactive
  - 'VM' (Video Motion) - Inactive
  - 'VM2' (Video Motion) - Inactive
- Internal Events:** Shows 'No profiles defined.'
- Message Events:** This section is highlighted with a red box and a circled '1'. It contains three entries, all with 'MxMessageSystem' as the system:
  - 'VaxOCRContainer' - Inactive
  - 'MxAnalytics' - Inactive
  - 'FFLPRAM' - Inactive
- Meta Events:** Shows 'No profiles defined.'
- Signal Events:** Contains two entries:
  - 'SI' (Signal Input) - Inactive
  - 'UC' (UC Soft Button) - Inactive
- Time Events:** Contains one entry 'PE' (Periodic Event) - Inactive.

At the bottom of the interface are buttons for 'Set', 'Restore', and 'Close'.

Fig. 34: Example: Generic message event from Vaxtor Container Code Recognition App

- Click **Edit** ① to display a selection of all configured message events.

Attribute	Value	Explanation
IP Receive	8000	Port: TCP port to listen on.
Events	<div> <div>VaxOCRContainer ①</div> <div>5</div> <div> <div>Event Sensor Type</div> <div> <input type="radio"/> IP Receive  <input checked="" type="radio"/> MxMessageSystem </div> <div>Event on receiving a message from the MxMessageSystem.</div> <div> <div>Message Name</div> <div>VaxOCRContainer.container.L ②</div> <div>Local</div> <div>JSON Comparison</div> <div> <div>Filter Value</div> <div>"Black List" ③</div> </div> </div> </div> </div>	<div> <div>Event Dead Time:</div> <div>Time to wait [0..3600 s] before the event can trigger anew.</div> </div> <div> <div>Event Sensor Type:</div> <div>Choose the message sensor.</div> </div> <div> <div>Message Name:</div> <div>Defines an MxMessageSystem name to wait for.</div> </div> <div> <div>Message Range:</div> <div>There are two different ranges of message distribution: Global: across all cameras within the current LAN. Local: camera internal.</div> </div> <div> <div>Filter Message Content:</div> <div>Optionally choose how to ignore messages containing Filter Value. Select No Filter to trigger on any message with defined Message Name.</div> </div> <div> <div>Filter Value:</div> <div>Define either a valid reference value as a string (in JSON format) without line breaks, or an extended regular expression. Open help for examples. This parameter allows using variables.</div> </div>
MxAnalytics		
FFLPRAM		

Set ④ Factory Restore Close

Fig. 35: Example: Black list message event

- Click on the event (e. g. VaxOCRContainer) ① to open the event settings.
- Configure the parameters of the event profile as follows:
  - Message Name:** Enter the "Message Name" ② according to the event documentation of the corresponding app (see [Examples for message names and filter values of the Vaxtor Container Code Recognition App](#), p. 49)
  - Message Range:**
    - Local: Default settings for the Vaxtor Container Code Recognition App
    - Global: (MxMessage is forwarded from another MOBOTIX camera in the local network.
  - Filter Message Content:**
    - No Filter:** Trigger on any message according to the defined **Message Name**.
    - JSON Comparison:** Select if filter values are to be defined in JSON format.
    - Regular Expression:** Select if filter values are to be defined as regular expression.
  - Filter Value:** ③ see [Examples for message names and filter values of the Vaxtor Container Code Recognition App](#), p. 49.



**CAUTION!** “Filter Value“ is used to differentiate the MxMessages of an app / bundle. Use this entry to benefit from individual event types of the apps (if available).

Choose “No Filter” if you want to use all incoming MxMessages as generic event of the related app.

2. Click on **Set** ④ at the end of the dialog box to confirm the settings.

## Examples for message names and filter values of the Vaxtor Container Code Recognition App

	MxMessage-Name	Filter value
Generic Event	VaxOCRContainer	
White list Event	VaxOCRContainer.container.List	“White list”
Black list Event	VaxOCRContainer.container.List	“Black list”
Not listed Event	VaxOCRContainer.container.List	“Not listed”
Unique container code event	VaxOCRContainer.container.ContainerCode	Container code as “STRING”; e.g. “ALLU910879745G1” (compare <a href="#">Meta data transferred within the MxMessageSystem</a> , p. 46)
Owner Code Event	VaxOCRContainer.container.OwnerCode	e.g. “ALLU”
Container Type Event	VaxOCRContainer.container.Type	e.g. “HIGH CUBE CONTAINER”



[EN\\_11/22](#)

MOBOTIX AG • Kaiserstrasse • D-67722 Langmeil • Tel.: +49 6302 9816-103 • [sales@mobotix.com](mailto:sales@mobotix.com) • [www.mobotix.com](http://www.mobotix.com)

MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX AG 2021