


Guideline

FF Group License Plate Recognition App - Region EUCA

© 2023 MOBOTIX AG

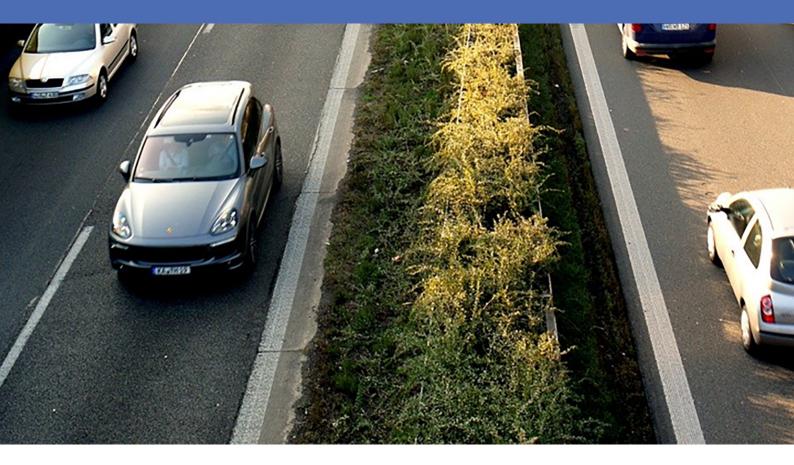

Beyond Human Vision



V2.06_7/14/2023, Order Code:Mx-APP-FF-LPR-EUCA

Table of Contents

Table of Contents	. 2
Before You Start	3
Support	4
MOBOTIX Support	4
MOBOTIX eCampus	4
MOBOTIX Community	4
Safety Notes	. 5
Legal Notes	5
About FF Group License Plate Recognition App - Region EUCA	. 7
Smart Data Interface to MxManagementCenter	. 7
Technical Specifications	9
Licensing Certified Apps	11
License Activation of Certified Apps in MxManagementCenter	
Managing Licenses in MxManagementCenter	.16
Camera, image and scene requirements	18
Recommendations on mounting and adjusting.	.21
Troubleshooting	.22
Activation of the Certified App Interface	28
Configuration of FF Group License Plate Recognition App - Region EUCA	29
MxMessageSystem	37
What is MxMessageSystem?	.37
Facts about MxMessages	.37
MxMessageSystem: Processing the automatically generated app event	38
Checking automatically generated app events	
Action handling - Configuration of an action group	
Action settings - Configuration of the camera recordings	42
MxMessageSystem: Processing the meta data transmitted by apps	44
Meta data transferred within the MxMessageSystem	
Creating a Custom Message Event	
Examples for message names and filter values of the FF Group License Plate Recognition App - Region EUCA	47

1

Before You Start

Support	4
MOBOTIX Support	4
MOBOTIX eCampus	4
MOBOTIX Community	4
Safety Notes	5
Legal Notes	5

4 / 48

Support

MOBOTIX Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates.

Please visit **www.mobotix.com > Support > Help Desk**.

MOBOTIX eCampus

The MOBOTIX eCampus is a complete e-learning platform. It lets you decide when and where you want to view and process your training seminar content. Simply open the site in your browser and select the desired training seminar.

Please visit www.mobotix.com/ecampus-mobotix.

MOBOTIX Community

The MOBOTIX community is another valuable source of information. MOBOTIX staff and other users are sharing their information, and so can you.

Please visit community.mobotix.com.







Safety Notes

- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- This equipment is not suitable for use in locations where children are likely to be present.
- When using a Class I adapter, the power cord shall be connected to a socket-outlet with proper ground connection.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.

Legal Notes

Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on <u>www.mobotix.com</u> under **Support > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see www.mobotix.com, **Support >** Download Center > Marketing & Documentation > Brochures & Guides > Certificates).

Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at <u>www.-</u> <u>mobotix.com</u> by clicking on the corresponding link at the bottom of every page.

About FF Group License Plate Recognition App - Region EUCA

Certified App for License Plate Recognition

The app's artificial intelligence-based algorithms, which have already been successfully tested in numerous European markets, allow the reliable recognition of single and two-line license plates of vehicles in the supported regions of origin (Latin and Hebrew characters and numbers). Typical application areas for the app are: Parking management, access control and regulation, traffic monitoring.

- App delivers events via MxMessageSystem in real-time
- Integrated recognition protocol (last 1000 recognized license plates)
- License plate detection with up to 99% accuracy
- Camera can be online or offline
- Configuration of the application also via MxManagementCenter (free Advanced Config license required)
- Can be used with all cameras of the MOBOTIX 7 system platform

CAUTION! Thermal sensors are not supported by this app.

Smart Data Interface to MxManagementCenter

This app has a Smart Data interface to MxManagementCenter.

With the MOBOTIX Smart Data System, transaction data can be linked to the video recordings made at the time of the transactions. Smart Data source can be e.g. MOBOTIX Certified Apps (no license required) or general Smart Data sources (license required) like POS systems or license plate recognition systems.

The Smart Data System in MxManagementCenter enables you to quickly find and review any suspicious activities. The Smart Data Bar and the Smart Data View are available for searching and analyzing transactions. The Smart Data Bar provides a direct overview of the most recent transactions (from the last 24 hours) and for this reason it is convenient to use it for reviews and searches.

NOTE! For information on how to use the Smart Data System, see the corresponding online help of the camera software and MxManagementCenter.

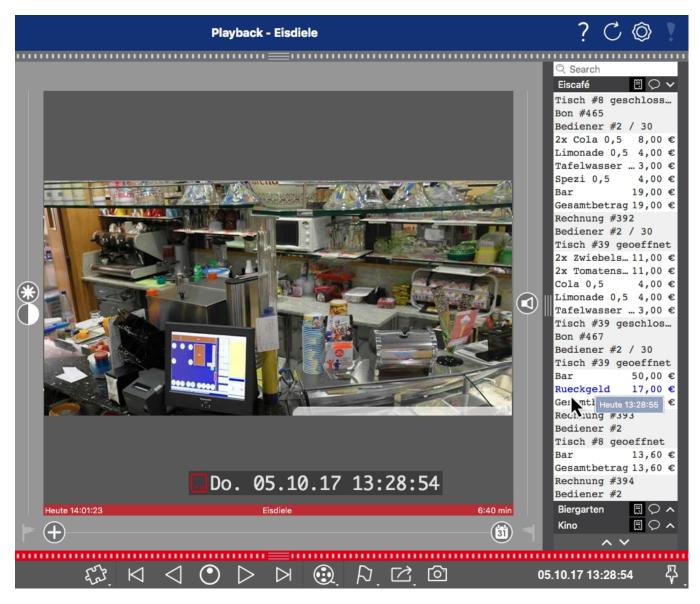


Fig. 1: : Smart Data Bar in MxManagementCenter (Example: POS System)

Technical Specifications

Product Information

Product Name	FF Group License Plate Recognition App - Region EUCA
Order Code	Mx-APP-FF-LPR-EUCA
Supported MOBOTIX Cam- eras	Mx-M73A, Mx-S74A
Minimum Camera Firmware	V7.0.4.x
MxManagementCenter Integration	min. MxMC v2.3.1

Product Features

App Features	 License plate recognition of one- and two-line license plates
	Latin and Hebrew characters
	 Recognition log (last 1000 recognized license plates)
	MOBOTIX events via MxMessageSystem
	Extended country coverage*
	White- and Black listing
Maximum number of lanes	3
Meta Data / Statistic formats	JSON, CSV
Trial License	30-day trial license pre-installed
MxMessageSystem sup- ported	Yes
Interfaces	MxMC Smart Data, IP Notification
MOBOTIX Events	Yes
ONVIF Events	Yes (Generic message event)
Smart Data Interface to MxManagementCenter	Yes

Supported Regions

Europe	Albania, Armenia, Austria, Azerbaijan, Belarus, Belgium, Bosnia and Herzegov- ina, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Georgia, Germany, Greece, Hungary, Iceland, Italy, Ireland, Israel, Kaza- khstan, Kirgizstan, Latvia, Lithuania, Luxembourg, Macedonia, Malta, Moldova, Montenegro, Netherlands, Norway, Poland, Portugal, Romania, Russia, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, Tajikistan, Turkey, Turk- menistan, Ukraine, United Kingdom, Uzbekistan, Vatican City State
Israel / Palestine	Israel / Palestine
APAC	Australia, New Zealand

Scene Requirements

Minimum License Plate Width	130 px
Maximum Vertical Angle	30°
Maximum Horizontal Angle	30°
Maximum Tilt Angle	5°
MOBOTIX App support	Yes

Technical App Specifications

Synchronous / Asyn- chronous App	Asynchronous
Accuracy	up to 120 km/h on 2 lanes simultaneously, up to 200 km/h on 1 lane: min. 95% (from general traffic count) close to 99% (from detected vehicles count)
Processed number of frames per second	Typ. 10 fps
Detection time	Typ. 100 – 120 ms

Licensing Certified Apps

The following licenses are available for the FF Group License Plate Recognition App - Region EUCA:

- 30-day test license pre-installed
- permanent commercial license

The usage period begins with activation of the app interface (see Activation of the Certified App Interface, p. 28)

NOTE! For buying or renewing a license, contact your MOBOTIX Partner.

NOTE! Apps are usually pre-installed with the firmware. In rare cases, apps must be downloaded from the website and installed. In this case see <u>www.mobotix.com > Support > Download Center > Marketing &</u> <u>Documentation</u>, download and install the app.

License Activation of Certified Apps in MxManagementCenter

After a test period commercial licenses must be activated for use with a valid license key.

Online-Activation

After receiving the activation IDs, activate them in MxMC as follows:

- 1. Select from the menu Window > Camera App Licenses.
- 2. Select the camera on which you want to license apps and click **Select**.

Licensing Certified Apps

License Activation of Certified Apps in MxManagementCenter

•••	Camera Licenses	
	MxManagementCenter	
Cameras		
Q 10.3		×
Name	Url	Serial Number
mx10-10-38-40	10.10.38.40	10.10.38.40
mx10-22-10-30	10.22.10.30	10.22.10.30
M73 10-32-0-62	10.32.0.62	10.32.0.62
		Select
Mobotix + i	Kaiserstrasse D-67722 Langmell • Info@mobotix.com • www	.mobotix.com

Fig. 2: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

1. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

	Camera Licenses			
	MxManagemen	tCenter	?	
< Camera License Status: mx10-251-1-235				
Name	Expiration	Quantity		
MxWheelDetector	Permanent	Unlimited		
iot_plugin_a	Permanent	Unlimited		
iot_plugin_b	Permanent	Unlimited		
iot_plugin_c	Permanent	Unlimited		
iot_plugin_d	Permanent	Unlimited		
iot_plugin_e	Permanent	Unlimited		
iot_plugin_f	Permanent	Unlimited		
iot_plugin_g	Permanent	Unlimited		
iot_plugin_h	Permanent	Unlimited		
iot_plugin_i	Permanent	Unlimited		
Camera time is incorrect. Please reset your camera time before activating Licenses				
	Mobotix + Kalserstrasse D-67722 Langmell + Info@m	obotix.com • www.mobotix.com		

Fig. 3: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

- 2. Enter a valid Activation ID and specify the number of licenses to install on this computer.
- 3. If you want to license another product, click on . In the new row, enter the appropriate Activation ID and the number of licenses you want.

- 4. To remove a line click
- 5. When you have entered all Activation IDs, click **Activate License Online**. During activation, **MxMC** connects to the license server. This requires an Internet connection.

Camera Licenses	
MxManagementCenter	?
< Activate Camera Licenses: M73 10-32-0-62	
Activate Camera Licenses: M/3 10-32-0-62	Serial Number: 10.32.0.62
via Activation ID	
Please enter your Activation IDs and for each Activation ID the corresponding quantity of licenses that you want to use	
we23-4c5f-as23-4bf2-b872-9c84-e935-78de 1 +	
ec90-4c5f-cfd0-4bf2-b872-9c84-e935-6f20 1	
Download Capability Request File Activate License Online	
Via Capability Response File	
If you have already created or received a capability response file (<deviceid>.bin), you can load it here.</deviceid>	
Load Capability Response File	
Mobotix • Kalserstrasse D-67722 Langmell • Info@mobotix.com • www.mobotix.com	

Fig. 4: Adding licenses

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Failed activation (missing internet connection)

If the license server cannot be reached, e.g. due to a missing internet connection, apps can also be activated offline. (see Offline Activation, p. 13).

Offline Activation

For offline activation, the partner/installer from whom you purchased the licenses can generate a capability response (.bin file) on the license server to activate their licenses.

- 1. Select from the menu **Window > Camera App Licenses**.
- 2. Select the camera on which you want to license apps and click **Select**.

Licensing Certified Apps

License Activation of Certified Apps in MxManagementCenter

	Camera Licenses	
	MxManagementCenter	
Cameras		
୍ ପ୍ 10.3		×
Name	Url	Serial Number
mx10-10-38-40	10.10.38.40	10.10.38.40
mx10-22-10-30	10.22.10.30	10.22.10.30
M73 10-32-0-62	10.32.0.62	10.32.0.62
		Select
Mobotix + K	aiserstrasse D-67722 Langmeil • info@mobotix.com • www	mobotix.com

Fig. 5: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

3. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

	Camera License	35	
	MxManagemer	ntCenter	?
< Camera License Sta	atus: mx10-251-1-235		Serial Number: 10.23.9.171
	Expiration	Quantity	
MxWheelDetector	Permanent	Unlimited	
iot_plugin_a	Permanent	Unlimited	
iot_plugin_b	Permanent	Unlimited	
iot_plugin_c	Permanent	Unlimited	
iot_plugin_d	Permanent	Unlimited	
iot_plugin_e	Permanent	Unlimited	
iot_plugin_f	Permanent	Unlimited	
iot_plugin_g	Permanent	Unlimited	
iot_plugin_h	Permanent	Unlimited	
iot_plugin_i	Permanent	Unlimited	
Camera time is incorr	ect. Please reset your camera time before activating	g Licenses	Activate License
	Mobotix • Kaiserstrasse D-67722 Langmeil • info@	mobotix.com • www.mobotix.com	

Fig. 6: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

- 4. Enter a valid Activation ID and specify the number of licenses to install on this computer.
- 5. If you want to license another product, click on . In the new row, enter the appropriate **Activation ID** and the number of licenses you want.
- 6. If necessary, click to remove a line.
- 7. When you have entered all Activation IDs, click **Download Capability Request File (.lic)**. and send it to your partner/installer.

NOTE! This file allows the partner / installer from whom you purchased the licenses to generate a capability response file (.bin) on the license server.

Camera Licenses	
MxManagementCenter	?
< Activate Camera Licenses: M73 10-32-0-62	
	Serial Number: 10.32.0.62
via Activation ID	
Please enter your Activation IDs and for each Activation ID the corresponding quantity of licenses that you want to use	
we23-4c5f-as23-4bf2-b872-9c84-e935-78de 1 +	
ec90-4c5f-cfd0-4bf2-b872-9c84-e935-6f20	
Download Capability Request File Activate License Online	
Via Capability Response File	
If you have already created or received a capability response file (<deviceid>.bin), you can load it here.</deviceid>	
Load Capability Response File	
Mobotix • Kaiserstrasse D-67722 Langmell • Info@mobotix.com • www.mobotix.com	

Fig. 7: Adding licenses

8. Click Load Capability Response File and follow the instructions.

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Managing Licenses in MxManagementCenter

In MxManagementCenter you can comfortably manage all licenses that have been activated for a camera.

- 1. Select from the menu Window > Camera App Licenses.
- 2. Select the camera on which you want to license apps and click **Select**.

	Camera Licenses	
	MxManagementCenter	?
Cameras		
ି 10.3		×
Name	Url	Serial Number
mx10-10-38-40	10.10.38.40	10.10.38.40
mx10-22-10-30	10.22.10.30	10.22.10.30
M73 10-32-0-62	10.32.0.62	10.32.0.62
		Select
Mobotix • Kaiserstrasse D-67722 Langmell • Info@mobotix.com • www.mobotix.com		

Fig. 8: Overview of Camera App Licenses in MxManagementCenter

An overview of the licenses installed on the camera may be displayed.

• • •	Camera License	S	
	MxManagemer	tCenter	?
< Camera License Status: mx10-251-1-235 Serial Number: 10.23.9.1			
Name	Expiration	Quantity	
MxWheelDetector	Permanent	Unlimited	
iot_plugin_a	Permanent	Unlimited	
iot_plugin_b	Permanent	Unlimited	
iot_plugin_c	Permanent	Unlimited	
iot_plugin_d	Permanent	Unlimited	
iot_plugin_e	Permanent	Unlimited	
iot_plugin_f	Permanent	Unlimited	
iot_plugin_g	Permanent	Unlimited	
iot_plugin_h	Permanent	Unlimited	
iot_plugin_i	Permanent	Unlimited	
Camera time is incorrect. Please reset your camera time before activating Licenses Activate License			
Mobotix + Kalserstrasse D-67722 Langmell + Info@mobotix.com + www.mobotix.com			

Fig. 9: Overview of the licenses installed on the camera

ColumnExplanationNameName of the licensed appExpirationthe time limit of the licenseQuantityNumber of licenses purchased for a product.Serial NumberUnique identification determined by MxMC for the device used. If problems occur during licensing, please have the device ID ready.

NOTE! If necessary, correct the time set on the camera.

Synchronize licenses with server

When the program starts, there is no automatic comparison of the licenses between the computer and the license server. Therefore, click **Update** to reload the licenses from the server.

Update licenses

To update temporary licenses, click **Activate Licenses**. The dialog for updating/activating licenses opens.

NOTE! You need administrator rights to synchronize and update licenses.

Camera, image and scene requirements

In order to be able to recognize license plates in the best possible way, the following prerequisites must be fulfilled for the scene:

Quality of the license plate to be captured in the image

- The license plate must be high-contrast and clearly legible, i.e. as clean as possible, without dents or holes and well illuminated.
- The license plate should be rectangular
- Minimum horizontal size
 - 130 px for one-line plates (150 px for license plates from Russia, Kazakhstan, Armenia, Uzbekistan, Serbia)
 - 100 px for two line plates (130 px for license plates from Russia, Kazakhstan, Armenia, Uzbekistan, Serbia)
- Maximum rotation angle: 5°



Maximum tilt angle of the license plate to the camera: 30° horizontal and vertical

Examples of clearly recognizable license plates



Fig. 10: Easily readable license plate in daylight



Fig. 11: Easily readable license plate at night with infrared LED illumination

Vertical pointing of the camera

The vertical angle to the registration plate must not exceed 30° . The minimum distance (**x**) from the camera as a function of its mounting height (**h**) is calculated by the formula:

 $x = h * \sqrt{3}$

Example: calculation of the vertical alignment of the camera

h (Meter)	x (Meter)	
1	1,7	
1,5	2,6	Fig. 12: Vertical pointing of the camera
2	3,4	rig. 12. vertical pointing of the camera
2,5	4,3	
3	5,1	
3,5	6	
4	6,8	

Horizontal pointing of the camera

The horizontal angle to the registration plate must not exceed 30°. The minimum distance (\mathbf{x}) from the camera as a function of its mounting height (\mathbf{y}) is calculated by the formula:

 $x = y * \sqrt{3}$

Sample calculation of the horizontal alignment of the camera

y (meter)	x (meter)	
1	1,7	
1,5	2,6	Fig. 13: Horizontal alignment of the camera

y (meter)	x (meter)	
2	3,4	k k
2,5	4,3	
3	5,1	Fig. 13: Horizontal alignment of the camera
3,5	6	
4	6,8	

Depth of field in relation of vehicle speed and recognition time per plate

To effectively capture the vehicle camera should be set so as to provide the minimum depth of field (DOF). Depth-of-field (or length of the zone of sharpness) is the distance between the nearest and farthest objects that appear in acceptably sharp focus in a video.

The depth of field can be calculated by the formula:

$$L_{dof} = rac{4 * T_{rec} * V_{max}}{3600}$$

Definition of the variables use in the formula

 L_{dof} = depth of field in meters (m)

 T_{rec} = recognition time per plate in milliseconds (ms)

 V_{max} =maximum vehicle speed in kilometers per hour (km/h)

Example: calculation of typical cases

maximum vehicle speed in kilometers per hour (km/h)) recognition time per plate in milliseconds (ms)				
	100	200	300	400	500
	dept	h of fie	eld in	meters (m)	
40	4	9	13	18	22
80	9	18	27	36	44
100	11	22	33	44	56
120	13	27	40	53	67
140	16	31	47	62	78
180	20	40	60	80	100
200	22	44	67	89	111
220	24	49	73	98	122
240	27	53	80	107	133

NOTE! The minimum sizes of the license plate on the edges of the zone of sharpness must beat least as mentioned in Quality of the license plate to be captured in the image, p. 18.

NOTE! For the best possible depth of field it is strongly recommended to manually adjust the cameras aperture settings instead of using the automatic settings.

Exposure time in relation to maximum vehicle speed

The exposure time must be adjusted to get the best results in recognition of license plates. Values are calculated for a camera mounted at a horizontal angle of 30 degrees.

Example: calculation of typical cases

exposure time in seconds (s)	maximum vehicle speed in kilo- meters per hour (km/h)
1/100	5
1/500	40
1/1000	100
1/2000	200
1/4000	400

NOTE! The exposure time must be adjusted according to the light conditions.

Recommendations on mounting and adjusting.

- If you want to recognize license plates on multiple lanes it is generally recommended to mount the camera on a crossbar.
- Use an IR Led to recognize license plates at night or under low light conditions.
- Shutter speed must be high enough to cut the light from car's headlights at night (usually it's about 1/1000). Keep in mind, that too high shutter speed may obscure the edges of the lines (especially shadows).
- Depth of focus is a very important parameter. If you are using a camera with a CS-mount lens, use a fixed lens. Fixed lens are better for license plate recognition due to greater depth of focus. Megapixel lens is also strongly recommended.
- Respect changing light conditions (e. g. due to sunrises and sunset) when choosing the place of mounting. Direct sunlight beams can distort a picture. If the cars facing a direct sunlight consider using a lens with auto iris mode.

- If mounting a camera on a roadside pole check how the pole reacts to heavy cars or a convoy of cars.
 Some poles have tangible tremor, this could make license plate recognition almost impossible.
- It is recommended to turn down WDR and BLC. In most cases, they will make the picture more pretty, but at the cost of smudging details like an edges of letters in the license plate. For the same reason keep digital noise reduction as low as possible.
- On certain rare conditions there may be a cases of false detections e. g. because of recognizing image parts that structurally or semantically look similar to a license plate(e. g. fences or ads). To minimize this:
- Adjust the region of interest accordingly. It may be a good idea to make it smaller, or change it's shape, omitting the parts, which potentially may be false detected.
- Adjust the min and max license plate settings according to upper instructions do not leave a default 130 - 300.
- There may be cases, when the best performance will occur by changing angle of lens or moving the camera. In some cases, shooting a front license plate is better.

Troubleshooting

Blurred license plates can not be recognized

Problem: If you need to recognize multiple license plates of cars following one another a wider depth of field might be necessary. In the example below only the license plate in the green frame can be recognized. **Solution**: adjust the lens focus to archive a higher depth of field.



Fig. 14: Insufficient depth of field

Problem: License plate is blurred due to wrong focus settings or to long exposure time.

Solution: Adjust focus settings or increase shutter speed



Fig. 15: Blurred license plate due to long exposure time

License plates cannot be recognized due to over exposure

Problem: In certain situations license plates can be over exposed and therefore no more readable. Possible cause could be direct sunlight shining on the license plates or to strong IR LED light at night.Solution: Adjust shutter speed or dim IR LED light.

Camera, image and scene requirements Troubleshooting



Fig. 16: Over exposed license plate at daytime



Fig. 17: Over exposed license plates due to too strong IR LED light

License plates cannot be recognized due to insufficient light

Problem: In certain situations there is not enough light which results in low contrast. Therefore license plates are not readable. Possible cause could be direct sunlight shining on the license plates or to strong IR LED light at night.

Solution: Adjust the shutter speed or provide extra light.



Fig. 18: Insufficient light to recognize license plate

License plates cannot be recognized due to low resolution

Problem: It seems that the license plate is well recognizable despite good illumination and sufficient resolution.

Solution: Measure the resolution of the license plate to be captured with an image processing program. It may be necessary to adjust the horizontal resolution to the minimum required 130 px (see Camera, image and scene requirements, p. 18).



Fig. 19: Insufficient light to recognize license plate

Activation of the Certified App Interface

CAUTION! The FF Group License Plate Recognition App - Region EUCA does not consider obscure areas defined for the live image. Therefore there is no pixelation in obscure areas while configuring the app and during image analysis by the app.

NOTE! The user must have access to the setup menu (http(s)://<Camera IP address>/control). Therefore check the user rights of the camera.

 In the camera web interface, open: Setup Menu / Certified App Settings (http(s)://<Camera IP address>/control/app_config).

MOBOTIX					(800	v
Θ	M73 mx10-3	32-6-96 Cert	ified App Settings			0 (ì	÷
General Settings							
Arming	1 Active	Ą	Activate app service.				
Note: It is not recomme	ended to activate more t	han 2 apps.					
Resource monitor	Active	C	Display camera actual load in	live image.			
Note: High performance	ce impact. Use for testing	g purposes only.					
Custom font	Active		Jse custom font for the text d To select or upload a custom f		0	ïle.	
App Settings							
Арр	Activation	License	Explanation	Version	Delete	Delete applicati	ion
FFLPR Settings	2	2022-03-03 (30 day trial).	General Settings	1.4.1	Data (4.0K)	Delet applica	
FFLPRAM	Trial	Trial available.	Please update the license.	1.4.1	Data	Delet applica	
FFLPRME	Trial	Trial available.	Please update the license.	1.4.1	Data	Delet applica	
Set 3 ory Res	tore Close						

Fig. 20: Certified App: Settings

- 2. Under **General Settings** activate the **Arming**^① of the app service.
- 3. Under App Settings check the Active option O and click SetO.
- 4. Click on the name of the App to be configured to open the Apps user interface.
- 5. For configuration of the App see Configuration of FF Group License Plate Recognition App Region EUCA, p. 29.

Configuration of FF Group License Plate Recognition App - Region EUCA

NOTE! For best performance and results in LPR processing make sure to have scene set up to meet the Camera, image and scene requirements, p. 18.

CAUTION! The user must have access to the setup menu (http(s)://<Camera IP address>/control). Therefore check the user rights of the camera.

- In the camera web interface, open: Setup Menu / Certified App Settings (http(s)://<Camera IP address>/control/app_config).
- 2. Click on the name of the FF Group License Plate Recognition App Region EUCA.

The configuration window of the app appears with the following options:

MOBOTIX			
Θ	M73 mx10-32-6-96	FFLPR Settings	() € [
FFLPR			
Sensor Selection	Automatic	\$	Select the image sensor
Image Size	2592x1944	¢	Defines the image size, which is used as basis for the license plate recognition. Factory default: Full HD
			(1920x1080)
Enable Overlays			Highlight recognized license plates and enable the on- screen text overlay
Enable MxMessage			Send an MxMessage for each license plate recognized. The MxMessage is required for the configuration of Message Events on the camera and for the usage of the
			MxMC Smart Data Interface.
Region	EU+CIS	\$	Recognition of number plates within the selected region. For countries belonging to the region, see the app documentation.
Preferred Country	United Kingdom	\$	Here you might select preferred country within Europe / CIS regions. The choice is not mandatory though.
Recognition Zones of the	Right sensor		
Recognition Zones of the	Left sensor		
Integration Interfaces			

Basic settings

Fig. 21: Default operating mode: Detection

Sensor selection: Select the sensor(s) to be used for the video stream to be analyzed by FF Group License Plate Recognition App - Region EUCA.

NOTE! Automatic corresponds to the live image configured on the camera FF Group License Plate Recognition App - Region EUCA.

Image Size: Select the resolution for the video stream to be analyzed by FF Group License Plate Recognition App - Region EUCA.

NOTE! The resolution for LPR processing could be different from the resolution used for live stream.

Enable Overlays: Check to highlight recognized license plates and enable the on-screen text overlay in the live view.

Enable MxMessage: Check to enable sending a MxMessage for each license plate recognized. The MxMessage is required for the configuration of Message Events on the camera and for the usage of the MxMC Smart Data Interface.

Region: Select the region to be set for the LPR engine. These regions are:

Preferred Country: Optionally select the preferred country within Europe / CIS regions.

Recognition Zones

Recognition zones can be defined on up to two sensors. Per sensor up to three recognition areas can be defined. Each recognition zone is evaluated by the LPR engine independently of the others. Accordingly, each zone is assigned an individual ID (zone number).

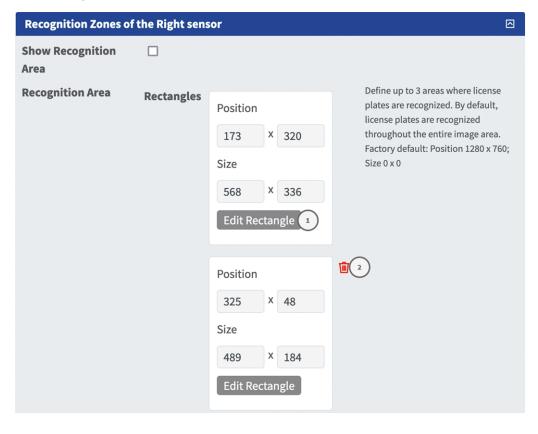


Fig. 22: Recognition Areas

Drawing a Recognition Area

- 1. Click the **plus** icon to switch into the live image.
- 2. In the live view simply click and drag a rectangular recognition area.
- 3. Drag the corner points to refine the recognition area.
- 4. In the top right corner of the live view click **Submit** to adopt the coordinates of the rectangle.
- 5. Optionally click the **bin** icon ⁽²⁾ to delete the recognition area.

NOTE! Without activating the zones the full image will be analyzed.

Integration Interfaces

LPR events can be send to 3rd party systems, e. g. Access Control Systems or Video Management Systems. Therefore the following configurations should be taken into account:

Integration Interfaces		
Enable		Enable the integration interface to send IP notifications to a defined external receiver (e.g. 3rd party access control systems, video management system, etc.)
Destination Address	http://server.address	Receiver / Server IP address and port. Separate IP address and port using a colon (e.g. 10.0.1:80)
Transfer Protocol	HTTP(s) POST 🗢	Transfer notification data using these protocol headers
Device ID	defaultID	Device ID is used as unique identifier for the device sending the IP notification (e.g. camera's serial number / factory IP address)
Attach Image		Enable to attach an event image to the IP notification
Image Selection	License plate crop 🗢	Selection of the event image to be attached to the IP notification
Event Type: New		Send the IP notification for event type 'new'. Condition 'new' becomes true, if the license plate appears for the first time in 5 seconds
Event Type: Update		Send the IP notification for event type 'update'. Condition 'update' becomes true, if the license plate was already detected in the last 5 seconds
Event Type: Lost		Send the IP notification for event type 'lost'. Condition 'lost' becomes true, if plate was not seen in the last 5 seconds since previous detection
self-signed certificates		Allow self-signed certificates for HTTPS

Fig. 23: Integration Interfaces

Enable: Check to enable the integration interface to send IP notifications to a defined external receiver (e.g. 3rd party access control systems, video management system, etc.).

Destination Address: Receiver / Server IP address and port. Separate IP address and port using a colon (e.g. 10.0.0.1:80).

Transfer Protocol: Select the protocol on the basis of which the LPR events are transmitted.

TCP: Data will be transmitted via TCP.

HTTP POST: Data will be transmitted via FFG protocol. <u>Download a detailed description</u>.

Device ID: Set an unique text string to identify your camera device in messages. Device ID is used as unique identifier for the device sending the IP notification (e.g. camera's serial number / factory IP address). **Attach Image:** Check to attach an event image to the IP notification.

Image Selection: If images should be send select the image type here:

License plate crop: The image contains the license plate only.

Vehicle crop: The image contains the vehicle with the recognized license plate.

Full frame: the full image is transmitted.

Event Type: New: Check to send an IP notification for event type 'new'. Condition 'new' becomes true, if the license plate appears for the first time in 5 seconds.

Event Type: Update: Check to send an IP notification for event type 'update'. Condition 'update' becomes true, if the license plate was already detected in the last 5 seconds.

Event Type: Lost: Check to send an IP notification for event type 'lost'. Condition 'lost' becomes true, if plate was not seen in the last 5 seconds since previous detection.

Self signed certificates: Allow self signed certificates for HTTPS.

Black List & White List

You can define a black list and a white list with up to 1000 license plates per list. If a license plate from one of the lists is recognized, a corresponding event is sent within the MxMessageSystem of the camera.

Whitelist		
Whitelist	Filter 6 LUCY8000 × KIBMX8080 × BVB1909 × KAX120 × KIBMX325 × 2 LUCY1909 × DOMU1312 × 1 1	Assign up to 1000 license plates to the whitelist. Add individual license plates, add a whole list of license plates or delete the entire list
Blacklist	(3)(4)(5)	

Fig. 24: Black and white lists

Adding a license plate to a list

• Enter the license plate text into the text field ① and click **Enter**.

Adding multiple license plates from a text file

- 1. Make sure that your text file contains one license plate per line.
- 2. Copy the relevant license plates from the text file and paste them into the text field 0 .

Deleting a license plate from a list

Click on the small x to the right of the license plate number.

Deleting all license plates from a list

Click the trash icon ③ .

Sorting all license plates from a list alphabetically

• Click the sort icon ④ .

Copy all license plates from a list to the clip board

Click the copy to clipboard icon ⑤ .

Filtering license plates

Enter the license plate or parts of it into the filter text field ⁽⁶⁾. Only license plates containing the filter text are displayed accordingly.

Overlay Configuration

In this section you can customize the overlay.

Overlay Configuration				
Color for overlay	White	\$	Color of overlay text	
	Full color	\$	Opacity of overlay text	
Overlay Duration	2	$\hat{}$	Set overlay duration in seconds	
Overlay Position	Left Top	\$	Select position of overlay text	
Overlay license plate crop			Display recognized license plate crop	
Image overlay Position	Left Top	\$	Select position of overlay image	

Fig. 25: Overlay Configuration

Color for overlay: Select a color the opacity of overlay text.

Overlay duration: Set the overlay duration in seconds.

Overlay Position: Select the overlay text position in the camera image.

Overlay License Plate Crop: Check to display the recognized license plate crop. **Image Overlay Position:** Select the overlay image position in the camera image.

MxMxMessage Configuration

In this section, you can specify for which events a MxMessage is to be sent.

MxMessage Configuration	
MxMessage New	Send an MxMessage for LPR NEW event
MxMessage Update	Send an MxMessage for LPR UPDATE event
MxMessage Lost	Send an MxMessage for LPR LOST event

Fig. 26: MxMessage Configuration

MxMessage New: Check to send a MxMessage for "LPR NEW" event.MxMessage Update: Check to send a MxMessage for "LPR UPDATE" event.MxMessage Lost: Check to send a MxMessage for "LPR LOST" event.

Installation Tools

In this section you find useful tools for calibration and trouble shooting.

Installation Tools			
Calibration grid			Turn on the calibration grid to detect the acceptable license plate size. Vertical lines indicate a distance of 130 pixels wide. Please keep the license plates in the range 130-300 pixels wide
Debug level	✓ NO LOG DEBUG		Available options NO LOG: No debug log is created (Factory default). DEBUG: Added additional info to overlay text
LPR Confidence	0.7	\$	Set the confidence threshold which must be reached to recognize license plates. The confidence value within the sent MxMessage can be used as an indication for a proper configuration.
Minimum license plate charcters	6	\$	Defines the minimum number of charcters in the recognized license plates, shorter sequences will be ignored. The practical recommended minimum is 5. Default 6.
Maximum license plate charcters	10	\$	Defines the maximum number of charcters in the recognized license plates, longer sequences will be ignored. Default 10.
The Levenshtein distance is a string metric for measuring the difference between two sequences.	1	\diamond	The Levenshtein distance between two words is the minimum number of single- character edits (insertions, deletions or substitutions) required to change one word into the other.

Fig. 27: Installation Tools

Calibration grid: Turn on the calibration grid to detect the acceptable license plate size. Vertical lines indicate a distance of 130 pixels wide. Please keep the license plates in the range 130-300 pixels wide. **Color Confidence:** Set the confidence threshold which must be reached to recognize color of the vehicle. The

confidence value within the sent MxMessage can be used as an indication for a proper configuration.

Debug level: Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

NOLOG: no debug log is created (default setting)

EMERGENCY INFO DEBUG ULTRADEBUG

LPR Confidence: Set the confidence threshold which must be reached to recognize license plates. The confidence value within the sent MxMessage can be used as an indication for a proper configuration.

CAUTION! Wrong settings can lead to bad recognition results. In most cases the default settings are sufficient.

Storing the Configuration

To store the configuration you have the following options:

Set Factory Restore Close

Fig. 28: Storing the configuration

- Click on the **Set** button to activate your settings and to save them until the next reboot of the camera.
- Click on the Factory button to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click on the **Restore** button to undo your most recent changes that have not been stored in the camera permanently.
- Click on the Close button to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

MxMessageSystem

What is MxMessageSystem?

MxMessageSystem is a communication system based on name oriented messages. This means that a message must have a unique name with a maximum length of 32 bytes.

Each participant can send and receive messages. MOBOTIX cameras can also forward messages within the local network. This way, MxMessages can be distributed over the entire local network (see Message Area: Global).

For example, a MOBOTIX 7 series camera can exchange a MxMessage generated by a camera app with an Mx6 camera that does not support certified MOBOTIX apps.

Facts about MxMessages

- 128-bit encryption ensures privacy and security of message content.
- MxMessages can be distributed from any camera of the Mx6 and 7 series.
- The message range can be defined individually for each MxMessage.
 - Local: Camera expects a MxMessage within its own camera system (e.g. through a Certified App).
 - **Global:** the camera expects a MxMessage that is distributed in the local network by another MxMessage device (e.g. another camera of the 7 series equipped with a certified MOBOTIX app).
- Actions that the recipients are to perform are configured individually for each participant of the MxMessageSystem.

MxMessageSystem: Processing the automatically generated app event

Checking automatically generated app events

NOTE! After successfully activating the app (see Activation of the Certified App Interface, p. 28), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. FFLPR).

ΜΟΒΟΤΙΧ				
Θ	S74 mx10-32-24-156	Event Overv	view	0 î ± Ξ
Environment Events				
Image Analysis Events				
Internal Events				\bigtriangledown
Message Events				
FFLPR	MxMessageSystem	Inactive	Delete	Edit 1
MxAnalytics	MxMessageSystem	Inactive	Delete	
ObjRec	MxMessageSystem	Inactive	Delete	
Meta Events				
Signal Events				
Time Events				
Set Restore Clo	ose			

Fig. 29: Example: Generic message event from FF Group License Plate Recognition App - Region EUCA

MOBOTIX			
Θ	S74 mx10-32-24-156 Mess	age	Events (?) 🛈 🗄 🖃
Events	Value		Explanation
FFLPR	📃 🗌 Inactive 🗌 🕻	Delete	e
	5	\$	Event Dead Time: Time to wait [03600 s] before the event can trigger anew.
Event Sensor Type	IP ReceiveMxMessageSystem		Event Sensor Type: Choose the message sensor.
Event on receiving	a message from the MxMessageSystem.		
	FFLPR		Message Name: Defines an MxMessageSystem name to wait for.
	Local	\$	Message Range: There are two different ranges of message distribution: <i>Global</i> : across all cameras within the current LAN. <i>Local</i> : camera internal.
Set Factory	Restore Close		

2. Click **Edit**^① to display a selection of all configured message events.

Fig. 30: Example: Generic message event details - no filter

Action handling - Configuration of an action group

CAUTION! To use events, trigger action groups or record images the general arming of the camera must be enabled (http(s)/<Camera IP address>/control/settings)

An action group defines which action(s) is (are) triggered by the FF Group License Plate Recognition App -Region EUCA event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** (http(s)://<Camera IP address>/control/actions).

MOBOTIX		
⊙ \$74 mx1	0-32-24-156 Action Group Overview	() () ± ⊡
VisualAlarm	Delete	
Arming	Events & Actions	Edit
Off	♦ (select all)	Edit 2
(No time table)	¢ VA	
FFGroup	Delete	
Add new group		
Set Restore Close		

Fig. 31: Defining Action Groups

- 2. Click Add new group and give a meaningful name.
- 3. Click **Edit**^②, to configure the group.

MOBOTIX			
Θ	S74 mx10-32-24-156	Action Group Details	00
Action Group	FFGroup	Name: The name is purely informational.	
	Enabled 3	Arming: Controls this action group: Enabled: activate the group. Off. deactivate the group. St. group armed by signal input. CS: group armed by custom signal as defined in <u>General Even</u> Settings.	ţ
	(No time table)	Time Table: Time table for this action profile (<u>Time Tables</u>).	
Event Selection	(Image Analysis: VM) (Image Analysis: VM2) Message: FFLPR Message: MxAnalytics Message: ObjRec	Event Selection: Select the events which will trigger the actions below. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <u>activated</u> first.	
Action Details	5	Action Deadtime: Time to wait [03600 s] before a new action can take place.	
	Simultaneously	Action Chaining: Choose how the status of each subaction influences the exect all others. <i>Simultaneously</i> . All actions are executed simultaneously. <i>Simultaneously until first success</i> . Simultaneous execution, b soon as one action succeeds (i.e. has been completed or the p picked up), all others are terminated. <i>Consecutively</i> . All actions are executed in the specified order. <i>Consecutively until first success</i> . Consecutive execution, but a as one action <i>succeeds</i> , the following actions are not executed. <i>Consecutively until first failure</i> . Consecutive execution, but a as one action <i>fails</i> , the following actions are not executed.	ut as phone is as soon d.
Actions Add new action	Value	Explanation	
Set Factory R	estore Close		

Fig. 32: Configuring an Action Group

- 4. Enable **Arming** 3 of the Action Group.
- 5. Select your message event in the **Event selection** list ④ . To select multiple events, hold the shift key.
- 6. Click Add new Action⁽⁵⁾.
- 7. Select a proper action from list Action Type and Profile G .

MxMessageSystem: Processing the automatically generated app event Action settings - Configuration of the camera recordings

Θ	S74 mx10-32-24-156	ction Group Det	ails 💿 🤇
	(No time table)	♦ Time tab	ole for this action profile (<u>Time Tables</u>).
Event Selection	Image Analysis: AS Y FIF: FIF-webcani FTP: FTP-AlarmClip FTP: FTP-Archiving FTP: FTP-Day-Period	Use [Ctrl]	election: e events which will trigger the actions below.]-Click to select more than one event. n parentheses need to be <u>activated</u> first.
Action Details	E-Mail: AlarmMail E-Mail: NotifyMail		eadtime: wait [03600 s] before a new action can take place.
Actions	E-Mail: MailWithMxPEGClip E-Mail: MailWithStoryImages E-Mail: MailSystemStatus24 IP Notify: MxMC-Alarm IP Notify: MxMC-Cridview IP Notify: MxMC-Gridview IP Notify: TCPMessage IP Notify: CDScureAreaOn IP Notify: ObscureAreaOn IP Notify: ObscureAreaOn IP Notify: ObscureAreaOff Play Sound: StandardSounds Visual Alarm: Red Permanent Image Profile: Ultra HD	all others Simultan Simultan Soon as c picked uj Consecu as one ac Consecu	how the status of each subaction influences the execution of s. neously: All actions are executed simultaneously. neously until first success: Simultaneous execution, but as one action succeeds (i.e. has been completed or the phone is p), all others are terminated. trively: All actions are executed in the specified order. trively until first success: Consecutive execution, but as soon ction succeeds, the following actions are not executed. trively until first failure: Consecutive execution, but as soon ction fails, the following actions are not executed.
Action 1	FTP: FTP-Webcam	T	ype and Profile: The Action Profile to be executed.
Delete	0	Action Ti If this act aborted a	imeout or Duration: tion runs longer than the time specified [03600 s], it is and returns an error; 0 to deactivate. ge Profile action, this is the duration and no error returns.

Fig. 33: Select Action Type- and Profile

NOTE! If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can+ add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- 8. Click on the **Set** the button at the end of the dialog box to confirm the settings.
- 9. Click on **Close** [®] to save your settings permanently.

Action settings - Configuration of the camera recordings

 In the camera web interface, open: Setup Menu / Event Control / Recording(http(s)/<Camera IP address>/control/recording).

ΜΟΒΟΤΙΧ			
Θ	S74 mx10-32-24-156	Recording	0 () 🗄 🗄
General Settings			
	Value	Explanation	
Arming	Enabled	Settings.	nput. n signal as defined in <u>General Event</u> arming state from master camera.
	(No time table)	Time Table Profile: Time table profile for time-con	ntrolled recording (Time Tables).
Storage Settings	Value	Explanation	
Recording (REC)	Event Recording (2)	codec. <i>Continuous Recording</i> : continu files using MxPEG codec. Even	-
Start Recording	(Image Analysis: VM2) Message: FFLPR Message: MxAnalytics Message: ObjRec (Signal: SI) Signal: LIC	Start Recording: Select the events which will st Use [Ctrl]-Click to select more Events in parentheses need to	than one event.
	Max fps	 Event Frame Rate: Recording speed if an event is 	detected, in frames per second.
	0	C Recording Time Before Event Additional recording time before	
	10 s	Recording Time:	
Set 4 actory Resto	ore Close 5		More

Fig. 34: Configuration of camera recording settings

- 2. Activate Arm Recording ①.
- 3. Under **Storage Settings** / **Recording (REC)** select a **Recording mode** ②. The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
- 4. In list **Start recording** ③ select the message event just created.
- 5. Click on the Set 3 button at the end of the dialog box to confirm the settings.
- 6. Click on **Close** (5) to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

MxMessageSystem: Processing the meta data transmitted by apps

Meta data transferred within the MxMessageSystem

For each event, the app also transfers meta data to the camera. This data is sent in the form of a JSON schema within a MxMessage.

• • • 10.3	32.6.96/api/json/messages × +
\leftarrow \rightarrow C G	\aleph 10.32.6.96/api/json/messages $☆$ Q Suchen \heartsuit $▲$ \gg \equiv
🌣 Meistbesucht 🍫	🔞 🍫 mobiles Login OIntranet News 🗋 MOBOTIX 🗋 MadCap 🛛 📎 🗋 Weitere Lesezeichen
JSON Rohdaten	Kopfzeilen
Speichern Kopieren E	Einheitlich formatieren
	<pre>: "FFLPR" : { "custom" : { "blacklist" : "false", "notlisted" : "true", "whitelist" : "false" }, "plate" : { "Camera_id" : "defaultID", "Confidence" : "0.70", "Direction" : "in", "Direction" : "in", "EventType" : "lost", "List" : "not listed", "Time" : "1606222083.755", "Zone" : "1", "carID" : "1" } }</pre>

Fig. 35: Example: Meta data transmitted within a MxMessage of the FF Group License Plate Recognition App - Region EUCA

NOTE! To view the meta data structure of the last App event, enter the following URL in the address bar of your browser: http(s)/IPAddresseOfYourCamera/api/json/messages

Creating a Custom Message Event

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. FFLPR).

MOBOTIX				
\ominus	S74 mx10-32-24-156	Event Over	view	() () ∄ ⊟
Environment Even	ts			
Image Analysis Eve	ents			
Internal Events				
Message Events				
FFLPR	MxMessageSystem	Inactive	Delete	Edit 1
MxAnalytics	MxMessageSystem	Inactive	Delete	
ObjRec	MxMessageSystem	Inactive	Delete	
Meta Events				
Signal Events				
Time Events				
Set Restore	Close			

Fig. 36: Example: Generic message event from FF Group License Plate Recognition App - Region EUCA

2. Click **Edit**^① to display a selection of all configured message events.

MOBOTIX			
\ominus	S74 mx10-32-24-156 M	essage Events	0 i + E
FFLPR (1)	Inactive Delete	è	
	5	C Event Dead Time: Time to wait [03600 s] before the	he event can trigger anew.
Event Sensor Type	IP ReceiveMxMessageSystem	Event Sensor Type: Choose the message sensor.	
Event on receiving a	nessage from the MxMessageSystem.		
	FFLPR.custom.blacklist 2	Message Name: Defines an MxMessageSystem na	ame to wait for.
	Local	Message Range: There are two different ranges o Global: across all cameras within Local: camera internal.	0
	JSON Comparison	 Filter Message Content: Optionally choose how to ignore Value. Select No Filter to trigger Message Name. 	
	"true"	Filter Value: Define either a valid reference va format) without line breaks, or a Open help for examples. This parameter allows using var	in extended regular expression.
Set ⁴ actory Re	estore Close		

Fig. 37: Example: Intrusion message event

- 3. Click on the event (e. g. IRIS) to open the event settings.
- 4. Configure the parameters of the event profile as follows:
 - Message Name: Enter the "Message Name" ② according to the event documentation of the corresponding app (see Examples for message names and filter values of the FF Group License Plate Recognition App Region EUCA, p. 47)
 - Message Range:
 - Local: Default settings for the FF Group License Plate Recognition App Region EUCA
 - **Global:** (MxMessage is forwarded from another MOBOTIX camera in the local network.
 - Filter Message Content:
 - Generic Event: "No Filter"
 - Filtered Event: "JSON Comparison"

Filter Value: Examples for message names and filter values of the FF Group License Plate Recognition App - Region EUCA, p. 47.

CAUTION! "Filter Value" is used to differentiate the MxMessages of an app / bundle. Use this entry to benefit from individual event types of the apps (if available).

Choose "No Filter" if you want to use all incoming MxMessages as generic event of the related app.

2. Click on **Set**^④ at the end of the dialog box to confirm the settings.

Examples for message names and filter values of the FF Group License Plate Recognition App -Region EUCA

Event	MxMessage Name	Filter Value
Generic Event	FFLPR	"recognizedPersons"
White list Event	FFLPR.custom.whitelist	"true"
Black list Event	FFLPR.custom.blacklist	"true"
Not listed Event	FFLPR.custom.notlisted	"true"
Unique license plate event	FFLPR.plate.LicensePlate	License plate code as "STRING"; e.g., "LUCY8000" (see Meta data transferred within the MxMessageSystem, p. 44)
Incoming Vehicle Event	FFLPR.plate.Direction	"in"
Outgoing Vehicle Event	FFLPR.plate.Direction	"out"



EN_07/23 MOBOTIX AG • Kaiserstrasse • D-67722 Langmeil • Tel.: +49 6302 9816-103 • sales@mobotix.com • www.mobotix.com MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX