



Guideline

Vaxtor Container Code Recognition App

© 2023 MOBOTIX AG



Table of Contents

Table of Contents	2
Before You Start	5
Support	6
MOBOTIX Support	6
MOBOTIX eCampus	6
MOBOTIX Community	6
Safety Notes	7
Legal Notes	7
About Vaxtor Container Code Recognition App	9
Smart Data Interface to MxManagementCenter	9
Technical Specifications	11
Licensing Certified Apps	13
License Activation of Certified Apps in MxManagementCenter	13
Managing Licenses in MxManagementCenter	18
Camera, image and scene requirements	20
Recommendations on mounting and adjusting.	22
Activation of the Certified App Interface	24
Configuration of Vaxtor Container Code Recognition App	26
Basic Settings	26
Recognition Areas	27
Drawing a rectangular Area in the Live View	28
List Management	28
Video	29
OCR	30
Reporting	31
Basic Settings	33
Text Overlay	33
MxMessage	34
MOBOTIX HUB Analytic Event	34
MOBOTIX HUB Transaction	34
MOBOTIX SYNC	35
JSON	36
XML	36
Milestone Analytic Event	37
TCP Client	37

TCP Server	37
FTP	38
Network Optix	39
Genetec Security Center	40
Variables / Template Fields	41
Advanced	43
Storing the Configuration	43
MxMessageSystem	45
What is MxMessageSystem?	45
Facts about MxMessages	45
MxMessageSystem: Processing the automatically generated app event	46
Checking automatically generated app events	46
Action handling - Configuration of an action group	51
Action settings - Configuration of the camera recordings	55
Advanced Configuration: Processing the meta data transmitted by apps	57
Meta data transferred within the MxMessageSystem	57
Creating a Custom Message Event	58
Examples for message names and filter values of the Vaxtor Container Code Recognition App	60

Before You Start

Support	6
MOBOTIX Support	6
MOBOTIX eCampus	6
MOBOTIX Community	6
Safety Notes	7
Legal Notes	7

Support

MOBOTIX Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates.

Please visit www.mobotix.com > **Support** > **Help Desk**.



MOBOTIX eCampus

The MOBOTIX eCampus is a complete e-learning platform. It lets you decide when and where you want to view and process your training seminar content. Simply open the site in your browser and select the desired training seminar.

Please visit www.mobotix.com/ecampus-mobotix.



MOBOTIX Community

The MOBOTIX community is another valuable source of information. MOBOTIX staff and other users are sharing their information, and so can you.

Please visit community.mobotix.com.



Safety Notes

- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- This equipment is not suitable for use in locations where children are likely to be present.
- When using a Class I adapter, the power cord shall be connected to a socket-outlet with proper ground connection.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.

Legal Notes

Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on www.mobotix.com under **Support > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see www.mobotix.com, **Support > Download Center > Marketing & Documentation > Brochures & Guides > Certificates**).

Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at www.mobotix.com by clicking on the corresponding link at the bottom of every page.

About Vaxtor Container Code Recognition App

Recognition of cargo container codes according to ISO 6346

Based on deep learning processes the certified Vaxtor Container Code Recognition App recognizes container codes and delivers realtime results about the container owner, type dimensions and much more. The app is able to detect container codes within 900 ms and an extremely high hit probability of over 99 percent. Via blocking or permission lists, authorized, or containers with unauthorized content can be defined specifically. Possible areas of use for the application are harbor & airport logistics, container inventory & surveillance, border control, access control or logistic management.

- Recognition of cargo container codes according to ISO 6346 standard
- with over 99% accuracy optimally suited for detection and logging of container codes on entry, between zones, during processes or exit
- Two lists for individual actions (e.g. access granted/denied, alarm, etc.)
- Integrated Smart Data Interface for data retrieval with MxManagementCenter from version 2.4.3.

CAUTION! Thermal sensors are not supported by this app.

Smart Data Interface to MxManagementCenter

This app has a Smart Data interface to MxManagementCenter.

With the MOBOTIX Smart Data System, transaction data can be linked to the video recordings made at the time of the transactions. Smart Data source can be e.g. MOBOTIX Certified Apps (no license required) or general Smart Data sources (license required) like POS systems or license plate recognition systems.

The Smart Data System in MxManagementCenter enables you to quickly find and review any suspicious activities. The Smart Data Bar and the Smart Data View are available for searching and analyzing transactions. The Smart Data Bar provides a direct overview of the most recent transactions (from the last 24 hours) and for this reason it is convenient to use it for reviews and searches.

NOTE! For information on how to use the Smart Data System, see the corresponding online help of the camera software and MxManagementCenter.

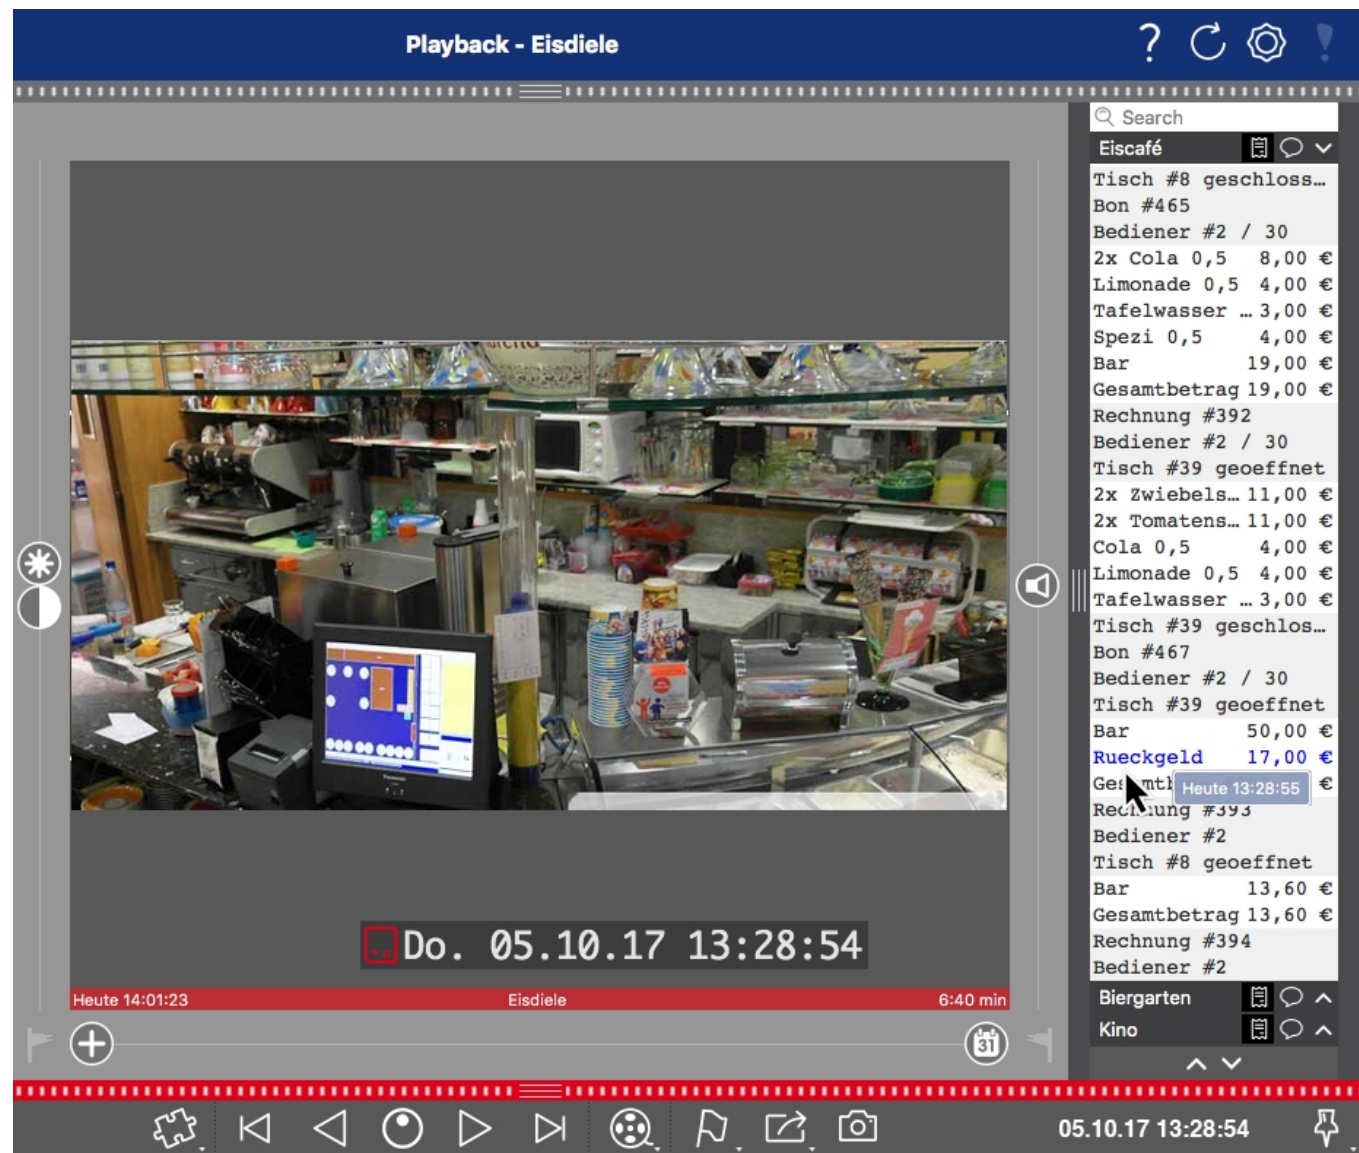


Fig. 1: : Smart Data Bar in MxManagementCenter (Example: POS System)

Technical Specifications

Product Information

Product Name	Vaxtor Container Code Recognition App
Order Code	Mx-APP-VX-CON
Supported MOBOTIX Cameras	Mx-M73A, Mx-S74A
Minimum Camera Firmware	v7.1.3.x
MxManagementCenter Integration	<ul style="list-style-type: none">■ min. MxMC v2.4.3■ Configuration: Advanced Config license required■ Event Search: Smart Data Interface license included

Product Features

App Features	<ul style="list-style-type: none">■ Recognition of cargo container codes according to ISO 6346■ Real time results:<ul style="list-style-type: none">■ Container Code■ Owner and corresponding origin■ Container Type■ Container Dimensions■ Control Digit■ Control Digit Validation■ Recognition log (Smart Data / Event Search via MxManagementCenter)■ MOBOTIX events via MxMessageSystem■ Two lists for individual actions (e.g. access granted/denied, alarm, etc.)■ Free flow and Signaled mode
Maximum number of recognition areas	1
Maximum number of enrolled license plates	1000 per list

Technical Specifications

Smart Data Interface to MxManagementCenter

Meta Data / Statistic formats	JSON
Trial License	30-day trial license pre-installed
MxMessageSystem supported	Yes
Integration Interfaces	<ul style="list-style-type: none">■ MxMC Smart Data■ IP Notification■ Milestone X-Protect■ MOBOTIX SYNC■ generic 3rd party integration via XML■ compare supported camera's interfaces
MOBOTIX Events	Yes
ONVIF Events	Yes (Generic Message event)

Supported Container Codes

Supported Container Codes	Container code specification according to ISO 6346
---------------------------	--

Scene Requirements

Character Height	20px - 50px
Maximum Vertical Angle	30°
Maximum Horizontal Angle	< 25°
Maximum Tilt Angle	< 25°

Technical App Specifications

Synchronous / Asynchronous App	asynchronous
Simultaneous execution of other apps	No
Accuracy	min. 99% (considering scene requirements)
Processed frame rate	typ. 10 fps
Detection time	typ. 900 ms per Container

Licensing Certified Apps

The following licenses are available for the Vaxtor Container Code Recognition App:

- **30-day test license** pre-installed
- **permanent commercial license**

The usage period begins with activation of the app interface (see [Activation of the Certified App Interface](#), p. 24)

NOTE! For buying or renewing a license, contact your MOBOTIX Partner.

NOTE! Apps are usually pre-installed with the firmware. In rare cases, apps must be downloaded from the website and installed. In this case see www.mobotix.com > [Support](#) > [Download Center](#) > [Marketing & Documentation](#), download and install the app.

License Activation of Certified Apps in MxManagementCenter

After a test period commercial licenses must be activated for use with a valid license key.

Online-Activation

After receiving the activation IDs, activate them in MxMC as follows:

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

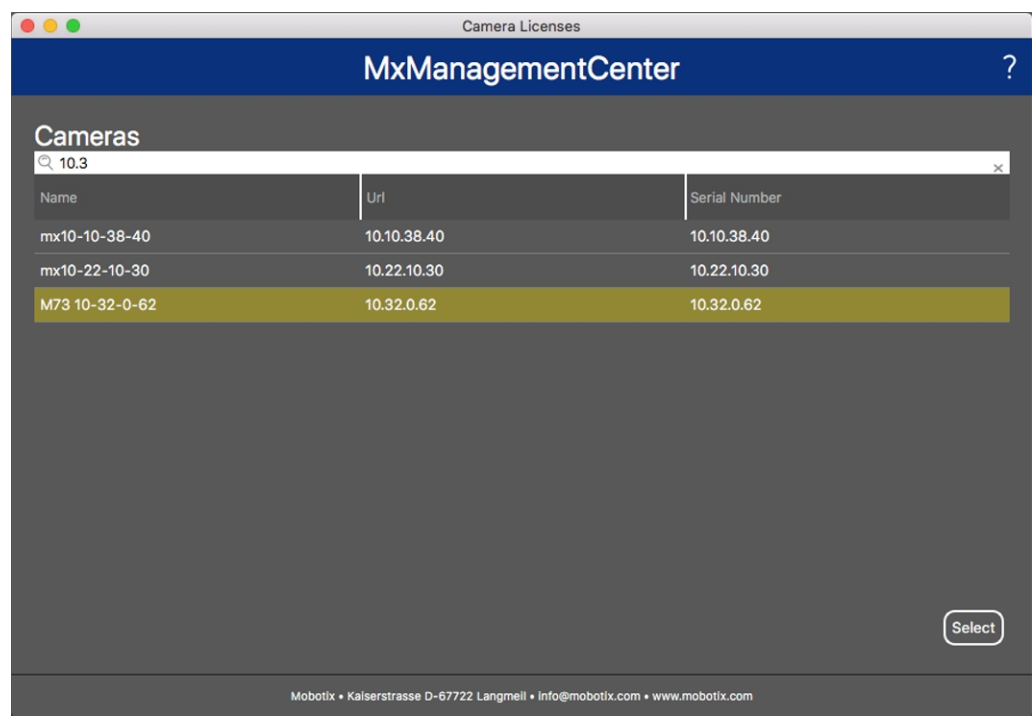


Fig. 2: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

1. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

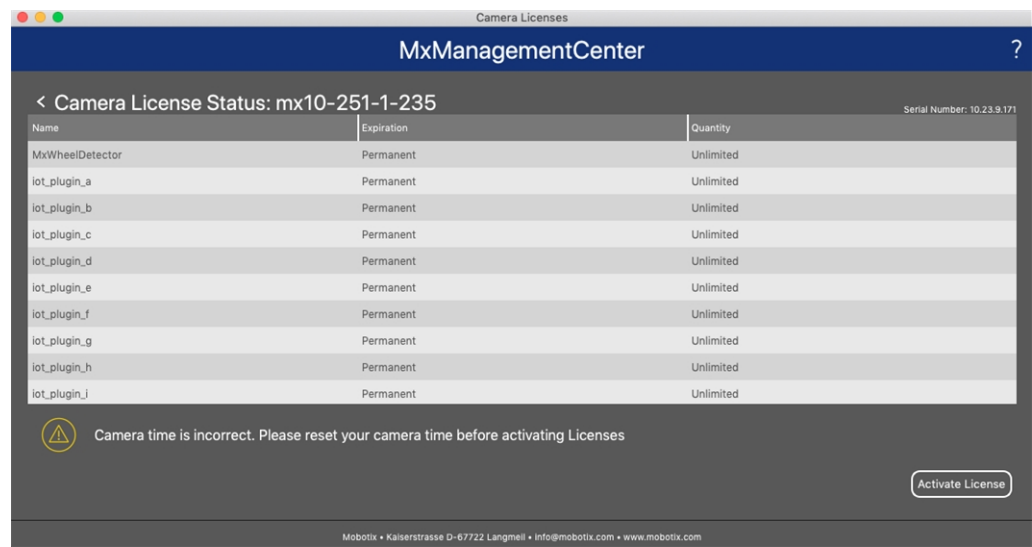



Fig. 3: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

2. Enter a valid Activation ID and specify the number of licenses to install on this computer.
3. If you want to license another product, click on . In the new row, enter the appropriate Activation ID and the number of licenses you want.

4. To remove a line click .
5. When you have entered all Activation IDs, click **Activate License Online**. During activation, **MxMC** connects to the license server. This requires an Internet connection.

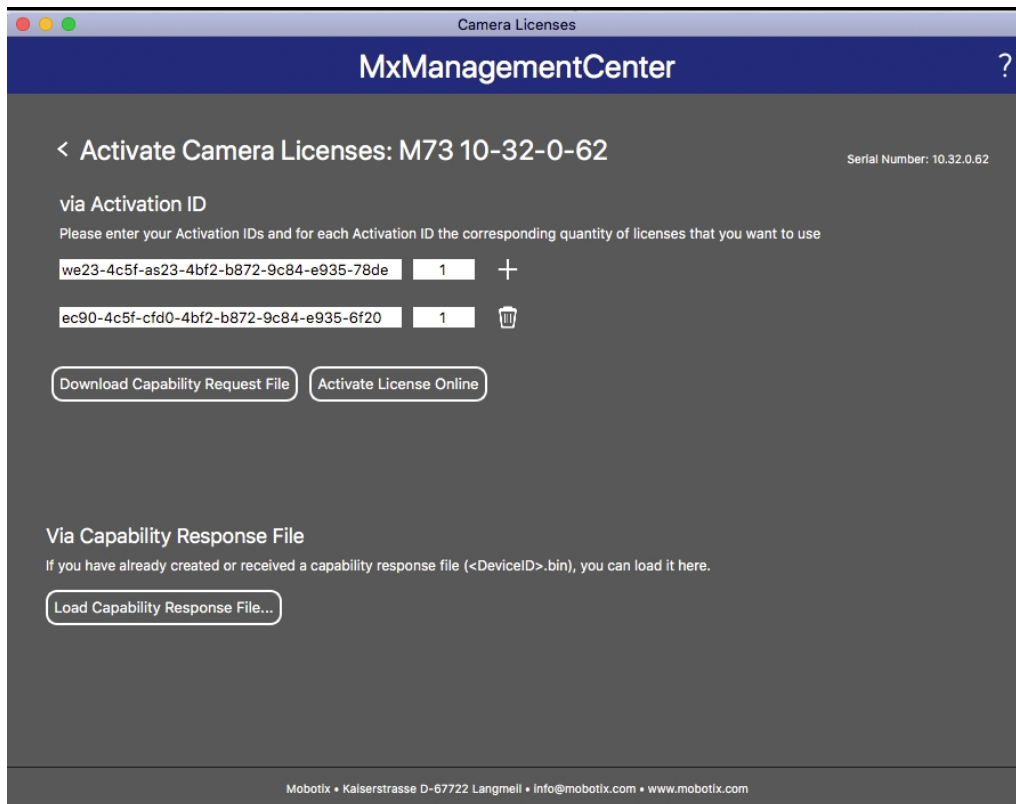


Fig. 4: Adding licenses

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Failed activation (missing internet connection)

If the license server cannot be reached, e.g. due to a missing internet connection, apps can also be activated offline. (see [Offline Activation](#), p. 15).

Offline Activation

For offline activation, the partner/installer from whom you purchased the licenses can generate a capability response (.bin file) on the license server to activate their licenses.

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

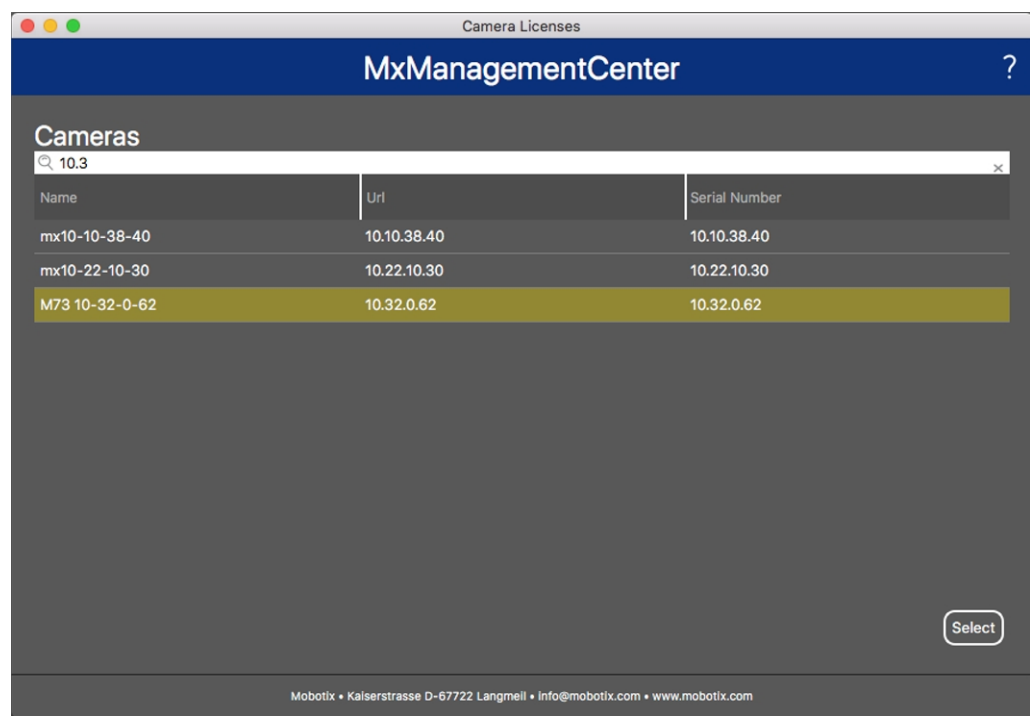


Fig. 5: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

3. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

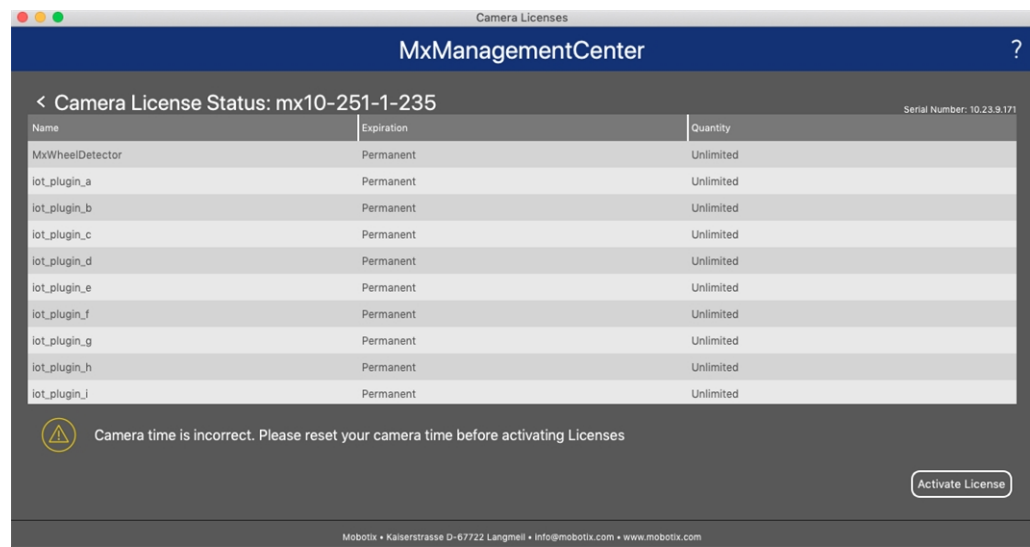




Fig. 6: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

4. Enter a valid Activation ID and specify the number of licenses to install on this computer.
5. If you want to license another product, click on . In the new row, enter the appropriate **Activation ID** and the number of licenses you want.
6. If necessary, click  to remove a line.
7. When you have entered all Activation IDs, click **Download Capability Request File (.lic)** and send it to your partner/installer.

NOTE! This file allows the partner / installer from whom you purchased the licenses to generate a capability response file (.bin) on the license server.

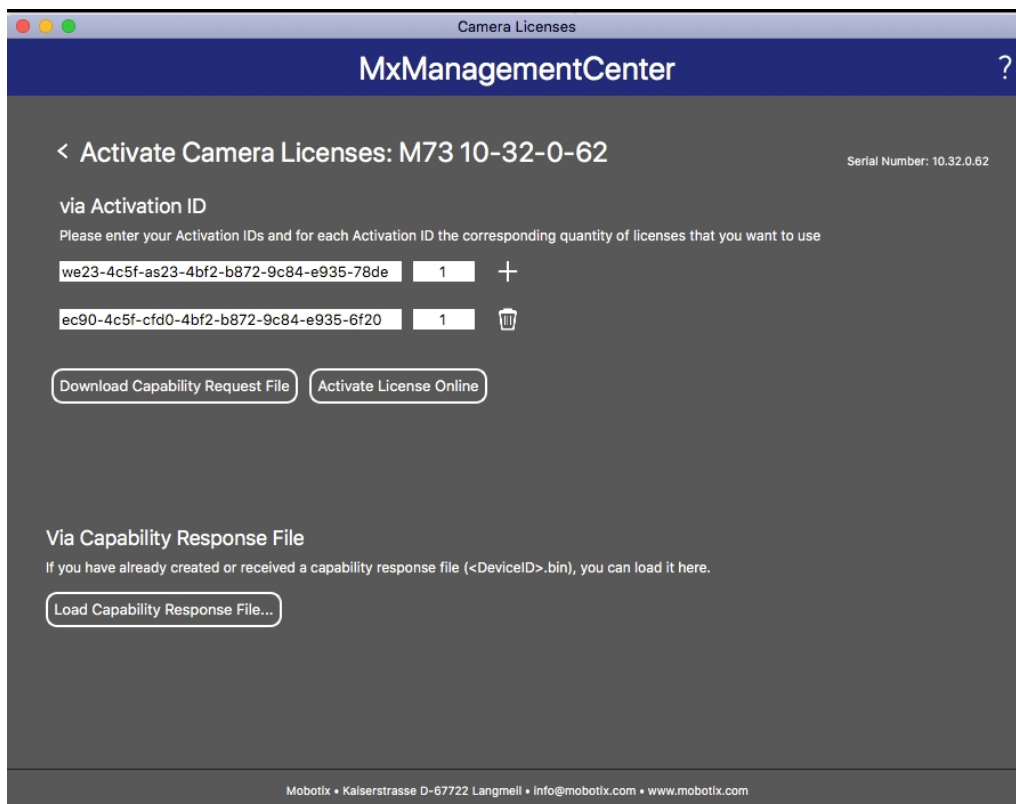


Fig. 7: Adding licenses

8. Click Load Capability Response File and follow the instructions.

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Managing Licenses in MxManagementCenter

In MxManagementCenter you can comfortably manage all licenses that have been activated for a camera.

- 1. Select from the menu **Window > Camera App Licenses**.
- 2. Select the camera on which you want to license apps and click **Select**.

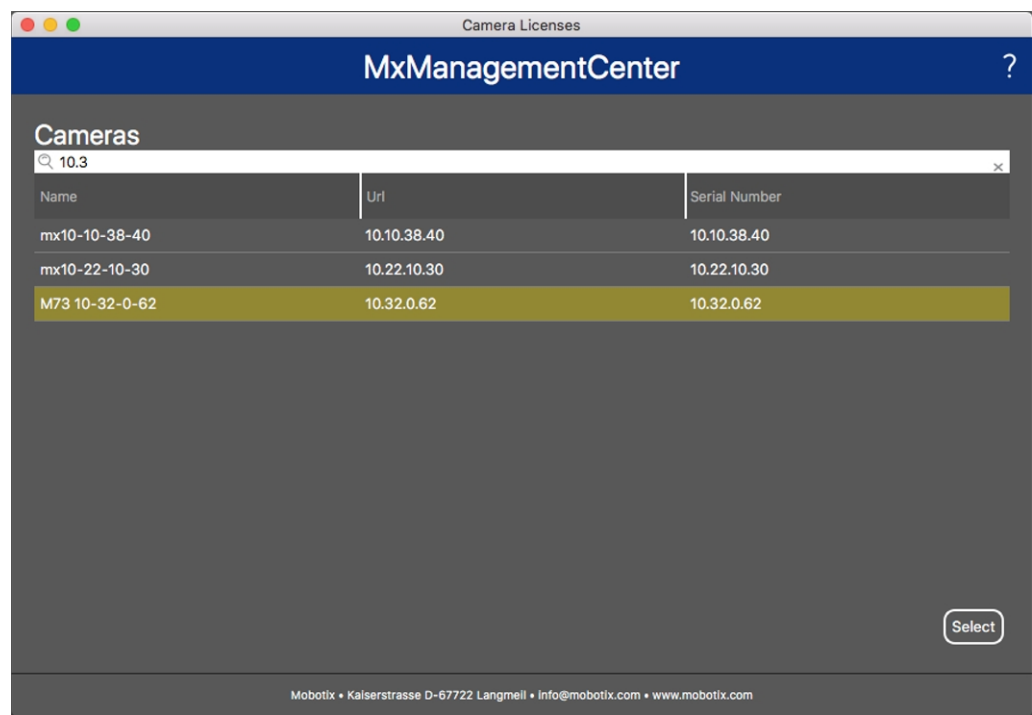


Fig. 8: Overview of Camera App Licenses in MxManagementCenter

An overview of the licenses installed on the camera may be displayed.

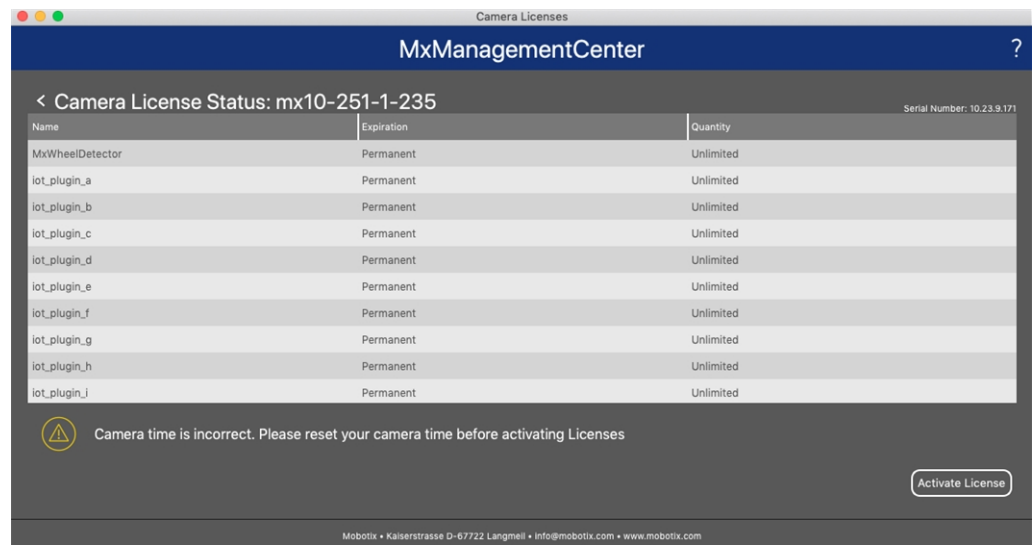


Fig. 9: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

Column	Explanation
Name	Name of the licensed app
Expiration	the time limit of the license
Quantity	Number of licenses purchased for a product.
Serial Number	Unique identification determined by MxMC for the device used. If problems occur during licensing, please have the device ID ready.

Synchronize licenses with server

When the program starts, there is no automatic comparison of the licenses between the computer and the license server. Therefore, click **Update** to reload the licenses from the server.

Update licenses

To update temporary licenses, click **Activate Licenses**. The dialog for updating/activating licenses opens.

NOTE! You need administrator rights to synchronize and update licenses.

Camera, image and scene requirements

The camera should be setup so that the combination of the distance, the lens's focal length and the camera's resolution provide an image that can be accurately analyzed by the OCR. Therefore the following pre-requisites must be fulfilled for the scene:

Quality of the container code to be captured in the image

- The container code must be high-contrast and clearly legible, i.e. as clean as possible, without dents or holes and well illuminated.
- The code must comply with the standard ISO 6346
- Minimum character height
 - The objective of a container code recognition system is to capture an image with a good container code. In order to achieve this all characters of container code should have a height between 20 and 50 pixels.

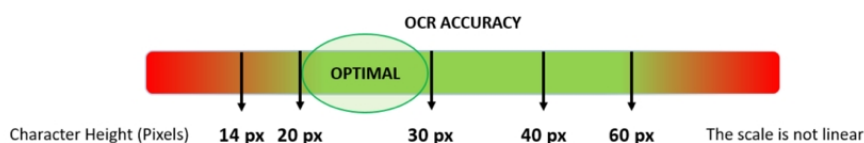


Fig. 10: Minimum character height

- Maximum rotation angle:
 - Vertical: < 30°
 - Slope: < 25°
 - Horizontal: < 25°

Frame rate

The selection of the correct frame rate influences the recognition quality significantly. The recommendation is 10 fps.

Shutter Speed (Exposure time)

Shutter speed, also known as the “exposure time”, is the length of time a camera shutter is open for in order to expose light onto the camera sensor. The shutter speed is measured in seconds, or fractions of a second. The bigger the denominator, the faster the speed. For example, 1/250th means one two-hundred-and-fiftieth of a second or four milliseconds.

(1 second = 1000 milliseconds)

Examples for recommended exposure times

Scene (Street type)	minimum exposure time (sec)
Barrier or Gate	1/250 th (4 milliseconds)

NOTE! The exposure time must be adjusted according to the light conditions.

Resolution

The resolution of the camera determines the amount of detail that can be captured. The smaller the object detail, the higher the resolution that is required. There are several factors that determine the detail captured:

- The resolution (pixel size) of the camera sensor. This sensor (normally CMOS) where the light eventually falls and a typical IP camera has a sensor resolution of 2 or 4 Megapixels.
- The resolution of the camera's electronics. Most CCTV cameras can support a minimum of 1920 x 1080 – but may be set to a lower resolution if not needed.
- The quality and focal length of the lens. The quality of the optics can play a part in challenging circumstances. The focal length (zoom factor) determines the field of view that can be seen.
- The quality of the images can be influenced by factors such as the type of lighting used.

Examples for recommend resolutions

Scene (Street type)	minimum resolution
Barrier or Gate	800 x 600 px
Roadside Deployment	1280 x 720 px

Focal length

The focal length of the lens determines how “zoomed in” the image is. It is usually expressed in millimeters (e.g., 6 mm, 25 mm, or 50 mm).

The focal length defines the angle of view (how much of the scene will be captured) and the magnification (how large individual elements will be). The longer the focal length, the narrower the angle of view and the higher the magnification. The shorter the focal length, the wider the angle of view and the lower the magnification.

In the case of zoom lenses, both the minimum and maximum focal lengths are stated, for example 10–40 mm.

Examples for recommended focal length

Scene (Street type)	Distance between camera and container code (m)	recommended lens
Barrier or Gate	2 - 6 m	2 - 8 mm or similar
Access road	15 - 30 m	15 - 50 mm or similar

NOTE! The lens should be **IR corrected** to avoid out of focus images. IR Corrected lenses should be used on both day/night and monochrome cameras in all lighting conditions in order to achieve a crisp sharp image.

Illumination

Container codes are normally painted onto the containers and are not reflective. Therefore sufficient ambient lighting must be used to adequately illuminate the text so that it can be read at a reasonably fast shutter speed without the camera adding too much gain to brighten the image. (a maximum gain of about 12 is advised).

NOTE! Adding gain effectively amplifies the video signal, including any noise which can result in a very grainy image which is prone to OCR errors.

Recommendations on mounting and adjusting.

- If you want to recognize container codes on multiple lanes it is generally recommended to mount the camera on a crossbar.
- Shutter speed must be high enough to cut the light from car's headlights at night (usually it's about 1/1000). Keep in mind, that too high shutter speed may obscure the edges of the lines (especially shadows).
- Depth of focus is a very important parameter. If you are using a camera with a CS-mount lens, use a fixed lens. Fixed lens are better for container code recognition due to greater depth of focus. Megapixel lens is also strongly recommended.
- Respect changing light conditions (e. g. due to sunrises and sunset) when choosing the place of mounting. Direct sunlight beams can distort a picture. If the code is facing a direct sunlight consider using a lens with auto iris mode.
- If mounting a camera on a roadside pole check how the pole reacts to heavy cars or a convoy of cars. Some poles have tangible tremor, this could make container code recognition almost impossible.
- It is recommended to turn down WDR and BLC. In most cases, they will make the picture more pretty, but at the cost of smudging details like an edges of letters in the container code. For the same reason keep digital noise reduction as low as possible.

- On certain rare conditions there may be a cases of false detections e. g. because of recognizing image parts that structurally or semantically look similar to a container code(e. g. fences or ads). To minimize this:
- Adjust the region of interest accordingly. It may be a good idea to make it smaller, or change it's shape, omitting the parts, which potentially may be false detected.
- There may be cases, when the best performance will occur by changing angle of lens or moving the camera. In some cases, shooting a front container code is better.

Activation of the Certified App Interface

CAUTION! The Vaxtor Container Code Recognition App does not consider obscure areas defined for the live image. Therefore there is no pixelation in obscure areas while configuring the app and during image analysis by the app.

NOTE! The user must have access to the setup menu ([http\(s\)://<camera IP address>/control](http(s)://<camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<camera IP address>/control/app_config](http(s)://<camera IP address>/control/app_config)).

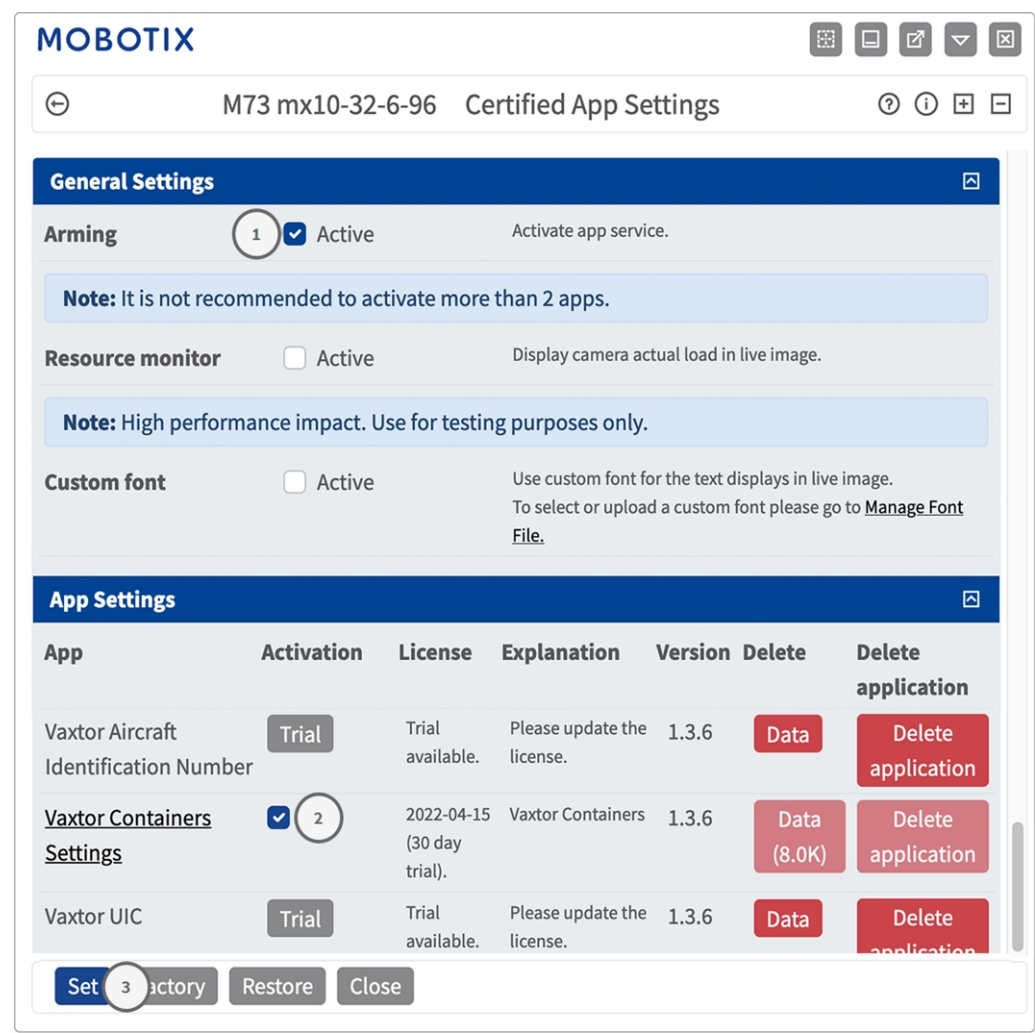


Fig. 11: Activation of Certified Apps

2. Under **General Settings** activate the **Arming**^① of the app service.
3. Under **App Settings** check the **Active** option ^② and click **Set**^③.

4. Click on the name of the App to be configured to open the Apps user interface.
5. For configuration of the App see [Configuration of Vaxtor Container Code Recognition App, p. 26.](#)

Configuration of Vaxtor Container Code Recognition App

NOTE! For best performance and results in container code processing make sure to have scene set up to meet the [Camera, image and scene requirements](#), p. 20.

CAUTION! The user must have access to the setup menu ([http\(s\)://<camera IP address>/control](http(s)://<camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<camera IP address>/control/app_config](http(s)://<camera IP address>/control/app_config)).
2. Click on the name of the **Vaxtor Container Code Recognition App**.

The configuration window of the app appears with the following options:

Basic Settings

The following configurations should be taken into account:

Vaxtor Containers		
Read size and type	<input type="checkbox"/>	Read container size and type information
Same Code Delay	<div>60</div>	Minimum elapsed time to report the same code twice (seconds)
Working Mode	<div>freeflow</div>	Signaled: The application will only attempt to read a container code when the signal is activated. Freeflow: The application continuously captures container codes.
Enable MxMessage	<input checked="" type="checkbox"/>	Send a mxmessage when a container code is read
Enable Overlay	<input checked="" type="checkbox"/>	Display an overlay on all the sensors when a container code is read

Read size and type: Check to read container size and type information

Same code delay: Define the minimum elapsed time to report the same code twice (seconds).

Working mode: The following modes are available:

Free flow: The application continuously captures container code numbers.

Signaled: The application will only attempt to read a license plate number when the signal (trigger) is activated.

NOTE! In signaled mode an signal ID will be sent with the signal event.

Enable MxMessage: Check to enable the processing of container code events in the MxMessageSystem.

Enable Overlay: Check to enable the display of the container code recognition result in the live view.

Recognition Areas

A Recognition Area, an area within the video frame where the OCR analytics takes place. You can draw a polygon and choose whether the area to look for plates in Inside or Outside this region. You can set multiple areas to respect complex situations.

NOTE! Using Recognition Areas can decrease OCR processing time and also reduce false positives. The whole license plate must be in or out the Recognition Area to pass the test.

Recognition Areas

Recognition Area Type inclusion Recognition Area Type. Inclusion: only the usdots inside the recognition area will be detected. Exclusion: only the usdots outside the recognition area will be detected

Show Recognition Area ☐ Show the recognition area on the USDOT sensor

Edit Recognition Area

Position
599 x 275

Size
265 x 388

Edit Rectangle 1

2

3

Define multiple detection zones as a rectangle. To do this, press the "Edit Rectangle" button. You can draw a rectangle in the camera image with the mouse. The corners are moved using the large handles.

Recognition Area Type: Check to activate the sending of events according to the following configuration

Inclusion: only the plates inside the recognition area will be detected.

Exclusion: only the plates outside the recognition area will be detected.

Show Recognition Area: Check to display the recognition area on the LPR sensor.

Edit Recognition Area: Click **Edit Rectangle** ① to draw a recognition area in the live view (see [Drawing a rectangular Area in the Live View, p. 28](#)).

Recycle Bin icon ② : Click the to delete the recognition area.

Plus icon ③ : Click the to define another Detection Area.


Drawing a rectangular Area in the Live View

In the Live View, there you can draw rectangular area. Depending on the App these areas are e.g. Detection Areas, Excluded Areas, Reference Areas, Human Size Selectors etc.

1. In the Live View simply click and drag a rectangular area.
2. Drag the corner points to the desired position.
3. In the top right corner of the live view click **Submit** to adopt the coordinates of the polygon.
4. Optionally click the **bin** icon to delete the recognition area.

List Management

You can define a black list and a white list with up to 1000 container codes per list. If a container code from one of the lists is recognized, a corresponding event is sent within the MxMessageSystem of the camera.

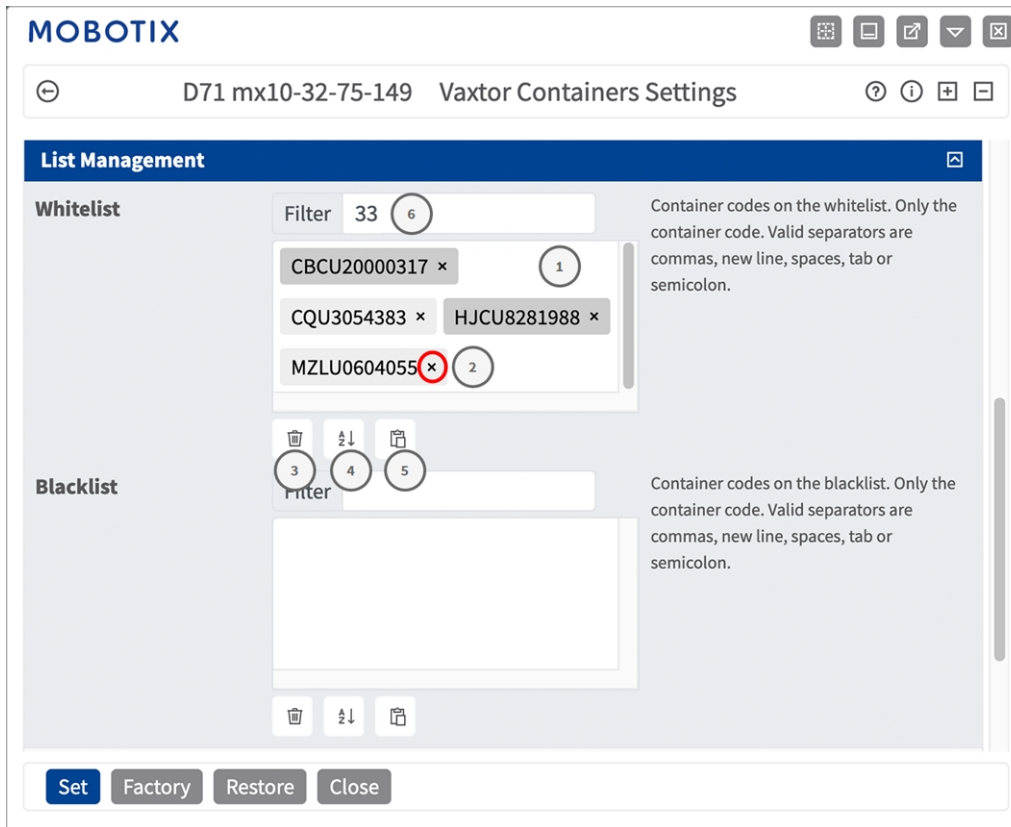

Adding a container code to a list

1. Enter the container code text into the text field ① and click **Enter**.

Adding multiple license plates from a text file

1. Make sure that your text file contains one license plate per line.
2. Copy the relevant license plates from the text file and paste them into the text field ① .

Deleting a container code from a list

1. Click on the small x ② to the right of the license plate number.

Deleting all container codes from a list

1. Click the trash icon ③ .

Sorting all container codes from a list alphabetically

1. Click the sort icon ④ .

Copy all container codes from a list to the clip board

1. Click the copy to clipboard icon ⑤ .

Filtering container codes

1. Enter the license plate or parts of it into the filter text field ⑥ . Only license plates containing the filter text are displayed accordingly.

Video

In the video tab you can specify video quality of the video to be analyzed.

MOBOTIX

D71 mx10-32-75-149

Vaxtor Containers Settings

Video

OCR Sensor

Right sensor

Sensor used to recognize containers

Overview Sensor

None

Sensor used to capture overview images when a container code is detected

Resolution

1920x1080

Working resolution. Adjust the resolution and the camera zoom to capture the containers codes on the optimum range. Changing this option will require a camera reboot

Minimum Character Height

18

Minimum character height in pixels (14-70). Tip: optimal reading size is 25 pixels height

Maximum Character Height

42

Maximum character height in pixels (14-70). Tip: optimal reading size is 25 pixels height

Set

Factory

Restore

Close

OCR sensor: Select the camera sensor to be used for container code recognition.

NOTE! Changing this option requires a camera reboot.

Overview Sensor: Optionally select a sensor used to capture overview images when a plate is detected.

Resolution: Set the working resolution (current maximum is 1080p). Adjust the resolution and the camera zoom to capture the codes on the optimum range.

NOTE! Changing this option requires a camera reboot.

Minimum Character Height: the minimum height that a container code’s characters should be before being read. The characters should be about 20-30 pixels high.

Maximum Character Height: the maximum height is about 20-30 pixels.

NOTE! The recommended difference between the min and max heights is about 10 pixels.

OCR

In the OCR (Optical Character Recognition) tab you can set parameters to ensure the best possible recognition results.

OCR	
Analytics Complexity	<div>Medium</div> <div>Tip: Set low if you're losing containers codes because lack of performance, Medium: default/normal scenario conditions, High: low quality video</div>
Double Read	<div><input checked="" type="checkbox"/></div> <div>It does one read in 2 consecutive frames</div>

Analytics Complexity: This is the complexity of the analytics to be applied during the OCR engine's stage of plate reading. Set this according to the OCR mode and type of traffic expected. There are three options.

Low: Recommended for very high-speed traffic where the OCR needs to work faster and your preference is for plate detection over perfect recognition.

Medium (Default) Recommended when the OCR mode is set to free-flow.

High: Recommended when the OCR mode is set to signal (triggered).


CAUTION! Higher complexities give more accurate reading but make the ALPR engine run slower.

Double Read: It does one read in 2 consecutive frames.

Reporting

Vaxtor Container Code Recognition App is able to output all plate reads in real time using a variety of standard protocols so that the plate reads can be accepted remotely by a variety of programs including MOBOTIXSYNC, which can accept and store plate reads in real time from hundreds cameras.

By selecting one of the listed protocols, a sub-menu will appear with fields for setting up parameters such as remote IP addresses etc.

Reporting

Retry Notifications	<input type="checkbox"/>	Retry failed notifications (MOBOTIX SYNC and JSON only)
Send Test	<input type="checkbox"/>	Send a fake read (TEST) when settings are stored or when the camera is started
Text Overlay		
MxMessage		
MOBOTIX HUB Analytic Event		
Enable	<input type="checkbox"/>	Enable MOBOTIX HUB Analytic Event reporting
MOBOTIX HUB Transaction		
Enable	<input type="checkbox"/>	Enable MOBOTIX HUB Transaction reporting
MOBOTIX SYNC		
Enable	<input type="checkbox"/>	Send all results to the configured MOBOTIX SYNC server
JSON		
Enable	<input type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
XML		
Enable	<input type="checkbox"/>	Enable XML HTTP/HTTPS POST reporting
Milestone Analytic Event		
Enable	<input type="checkbox"/>	Enable analytic event reporting
TCP Client		
Enable	<input type="checkbox"/>	Enable TCP client reporting
TCP Server		
Enable	<input type="checkbox"/>	Enable TCP server reporting
FTP		
Enable	<input type="checkbox"/>	Enable FTP reporting
Network Optix		
Enable	<input type="checkbox"/>	Enable Network Optix reporting
Genetec Security Center		
Enable	<input type="checkbox"/>	Enable Genetec reporting
Genetec LPR Plugin		
Enable	<input type="checkbox"/>	Enable Genetec LPR Plugin reporting
UTMC		
Enable	<input type="checkbox"/>	Enable UTMC reporting

Basic Settings

Reporting		
Retry Notifications	<input checked="" type="checkbox"/>	Retry failed notifications (Helix-6 and JSON only)
Retry Period	<input type="text" value="1"/>	Amount of seconds between notification retries
Send reads without size and type	<input checked="" type="checkbox"/>	Send reads without size and type information if available
Send Test	<input type="checkbox"/>	Send a fake read (TEST) when settings are stored or when the camera is started

Retry notifications: Check to retry failed notifications (MOBOTIX SYNC and JSON only).

Retry period: Amount of seconds between notification retries.

Send reads without size and type: Check to send reads without container size and type information.

Send test: Check to send a fake read (TEST) when settings are stored or when the camera is started.

Text Overlay

Text Overlay		
Overlay Template	<input type="text" value="\$date\$ - \$plateutf8\$"/>	Template to use on the overlay, check the manual for available keywords
Fade out timer	<input type="text" value="0"/>	Amount of seconds that the overlay will be visible or 0 to make it perpetual
Show plate image	<input type="checkbox"/>	Display a small image with the plate number detected
Image position (x)	<input type="text" value="5"/>	Coordinate position for the image (x)
Image position (y)	<input type="text" value="50"/>	Coordinate position for the image (y)

Text Overlay

Overlay Template: Define template to use on the overlay. Check the [Variables / Template fields](#) [Variables / Template Fields, p. 41](#) for available keywords.

Fade out timer: Set the amount of seconds that the overlay will be visible or 0 to make it perpetual.

Show plate image: Check to display a small image with the container code detected.

Image position (x): x coordinate position for the image.

Image position (y): y coordinate position for the image.

MxMessage

MxMessage		
MxMessage Template	<input "="" type="text" value='{"area": "\$roidid\$", "direction": "\$direct'/>	Defines the template of customized part of the MxMessage. Check the manual for available keywords
Subpath	<input type="text"/>	

MxMessage

MxMessage Template: Define template of customized part of the MxMessage. [Check the Variables / Template fieldsVariables / Template Fields, p. 41](#) for available keywords.

Subpath: Define a subpath for the MxMessage. Check the [Variables / Template fieldsVariables / Template Fields, p. 41](#) for available keywords.

MOBOTIX HUB Analytic Event

MOBOTIX HUB Analytic Event		
Enable	<input checked="" type="checkbox"/>	Enable MOBOTIX HUB Analytic Event reporting
URL	<input type="text" value="http://mobotixhubserver.com:9090/"/>	Destination URL
Camera name	<input type="text" value="10.X.X.X"/>	Camera name or IP address as defined in MOBOTIX HUB

MOBOTIX HUB Analytic Event: With the Analytics Events feature it is possible to send MAD (Milestone Alert Data) formatted alerts to the MOBOTIX HUB event server over TCP/IP.

Enable : Check to enable and configure MOBOTIX HUB Analytic Event reporting.

URL: Enter the corresponding MOBOTIX HUB Server URL (e.g. <http://mobotixhubserver.com:9090/>)

Camera name: Enter the camera name or IP address of this camera as defined in MOBOTIX HUB.

MOBOTIX HUB Transaction

MOBOTIX HUB Transaction		
Enable	<input checked="" type="checkbox"/>	Enable MOBOTIX HUB Transaction reporting
Port	<input type="text" value="30001"/>	MOBOTIX HUB Server TCP Port
Template	<input type="text" value="@ \$plateutf8\$@"/>	Template to use on the message, check the manual for available keywords

MOBOTIX HUB Transaction: With the Analytics Events feature it is possible to send transaction data to a MOBOTIX HUB server over TCP/IP port.

Enable : Check to enable and configure MOBOTIX HUB Transaction reporting.

Port: MOBOTIX HUB Server TCP Port.

Template: Template used when reporting. Check the [Variables / Template fields](#) [Variables / Template Fields](#), p. 41 for available keywords.

MOBOTIX SYNC

NOTE! The options in this section also apply to Vaxtor Helix servers.

MOBOTIX SYNC		
Enable	<input checked="" type="checkbox"/>	Send all results to the configured MOBOTIX SYNC server
URL	<input type="text"/>	MOBOTIX SYNC full URL address (https://mysync.server.com/sync)
API Key	<input type="text"/>	MOBOTIX SYNC API Key
Heartbeat	<input type="text" value="300"/>	Heartbeat timer in seconds (10 - 300) or 0 if heartbeat is disabled
Camera ID	<input type="text" value="1"/>	MOBOTIX SYNC camera ID assigned to this camera
Overview Camera ID	<input type="text" value="0"/>	MOBOTIX SYNC overview camera ID assigned to this camera (0 if none)
Sync lists	<input type="text" value="0"/>	Synchronize lists with MOBOTIX SYNC server

MOBOTIX SYNC: MOBOTIX SYNC protocol is an encrypted version of the Vaxtor protocol.

Enable : Check to enable and configure the reporting to a MOBOTIX SYNC server.

URL: Enter the full URL of your configured MOBOTIX SYNC server using this syntax https://<ip_or_server_name>/sync). When reporting to a Vaxtor Helix server, enter https://<ip_or_server_name>/helix6.

API Key: Enter the MOBOTIX SYNC (or Helix) API key generated from your server application.

Heartbeat: Sends a heartbeat every x seconds to the specified server (enter 0 to disable).

Camera ID: Enter MOBOTIX SYNC (or Helix) camera ID assigned to this particular camera.

Overview Camera ID: Enter the MOBOTIX SYNC (or Helix) overview camera ID assigned to this particular camera (set to 0 if none).

Sync lists: Synchronizes the lists with the MOBOTIX SYNC (or Helix) server.

JSON

JSON

Enable	<input checked="" type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
URL	<input type="text" value="https://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="text"/>	Password to use on the authentication. Blank if none.
JSON Template	<input "="" type="text" value='{"plate":"\$plate\$", "date":"\$date\$", "ir'/>	Template to use on the message, check the manual for available keywords

JSON : JSON is a compact data format in an easy-to-read text form for data exchange between applications.

Enable : Check to enable and configure JSON HTTP/HTTPS POST reporting.

URL: Enter the destination URL (e.g., 3rd party server) where the generated meta data should be sent to.

Username: Username to be used for authentication (leave blank if no authentication is used).

Password: Password to be used for authentication (leave blank if no authentication is used).

JSON Template: Defines the content / scheme of the transmitted JSON notification. Check the [Variables / Template fields](#)[Variables / Template Fields, p. 41](#) for available keywords.

XML

JSON

Enable	<input checked="" type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
URL	<input type="text" value="https://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="text"/>	Password to use on the authentication. Blank if none.
JSON Template	<input "="" type="text" value='{"plate":"\$plate\$", "date":"\$date\$", "ir'/>	Template to use on the message, check the manual for available keywords

XML : XML is a compact data format in an easy-to-read text form for data exchange between applications.

Enable : Check to enable and configure XML HTTP/HTTPS POST reporting.

URL: Enter the destination URL (e.g., 3rd party server) where the generated meta data should be sent to.

Username: Username to be used for authentication (leave blank if no authentication is used).

Password: Password to be used for authentication (leave blank if no authentication is used).

XML Template: Defines the content / scheme of the transmitted XML notification. Check the [Variables / Template fields](#)[Variables / Template Fields, p. 41](#) for available keywords.

Milestone Analytic Event

Milestone Analytic Event		
Enable	<input checked="" type="checkbox"/>	Enable analytic event reporting
URL	<input type="text" value="http://milestoneserver.com:9090/"/>	Destination URL
Camera name	<input type="text" value="10.X.X.X"/>	Camera name or IP address as defined in Milestone

Milestone Analytic Event: With the Analytics Events feature it is possible to send MAD (Milestone Alert Data) formatted alerts to the Milestone event server over TCP/IP

Enable : Check to enable and configure MOBOTIX HUB Analytic Event reporting.

URL: Enter the corresponding Milestone Server URL (e.g. <http://milestoneserver.com:9090/>)

Camera name: Enter the camera name or IP address of this camera as defined in Milestone.

TCP Client

TCP Client		
Enable	<input checked="" type="checkbox"/>	Enable TCP client reporting
Server IP	<input type="text"/>	Server IP to which the messages are going to be sent
Port	<input type="text" value="30001"/>	Server TCP port to which the messages are going to be sent
Template	<input type="text" value="@\${plateutf8}\${@}"/>	Template to use on the message, check the manual for available keywords

TCP Client:

Enable : Check to enable and configure TCP client reporting

Server IP: Enter the URL of the server to which the MxMessages will be sent.

Port: Enter the TCP port of the server.

Template: Defines the content / scheme of the transmitted TCP message. Check the [Variables / Template fields](#)[Variables / Template Fields, p. 41](#) for available keywords.

TCP Server

TCP Server		
Enable	<input checked="" type="checkbox"/>	Enable TCP server reporting
Port	<input type="text" value="30000"/>	Server TCP port
Template	<input type="text" value="@\${plateutf8}\${@}"/>	Template to use on the message, check the manual for available keywords

TCP Server: You can send event data as text file and images files to a ftp server.

Enable :Check to enable and configure TCP server reporting.

Server IP: Enter the URL of the server to which the MxMessages will be sent.

Port: Enter the TCP port of the server.

Template: Defines the content / scheme of the transmitted TCP message. Check the [Variables / Template fieldsVariables / Template Fields](#), p. 41 for available keywords.

FTP

FTP

Enable	<input checked="" type="checkbox"/>	Enable FTP reporting
URL	<input type="text" value="ftp://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="password"/>	Password to use on the authentication. Blank if none.
Filename template	<input type="text" value="\$uuid\$.ftpfiletype\$"/>	Template to use for the filename.
Text file template	<input type="text" value="\$date\$,plateutf8\$"/>	Template to use for the content of the text file.
Upload image	<input type="checkbox"/>	Upload the OCR image
Upload overview image	<input type="checkbox"/>	Upload the overview image
Upload patch	<input type="checkbox"/>	Upload the plate patch
Upload text file	<input type="checkbox"/>	Upload the text file

FTP: You can send event data as text file and images files to a ftp server.

Enable : Check to enable and configure FTP server reporting.

URL: Destination URL for the FTP server.

Username: Username if required, blank if none.

Password: Password if required, blank if none.

Filename Template: Template to use for the filename.

Text file template: Template to use for the content of the text file.

Upload image: Enables the upload of an image.

Upload overview image: Enables the upload of an overview image.

Upload patch: Enables the upload of a plate patch image (crop of the recognized code).

Upload text file: Enables the upload of a text file.

Network Optix

Network Optix		
Enable	<input checked="" type="checkbox"/>	Enable Network Optix reporting
URL	<input type="text" value="https://nxserver:7001/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication.
Password	<input type="text"/>	Password to use on the authentication.
Network Optix Camera Id	<input type="text"/>	Camera Id set in Network Optix Video Management Software
Source	<input type="text" value="LPR"/>	Source value sent with the generic event.
Caption	<input type="text" value="\$plateutf8\$"/>	Template to use for the caption.
Description	<input type="text" value="\$plateutf8\$ (\$country\$)"/>	Template to use for the description.

Network Optix: You can send event data to a Network Optix VMS server.

Enable : Check to enable and configure Network Optix server reporting.

URL: Destination URL for the Network Optix server.

Username: Username for authentication.

Password: Password for authentication.

Network Optix Camera ID: Camera ID as set in the Network Optix video management software.

Source: Source value sent with the generic event.

Caption: Template to use for the caption Check the [Variables / Template fields](#)[Variables / Template Fields, p. 41](#) for available keywords.

Description: Template to use for the description. Check the [Variables / Template fields](#)[Variables / Template Fields, p. 41](#) for available keywords.

Genetec Security Center

Genetec Security Center

Enable

☒

Enable Genetec reporting

Installation type

Production

Type of installation. Check with Genetec the correct type according with your license.

URL

Destination URL

Username

Username to use on the authentication.

Password

Password to use on the authentication.

Camera Logical Id

0

Camera Logical Id configured on Genetec Security Center

Template

\$plateutf8\$

Template to use for bookmarks and custom events.

Create bookmarks

☒

Create a new bookmark with each plate read

Raise custom events

☒

Raise a new custom event with each plate read

Custom Event Id

0

Custom Event Id

Genetec Security Center: You can send event data to a Genetec Security Center server.

Enable : Check to enable and configure Genetec Security Center server reporting.

Installation type: Select the installation type that corresponds to your license.

URL: Destination URL for the Genetec Security Center server.

Username: Username for authentication.

Password: Password for authentication.

Camera Logical ID: Camera ID as set in Genetec Security Center.

Template: Template to use for bookmarks and custom events. Check the [Variables / Template fields](#)[Variables / Template Fields](#), p. 41 for available keywords.

Create bookmarks: Creates a new bookmark with each plate read by the app.

Raise custom events: Raises a new custom event with each plate read by the app.

Custom Event ID: Set a custom event ID.

Variables / Template Fields

Vaxtor Container Code Recognition App only reserved variables

Template field	Description
\$confidencecode\$	Validation digit. (1=unverified, 2=Owner verified, 3=Owner and CD verified)
\$containercode\$	Container code number
\$controldigit\$	Container Code Control digit
\$direction\$	(0: unknown, 1: left, 2: right)
\$directionstr\$	(Unknown, Left, Right)
\$numdigits\$	Number of digits in the code
\$ownercity\$	Allocated city of the owner
\$ownercode\$	Allocated code of the owner
\$ownercompany\$	Owner company name
\$serialcode\$	Container Serial Code
\$sizetypecode\$	Container size & type code

Shared reserved variables

Variable	Description
\$absolutebottom\$	Plate bottom position based on the total image height (0-1).
\$absoluteleft\$	Plate left position based on the total image width (0-1).
\$absoluteright\$	Plate right position based on the total image width (0-1).
\$absolutetop\$	Plate top position based on the total image height (0-1).
\$blacklist\$	Description on the blacklist linked to the code/plate.
\$bottom\$	Bottom coordinate for the code/plate on the image (pixels).
\$category\$	Code/plate category for countries that support it.
\$charheight\$	Average character height (pixels).
\$confidence\$	Global confidence (0-100).
\$date\$	Timestamp in ISO8601 format.
\$epoch\$	Unix epoch (seconds).
\$etx\$	End of transmission character (HEX 03).
\$height\$	OCR image height.

Configuration of Vaxtor Container Code Recognition App

Reporting

Variable	Description
\$id\$	Database ID for this read.
\$ifblacklist\$...\$ifblacklist\$	If the plate is on the blacklist, returns the text between these templates.
\$ifnolist\$...\$ifnolist\$	If the plate is not on any list, returns the text between these templates.
\$ifwhitelist\$...\$ifwhitelist\$	If the plate is on the whitelist, returns the text between these templates.
\$image\$	JPEG encoded in base64.
\$imageid\$	Signal ID in case of a trigger read.
\$imagesize\$	Size of saved complete image.
\$left\$	Left coordinate for the code/plate on the image (pixels)
\$localdate\$	Date in format "%d/%m/%Y" in the camera time zone.
\$localtime\$	Time in format "%H:%M:%S" in the camera time zone.
\$overviewimage\$	Overview JPEG image encoded in base64.
\$overviewimagesize\$	Overview image size in bytes.
\$processingtime\$	Processing time in milliseconds.
\$right\$	Right coordinate for the code/plate on the image (pixels)
\$safedate\$	Time stamp in format "%Y%m%d_%H%M%S" in the camera time zone (useful for file names).
\$sensor\$	Sensor (0, 1).
\$signaled\$	True if the read had been triggered.
\$signalid\$	Signal ID of the trigger.
\$stx\$	Start of transmission character (HEX 02).
\$timestamp\$	Time stamp in format "yyyy-MM-ddTHH:mm:sszzz".
\$top\$	Top coordinate for the code/plate on the image (pixels).
\$utcdatetime\$	Time stamp in ISO8601 format but always in UTC (2020-12-31T16:11:30.000Z).
\$whitelist\$	Description on the whitelist linked to the code/plate.
\$width\$	OCR image width.

Advanced

In this section you find useful tools for calibration and trouble shooting.

Advanced	
Log level	info
Show Log File On Screen	<input type="checkbox"/>
Sensor	Right sensor
Show Calibration Grid	<input type="checkbox"/>

Log level: Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

Info: Default log level

Trace: Select e. g. for diagnostic messages received from third parties

Debug: Select for complete log files for debug purposes

Show log file on screen: Check to display the on-screen log file on the selected sensor

Sensor: Select the sensor on which the on-screen log file is displayed

Show Calibration Grid: Check to display on the OCR sensor a 20 pixels height grid

Storing the Configuration

To store the configuration you have the following options:

Set	Factory	Restore	Close
-----	---------	---------	-------

- Click **Set** to activate your settings and to save them until the next reboot of the camera.
- Click **Factory** to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click **Restore** to undo your most recent changes that have not been stored in the camera permanently.
- Click **Close** to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

MxMessageSystem

What is MxMessageSystem?

MxMessageSystem is a communication system based on name oriented messages. This means that a message must have a unique name with a maximum length of 32 bytes.

Each participant can send and receive messages. MOBOTIX cameras can also forward messages within the local network. This way, MxMessages can be distributed over the entire local network (see Message Area: Global).

For example, a MOBOTIX 7 series camera can exchange a MxMessage generated by a camera app with an Mx6 camera that does not support certified MOBOTIX apps.

Facts about MxMessages

- 128-bit encryption ensures privacy and security of message content.
- MxMessages can be distributed from any camera of the Mx6 and 7 series.
- The message range can be defined individually for each MxMessage.
 - **Local:** Camera expects a MxMessage within its own camera system (e.g. through a Certified App).
 - **Global:** the camera expects a MxMessage that is distributed in the local network by another MxMessage device (e.g. another camera of the 7 series equipped with a certified MOBOTIX app).
- Actions that the recipients are to perform are configured individually for each participant of the MxMessageSystem.

MxMessageSystem: Processing the automatically generated app event

Checking automatically generated app events

NOTE! After successfully activating the app (see [Activation of the Certified App Interface, p. 24](#)), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. VaxOCRContainer).

MOBOTIX S74 mx10-32-24-156 Event Overview

Environment Events

PI

The selected sensor is currently not available!

☒ Inactive

☐ Delete

Edit...

Image Analysis Events

AS

MxActivitySensor

☐ Inactive

☐ Delete

Edit...

VM

Video Motion

☒ Inactive

☐ Delete

VM2

Video Motion

☒ Inactive

☐ Delete

Internal Events

No profiles defined.

Edit...

Message Events

VaxOCRContainer

MxMessageSystem

☐ Inactive

☐ Delete

Edit...

MxAnalytics

MxMessageSystem

☐ Inactive

☐ Delete

FFLPRAM

MxMessageSystem

☐ Inactive

☐ Delete

Meta Events

No profiles defined.

Edit...

Signal Events

SI

Signal Input

☒ Inactive

☐ Delete

Edit...

UC

UC Soft Button

☐ Inactive

☐ Delete

Time Events

PE

Periodic Event

☒ Inactive

☐ Delete

Edit...

Set

Restore

Close

Fig. 12: Example: Generic message event from Vaxtor Container Code Recognition App

- Click **Edit** ^① to display a selection of all configured message events.

Fig. 13: Example: Generic message event details - no filter

Action handling - Configuration of an action group

CAUTION!

To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)/<camera IP address>/control/settings](http(s)/<camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor Container Code Recognition App event.

- In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<camera IP address>/control/actions](http(s)://<camera IP address>/control/actions)).

Fig. 14: Defining Action Groups

- 2. Click **Add new group**① and give a meaningful name.
- 3. Click **Edit**② , to configure the group.

MOBOTIX S74 mx10-32-24-156 Action Group Details

General Settings	Value	Explanation
Action Group	<div>Vax_Container_Action</div> <div>Enabled 1</div> <div>(No time table)</div>	Name: The name is purely informational. Arming: Controls this action group: <i>Enabled:</i> activate the group. <i>Off:</i> deactivate the group. <i>SI:</i> group armed by signal input. <i>CS:</i> group armed by custom signal as defined in General Event Settings . Time Table: Time table for this action profile (Time Tables).
Event Selection	<div>(Image Analysis: VM2)</div> <div>Message: VaxOCRContainer</div> <div>Message: MxAnalytics</div> <div>Message: FFLPRAM</div> <div>(Signal: SI)</div> 2	Event Selection: Select the events which will trigger the actions below. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first.
Action Details	<div>5</div> <div>Simultaneously</div>	Action Deadtime: Time to wait [0..3600 s] before a new action can take place. Action Chaining: Choose how the status of each subaction influences the execution of all others. <i>Simultaneously:</i> All actions are executed simultaneously. <i>Simultaneously until first success:</i> Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated. <i>Consecutively:</i> All actions are executed in the specified order. <i>Consecutively until first success:</i> Consecutive execution, but as soon as one action succeeds, the following actions are not executed. <i>Consecutively until first failure:</i> Consecutive execution, but as soon as one action fails, the following actions are not executed.
Actions	Value	Explanation
<div>Add new action 3</div>		

Set

Factory

Restore

Close

Fig. 15: Configuring an Action Group

- 1. Enable **Arming**① of the Action Group.
- 2. Select your message event in the **Event selection** list ② . To select multiple events, hold the shift key.
- 3. Click **Add new Action**③ .
- 4. Select a proper action from list **Action Type and Profile**④ .

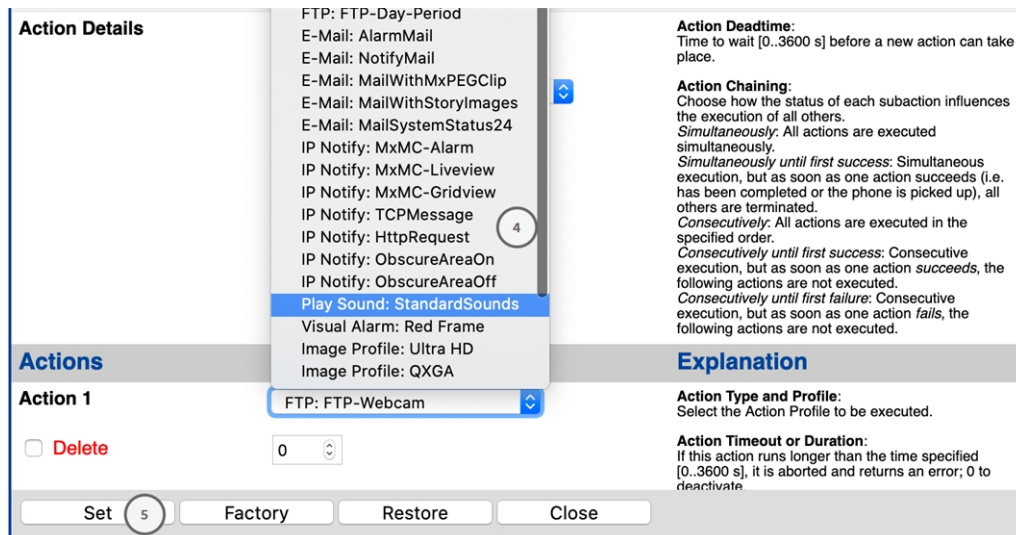


Fig. 16: Select Action Type- and Profile

NOTE!

If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- Click on the **Set** button at the end of the dialog box to confirm the settings.

Action settings - Configuration of the camera recordings

- In the camera web interface, open: **Setup Menu / Event Control / Recording**([http\(s\)/<camera IP address>/control/recording](http(s)/<camera IP address>/control/recording)).

MOBOTIX S74 mx10-32-24-156 Recording

General Settings	Value	Explanation
Arming	Enabled (1)	Arm Recording: Controls camera recording. <i>Enabled:</i> activate recording. <i>Off:</i> deactivate recording. <i>SI:</i> recording armed by signal input. <i>CS:</i> recording armed by custom signal as defined in General Event Settings . <i>From Master:</i> copies recording arming state from master camera.
	(No time table)	Time Table Profile: Time table profile for time-controlled recording (Time Tables).

Storage Settings	Value	Explanation
Recording (REC)	Event Recording (2)	Recording Mode: Type of event and story recording. <i>Snap Shot Recording:</i> stores single JPEG pictures. <i>Event Recording:</i> stores stream files for every event using MxPEG codec. <i>Continuous Recording:</i> continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using <i>Start Recording</i> , <i>Retrigger Recording</i> and <i>Stop Recording</i> .
Start Recording	(Image Analysis: VM2) Message: VaxOCRContainer (3) Message: MxAnalytics Message: FFLPRAM (Signal: SI) Max fps 0 10 s	Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <i>activated</i> first. Event Frame Rate: Recording speed if an event is detected, in frames per second. Recording Time Before Event: Additional recording time before an event in seconds. Recording Time: Time to include in recorded stream after an event has occurred.

Set (4) Factory Restore Close (5) More

Fig. 17: Configuration of camera recording settings

2. Activate **Arm Recording** ① .
3. Under **Storage Settings / Recording (REC)** select a **Recording mode** ② . The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
4. In list **Start recording** ③ select the message event just created.
5. Click on the **Set** ④ button at the end of the dialog box to confirm the settings.
6. Click on **Close** ⑤ to save your settings permanently.

NOTE!

Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Action handling - Configuration of an action group

CAUTION! To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)/<camera IP address>/control/settings](http(s)/<camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor Container Code Recognition App event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<camera IP address>/control/actions](http(s)://<camera IP address>/control/actions)).

Name	Arming	Events & Actions	Edit
VisualAlarm <input type="checkbox"/> Delete	Off (No time table)	(select all) VA	Edit...
Vax_Container_Action <input type="checkbox"/> Delete	Enabled (No time table)	MSG SD	Edit... 2

Add new group 1

Set Restore Close

Fig. 18: Defining Action Groups

2. Click **Add new group** ① and give a meaningful name.
3. Click **Edit** ② , to configure the group.

MOBOTIX S74

mx10-32-24-156 Action Group Details

?

i

General Settings	Value	Explanation
Action Group	<div>Vax_Container_Action</div> <div>Enabled 1</div> <div>(No time table)</div>	<p>Name: The name is purely informational.</p> <p>Arming: Controls this action group: <i>Enabled:</i> activate the group. <i>Off:</i> deactivate the group. <i>SI:</i> group armed by signal input. <i>CS:</i> group armed by custom signal as defined in General Event Settings.</p> <p>Time Table: Time table for this action profile (Time Tables).</p>
Event Selection	<div>(Image Analysis: VM2)</div> <div>Message: VaxOCRContainer</div> <div>Message: MxAnalytics</div> <div>Message: FFLPRAM</div> <div>(Signal: SI) 2</div>	<p>Event Selection: Select the events which will trigger the actions below. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first.</p>
Action Details	<div>5</div> <div>Simultaneously</div>	<p>Action Deadline: Time to wait [0..3600 s] before a new action can take place.</p> <p>Action Chaining: Choose how the status of each subaction influences the execution of all others. <i>Simultaneously:</i> All actions are executed simultaneously. <i>Simultaneously until first success:</i> Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated. <i>Consecutively:</i> All actions are executed in the specified order. <i>Consecutively until first success:</i> Consecutive execution, but as soon as one action <i>succeeds</i>, the following actions are not executed. <i>Consecutively until first failure:</i> Consecutive execution, but as soon as one action <i>fails</i>, the following actions are not executed.</p>
Actions	<div>Add new action 3</div>	

Set

Factory

Restore

Close

Fig. 19: Configuring an Action Group

1. Enable **Arming**① of the Action Group.
2. Select your message event in the **Event selection** list ② . To select multiple events, hold the shift key.
3. Click **Add new Action**③ .
4. Select a proper action from list **Action Type and Profile**④ .

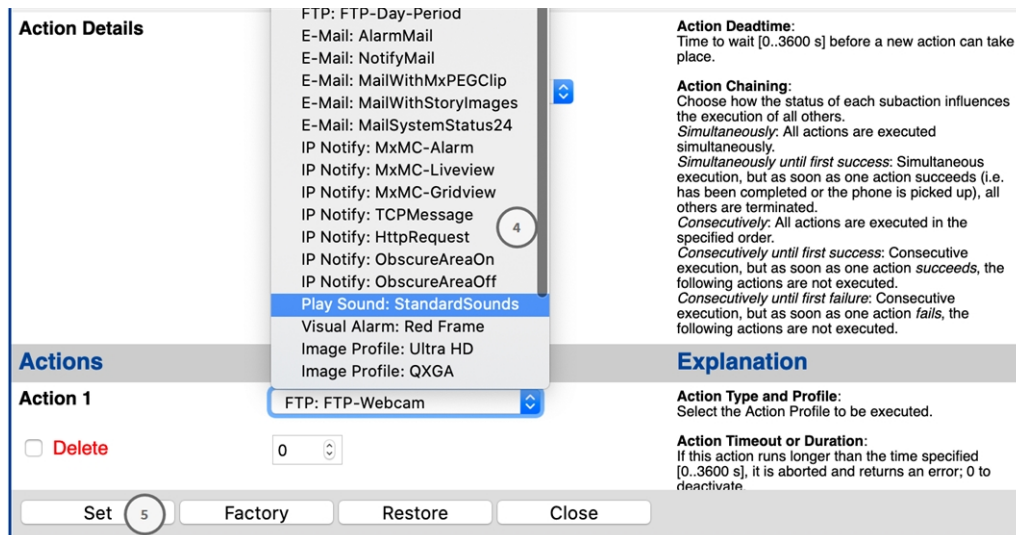


Fig. 20: Select Action Type- and Profile

NOTE!

If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- Click on the **Set** button at the end of the dialog box to confirm the settings.

Action settings - Configuration of the camera recordings

- In the camera web interface, open: **Setup Menu / Event Control / Recording**([http\(s\)/<camera IP address>/control/recording](http(s)/<camera IP address>/control/recording)).

MOBOTIX S74 mx10-32-24-156 Recording

General Settings	Value	Explanation
Arming	Enabled (1)	Arm Recording: Controls camera recording. <i>Enabled:</i> activate recording. <i>Off:</i> deactivate recording. <i>SI:</i> recording armed by signal input. <i>CS:</i> recording armed by custom signal as defined in General Event Settings . <i>From Master:</i> copies recording arming state from master camera.
	(No time table)	Time Table Profile: Time table profile for time-controlled recording (Time Tables).

Storage Settings	Value	Explanation
Recording (REC)	Event Recording (2)	Recording Mode: Type of event and story recording. <i>Snap Shot Recording:</i> stores single JPEG pictures. <i>Event Recording:</i> stores stream files for every event using MxPEG codec. <i>Continuous Recording:</i> continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using <i>Start Recording</i> , <i>Retrigger Recording</i> and <i>Stop Recording</i> .
Start Recording	(Image Analysis: VM2) Message: VaxOCRContainer (3) Message: MxAnalytics Message: FFLPRAM (Signal: SI) Max fps 0 10 s	Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <i>activated</i> first. Event Frame Rate: Recording speed if an event is detected, in frames per second. Recording Time Before Event: Additional recording time before an event in seconds. Recording Time: Time to include in recorded stream after an event has occurred.

Set (4) Factory Restore Close (5) More

Fig. 21: Configuration of camera recording settings

2. Activate **Arm Recording** ① .
3. Under **Storage Settings / Recording (REC)** select a **Recording mode** ② . The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
4. In list **Start recording** ③ select the message event just created.
5. Click on the **Set** ④ button at the end of the dialog box to confirm the settings.
6. Click on **Close** ⑤ to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Action settings - Configuration of the camera recordings

1. In the camera web interface, open: **Setup Menu / Event Control / Recording**(http(s)/<camera IP address>/control/recording).

General Settings	Value	Explanation
Arming	Enabled 1	Arm Recording: Controls camera recording. <i>Enabled:</i> activate recording. <i>Off:</i> deactivate recording. <i>SI:</i> recording armed by signal input. <i>CS:</i> recording armed by custom signal as defined in General Event Settings . <i>From Master:</i> copies recording arming state from master camera.
	(No time table)	Time Table Profile: Time table profile for time-controlled recording (Time Tables).
Storage Settings	Value	Explanation
Recording (REC)	Event Recording 2	Recording Mode: Type of event and story recording. <i>Snap Shot Recording:</i> stores single JPEG pictures. <i>Event Recording:</i> stores stream files for every event using MxPEG codec. <i>Continuous Recording:</i> continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using <i>Start Recording</i> , <i>Retrigger Recording</i> and <i>Stop Recording</i> .
Start Recording	(Image Analysis: VM2) 3 Message: VaxOCRContainer Message: MxAnalytics Message: FFLPRAM (Signal: SI) Max fps 0 10 s	Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first. Event Frame Rate: Recording speed if an event is detected, in frames per second. Recording Time Before Event: Additional recording time before an event in seconds. Recording Time: Time to include in recorded stream after an event has occurred.

Set 4 Factory Restore Close 5 More

Fig. 22: Configuration of camera recording settings

2. Activate **Arm Recording**① .
3. Under **Storage Settings / Recording (REC)** select a **Recording mode**② . The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
4. In list **Start recording**③ select the message event just created.
5. Click on the **Set**④ button at the end of the dialog box to confirm the settings.
6. Click on **Close**⑤ to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Advanced Configuration: Processing the meta data transmitted by apps

Meta data transferred within the MxMessageSystem

For each event, the app also transfers meta data to the camera. This data is sent in the form of a JSON schema within a MxMessage.

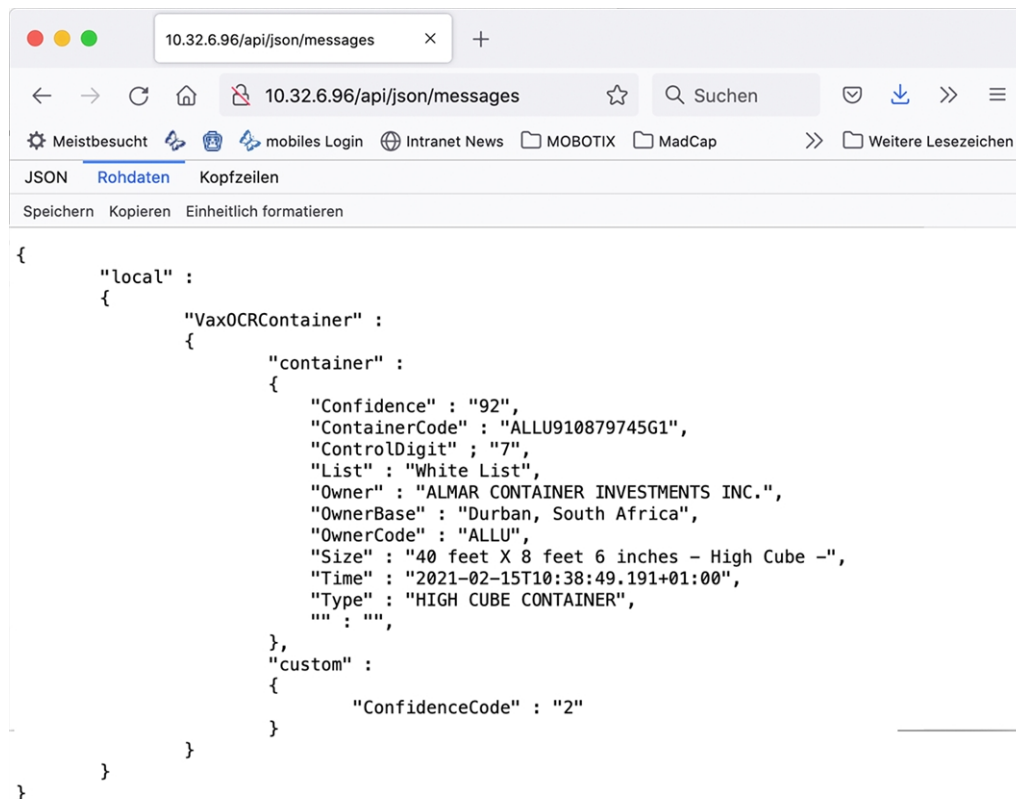


Fig. 23: Example: Meta data transmitted within a MxMessage of the Vaxtor Container Code Recognition App

NOTE! To view the meta data structure of the last App event, enter the following URL in the address bar of your browser: `http(s)/IPAdresseOfYourCamera/api/json/messages`

Creating a Custom Message Event

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. VaxOCRContainer).

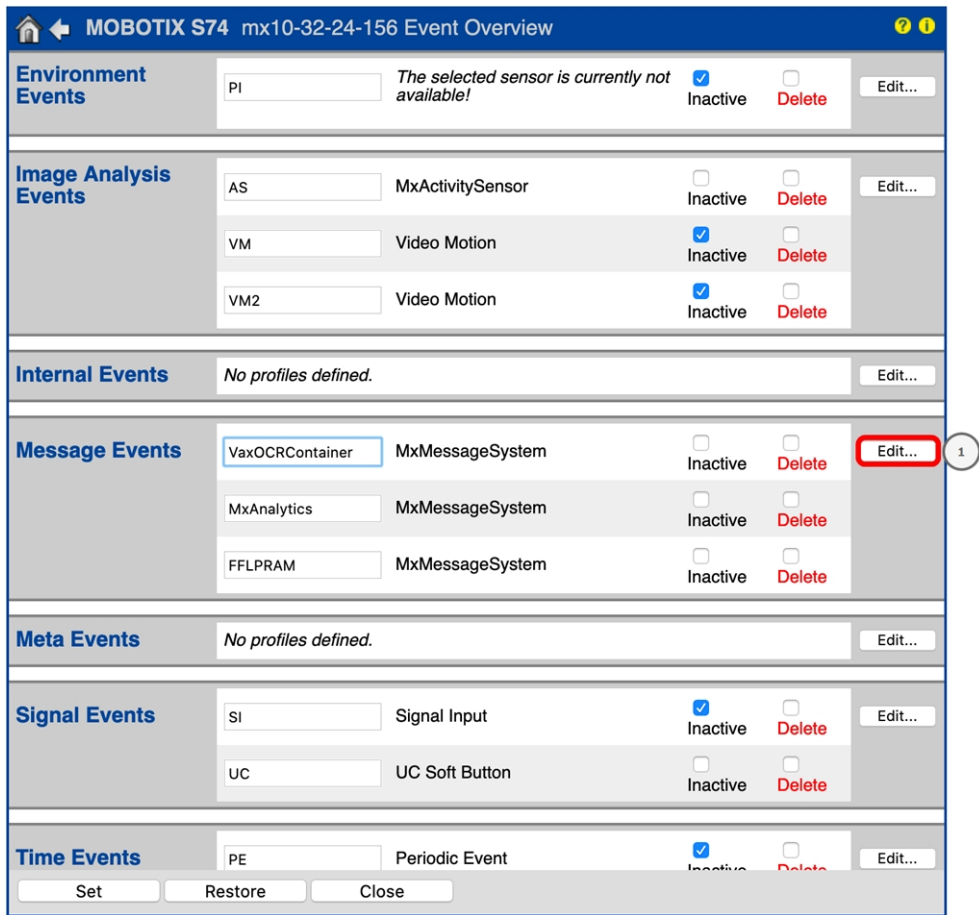


Fig. 24: Example: Generic message event from Vaxtor Container Code Recognition App

-
- The screenshot displays the MOBOTIX S74 configuration window, specifically the "Message Events" tab. The interface has a blue header bar with the title "MOBOTIX S74 mx10-32-24-156 Message Events". Below the header, there are three main sections: "Attribute", "Events", and "Event Sensor Type".
- Attribute Section:** Contains a single entry "IP Receive" with a value of "8000". To the right, under "Explanation", it says "Port: TCP port to listen on."
 - Events Section:** A dropdown menu shows "VaxOCRContainer" selected. Next to it is a circular icon with the number "1". To the right, there are two checkboxes labeled "Inactive" and "Delete". Below this, a numeric input field shows "5". To the right, under "Event Dead Time:", it says "Time to wait [0..3600 s] before the event can trigger anew."
 - Event Sensor Type Section:** Contains two radio button options: "IP Receive" and "MxMessageSystem" (which is selected). To the right, under "Event Sensor Type:", it says "Choose the message sensor." Below this, a paragraph states "Event on receiving a message from the MxMessageSystem." Further down, there is a text input field containing "VaxOCRContainer.container.L" with a circular icon labeled "2" next to it. Below this is a dropdown menu set to "Local". Further down is another dropdown menu set to "JSON Comparison". At the bottom of this section is a large text area containing the text "Black List" with a circular icon labeled "3" next to it.
 - Filter Message Content Section:** Located to the right of the "Event Sensor Type" section, it contains several paragraphs explaining the filter settings: "Message Name:" (Defines an MxMessageSystem name to wait for.), "Message Range:" (There are two different ranges of message distribution: Global: across all cameras within the current LAN. Local: camera internal.), "Filter Message Content:" (Optionally choose how to ignore messages containing Filter Value. Select No Filter to trigger on any message with defined Message Name.), and "Filter Value:" (Define either a valid reference value as a string (in JSON format) without line breaks, or an extended regular expression. Open help for examples. This parameter allows using variables.)
 - Bottom Section:** Shows two more event entries: "MxAnalytics" and "FFLPRAM", each with its own "Inactive" and "Delete" checkboxes. Below these, a numeric input field shows "5". To the right, under "Event Dead Time:", it says "Time to wait [0..3600 s] before the event can trigger anew."
 - Footer:** At the very bottom, there are four buttons: "Set" (with a circular icon labeled "4"), "Factory", "Restore", and "Close".

4. Configure the parameters of the event profile as follows:

- 59 / 61

CAUTION! “Filter Value” is used to differentiate the MxMessages of an app / bundle. Use this entry to benefit from individual event types of the apps (if available).

Choose “No Filter” if you want to use all incoming MxMessages as generic event of the related app.

2. Click on **Set** ④ at the end of the dialog box to confirm the settings.

Examples for message names and filter values of the Vaxtor Container Code Recognition App

	MxMessage-Name	Filter value
Generic Event	VaxOCRContainer	
White list Event	VaxOCRContainer.container.List	“White list”
Black list Event	VaxOCRContainer.container.List	“Black list”
Not listed Event	VaxOCRContainer.container.List	“Not listed”
Unique container code event	VaxOCRContainer.container.ContainerCode	Container code as “STRING”; e.g. “ALLU910879745G1” (compare Meta data transferred within the MxMessageSystem , p. 57)
Owner Code Event	VaxOCRContainer.container.OwnerCode	e.g. “ALLU”
Container Type Event	VaxOCRContainer.container.Type	e.g. “HIGH CUBE CONTAINER”



EN_08/23

MOBOTIX AG • Kaiserstrasse • D-67722 Langmeil • Tel.: +49 6302 9816-103 • sales@mobotix.com • www.mobotix.com

MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX AG 2021