

Guideline

FF Group License Plate Recognition App - Region Americas

© 2024 MOBOTIX AG







Table of Contents

Table of Contents	2
Before You Start	. 5
Support	. 6
MOBOTIX Support	. 6
MOBOTIX eCampus	. 6
MOBOTIX Community	. 6

Safety Notes	
About FF Group License Plate Recognition App - Region Americas	
Smart Data Interface to MxManagementCenter	
Technical Specifications	
Licensing Certified Apps	
License Activation of Certified Apps in MxManagementCenter	
Managing Licenses in MxManagementCenter	
Camera, image and scene requirements	
Recommendations on mounting and adjusting.	
Troubleshooting	
Activation of the Certified App Interface	29
Configuration of FF Group License Plate Recognition App - Region Americas	
Basic Settings	
Recognition Zones	32
Integration Interfaces	
Black List & White List	
Installation Tools	
Storing the Configuration	
MxMessageSystem	
What is MxMessageSystem?	
Facts about MxMessages	
MxMessageSystem: Processing the automatically generated app events	
Checking Automatically Generated App Events	46
Action Handling - Configuration of an Action Group	
Action Settings - Configuration of the Camera Recordings	
MxMessageSystem: Processing the meta data transmitted by apps	
Meta Data Transferred Within the MxMessageSystem	
Creating a Custom Message Event	56
Examples for Message Names and Filter Values of the FF Group License Plate Recognition App - R	egion Americas 58

1

Before You Start

Support	6
MOBOTIX Support	6
MOBOTIX eCampus	6
MOBOTIX Community	6
Safety Notes	6
Legal Notes	7

6 / 60

Support

MOBOTIX Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates.

Please visit **www.mobotix.com > Support > Help Desk**.

MOBOTIX eCampus

The MOBOTIX eCampus is a complete e-learning platform. It lets you decide when and where you want to view and process your training seminar content. Simply open the site in your browser and select the desired training seminar.

Please visit www.mobotix.com/ecampus-mobotix.

MOBOTIX Community

The MOBOTIX community is another valuable source of information. MOBOTIX staff and other users are sharing their information, and so can you.

Please visit community.mobotix.com.

Safety Notes

 This camera must be installed by qualified personnel and the installation should conform to all local codes.







- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- Do not replace batteries of the camera. If a battery is replaced by an incorrect type, the battery can explode.
- External power supplies must comply with the Limited Power Source (LPS) requirements and share the same power specifications with the camera.
- When using a Class I adapter, the power cord shall be connected to a socket-outlet with proper ground connection.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.

Legal Notes

Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on <u>www.mobotix.com</u> under **Support > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see <u>www.mobotix.com</u>, **Support > Download Center > Marketing & Documentation > Brochures & Guides > Certificates**).

Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at <u>www.-</u> mobotix.com by clicking on the corresponding link at the bottom of every page.

It is the User's responsibility to comply with all applicable local, state, national and foreign laws, rules, treaties and regulations in connection with the use of the Software and Product, including those related to data privacy, the Health Insurance Portability and Accountability Act of 1996 (HIPPA), international communications and the transmission of technical or personal data.

About FF Group License Plate Recognition App - Region Americas

Certified App for License Plate Recognition

The application recognizes with at least 95% hit probability single and double line license plates from the USA with Latin characters. The high-performance app is capable of monitoring up to three lanes. Depending on the amount of lanes, the application is suitable for vehicles with up to 200 km/h. Via granted & denied, any follow-up actions can be triggered when a recognized license plate belongs to a list (e.g. notification to security service). Typical application areas for the app are: Parking management, access control and regulation, traffic monitoring.

- App delivers events via MxMessageSystem in real-time
- Integrated recognition protocol (last 1000 recognized license plates)
- Detection with at least 95 % accuracy
- Camera can be online or offline
- Configuration of the application also via MxManagementCenter (free Advanced Config license required)
- Usable with all cameras of the MOBOTIX 7 system platform

CAUTION! Thermal sensors are not supported by this app.

Smart Data Interface to MxManagementCenter

This app has a Smart Data interface to MxManagementCenter.

With the MOBOTIX Smart Data System, transaction data can be linked to the video recordings made at the time of the transactions. Smart Data source can be e.g. MOBOTIX Certified Apps (no license required) or general Smart Data sources (license required) like POS systems or license plate recognition systems.

The Smart Data System in MxManagementCenter enables you to quickly find and review any suspicious activities. The Smart Data Bar and the Smart Data View are available for searching and analyzing transactions. The Smart Data Bar provides a direct overview of the most recent transactions (from the last 24 hours) and for this reason it is convenient to use it for reviews and searches.

NOTE! For information on how to use the Smart Data System, see the corresponding online help of the camera software and MxManagementCenter.

Technical Specifications

Product Information

Product Name	FF Group License Plate Recognition App - Region Americas
Order Code	Mx-APP-FF-LPR-AM
Supported MOBOTIX Cam- eras	Mx-M73A, Mx-S74A
Minimum Camera Firmware	v7.1.2.24
MxManagementCenter Integration	 min. MxMC v2.4.x Configuration: Advanced Config license required Event Search: Smart Data Interface license included

Product Features

App Features	 License plate recognition of one- and two-line license plates Recognition of latin characters optimized for American license plates Recognition log (Smart Data / Event Search via MxManagementCenter) MOBOTIX events via MxMessageSystem Multiple lists for individual actions (e.g. access granted, alarm, etc.)
Maximum number of lanes	3
Maximum number of enrolled license plates	1000
Meta Data / Statistic formats	JSON
Trial License	30-day trial license pre-installed
MxMessageSystem sup- ported	Yes
Integration interfaces	 - 3rd party integration via HTTP(S) Post and TCP messages - compare supported camera interfaces
MOBOTIX Events	Yes
ONVIF Events	Yes (Generic message event)

Supported Regions

Supported license plates /	see https://community.mobotix.com/t/ff-group-lpr-app-region-america-sup-
countries	ported-license-plates-countries/3293

Scene Requirements

License Plate Width	min. 130p
	max. 300px
Maximum Vertical Angle	30°
Maximum Horizontal Angle	30°
Maximum Tilt Angle	5°

Technical App Specifications

Synchronous / Asyn- chronous App	synchronous
Simultaneous execution of other apps	Yes (considering performance requirements)
Accuracy	min. 95% (considering scene requirements)
Processed framerate	typ. 10 fps
Detection time	typ. 80ms (one lane) typ. 120ms (two lanes)

Licensing Certified Apps

The following licenses are available for the FF Group License Plate Recognition App - Region Americas:

- 30-day test license pre-installed
- permanent commercial license

The usage period begins with activation of the app interface (see Activation of the Certified App Interface, p. 29)

NOTE! For buying or renewing a license, contact your MOBOTIX Partner.

NOTE! Apps are usually pre-installed with the firmware. In rare cases, apps must be downloaded from the website and installed. In this case see <u>www.mobotix.com > Support > Download Center > Marketing &</u> <u>Documentation</u>, download and install the app.

License Activation of Certified Apps in MxManagementCenter

After a test period commercial licenses must be activated for use with a valid license key.

Online-Activation

After receiving the activation IDs, activate them in MxMC as follows:

- 1. Select from the menu Window > Camera App Licenses.
- 2. Select the camera on which you want to license apps and click **Select**.

•••	Camera Licenses	
	MxManagementCenter	?
Cameras		
Q 10.3		×
Name	Url	Serial Number
mx10-10-38-40	10.10.38.40	10.10.38.40
mx10-22-10-30	10.22.10.30	10.22.10.30
M73 10-32-0-62	10.32.0.62	10.32.0.62
		Select
Mobotix • Kaiserstrasse D-67722 Langmeli • Info@mobotix.com • www.mobotix.com		

Fig. 1: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

1. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

•	Camera License MxManagemen		
< Camera License Sta	ntus: mx10-251-1-235	Quantity	Serial Number: 10.23.9.17
MxWheelDetector	Permanent	Unlimited	
iot_plugin_a	Permanent	Unlimited	
iot_plugin_b	Permanent	Unlimited	
iot_plugin_c	Permanent	Unlimited	
iot_plugin_d	Permanent	Unlimited	
iot_plugin_e	Permanent	Unlimited	
iot_plugin_f	Permanent	Unlimited	
iot_plugin_g	Permanent	Unlimited	
iot_plugin_h	Permanent	Unlimited	
iot_plugin_i	Permanent	Unlimited	
Camera time is incorrect. Please reset your camera time before activating Licenses			
Mobotix • Kaiserstrasse D-67722 Langmeii • info@mobotix.com • www.mobotix.com			

Fig. 2: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

- 2. Enter a valid Activation ID and specify the number of licenses to install on this computer.
- 3. If you want to license another product, click on . In the new row, enter the appropriate Activation ID and the number of licenses you want.

- 4. To remove a line click
- 5. When you have entered all Activation IDs, click **Activate License Online**. During activation, **MxMC** connects to the license server. This requires an Internet connection.

Camera Licenses	
MxManagementCenter	?
< Activate Camera Licenses: M73 10-32-0-62	Serial Number: 10.32.0.62
via Activation ID Please enter your Activation IDs and for each Activation ID the corresponding quantity of licenses that you want to use we23-4c5f-as23-4bf2-b872-9c84-e935-78de 1 +	
ec90-4c5f-cfd0-4bf2-b872-9c84-e935-6f20 1	
Download Capability Request File Activate License Online	
Via Capability Response File If you have already created or received a capability response file (<deviceid>.bin), you can load it here. Load Capability Response File)</deviceid>	
Mobotix • Kalserstrasse D-67722 Langmell • Info@mobotix.com • www.mobotix.com	

Fig. 3: Adding licenses

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Failed activation (missing internet connection)

If the license server cannot be reached, e.g. due to a missing internet connection, apps can also be activated offline. (see Offline Activation, p. 14).

Offline Activation

For offline activation, the partner/installer from whom you purchased the licenses can generate a capability response (.bin file) on the license server to activate their licenses.

- 1. Select from the menu Window > Camera App Licenses.
- 2. Select the camera on which you want to license apps and click **Select**.

•••	Camera Licenses	
	MxManagementCenter	?
Cameras		
○ 10.3		×
Name	Url	Serial Number
mx10-10-38-40	10.10.38.40	10.10.38.40
mx10-22-10-30	10.22.10.30	10.22.10.30
M73 10-32-0-62	10.32.0.62	10.32.0.62
		Select
Mobotix • Kaiserstrasse D-67722 Langmeil • Info@mobotix.com • www.mobotix.com		

Fig. 4: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

3. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

Camera License Status: mx10-251-1-235 Name Expiration MdxWheelDetector Permanent Iot_plugin_a Permanent Iot_plugin_c Permanent	Serial Number: 10. Quantity Unlimited Unlimited Unlimited
lot_plugin_a Permanent lot_plugin_b Permanent lot_plugin_c Permanent	Unlimited
iot_plugin_b Permanent iot_plugin_c Permanent	
iot_plugin_c Permanent	Unlimited
	Unlimited
iot_plugin_d Permanent	Unlimited
iot_plugin_e Permanent	Unlimited
iot_plugin_f Permanent	Unlimited
iot_plugin_g Permanent	Unlimited
iot_plugin_h Permanent	Unlimited
iot_plugin_i Permanent	Unlimited

Fig. 5: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

- 4. Enter a valid Activation ID and specify the number of licenses to install on this computer.
- 5. If you want to license another product, click on . In the new row, enter the appropriate **Activation ID** and the number of licenses you want.
- 6. If necessary, click to remove a line.
- 7. When you have entered all Activation IDs, click **Download Capability Request File (.lic)**. and send it to your partner/installer.

NOTE! This file allows the partner / installer from whom you purchased the licenses to generate a capability response file (.bin) on the license server.

Camera Licenses	
MxManagementCenter	?
< Activate Camera Licenses: M73 10-32-0-62	Serial Number: 10.32.0.62
via Activation ID	
Please enter your Activation IDs and for each Activation ID the corresponding quantity of licenses that you want to use	
we23-4c5f-as23-4bf2-b872-9c84-e935-78de 1 +	
ec90-4c5f-cfd0-4bf2-b872-9c84-e935-6f20	
Download Capability Request File) Activate License Online)	
Via Capability Response File	
If you have already created or received a capability response file (<deviceid>.bin), you can load it here.</deviceid>	
Load Capability Response File	
Mobotix • Kalserstrasse D-67722 Langmell • Info@mobotix.com • www.mobotix.com	

Fig. 6: Adding licenses

8. Click Load Capability Response File and follow the instructions.

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Managing Licenses in MxManagementCenter

In MxManagementCenter you can comfortably manage all licenses that have been activated for a camera.

- 1. Select from the menu **Window > Camera App Licenses**.
- 2. Select the camera on which you want to license apps and click **Select**.

•••	Camera Licenses			
	MxManagementCenter	· ?		
Cameras				
Q 10.3		×		
Name	Url	Serial Number		
mx10-10-38-40	10.10.38.40	10.10.38.40		
mx10-22-10-30	10.22.10.30	10.22.10.30		
M73 10-32-0-62	10.32.0.62	10.32.0.62		
		Select		
Mobotix • Kalserstrasse D-67722 Langmell • Info@mobotix.com • www.mobotix.com				

Fig. 7: Overview of Camera App Licenses in MxManagementCenter

An overview of the licenses installed on the camera may be displayed.

• • •	Camera License	S		
MxManagementCenter				
< Camera License Status: mx10-251-1-235				
	Expiration	Quantity	Serial Number: 10.23.9.171	
MxWheelDetector	Permanent	Unlimited		
iot_plugin_a	Permanent	Unlimited		
iot_plugin_b	Permanent	Unlimited		
iot_plugin_c	Permanent	Unlimited		
iot_plugin_d	Permanent	Unlimited		
iot_plugin_e	Permanent	Unlimited		
iot_plugin_f	Permanent	Unlimited		
iot_plugin_g	Permanent	Unlimited		
iot_plugin_h	Permanent	Unlimited		
iot_plugin_i	Permanent	Unlimited		
Camera time is incorre	ect. Please reset your camera time before activating	licenses		
			Activate License	
	Mobotix • Kaiserstrasse D-67722 Langmeil • info@	nobotix.com • www.mobotix.com		

Fig. 8: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

Column	Explanation
Name	Name of the licensed app
Expiration	the time limit of the license
Quantity	Number of licenses purchased for a product.
Serial Number	Unique identification determined by MxMC for the device used. If problems occur during licensing, please have the device ID ready.

Synchronize licenses with server

When the program starts, there is no automatic comparison of the licenses between the computer and the license server. Therefore, click **Update** to reload the licenses from the server.

Update licenses

To update temporary licenses, click **Activate Licenses**. The dialog for updating/activating licenses opens.

NOTE! You need administrator rights to synchronize and update licenses.

Camera, image and scene requirements

In order to be able to recognize license plates in the best possible way, the following prerequisites must be fulfilled for the scene:

Quality of the license plate to be captured in the image

- The license plate must be high-contrast and clearly legible, i.e. as clean as possible, without dents or holes and well illuminated.
- The license plate should be rectangular
- Minimum horizontal size
 - 130 px for one-line plates (150 px for license plates from Russia, Kazakhstan, Armenia, Uzbekistan, Serbia)
 - 100 px for two line plates (130 px for license plates from Russia, Kazakhstan, Armenia, Uzbekistan, Serbia)
- Maximum rotation angle: 5°



Maximum tilt angle of the license plate to the camera: 30° horizontal and vertical

Examples of clearly recognizable license plates



Easily readable license plate in daylight



Easily readable license plate at night with infrared LED illumination

Vertical pointing of the camera

The vertical angle to the registration plate must not exceed 30° . The minimum distance (**x**) from the camera as a function of its mounting height (**h**) is calculated by the formula:

 $x = h * \sqrt{3}$

Example: calculation of the vertical alignment of the camera

h (Meter)	x (Meter)	
1	1,7	h kr
1,5	2,6	Fig. 9: Vertical pointing of the camera
2	3,4	rig. 5. vertical politing of the camera
2,5	4,3	
3	5,1	
3,5	6	
4	6,8	

Horizontal pointing of the camera

The horizontal angle to the registration plate must not exceed 30°. The minimum distance (\mathbf{x}) from the camera as a function of its mounting height (\mathbf{y}) is calculated by the formula:

 $x = y * \sqrt{3}$

Sample calculation of the horizontal alignment of the camera

y (meter)	x (meter)	
1	1,7	
1,5	2,6	Fig. 10: Horizontal alignment of the camera

y (meter)	x (meter)	
2	3,4	y king and the second s
2,5	4,3	
3	5,1	Fig. 10: Horizontal alignment of the camera
3,5	6	
4	6,8	

Depth of field in relation of vehicle speed and recognition time per plate

To effectively capture the vehicle camera should be set so as to provide the minimum depth of field (DOF). Depth-of-field (or length of the zone of sharpness) is the distance between the nearest and farthest objects that appear in acceptably sharp focus in a video.

The depth of field can be calculated by the formula:

$$L_{dof} = rac{4 * T_{rec} * V_{max}}{3600}$$

Definition of the variables use in the formula

 L_{dof} = depth of field in meters (m)

 T_{rec} = recognition time per plate in milliseconds (ms)

 V_{max} =maximum vehicle speed in kilometers per hour (km/h)

Example: calculation of typical cases

maximum vehicle speed in kilometers per hour (km/h)	recognition time per plate in milliseconds (ms)				
	100	200	300	400	500
	dept	h of fi	eld in	meters (m)	
40	4	9	13	18	22
80	9	18	27	36	44
100	11	22	33	44	56
120	13	27	40	53	67
140	16	31	47	62	78
180	20	40	60	80	100
200	22	44	67	89	111
220	24	49	73	98	122
240	27	53	80	107	133

NOTE! The minimum sizes of the license plate on the edges of the zone of sharpness must beat least as mentioned in Quality of the license plate to be captured in the image, p. 19.

NOTE! For the best possible depth of field it is strongly recommended to manually adjust the cameras aperture settings instead of using the automatic settings.

Exposure time in relation to maximum vehicle speed

The exposure time must be adjusted to get the best results in recognition of license plates. Values are calculated for a camera mounted at a horizontal angle of 30 degrees.

Example: calculation of typical cases

exposure time in seconds (s)	maximum vehicle speed in kilo- meters per hour (km/h)
1/100	5
1/500	40
1/1000	100
1/2000	200
1/4000	400

NOTE! The exposure time must be adjusted according to the light conditions.

Recommendations on mounting and adjusting.

- If you want to recognize license plates on multiple lanes it is generally recommended to mount the camera on a crossbar.
- Use an IR Led to recognize license plates at night or under low light conditions.
- Shutter speed must be high enough to cut the light from car's headlights at night (usually it's about 1/1000). Keep in mind, that too high shutter speed may obscure the edges of the lines (especially shadows).
- Depth of focus is a very important parameter. If you are using a camera with a CS-mount lens, use a fixed lens. Fixed lens are better for license plate recognition due to greater depth of focus. Megapixel lens is also strongly recommended.
- Respect changing light conditions (e. g. due to sunrises and sunset) when choosing the place of mounting. Direct sunlight beams can distort a picture. If the cars facing a direct sunlight consider using a lens with auto iris mode.

- If mounting a camera on a roadside pole check how the pole reacts to heavy cars or a convoy of cars.
 Some poles have tangible tremor, this could make license plate recognition almost impossible.
- It is recommended to turn down WDR and BLC. In most cases, they will make the picture more pretty, but at the cost of smudging details like an edges of letters in the license plate. For the same reason keep digital noise reduction as low as possible.
- On certain rare conditions there may be a cases of false detections e. g. because of recognizing image parts that structurally or semantically look similar to a license plate(e. g. fences or ads). To minimize this:
- Adjust the region of interest accordingly. It may be a good idea to make it smaller, or change it's shape, omitting the parts, which potentially may be false detected.
- Adjust the min and max license plate settings according to upper instructions do not leave a default 130 - 300.
- There may be cases, when the best performance will occur by changing angle of lens or moving the camera. In some cases, shooting a front license plate is better.

Troubleshooting

Blurred license plates can not be recognized

Problem: If you need to recognize multiple license plates of cars following one another a wider depth of field might be necessary. In the example below only the license plate in the green frame can be recognized. **Solution**: adjust the lens focus to archive a higher depth of field.



Fig. 11: Insufficient depth of field

Problem: License plate is blurred due to wrong focus settings or to long exposure time.

Solution: Adjust focus settings or increase shutter speed



Fig. 12: Blurred license plate due to long exposure time

License plates cannot be recognized due to over exposure

Problem: In certain situations license plates can be over exposed and therefore no more readable. Possible cause could be direct sunlight shining on the license plates or to strong IR LED light at night. **Solution:** Adjust shutter speed or dim IR LED light.



Fig. 13: Over exposed license plate at daytime



Fig. 14: Over exposed license plates due to too strong IR LED light

License plates cannot be recognized due to insufficient light

Problem: In certain situations there is not enough light which results in low contrast. Therefore license plates are not readable. Possible cause could be direct sunlight shining on the license plates or to strong IR LED light at night.

Solution: Adjust the shutter speed or provide extra light.



Fig. 15: Insufficient light to recognize license plate

License plates cannot be recognized due to low resolution

Problem: It seems that the license plate is well recognizable despite good illumination and sufficient resolution.

Solution: Measure the resolution of the license plate to be captured with an image processing program. It may be necessary to adjust the horizontal resolution to the minimum required 130 px (see Camera, image and scene requirements, p. 19).



Camera, image and scene requirements Troubleshooting

Fig. 16: Insufficient light to recognize license plate

Activation of the Certified App Interface

CAUTION! The FF Group License Plate Recognition App - Region Americas does not consider obscure areas defined for the live image. Therefore there is no pixelation in obscure areas while configuring the app and during image analysis by the app.

NOTE! The user must have access to the setup menu (http(s)://<camera IP address>/control). Therefore check the user rights of the camera.

 In the camera web interface, open: Setup Menu / Certified App Settings (http(s)://<camera IP address>/control/app_config).

MOBOTIX						
Θ	M73 mx10-32-6-96	Certifie	ed App Setting	S	?) (j) († E
General Settings						
Arming	1 Active	Act	tivate app service.			
Note: It is not recommended to activate more than 2 apps.						
Resource monitor	Active	Dis	splay camera actual lo	ad in the live	image.	
Note: High perfor	mance impact. Use for te	esting purp	oses only.			
Custom font	Active		e custom font for the select or upload a cus			-
AppSettings						
Арр	Activation	License	Explanation	Version	Delete	Delete app
FFLPR Settings		2024-03-29 (30 days trial).	General Settings	1.6.0	Data (4.0K)	Delete app
FFLPRAM Settings		2024-03-30 (30 days trial).	General Settings	1.6.0	Data (4.0K)	Delete app
FFLPRME	Inal	Trial available.	Please update the license.	1.6.0	Data	Delete app
FFLPR MMCR Setting	6º 🕛	2024-03-22 (30 days trial).	General Settings	1.6.0.1	Data (4.0K)	Delete app
Set ³ Factory	Restore Close					

- 2. Under **General Settings** activate the **Arming** (1) of the app service.
- 3. Under App Settings check the Active option O and click SetO.
- 4. Click on the name of the App to be configured to open the Apps user interface.
- 5. For configuration of the App see Configuration of FF Group License Plate Recognition App Region Americas, p. 31.

Configuration of FF Group License Plate Recognition App - Region Americas

NOTE! For best performance and results in LPR processing make sure to have scene set up to meet the Camera, image and scene requirements, p. 19.

CAUTION! The user must have access to the setup menu (http(s)://<camera IP address>/control). Therefore check the user rights of the camera.

- 1. In the camera web interface, open: **Setup Menu / Certified App Settings** (http(s)://<camera IP address>/- control/app_config).
- 2. Click on the name of the FF Group License Plate Recognition App Region Americas.

The configuration window of the app appears with the following options:

MOBOTIX			
Θ	M73 mx10-32-6-96	FFLPRAM Settin	gs ⑦ (i) ᡫ ⊡
FFLPRAM			
Sensor Selection	Right Sensor	\$	Select the image sensor
Image Size	1920x1080	\$	Defines the image size, which is used as basis for the license plate recognition. Factory default: Full HD (1920x1080)
Enable Overlays			Highlight recognized license plates and enable the on-screen text overlay
Enable MxMessage			Send an MxMessage for each license plate recognized. The MxMessage is required for the configuration of Message Events on the camera and for the usage of the MxMC Smart Data Interface.
Region	United States	\$	Recognition of number plates within the selected region. For countries belonging to the region, see the app documentation.

Basic Settings

Configuration of FF Group License Plate Recognition App - Region Americas Recognition Zones

Image Size: Select the resolution for the video stream to be analyzed by FF Group License Plate Recognition App - Region Americas.

NOTE! The resolution for LPR processing could be different from the resolution used for live stream.

Enable Overlays: Check to highlight recognized license plates and enable the on-screen text overlay in the live view.

Enable MxMessage: Check to enable sending a MxMessage for each license plate recognized. The MxMessage is required for the configuration of Message Events on the camera and for the usage of the MxMC Smart Data Interface.

Region: Select the region to be set for the LPR engine. These regions are:

United States: All US American license plate types

Recognition Zones

Up to three recognition areas can be defined. Each recognition zone is evaluated by the LPR engine independently of the others. Accordingly, each zone is assigned an individual ID (zone number).

MOBOTIX			
© M	173 mx10-32-6	-96 FFLPRAM Set	tings ⑦ ⊕ ⊞ ⊟
Recognition Zones of t	he Right sensor		
Recognition Zones of t	he Left sensor		
Enable LP recognition			Enable license plate recognition on the Left sensor
Show Recognition Area			
Recognition Area	Rectangles	Position	Define up to 3 areas where license plates are recognized. By default, license plates are recognized throughout the entire image
		439 X 417	area. Defalt setting: Full image recognition
		Size	
		460 × 281	
		Edit Rectangl 1 💼	2
		C	
		Position	
		833 × 616	
		Size	
		328 × 191	
		Edit Rectangle	
		÷	

Drawing a Recognition Area

- 1. Click the **plus** icon 1 to switch into the live image.
- 2. In the live view simply click and drag a rectangular recognition area.
- 3. Drag the corner points to refine the recognition area.
- 4. In the top right corner of the live view click **Submit** to adopt the coordinates of the rectangle.
- 5. Optionally click the **bin** icon⁽²⁾ to delete the recognition area.

NOTE! Without activating the zones the full image will be analyzed.

Integration Interfaces

LPR events can be send to 3rd party systems, e. g. Access Control Systems or Video Management Systems. Therefore the following configurations should be taken into account:

Integration Interfaces	;	
Enable		Enable the integration interface to send IP notifications to a defined external receiver (e.g. 3rd party access control systems, video management system, etc.)
Destination Address	http://server.address	Receiver / Server IP address and port. Separate IP address and port using a colon (e.g. 10.0.0.1:80)
Transfer Protocol	HTTP(s) POST	\$ Transfer notification data using these protocol headers
Device ID	defaultID	Device ID is used as unique identifier for the device sending the IP notification (e.g. camera's serial number / factory IP address)
Attach Image		Enable to attach an event image to the IP notification
Image Selection	License plate crop	\$ Selection of the event image to be attached to the IP notification
Event Type: New		Send the IP notification for event type 'new'. Condition 'new' becomes true, if the license plate appears for the first time in 5 seconds
Event Type: Update		Send the IP notification for event type 'update'. Condition 'update' becomes true, if the license plate was already detected in the last 5 seconds
Event Type: Lost		Send the IP notification for event type 'lost'. Condition 'lost' becomes true, if plate was not seen in the last 5 seconds since previous detection
self-signed certificates	5 🗌	Allow self-signed certificates for HTTPS

Enable: Check to enable the integration interface to send IP notifications to a defined external receiver (e.g. 3rd party access control systems, video management system, etc.).

Destination Address: Receiver / Server IP address and port. Separate IP address and port using a colon (e.g. 10.0.0.1:80).

Transfer Protocol: Select the protocol on the basis of which the LPR events are transmitted.

TCP: Data will be transmitted via TCP.

HTTP POST: Data will be transmitted via FFG protocol. <u>Download a detailed description</u>.

Device ID: Set an unique text string to identify your camera device in messages. Device ID is used as unique identifier for the device sending the IP notification (e.g. camera's serial number / factory IP address).

Attach Image: Check to attach an event image to the IP notification.

Image Selection: If images should be send select the image type here:

License plate crop: The image contains the license plate only.

Vehicle crop: The image contains the vehicle with the recognized license plate.

Full frame: the full image is transmitted.

Event Type: New: Check to send an IP notification for event type 'new'. Condition 'new' becomes true, if the license plate appears for the first time in 5 seconds.

Event Type: Update: Check to send an IP notification for event type 'update'. Condition 'update' becomes true, if the license plate was already detected in the last 5 seconds.

Event Type: Lost: Check to send an IP notification for event type 'lost'. Condition 'lost' becomes true, if plate was not seen in the last 5 seconds since previous detection.

Self signed certificates: Allow self signed certificates for HTTPS.

Black List & White List

You can define a black list and a white list with up to 1000 license plates per list. If a license plate from one of the lists is recognized, a corresponding event is sent within the MxMessageSystem of the camera.

Whitelist		
Whitelist	Filter 6 LUCY8000 × KIBMX8080 × FTRC400 × BVB1909 × KAX120 × KIBMX3255 × 2 LUCY1909 × DOMU1312 × 1 1	
Blacklist		

Adding a license plate to a list

• Enter the license plate text into the text field ① and click **Enter**.

Adding multiple license plates from a text file

- 1. Make sure that your text file contains one license plate per line.
- 2. Copy the relevant license plates from the text file and paste them into the text field 1 .

Deleting a license plate from a list

Click on the small x (2) to the right of the license plate number.

Deleting all license plates from a list

• Click the trash icon ③ .

Sorting all license plates from a list alphabetically

• Click the sort icon ④ .

Copy all license plates from a list to the clip board

• Click the copy to clipboard icon (5) .

Filtering license plates

Enter the license plate or parts of it into the filter text field ⁽⁶⁾. Only license plates containing the filter text are displayed accordingly

Installation Tools

In this section you find useful tools for calibration and trouble shooting.

Installation Tools		
Calibration grid		Turn on the calibration grid to detect the acceptable license plate size. Vertical lines indicate a distance of 130 pixels wide. Please keep the license plates in the range 130-300 pixels wide
Debug level	✓ NO LOG DEBUG	Available options NO LOG: No debug log is created (Factory default). DEBUG: Added additional info to overlay text
LPR Confidence	0.7	\$ Set the confidence threshold which must be reached to recognize license plates. The confidence value within the sent MxMessage can be used as an indication for a proper configuration.
Minimum license plate charcters	6	\$ Defines the minimum number of charcters in the recognized license plates, shorter sequences will be ignored. The practical recommended minimum is 5. Default 6.
Maximum license plate charcters	10	\$ Defines the maximum number of charcters in the recognized license plates, longer sequences will be ignored. Default 10.
The Levenshtein distance is a string metric for measuring the difference between two sequences.	1	\$ The Levenshtein distance between two words is the minimum number of single- character edits (insertions, deletions or substitutions) required to change one word into the other.

Calibration grid: Turn on the calibration grid to detect the acceptable license plate size. Vertical lines indicate a distance of 130 pixels wide. Please keep the license plates in the range 130-300 pixels wide.
Color Confidence: Set the confidence threshold which must be reached to recognize color of the vehicle. The confidence value within the sent MxMessage can be used as an indication for a proper configuration.
Debug level: Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

NOLOG: no debug log is created (default setting) EMERGENCY INFO DEBUG ULTRADEBUG

LPR Confidence: Set the confidence threshold which must be reached to recognize license plates. The confidence value within the sent MxMessage can be used as an indication for a proper configuration.

CAUTION! Wrong settings can lead to bad recognition results. In most cases the default settings are sufficient.

Storing the Configuration

To store the configuration you have the following options:



- Click **Set** to activate your settings and to save them until the next reboot of the camera.
- Click **Factory** to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click **Restore** to undo your most recent changes that have not been stored in the camera permanently.
- Click Close to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

MxMessageSystem

What is MxMessageSystem?

MxMessageSystem is a communication system based on name oriented messages. This means that a message must have a unique name with a maximum length of 32 bytes.

Each participant can send and receive messages. MOBOTIX cameras can also forward messages within the local network. This way, MxMessages can be distributed over the entire local network (see Message Area: Global).

For example, a MOBOTIX 7 series camera can exchange a MxMessage generated by a camera app with an Mx6 camera that does not support certified MOBOTIX apps.

Facts about MxMessages

- 128-bit encryption ensures privacy and security of message content.
- MxMessages can be distributed from any camera of the Mx6 and 7 series.
- The message range can be defined individually for each MxMessage.
 - Local: Camera expects a MxMessage within its own camera system (e.g. through a Certified App).
 - **Global:** the camera expects a MxMessage that is distributed in the local network by another MxMessage device (e.g. another camera of the 7 series equipped with a certified MOBOTIX app).
- Actions that the recipients are to perform are configured individually for each participant of the MxMessageSystem.

MxMessageSystem: Processing the automatically generated app events

Checking automatically generated app events

NOTE! After successfully activating the app (see Activation of the Certified App Interface, p. 29), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. FFLPRAM).

MOBOTIX			
\ominus	D71 mx10-32-75-149	Event Overview	0 i + -
Environment Event	ts		
Image Analysis Eve	nts		
Internal Events			
Message Events			
FFLPRAM	MxMessageSystem	Inactive Delete	Edit 1
Meta Events			
Signal Events			
Time Events			
Set Restore	Close		

ΜΟΒΟΤΙΧ				\bigtriangledown
Θ	D71 mx10-32-75-149	Message	Events ⑦ ①	+
Attribute	Value		Explanation	
IP Receive	8000	Ŷ	Port : TCP port to listen on.	
Events	Value		Explanation	
FFLPRAM	🗌 🗌 Inactiv	e 🗌 Dele	ete	
	5	\$	Event Dead Time : Time to wait [03600 s] before the event can trigger anew.	
Event Sensor Type	 IP Receive MxMessageSystem MQTT Subscription 		Event Sensor Type : Choose the message sensor.	
Event on receivin	g a message from the MxMessa	geSystem.		
	FFLPRAM		Message Name: Defines an MxMessageSystem name to wait	for.
	Local	\$	Message Range: There are two different ranges of message distribution: <i>Global</i> : across all cameras within the current <i>Local</i> : camera internal.	LAN.
	No Filter	\$	Filter Message Content: Optionally choose how to ignore messages containing <i>Filter Value</i> . Select <i>No Filter</i> to tri on any message with defined <i>Message Name</i> . The <i>Boolean Filter</i> triggers on JSON values t false, or 1/0, and for some JSON strings lif "on"/"off", "yes"/"no". For <i>JSON Comparison, Regular Expression</i> , N	e. rue/ ke
Set Factory	Restore Close		, or 550 a comparison, regular Expression, i	raiue

2. Click **Edit** to display and configure the event properties in detail.

Action handling - Configuration of an Action Group

CAUTION! To use events, trigger Action Groups or record images the general arming of the camera must be enabled (http(s)/<camera IP address>/control/settings)

An Action Group defines which action(s) is (are) triggered by the FF Group License Plate Recognition App - Region Americas event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** (http(s)://<camera IP address>/control/actions).

ΜΟΒΟΤΙΧ				
⊙ D71 mx10-32-	75-1	L49 Action Group Overview	() ()	÷ =
VisualAlarm		Delete		
Arming		Events & Actions	Edit	
Off	\$	(select all)	Edit 2	
(No time table)	¢	VA		
FFLPR_US	C	Delete		
Add new group 1				
Set Restore Close				

- 2. Click **Add new group** (1) and give a meaningful name.
- 3. Click **Edit**^②, to configure the group.

MOBOTIX				
\odot	D71 mx10-32-75-149	Action G	roup Details	() (i
General Settings	Value		Explanation	
Action Group	FFLPR_US		Name: The name is purely informational.	
	Enabled 3	¢	Arming: Controls this action group: Enabled: activate the group. Off: deactivate the group. SI: group armed by signal input. CS: group armed by custom signal as defined Event Settings.	d in <u>General</u>
	(No time table)	\$	Time Table : Time table for this action profile (<u>Time Table</u>	<u>s</u>).
Event Selection	Image Analysis: AS (Image Analysis: VM) (Image Analysis: VM2) Message: FFLPRAM (Signal: SI)	4	Event Selection: Select the events which will trigger the actio Use [Ctrl]-Click to select more than one even Events in parentheses need to be <u>activated</u> fr	it.
Action Details	5	\$	Action Deadtime: Time to wait [03600 s] before a new action o place.	can take
	Simultaneously	\$	Action Chaining: Choose how the status of each subaction inference of all others. Simultaneously: All actions are executed simultaneously until first success: Simultaneously until first success: Simultaneously until first success: Simultaneously is been completed or the phone is picked up), a terminated. Consecutively: All actions are executed in the order. Consecutively until first success: Consecutive but as soon as one action succeeds, the follow are not executed. Consecutively until first failure: Consecutive but as soon as one action fails, the following not executed.	eous ds (i.e. has all others are e specified e execution, owing actions execution,
Actions Add new action 5	Value		Explanation	
Set Factory F	Restore Close			

- 1. Enable **Arming** (1) of the Action Group.
- 2. Select your message event in the **Event selection** list②. To select multiple events, hold the shift key.
- 3. Click Add new Action ③ .
- 4. Select a proper action from list **Action Type and Profile** ④.

Action Details Actions Action 1	FIP: FIP-Day-Period E-Mail: AlarmMail E-Mail: NotifyMail E-Mail: MailWithMxPEGClip E-Mail: MailWithStoryImages E-Mail: MailSystemStatus24 IP Notify: MxMC-Alarm IP Notify: MxMC-Alarm IP Notify: MxMC-Cridview IP Notify: MxMC-Gridview IP Notify: TCPMessage IP Notify: ObscureAreaOn IP Notify: ObscureAreaOn IP Notify: ObscureAreaOff Play Sound: StandardSounds Visual Alarm: Red Frame Image Profile: Ultra HD Image Profile: QXGA FTP: FTP-Webcam	Action Deadtime: Time to wait [03600 s] before a new action can take place. Action Chaining: Choose how the status of each subaction influences the execution of all others. Simultaneously: All actions are executed simultaneously: All actions are executed simultaneously. Simultaneously until first success: Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated. Consecutively: All actions are executed in the specified order. Consecutively until first success: Consecutive execution, but as soon as one action succeeds, the following actions are not executed. Consecutively until first failure: Consecutive execution, but as soon as one action fails, the following actions are not executed. Explanation Action Type and Profile: Select the Action Profile to be executed.
Delete	0	If this action runs longer than the time specified [03600 s], it is aborted and returns an error; 0 to deactivate. For <i>Image Profile</i> action, this is the duration and no error returns.
Set 5 Fa	ctory Restore Close	

NOTE! If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

5. Click on the **Set** (5) button at the end of the dialog box to confirm the settings.

Action settings - Configuration of the camera recordings

In the camera web interface, open: Setup Menu / Event Control / Recording(http(s)/<camera IP address>/control/recording).

MOBOTIX			
\odot	D71 mx10-32-75-149	Record	ling ⑦ Ū ⊞ ⊟
General Settings			
	Value		Explanation
Arming	Enabled	¢	Arm Recording: Controls camera recording. Enabled: activate recording. Off: deactivate recording. SI: recording armed by signal input. CS: recording armed by custom signal as defined in General Event Settings. From Master: copies recording arming state from master camera.
	(No time table)	\$	Time Table Profile : Time table profile for time-controlled recording (<u>Time</u> <u>Tables</u>).
Storage Settings	Value		Explanation
Recording (REC)	Event Recording 2	¢	Recording Mode:Type of event and story recording.Snap Shot Recording: stores single JPEG pictures.Event Recording: stores stream files for every event usingMxPEG codec.Continuous Recording: continuously streams video datato stream files using MxPEG codec. Events can berecorded with a higher frame rate using Start Recording,Retrigger Recording and Stop Recording.
	Include audio	\$	Record Audio Data: Store audio data in stream file if available. Enable and configure <u>microphone</u> .
Start Recording	(Environment: MI) Image Analysis: AS (Image Analysis: VM) (Image Analysis: VM2) Message: FFLPRAM		Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <u>activated</u> first.
	Max fps	\$	Event Frame Rate : Recording speed if an event is detected, in frames per second.
	0		Recording Time Before Event: Additional recording time before an event in seconds.
Set 4 Factory Re	estore Close 5		More

- 2. Activate Arm Recording ① .
- 3. Under **Storage Settings** / **Recording (REC)** select a **Recording mode**⁽²⁾. The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
- 4. In list **Start recording** select the message event just created.
- 5. Click on the **Set** (4) button at the end of the dialog box to confirm the settings.
- 6. Click on **Close** (5) to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Checking Automatically Generated App Events

NOTE! After successfully activating the app (see Activation of the Certified App Interface, p. 29), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. FFLPRAM).

MOBOTIX			
$\overline{\Theta}$	D71 mx10-32-75-149	Event Overview	0 i + =
Environment Even	ts		
Image Analysis Eve	ents		\bigtriangledown
Internal Events			
Message Events			
FFLPRAM	MxMessageSystem	Inactive Delete	Edit 1
Meta Events			
Signal Events			
Time Events			
Set Restore	Close		

2. Click **Edit** (1) to display and configure the event properties in detail.

MOBOTIX			
\odot	D71 mx10-32-75-149 M	lessage	Events ⑦ 🛈 🗄 🗉
Attribute	Value		Explanation
IP Receive	8000	$\hat{\cdot}$	Port: TCP port to listen on.
Events	Value		Explanation
FFLPRAM	📄 Inactive	🗌 Dele	ete 🖸
	5	\$	Event Dead Time: Time to wait [03600 s] before the event can trigger anew.
Event Sensor Type	IP ReceiveMxMessageSystemMQTT Subscription		Event Sensor Type: Choose the message sensor.
Event on receiving	g a message from the MxMessageS	System.	
	FFLPRAM		Message Name: Defines an MxMessageSystem name to wait for.
	Local	\$	Message Range: There are two different ranges of message distribution: <i>Global</i> : across all cameras within the current LAN. <i>Local</i> : camera internal.
	No Filter	\$	Filter Message Content: Optionally choose how to ignore messages containing <i>Filter Value</i> . Select <i>No Filter</i> to trigger on any message with defined <i>Message Name</i> . The <i>Boolean Filter</i> triggers on JSON values t rue/ false, or 1/0, and for some JSON strings like "on"/"off", "yes"/"no". For <i>JSON Comparison, Regular Expression, Value</i>
Set Factory	Restore		

Action Handling - Configuration of an Action Group

CAUTION! To use events, trigger Action Groups or record images the general arming of the camera must be enabled (http(s)/<camera IP address>/control/settings)

An Action Group defines which action(s) is (are) triggered by the FF Group License Plate Recognition App -Region Americas event.

In the camera web interface, open: Setup Menu / Action Group Overview (http(s)://<camera IP address>/control/actions).

MOBOTIX		
⊙ D71 mx10-32	2-75-149 Action Group Overview	0 1 + -
VisualAlarm	Delete	
Arming	Events & Actions	Edit
Off	♦ (select all)	Edit 2
(No time table)	♦ VA	
FFLPR_US	Delete	
Add new group 1		
Set Restore Close		

- 2. Click **Add new group** (1) and give a meaningful name.
- 3. Click **Edit**⁽²⁾, to configure the group.

MxMessageSystem: Processing the automatically generated app events Action Handling - Configuration of an Action Group

Θ	D71 mx10-32-75-149	Action G	roup Details	0
General Settings	Value		Explanation	
Action Group	FFLPR_US		Name: The name is purely informational.	
	Enabled (3)	\$	Arming: Controls this action group: Enabled: activate the group. Off: deactivate the group. St: group armed by signal input. CS: group armed by custom signal as defined in Gen Event Settings.	eral
	(No time table)	\$	Time Table: Time table for this action profile (<u>Time Tables</u>).	
Event Selection	Image Analysis: AS (Image Analysis: VM) (Image Analysis: VM2) Message: FFLPRAM (Signal: SI)	4	Event Selection: Select the events which will trigger the actions belo Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <u>activated</u> first.	w.
Action Details	5	٥	Action Deadtime: Time to wait [03600 s] before a new action can take place.	5
	Simultaneously	¢	Action Chaining: Choose how the status of each subaction influences execution of all others. Simultaneously: All actions are executed simultaneous execution, but as soon as one action succeeds (i.e. h been completed or the phone is picked up), all other terminated. Consecutively: All actions are executed in the speciforder. Consecutively until first success: Consecutive execut but as soon as one action succeeds, the following are are not executed. Consecutively until first failure: Consecutive executed but as soon as one action fails, the following actions not executed.	ously. as rs are ied tion, ctions on,
Actions Add new action	Value		Explanation	

- 4. Enable **Arming** (3) of the Action Group.
- 5. Select your message event in the **Event selection** list④ . To select multiple events, hold the shift key.
- 6. Click Add new Action (5).
- 7. Select a proper action from list $\ensuremath{\textbf{Action Type and Profile}}\xspace$.

Θ	M73 mx10-32-6-96 Actic	n Group Details	0 (i
0	M/3 IIIX10-32-0-96 ACUC	in Group Details	
		Settings.	
	(No time table)	Time Table: Time table for this action profile (<u>Time Tables</u>).	
vent Selection	(select all) (select none) Y FIF: FIF-VEOCAIL FTP: FTP-AlarmClip FTP: FTP-Archiving FTP: FTP-Day-Period	Event Selection: Select the events which will trigger the actions below. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first.	
ction Details	E-Mail: AlarmMail E-Mail: NotifyMail	Action Deadtime: Time to wait [03600 s] before a new action can take pl	ace.
Actions	E-Mail: MailWithMxPEGClip E-Mail: MailWithMxPEGClip E-Mail: MailSystemStatus24 IP Notify: MxMC-Alarm IP Notify: MxMC-Criveview IP Notify: MxMC-Gridview IP Notify: TCPMessage IP Notify: CPMessage IP Notify: ObscureAreaOn IP Notify: ObscureAreaOn IP Notify: ObscureAreaOff Play Sound: StandardSounds Device Out: ~IrLightOff Device Out: ~IrLightOn Device Out: ~IrLightTogle	Action Chaining: Choose how the status of each subaction influences the all others. Simultaneously. All actions are executed simultaneous Simultaneously until first success: Simultaneous execut soon as one action succeeds (i.e. has been completed of picked up), all others are terminated. Consecutively. All actions are executed in the specified Consecutively. All actions are executed in the specified Consecutively until first success: Consecutive execution as one action succeeds, the following actions are not executed Descutively until first failure: Consecutive execution, one action fails, the following actions are not executed Explanation	y. tion, but as r the phone is order. 1, but as soon secuted. but as soon as
Action 1	FTP: FTP-Webcam	Action Type and Profile:	
Delete	0	Select the Action Profile to be executed. Action Timeout or Duration: If this action runs longer than the time specified [0360 aborted and returns an error: 0 to deactivate.	0 s], it is
		For Image Profile action, this is the duration and no error	

NOTE! If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can+ add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- 8. Click on the **Set** (7) button at the end of the dialog box to confirm the settings.
- 9. Click on **Close** (8) to save your settings permanently.

Action Settings - Configuration of the Camera Recordings

In the camera web interface, open: Setup Menu / Event Control / Recording(http(s)/<camera IP address>/control/recording).

MxMessageSystem: Processing the automatically generated app events Action Settings - Configuration of the Camera Recordings

MOBOTIX					
Θ	D71 mx10-3	2-75-149	Record	ling ⑦ ① 뒢	Ξ
General Settings					
	Value			Explanation	
Arming	Enabled		\$	Arm Recording: Controls camera recording. Enabled: activate recording. Off. deactivate recording. St: recording armed by signal input. CS: recording armed by custom signal as defined in General Event Settings. From Master: copies recording arming state from master camera.	
	(No time table)		\$	Time Table Profile: Time table profile for time-controlled recording (<u>Time</u> <u>Tables</u>).	
Storage Settings	Value			Explanation	
Recording (REC)	Event Recording	2	\$	Recording Mode: Type of event and story recording. Snap Shot Recording: stores single JPEG pictures. Event Recording: stores stream files for every event using MxPEG codec. Continuous Recording: continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using Start Recording, Retrigger Recording and Stop Recording.	
	Include audio		\$	Record Audio Data: Store audio data in stream file if available. Enable and configure <u>microphone</u> .	
Start Recording	(Environment: MI) Image Analysis: AS (Image Analysis: VM) (Image Analysis: VM2) Message: FFLPRAM	3		Start Recording : Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <u>activated</u> first.	
	Max fps		\$	Event Frame Rate : Recording speed if an event is detected, in frames per second.	
	0		\$	Recording Time Before Event: Additional recording time before an event in seconds.	
Set 4-actory Re	estore Close 5			Мо	re

- 2. Activate Arm Recording ① .
- 3. Under **Storage Settings** / **Recording (REC)** select a **Recording mode** (2). The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
- 4. In list **Start recording** (3) select the message event just created.
- 5. Click on the **Set** (4) button at the end of the dialog box to confirm the settings.

6. Click on **Close** (5) to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

MxMessageSystem: Processing the meta data transmitted by apps

Meta Data Transferred Within the MxMessageSystem

For each event, the app also transfers meta data to the camera. This data is sent in the form of a JSON schema within a MxMessage.

MxMessageSystem: Processing the meta data transmitted by apps Meta Data Transferred Within the MxMessageSystem

Image: A construction of a particulation of a particulatio	● ● ● 10.32.6.96/api/json/messages × +	
<pre>JSON Rohdaten Kopfzeilen Speichern Kopieren Einheitlich formatieren { "local" : { "FFLPRAM" : { "rFLPRAM" : { "custom" : { "plate" : "notcksted" false", "whitelist" : "true" "Camera_id" : "defaultID", "Country" : "USA" "Direction" : "out" "EventType" : "lost" "LicensePlate" : "W71GJF" "List" : "White list", "Region name" : "Florida" "Time": "1614090164.244" "Zone" : "1", "carID" : "2"</pre>	\leftarrow \rightarrow C \textcircled{a} \textcircled{b} 10.32.6.96/api/json/messages \overleftrightarrow Q Suchen \heartsuit \checkmark \gg	≡
<pre>Speichern Kopieren Einheitlich formatieren { "local" : { "FFLPRAM" : { "rFLPRAM" : { "ustom" : { "plate" : "notcksted" false", "whitelist" : "true" "Camera_id" : "defaultID", "Country" : "USA" "Direction" : "out" "EventType" : "lost" "LicensePlate" : "W71GJF" "List" : "White list", "Region name" : "Florida" "Time": "1614090164.244" "Zone" : "1", "carID" : "2"</pre>	🌣 Meistbesucht 🚸 👩 🍫 mobiles Login 🕀 Intranet News 🗋 MOBOTIX 🗋 MadCap 🛛 📎 🗋 Weitere Lesez	eicher
<pre>{ "local" : { "FFLPRAM" : { "rFLPRAM" : { "custom" : { "plate" : "notcksted" false", "whitelist" : "true" "Camera_id" : "defaultID", "Country" : "USA" "Direction" : "out" "EventType" : "lost" "LPR Confidence" : "0.78" "LicensePlate" : "W71GJF" "List" : "White list", "Region code" : "FL", "Region name" : "Florida" "Time": "1614090164.244" "Zone" : "1", "carID" : "2"</pre>	JSON Rohdaten Kopfzeilen	
<pre>"local" : { "FFLPRAM" : { "custom" : { "plate" : "notcksted" false", "whitelist" : "true" "Camera_id" : "defaultID", "Country" : "USA" "Direction" : "out" "EventType" : "lost" "LPR Confidence" : "0.78" "LicensePlate" : "W71GJF" "List" : "White list", "Region code" : "FL", "Region name" : "Florida" "Time": "1614090164.244" "Zone" : "1", "carID" : "2" } "</pre>	Speichern Kopieren Einheitlich formatieren	
}	<pre>"FFLPRAM" : { "custom" : { "plate" : "notcksted" false", "whitelist" : "true" "Camera_id" : "defaultID", "Country" : "USA" "Direction" : "out" "EventType" : "lost" "LPR Confidence" : "0.78" "LicensePlate" : "W71GJF" "List" : "White list", "Region code" : "FL", "Region name" : "Florida" "Time": "1614090164.244" "Zone" : "1", "carID" : "2" } } }</pre>	

NOTE! To view the meta data structure of the last App event, enter the following URL in the address bar of your browser: http(s)://IPAddresseOfYourCamera/api/json/messages

Creating a Custom Message Event

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. FFLPRAM).

MOBOTIX			
\odot	D71 mx10-32-75-149	Event Overview	0 i + -
Environment Event	ts		
Image Analysis Eve	nts		
Internal Events			
Message Events			
FFLPRAM	MxMessageSystem	Inactive Delete	Edit
Meta Events			
Signal Events			
Time Events			
Set Restore	Close		

MOBOTIX			
Θ	D71 mx10-32-75-149	Message E	Events ⑦ 🛈 🗄
Attribute	Value		Explanation
P Receive	8000	\$	Port: TCP port to listen on.
events	Value		Explanation
FFLPRAM 1	Inactive	Delete	
	5	٢	Event Dead Time: Time to wait [03600 s] before the event can trigger anew.
Event Sensor Type	IP ReceiveMxMessageSystemMQTT Subscription		Event Sensor Type: Choose the message sensor.
Event on receiving a	message from the MxMessageSyste	em.	
	FFLPRAM.custom.blacklist 2	/	Message Name: Defines an MxMessageSystem name to wait for.
	Local	\$	Message Range: There are two different ranges of message distribution: <i>Global</i> : across all cameras within the current LAN. <i>Local</i> : camera internal.
	JSON Comparison		Filter Message Content: Optionally choose how to ignore messages containing <i>Filter Value</i> . Select <i>No Filter</i> to trigger on any message with defined <i>Message Name</i> . The <i>Boolean Filter</i> triggers on JSON values true/false, or 1/0, and for some JSON strings like "on"/"off", "yes"/"no". For <i>JSON Comparison, Regular Expression, Value Filter,</i> and <i>Interval Notation</i> define the compared value as <i>Filter</i> <i>Value</i> below.
	"true"		Filter Value: Define either a valid reference value as a string (in JSON format) without line breaks, or an extended regular expression, a number, or a minimum/maximum interval
Set 4 actory	Restore Close 3		

2. Click **Edit** (1) to display and configure the event properties in detail.

- 3. Click on the event (e. g. FFLPRAM) (1) to change the event settings.
- 4. Configure the parameters of the event profile as follows:
 - Message Name: Enter the "Message Name" according to the event documentation of the corresponding app (see Examples for Message Names and Filter Values of the FF Group License Plate Recognition App Region Americas, p. 58)

MxMessageSystem: Processing the meta data transmitted by apps Examples for Message Names and Filter Values of the FF Group License Plate Recognition App - Region Americas

- Message Range:
 - Local: Default settings for the FF Group License Plate Recognition App Region Americas
 - Global: (MxMessage is forwarded from another MOBOTIX camera in the local network.
- Filter Message Content:
 - No Filter: Trigger on any message according to the defined Message Name.
 - **JSON Comparison:** Select if filter values are to be defined in JSON format.
 - **Regular Expression:** Select if filter values are to be defined as regular expression.
- Filter Value: ③ see Examples for Message Names and Filter Values of the FF Group License Plate Recognition App Region Americas, p. 58.

CAUTION! "Filter Value" is used to differentiate the MxMessages of an app / bundle. Use this entry to benefit from individual event types of the apps (if available).

Choose "No Filter" if you want to use all incoming MxMessages as generic event of the related app.

2. Click on **Set** ④ at the end of the dialog box to confirm the settings.

Examples for Message Names and Filter Values of the FF Group License Plate Recognition App -Region Americas

FF Group License Plate Recognition App - Region Americas	MxMessage Name	Filter Value
Generic Event	FFLPRAM	
White list Event	FFLPRAM.custom.whitelist	"true"
Black list Event	FFLPRAM.custom.Black list	"true"
Not listed Event	FFLPRAM.custom.notlisted	"true"
Unique license plate event	FFLPRAM.plate.LicensePlate	License plate code as "STRING", e.g. "W71GJF" (compare Meta Data Trans-
		ferred Within the MxMes- sageSystem, p. 54)

FF Group License Plate Recognition App - Region Americas	MxMessage Name	Filter Value
Incoming Vehicle Event	LPRAM.plate.Direction	"in"
Outgoing Vehicle Event	LPRAM.plate.Direction	"out"



EN_03/24 MOBOTIX AG • Kaiserstrasse • D-67722 Langmeil • Tel.: +49 6302 9816-103 • sales@mobotix.com • www.mobotix.com MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX