



Guideline

Vaxtor License Plate Recognition App

© 2024 MOBOTIX AG



Table of Contents

Table of Contents	2
Before You Start	5
Support	6
MOBOTIX Support	6
MOBOTIX eCampus	6
MOBOTIX Community	6
Safety Notes	7
Legal Notes	7
About Vaxtor License Plate Recognition App	9
Smart Data Interface to MxManagementCenter	9
Technical Specifications	10
Licensing Certified Apps	12
License Activation of Certified Apps in MxManagementCenter	12
Managing Licenses in MxManagementCenter	16
Camera, image and scene requirements	19
Recommendations on mounting and adjusting.	22
Activation of the Certified App Interface	24
Configuration of Vaxtor License Plate Recognition App	26
Basic Settings	27
Recognition Areas	28
Drawing a rectangular Area in the Live View	28
List Management	29
Video	30
License Plates	31
Environment	32
OCR	33
Reporting	34
Basic Settings	36
Text Overlay	36
MxMessage	37
MOBOTIX HUB Analytic Event	37
MOBOTIX HUB Transaction	37
MOBOTIX SYNC	38
JSON	39
XML	39

Milestone Analytic Event	40
TCP Client	40
TCP Server	40
FTP	41
Network Optix	42
Genetec Security Center	43
Variables / Template Fields	44
Genetec LPR Plugin	50
UTMC	51
Advanced	52
Storing the Configuration	53
MxMessageSystem	54
What is MxMessageSystem?	54
Facts about MxMessages	54
MxMessageSystem: Processing the automatically generated app event	55
Checking automatically generated app events	55
Action handling - Configuration of an Action Group	56
Action settings - Configuration of the camera recordings	59
MxMessageSystem: Processing the meta data transmitted by apps	61
Meta data transferred within the MxMessageSystem	61
Creating a Custom Message Event	62
Examples for message names and filter values of the Vaxtor License Plate Recognition App	64

Before You Start

Support	6
Safety Notes	7
Legal Notes	7

Support

MOBOTIX Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates.

Please visit www.mobotix.com > **Support** > **Help Desk**.



MOBOTIX eCampus

The MOBOTIX eCampus is a complete e-learning platform. It lets you decide when and where you want to view and process your training seminar content. Simply open the site in your browser and select the desired training seminar.

Please visit www.mobotix.com/ecampus-mobotix.



MOBOTIX Community

The MOBOTIX community is another valuable source of information. MOBOTIX staff and other users are sharing their information, and so can you.

Please visit community.mobotix.com.



Safety Notes

- This camera must be installed by qualified personnel and the installation should conform to all local codes.
- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- Do not replace batteries of the camera. If a battery is replaced by an incorrect type, the battery can explode.
- External power supplies must comply with the Limited Power Source (LPS) requirements and share the same power specifications with the camera.
- When using a power adapter, the power cord shall be connected to a socket-outlet with proper ground connection.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.

Legal Notes

Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on www.mobotix.com under **Support > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see www.mobotix.com, **Support > Download Center > Marketing & Documentation > Brochures & Guides > Certificates**).

Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply with the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at www.mobotix.com by clicking on the corresponding link at the bottom of every page.

It is the User's responsibility to comply with all applicable local, state, national and foreign laws, rules, treaties and regulations in connection with the use of the Software and Product, including those related to data privacy, the Health Insurance Portability and Accountability Act of 1996 (HIPPA), international communications and the transmission of technical or personal data.

About Vaxtor License Plate Recognition App

Worldwide usable with over 99% accuracy

The certified Vaxtor License Plate Recognition App recognizes, based on deep learning processes, characters from all over the world. The application can be used at maximum speeds of up to 160 km/h on several lanes with an hit probability of over 99 percent. Via easily editable lists, authorized, blocked or searched vehicles can be defined specifically. For example, a gate or barrier in an access road can open or be blocked automatically. The app can be tested free of charge for 30 days and is activated by license for an unlimited period of time.

- Recognition of license plates with global country coverage
- With over 99% accuracy optimally suited for license plate based access control
- Use of blocking and permission lists possible
- Free flow and signaled mode for LPR
- App-integrated Smart Data Data Interface for data retrieval with MxManagementCenter from version 2.4.

CAUTION! Thermal sensors are not supported by this app.

Smart Data Interface to MxManagementCenter

This app has a Smart Data interface to MxManagementCenter.

With the MOBOTIX Smart Data System, transaction data can be linked to the video recordings made at the time of the transactions. Smart Data source can be e.g. MOBOTIX Certified Apps (no license required) or general Smart Data sources (license required) like POS systems or license plate recognition systems.

The Smart Data System in MxManagementCenter enables you to quickly find and review any suspicious activities. The Smart Data Bar and the Smart Data View are available for searching and analyzing transactions. The Smart Data Bar provides a direct overview of the most recent transactions (from the last 24 hours) and for this reason it is convenient to use it for reviews and searches.

NOTE! For information on how to use the Smart Data System, see the corresponding online help of the camera software and MxManagementCenter.

Technical Specifications

Product Information

Product Name	Vaxtor License Plate Recognition App
Order Code	Mx-APP-VX-LPR
Supported MOBOTIX Cameras	Mx-M73A, Mx-S74A
Minimum Camera Firmware	V7.0.6.18
MxManagementCenter Integration	<ul style="list-style-type: none">min. MxMC v2.3.1Configuration: Advanced Config license requiredRecognition Log: Smart Data Interface license required

Product Features

App Features	<ul style="list-style-type: none">License plate recognition of one- and two-line license platesLatin, Hebrew, Arabic and Asian charactersRecognition log (Smart Data / Event Search via MxManagementCenter)MOBOTIX events via MxMessageSystemGlobal country coverageTwo lists for individual actions (e.g. access granted/denied, alarm, etc.)Free flow and signaled mode for LPR
Maximum number of lanes	2
Maximum number of enrolled license plates	1000 per list
Meta Data / Statistic formats	JSON
Trial License	30-day trial license pre-installed
MxMessageSystem supported	Yes

Interfaces	<ul style="list-style-type: none"> ■ Milestone X-Protect ■ MOBOTIX SYNC ■ Generic 3rd party integration via XML ■ Compare supported camera's interfaces
MOBOTIX Events	Yes
ONVIF Events	Yes (Generic message event)

Supported Regions

Supported license plates	https://community.mobotix.com/t/vaxtor-lpr-app-supported-license-plates-countries
--------------------------	---

Scene Requirements

Character Height	20px - 50px (depending on the plate type)
Maximum Vertical Angle	30°
Maximum Horizontal Angle	< 25°
Maximum Tilt Angle	< 25°

Technical App Specifications

MOBOTIX App support	Yes
Synchronous / Asynchronous App	Asynchronous
Accuracy	Min. 99% (considering scene requirements)
Processed number of frames per second	Typ. 10 fps
Detection time	Typ. 100 – 120 ms

Licensing Certified Apps

The following licenses are available for the Vaxtor License Plate Recognition App:

- **30-day test license** pre-installed
- **permanent commercial license**

The usage period begins with activation of the app interface (see [Activation of the Certified App Interface](#), p. 24)

NOTE! For buying or renewing a license, contact your MOBOTIX Partner.

NOTE! Apps are usually pre-installed with the firmware. In rare cases, apps must be downloaded from the website and installed. In this case see www.mobotix.com > **Support** > **Download Center** > **Marketing & Documentation**, download and install the app.


License Activation of Certified Apps in MxManagementCenter

After a test period commercial licenses must be activated for use with a valid license key.

Online-Activation


After receiving the activation IDs, activate them in MxMC as follows:

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

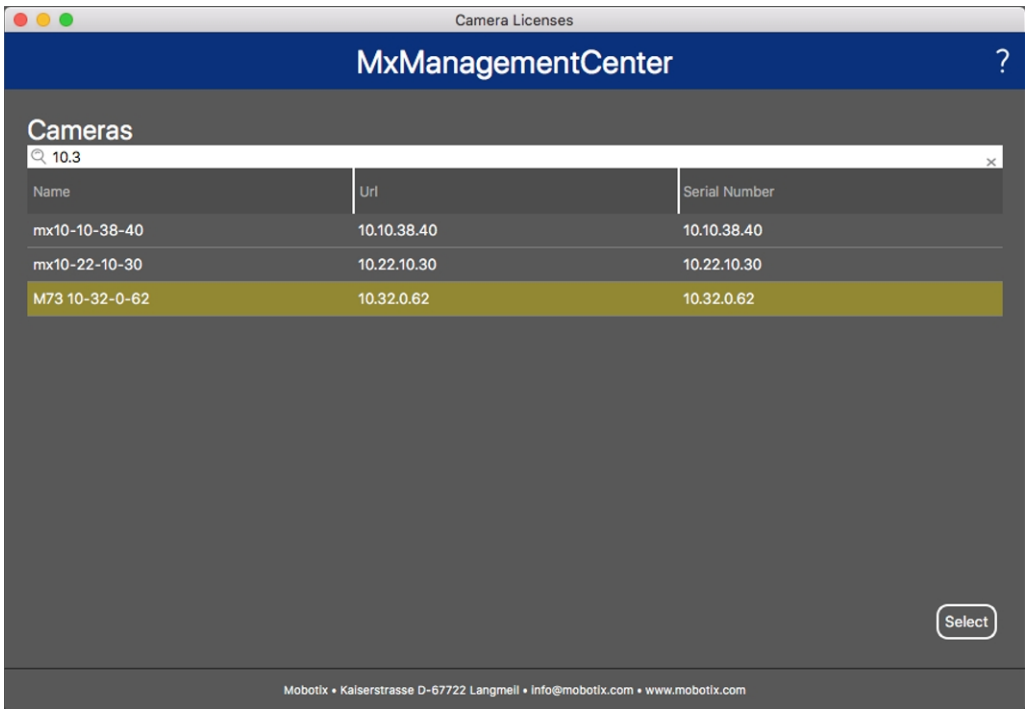



NOTE! If necessary, correct the time set on the camera.

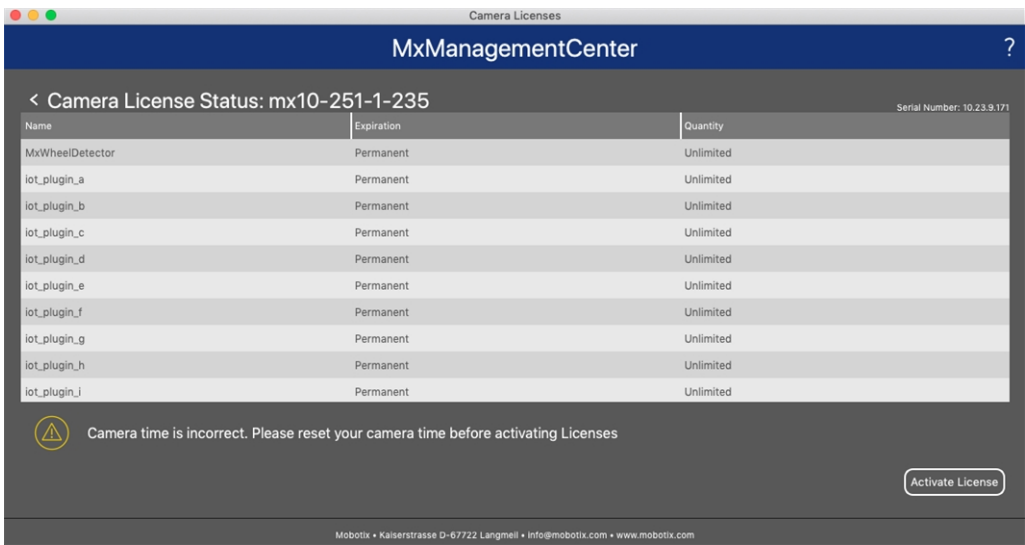1. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.



NOTE! If necessary, correct the time set on the camera.

2. Enter a valid Activation ID and specify the number of licenses to install on this computer.
3. If you want to license another product, click on . In the new row, enter the appropriate Activation ID and the number of licenses you want.
4. To remove a line click .

- When you have entered all Activation IDs, click **Activate License Online**. During activation, **MxMC** connects to the license server. This requires an Internet connection.

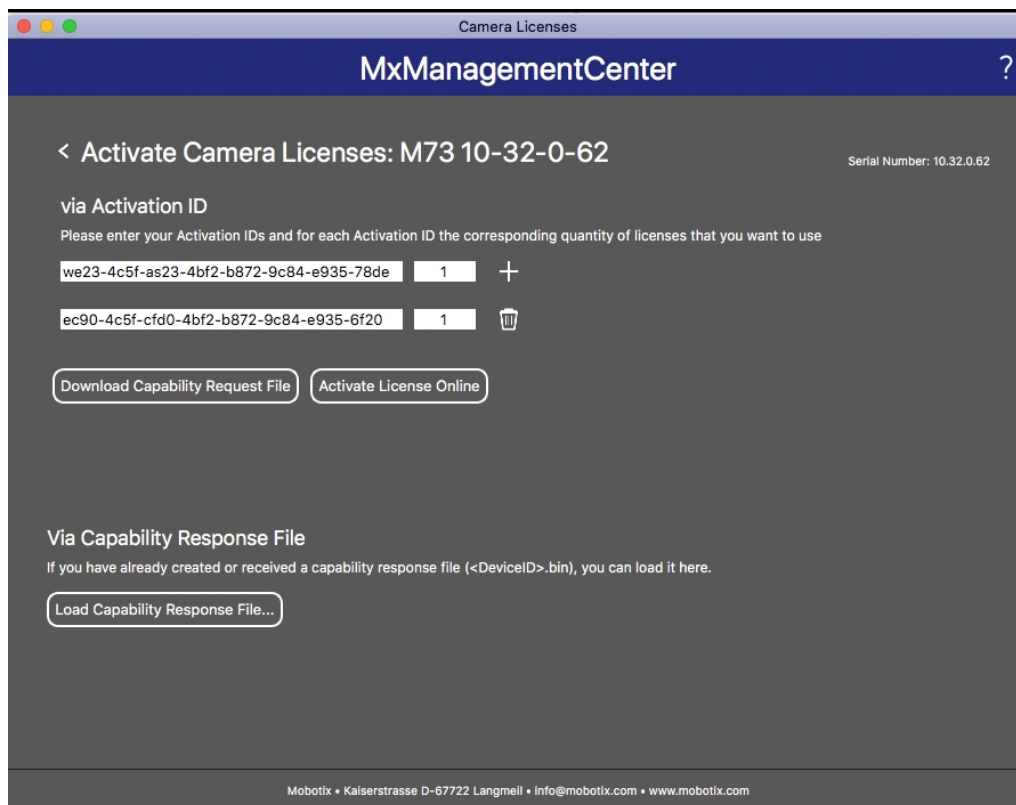


Fig. 1: Adding licenses

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.


Failed activation (missing internet connection)

If the license server cannot be reached, e.g. due to a missing internet connection, apps can also be activated offline. (see [Offline Activation](#), p. 14).

Offline Activation

For offline activation, the partner/installer from whom you purchased the licenses can generate a capability response (.bin file) on the license server to activate their licenses.

- Select from the menu **Window > Camera App Licenses**.
- Select the camera on which you want to license apps and click **Select**.

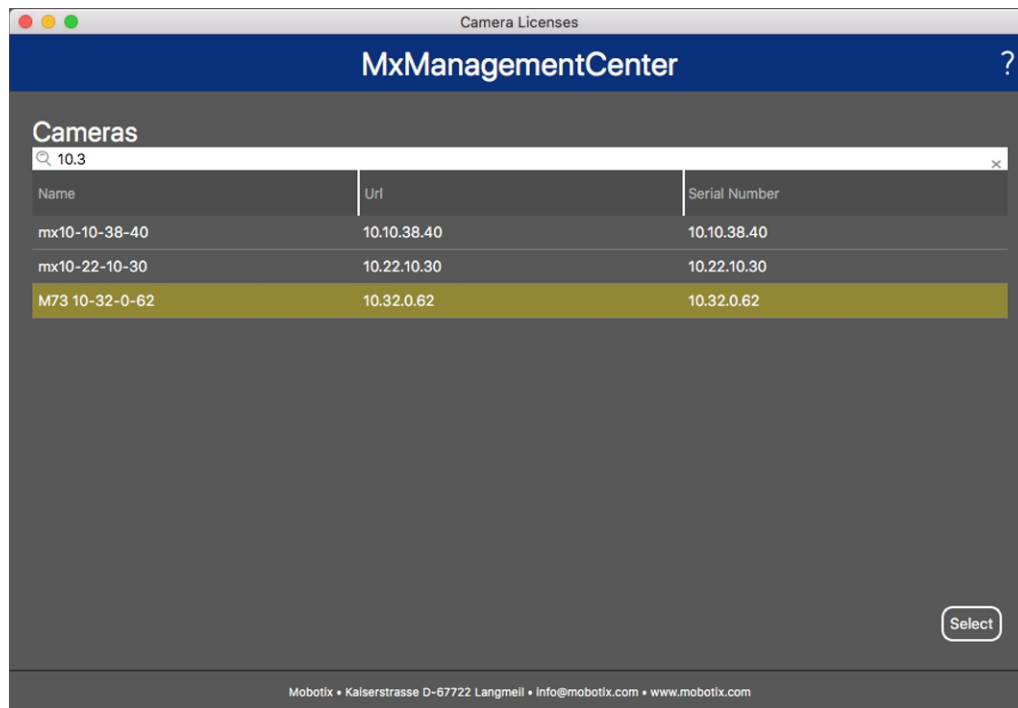


NOTE! If necessary, correct the time set on the camera.

- An overview of the licenses installed on the camera may be displayed. Click **Activate License**.




NOTE! If necessary, correct the time set on the camera.

- Enter a valid Activation ID and specify the number of licenses to install on this computer.
- If you want to license another product, click on . In the new row, enter the appropriate **Activation ID** and the number of licenses you want.

6. If necessary, click  to remove a line.
7. When you have entered all Activation IDs, click **Download Capability Request File (.lic)**, and send it to your partner/installer.

NOTE! This file allows the partner / installer from whom you purchased the licenses to generate a capability response file (.bin) on the license server.

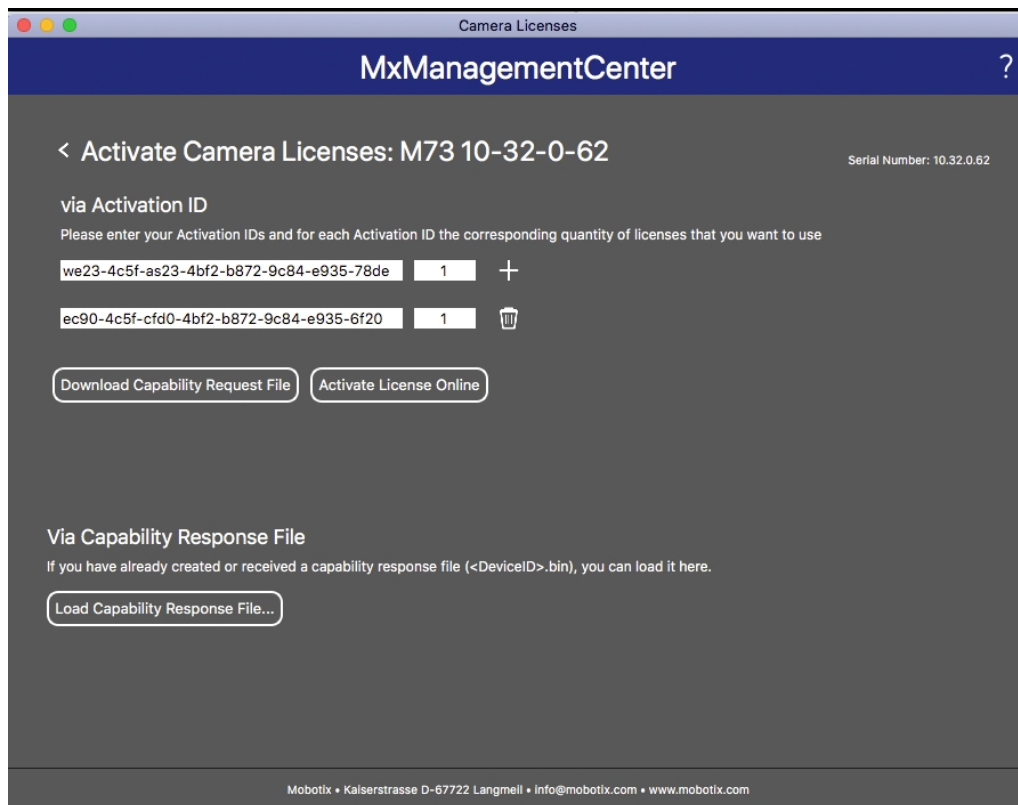

Camera Licenses

MxManagementCenter

< Activate Camera Licenses: M73 10-32-0-62 Serial Number: 10.32.0.62

via Activation ID

Please enter your Activation IDs and for each Activation ID the corresponding quantity of licenses that you want to use

we23-4c5f-as23-4bf2-b872-9c84-e935-78de	1	+
ec90-4c5f-cfd0-4bf2-b872-9c84-e935-6f20	1	🗑

Download Capability Request File Activate License Online

Via Capability Response File

If you have already created or received a capability response file (<DeviceID>.bin), you can load it here.

Load Capability Response File...

Mobotix • Kaiserstrasse D-67722 Langmeil • info@mobotix.com • www.mobotix.com

8. Click Load Capability Response File and follow the instructions.


Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.


Managing Licenses in MxManagementCenter

In MxManagementCenter you can comfortably manage all licenses that have been activated for a camera.

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

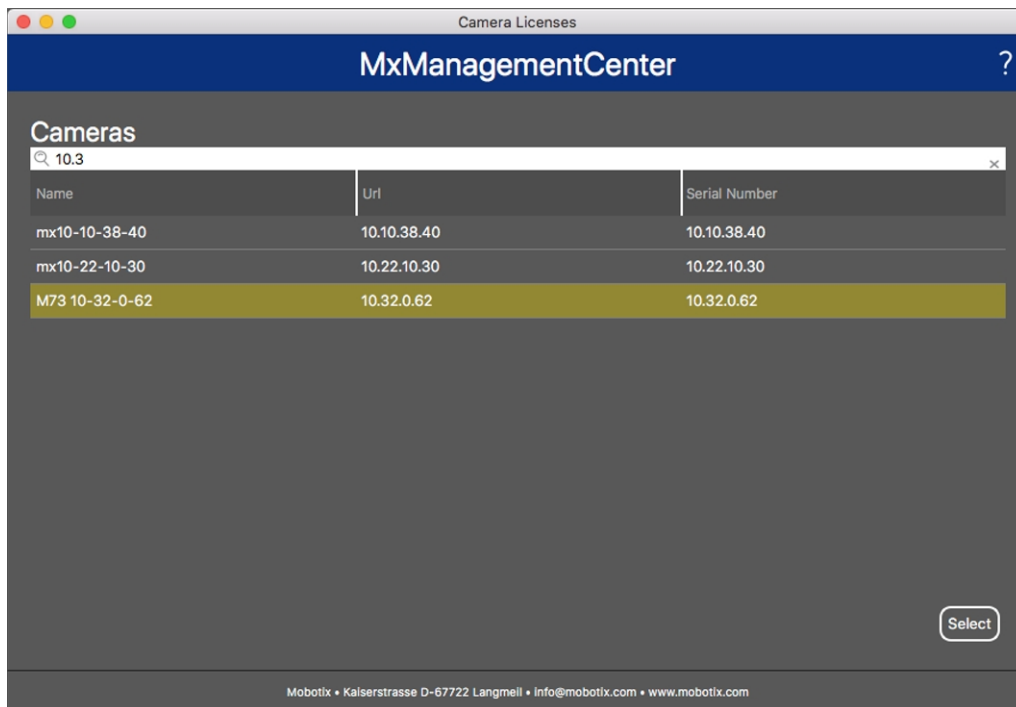

An overview of the licenses installed on the camera may be displayed.

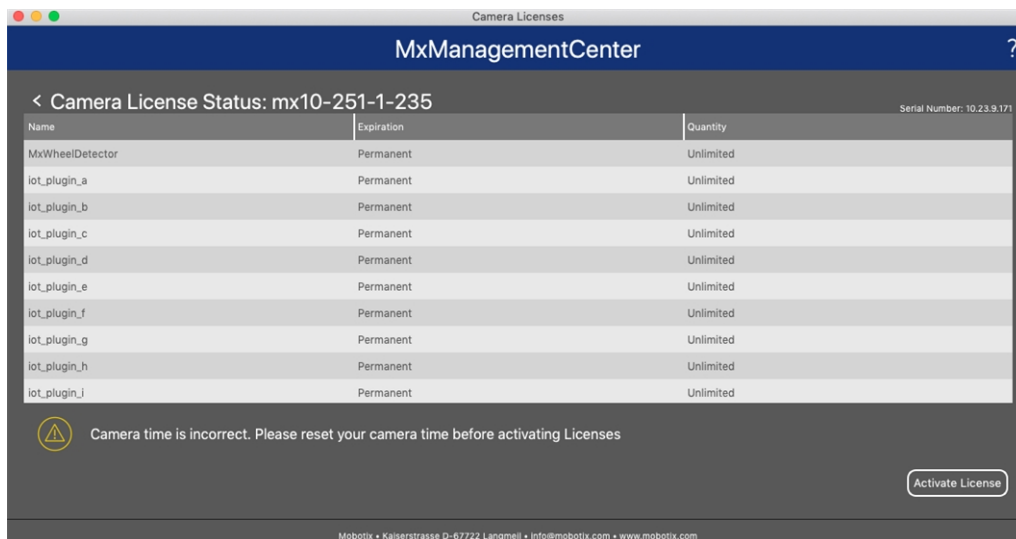

NOTE! If necessary, correct the time set on the camera.

Column	Explanation
Name	Name of the licensed app
Expiration	the time limit of the license

Column	Explanation
Quantity	Number of licenses purchased for a product.
Serial Number	Unique identification determined by MxMC for the device used. If problems occur during licensing, please have the device ID ready.

Synchronize licenses with server

When the program starts, there is no automatic comparison of the licenses between the computer and the license server. Therefore, click **Update** to reload the licenses from the server.

Update licenses

To update temporary licenses, click **Activate Licenses**. The dialog for updating/activating licenses opens.


NOTE! You need administrator rights to synchronize and update licenses.

Camera, image and scene requirements

The camera should be setup so that the combination of the distance, the lens's focal length and the camera's resolution provide an image that can be accurately analyzed by the OCR. Therefore the following pre-requisites must be fulfilled for the scene:

Quality of the license plate to be captured in the image

- The license plate must be high-contrast and clearly legible, i.e. as clean as possible, without dents or holes and well illuminated.
- The license plate should be rectangular
- Minimum character height
 - The objective of an ALPR system is to capture an image with a good readable plate. In order to achieve this the characters on the plate should have a height between 20 and 30 pixels for larger plate formats (e.g. EU 50 cm plates) and about 25-35 pixels for USA-style plates which are physically smaller and have a narrow character stroke width in many states.)
 - Certain Middle East and Arabic plates are smaller still and will need an even greater character pixel height of say 30-40 pixels. For example, in Abu Dhabi the small characters next to or above the main characters are only 3 cm high and may require a much higher camera resolution.

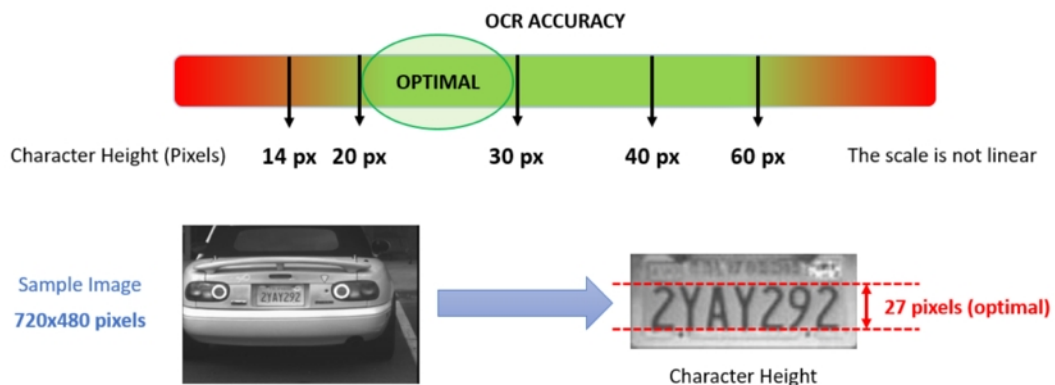

- Maximum rotation angle:



- Vertical: < 30°
- Slope: < 25°
- Horizontal: < 25°

Frame rate

The selection of the correct frame rate influences the recognition quality significantly. For ALPR cameras, the following frame rates are recommended:

Examples for recommended frame rates

Scene (Street type)	minimum frame rate (fps)
Barrier or Gate	5
Normal city street	15
Fast city streets	20
Freeway	25

Shutter Speed (Exposure time)

Shutter speed, also known as the “exposure time”, is the length of time a camera shutter is open for in order to expose light onto the camera sensor. The shutter speed is measured in seconds, or fractions of a second. The bigger the denominator, the faster the speed. For example, 1/250th means one two-hundred-and-fiftieth of a second or four milliseconds.

(1 second = 1000 milliseconds)

Examples for recommended exposure times

Scene (Street type)	minimum exposure time (sec)
Barrier or Gate	1/250 th (4 milliseconds)
Normal city street	1/500 th (2 milliseconds)
Fast city streets	1/1000 th (1 milliseconds)
Freeway	1/1000 th (1 milliseconds)

NOTE! The exposure time must be adjusted according to the light conditions.

Resolution

The resolution of the camera determines the amount of detail that can be captured. The smaller the object detail, the higher the resolution that is required. There are several factors that determine the detail captured:

- The resolution (pixel size) of the camera sensor. This sensor (normally CMOS) where the light eventually falls and a typical IP camera has a sensor resolution of 2 or 4 Megapixels.
- The resolution of the camera's electronics. Most CCTV cameras can support a minimum of 1920 x 1080 – but may be set to a lower resolution if not needed.
- The quality and focal length of the lens. The quality of the optics can play a part in challenging circumstances. The focal length (zoom factor) determines the field of view that can be seen.
- The quality of the images can be influenced by factors such as the type of lighting used.

Examples for recommend resolutions

Scene (Street type)	minimum resolution
Barrier or Gate	800 x 600 px
Roadside Deployment	1280 x 720

Focal length

The focal length of the lens determines how “zoomed in” the image is. It is usually expressed in millimeters (e.g., 6 mm, 25 mm, or 50 mm).

The focal length defines the angle of view (how much of the scene will be captured) and the magnification (how large individual elements will be). The longer the focal length, the narrower the angle of view and the higher the magnification. The shorter the focal length, the wider the angle of view and the lower the magnification.

In the case of zoom lenses, both the minimum and maximum focal lengths are stated, for example 10–40 mm.

Examples for recommended focal length

Scene (Street type)	Distance between camera and license plate (m)	recommended lens
Barrier or Gate	2 - 6 m	2 - 8 mm or similar
Highway, road or street	15 - 30 m	15 - 50 mm or similar

NOTE! The lens should be **IR corrected** to avoid out of focus images. IR Corrected lenses should be used on both day/night and monochrome cameras in all lighting conditions in order to achieve a crisp sharp image.

Infrared illumination

Infrared (or IR) illuminators are designed to provide additional illumination that the camera can see but humans normally cannot. In low light conditions, an IR illuminator is used as a spotlight to facilitate 24-hour recognition. It can penetrate darkness and to a lesser extent fog, rain and snow and it eliminates the inconsistency of ambient light.

Infrared illuminators add light across the camera's field of view to produce the desired image quality, lighting up the area and reflecting the plate.

For ALPR, it is recommended that the camera always has an infrared illuminator. This can be built into the camera or added as an external unit providing that it is placed very close to the camera lens.

Recommendations on mounting and adjusting.

- If you want to recognize license plates on multiple lanes it is generally recommended to mount the camera on a crossbar.
- Use an IR Led to recognize license plates at night or under low light conditions.
- Shutter speed must be high enough to cut the light from car's headlights at night (usually it's about 1/1000). Keep in mind, that too high shutter speed may obscure the edges of the lines (especially shadows).
- Depth of focus is a very important parameter. If you are using a camera with a CS-mount lens, use a fixed lens. Fixed lens are better for license plate recognition due to greater depth of focus. Megapixel lens is also strongly recommended.
- Respect changing light conditions (e.g. due to sunrises and sunset) when choosing the place of mounting. Direct sunlight beams can distort a picture. If the cars facing a direct sunlight consider using a lens with auto iris mode.
- If mounting a camera on a roadside pole check how the pole reacts to heavy cars or a convoy of cars. Some poles have tangible tremor, this could make license plate recognition almost impossible.


- It is recommended to turn down WDR and BLC. In most cases, they will make the picture more pretty, but at the cost of smudging details like an edges of letters in the license plate. For the same reason keep digital noise reduction as low as possible.
- On certain rare conditions there may be a cases of false detections e.g. because of recognizing image parts that structurally or semantically look similar to a license plate(e.g. fences or ads). To minimize this:
 - Adjust the region of interest accordingly. It may be a good idea to make it smaller, or change it's shape, omitting the parts, which potentially may be false detected.
 - Adjust the min and max license plate settings according to upper instructions do not leave a default 130 - 300.
- There may be cases, when the best performance will occur by changing angle of lens or moving the camera. In some cases, shooting a front license plate is better.

Activation of the Certified App Interface

CAUTION! The Vaxtor License Plate Recognition App does not consider obscure areas defined for the live image. Therefore there is no pixelation in obscure areas while configuring the app and during image analysis by the app.

NOTE! The user must have access to the setup menu ([http\(s\)://<camera IP address>/control](http(s)://<camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<camera IP address>/control/app_config](http(s)://<camera IP address>/control/app_config)).

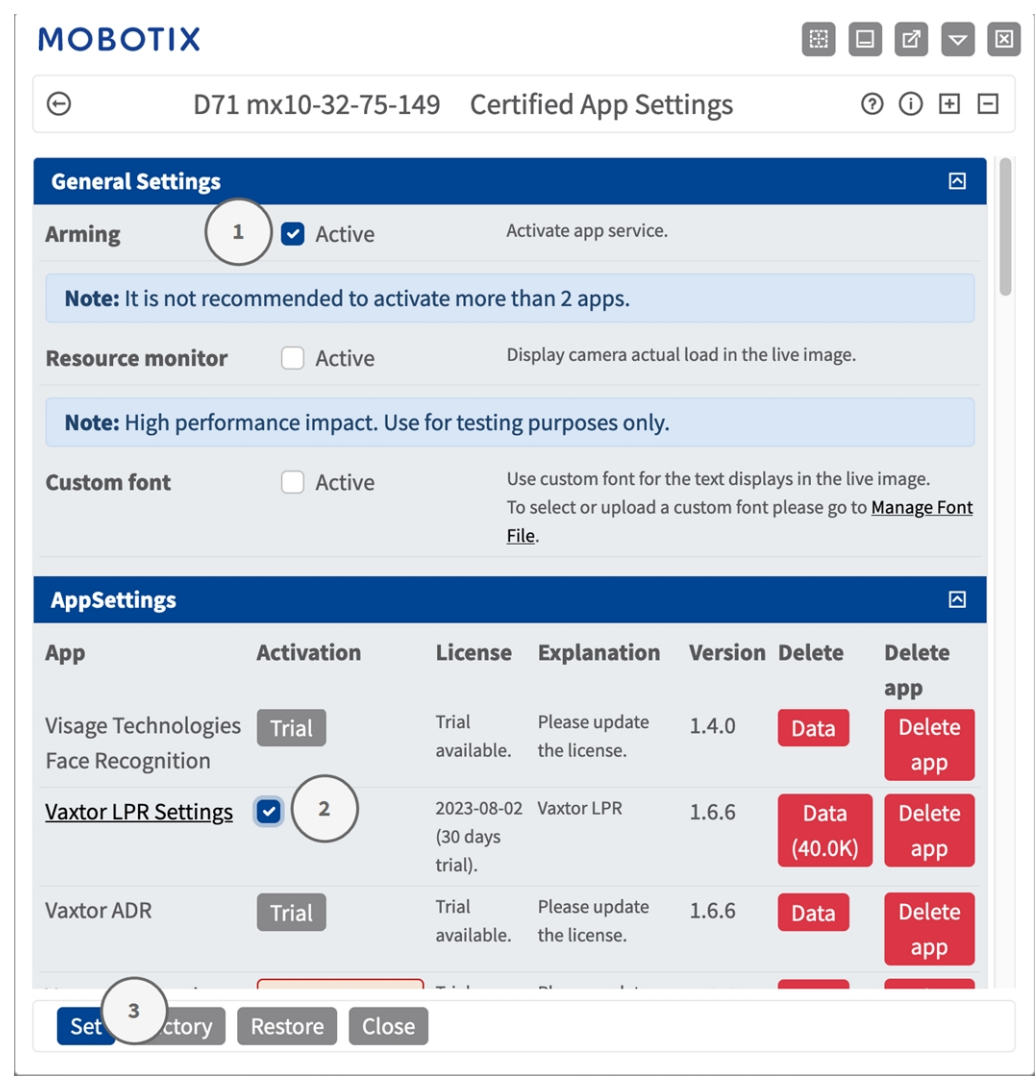

2. Under **General Settings** activate the **Arming**^① of the app service (see screenshot).
3. Under **App Settings** check the **Activation**^② option and click **Set**^③ .

4. Click on the name of the App to be configured to open the Apps user interface.
5. For configuration of the App see [Configuration of Vaxtor License Plate Recognition App](#), p. 26.

Configuration of Vaxtor License Plate Recognition App

NOTE! For best performance and results in LPR processing make sure to have scene set up to meet the [Camera, image and scene requirements, p. 19](#).

NOTE! The user must have access to the setup menu ([http\(s\)://<camera IP address>/control](http(s)://<camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<camera IP address>/control/app_config](http(s)://<camera IP address>/control/app_config)).
2. Click on the name of the **Vaxtor License Plate Recognition App**.

The configuration window of the app appears with the following options:

Basic Settings

The following configurations should be taken into account:

Vaxtor LPR	
Countries	<div> <div>France</div> <div>Germany</div> <div>+</div> <div>×</div> </div> <p>Choose countries from more to less probability of occurrence (up to 10)</p>
Grammar Strict	<input checked="" type="checkbox"/> <p>Read only plates that match a country grammar</p>
Working Mode	<div>Freeflow</div> <p>Signaled: The application will only attempt to read a license plate number when the signal is activated. Freeflow: The application continuously captures license plate numbers.</p>
Enable MxMessage	<input checked="" type="checkbox"/> <p>Send a mxmessage when a plate is read</p>
Enable Overlay	<input checked="" type="checkbox"/> <p>Display an overlay on all the sensors when a plate is read</p>

Countries: Select at least one country and ensure that you select in the more to less probability of occurrence.

To add country select it and click the + button.

To remove a country click on the x button beside it.

Grammar strict: Check to force the Engine to only use the syntax from countries or states that you have selected. Plates that do not match these rules will not be reported. This is the recommended option for using ALPR for access control where exact matches are required

NOTE! In USA, plates are often seen from multiple States – and so the recommended setting is OFF.

Working mode: The following modes are available:

Free flow: The application continuously captures license plate numbers.

Signaled: The application will only attempt to read a license plate number when the signal (trigger) is activated.

NOTE! In signaled mode an signal ID will be sent with the signal event.

Enable MxMessage: Check to enable the processing of LPR events in the MxMessageSystem.

Enable Overlay: Check to enable the display of the license plate recognition result in the live view.

Recognition Areas

A Recognition Area, an area within the video frame where the OCR analytics takes place. You can draw a polygon and choose whether the area to look for plates in Inside or Outside this region. You can set multiple areas to respect complex situations.

NOTE! Using Recognition Areas can decrease OCR processing time and also reduce false positives. The whole license plate must be in or out the Recognition Area to pass the test.

Recognition Areas

Recognition Area Type

inclusion

Show Recognition Area

☐

Edit Recognition Area

Position

599 x 275

Size

265 x 388

Edit Rectangle 1

2

3

Recognition Area Type. Inclusion: only the usdots inside the recognition area will be detected. Exclusion: only the usdots outside the recognition area will be detected

Show the recognition area on the USDOT sensor

Define multiple detection zones as a rectangle. To do this, press the "Edit Rectangle" button. You can draw a rectangle in the camera image with the mouse. The corners are moved using the large handles.

Recognition Area Type: Check to activate the sending of events according to the following configuration

Inclusion: only the plates inside the recognition area will be detected.

Exclusion: only the plates outside the recognition area will be detected.

Show Recognition Area: Check to display the recognition area on the LPR sensor.

Edit Recognition Area: Click **Edit Rectangle**① to draw a recognition area in the live view (see [Drawing a rectangular Area in the Live View, p. 28](#)).

Recycle Bin icon ② : Click the to delete the recognition area.

Plus icon ③ : Click the to define another Detection Area.

Drawing a rectangular Area in the Live View

In the Live View, there you can draw rectangular area. Depending on the App these areas are e.g. Detection Areas, Excluded Areas, Reference Areas, Human Size Selectors etc.

1. In the Live View simply click and drag a rectangular area.
2. Drag the corner points to the desired position.
3. In the top right corner of the live view click **Submit** to adopt the coordinates of the polygon.
4. Optionally click the **bin** icon to delete the recognition area.

List Management

You can define a black list and a white list with up to 1000 license plates per list. If a license plate from one of the lists is recognized, a corresponding event is sent within the MxMessageSystem of the camera.

The screenshot shows the 'List Management' interface. It has two main sections: 'Whitelist' and 'Blacklist'. Each section has a 'Filter' field and a list of license plates. The 'Whitelist' section contains a list of license plates: DOMU1312, LUX1909, FTRC400, KIBMX3445, and KAX120. The 'Blacklist' section contains a list of license plates: GES1904 and RBL2009. There are also icons for deleting, sorting, and adding items to each list. A red circle highlights the 'x' icon next to KIBMX3445 in the whitelist, and another red circle highlights the 'x' icon next to KIBMX3445 in the blacklist. A yellow highlight is under the 'Filter' field in the blacklist section.

List Management

Whitelist

Filter

DOMU1312 × LUX1909 ×

FTRC400 × KIBMX3445 ×

KAX120 ×

Vehicles on the whitelist. Only the plate number. Valid separators are commas, new line, spaces, tab or semicolon.

Blacklist

Filter

GES1904 × RBL2009

Vehicles on the blacklist. Only the plate number. Valid separators are commas, new line, spaces, tab or semicolon.

Adding a license plate to a list

1. Enter the license plate text into the text field ① and click **Enter**.

Adding multiple license plates from a text file

1. Make sure that your text file contains one license plate per line.
2. Copy the relevant license plates from the text file and paste them into the text field ①.

Deleting a license plate from a list

1. Click on the small x ② to the right of the license plate number.

Deleting all license plates from a list

- 1. Click the trash icon ③ .

Sorting all license plates from a list alphabetically

- 1. Click the sort icon ④ .

Copy all license plates from a list to the clip board

- 1. Click the copy to clipboard icon ⑤ .

Filtering license plates

- 1. Enter the license plate or parts of it into the filter text field ⑥ . Only license plates containing the filter text are displayed accordingly

Video

In the video tab you can specify video quality of the video to be analyzed.

Video		
LPR Sensor	Right sensor	Sensor used to recognize license plates
Overview Sensor	None	Sensor used to capture overview images when a plate is detected
Resolution	1920x1080	Working resolution. Adjust the resolution and the camera zoom to capture the plates on the optimum range. Changing this option will require a camera reboot
Minimum Character Height	18	Minimum character height in pixels (14-70). Tip: optimal reading size is 25 pixels height
Maximum Character Height	42	Maximum character height in pixels (14-70). Tip: optimal reading size is 25 pixels height

LPR sensor: Select the camera sensor to be used for License plate recognition.

NOTE! Changing this option requires a camera reboot.

Overview Sensor: Optionally select a sensor used to capture overview images when a plate is detected.

Resolution: Set the working resolution (current max = 1080p). Adjust the resolution and the camera zoom to capture the plates on the optimum range.

NOTE! Changing this option requires a camera reboot.

Minimum Character Height: the minimum height that a license plate's characters should be before being read. The characters should be about 20-30 pixels high.

NOTE! For small license plates, e.g. most Arabic plates or plates with additional small characters e.g. Costa Rica a minimum character height of 30 pixels is recommended.

The recommended difference between the min and max heights is about 10 pixels

Maximum Character Height: the maximum height is about 20-30 pixels.

NOTE! The recommended difference between the min and max heights is about 10 pixels.

License Plates

In the License Plates tab you can refine the settings for the license plates to be analyzed.

License Plates		
Minimum Plate Characters	5	Minimum number of characters that the license plate may have (4-12)
Maximum Plate Characters	9	Maximum number of characters that the license plate may have (4-12)
Multiline Reading	<input checked="" type="checkbox"/>	Read plates with 2 lines
License Plate Color Contrast	Dark font on light background	Plate color contrast. 1:dark font on light background, 2:light font on dark background, 3: both. Tip: do not use both unless it is really necessary

- **Minimum Plate Characters:** Minimum number of characters that the license plate may have (2-16).
- **Maximum Plate Characters:** Maximum number of characters that the license plate may have (2-16).
- **Multiline Reading:** set if license plates with 2 lines should be read.
- **License Plate Color Contrast:** select a contrast option:
 - dark font on light background
 - light font on dark background
 - both (Tip: do not use both unless it is really necessary)

Environment

In the Environment tab you can set parameters in respect the environmental situation the license plates are to be analyzed.

Environment

Same Plate Delay	60	Minimum elapsed time to report the same plate twice (seconds)
Same Plate Character Distance	2	Maximum difference between two plates to be considered as the same (Levenshtein distance)
Maximum Slope Angle	20	License plate maximum slope angle (0-30)
Maximum Recognition Period	500	Maximum time the OCR can spend reading one or more times the same plate (multiple samples) until making its final decision (ms)
Minimum Plates Occurrences	1	Minimum number of times the plate should be read within the "Max Recognition Period"
Maximum Plates Occurrences	5	Maximum number of times the plate should be read within the "Max Recognition Period". If the OCR reaches this number before the maximum recognition period expires, it will force out the plate result
Reported Image	First	Define which image from the pool is returned with the metadata

Same Plate Delay: Minimum elapsed time in seconds to report the same plate twice. This is to prevent multiple reporting of the same plate in situations when the traffic is slow or stationary.

Example: If a vehicle stops at a barrier and the plate is reported but the car doesn't move for 30 seconds, then this delay should be set to say 60 seconds or more to prevent a duplicate read.

NOTE! When using triggered mode, it is recommended that you set the delay to 0 seconds.

Same Plate Character Distance: Set the number of characters that two readings of the same license plate must differ by to be considered different. The camera is capable of reading a plate several times as it passes through the field of view. If one character is misread on one of the reads, then by setting this value to 2 then both reads will contribute towards the reported plate text.

Maximum Slope Angle: Set the angle of slope of a plate that the engine should attempt to read up to (0-30°).

Maximum Recognition Period: Maximum time the OCR can spend reading one or more times the same plate (multiple samples) until making its final decision (ms)

Minimum Plates Occurrences: Minimum number of times the plate should be read within the "Max Recognition Period" before being reported.

Maximum Plates Occurrences: Set the maximum number of times that a plate should be read before being reported (this may happen before the timeout).

Reported Image: Define which image from the pool is returned with the meta data. A plate is normally read several times as it passes through the camera's field of view. You may want to use the largest (last) image for oncoming traffic & the first image for vehicles moving away from the camera.

OCR

In the OCR (Optical Character Recognition) tab you can set parameters to ensure the best possible recognition results.

OCR	
Minimum Global Confidence	<input type="text" value="80"/> <div>Minimum global confidence 1-100, plates under this confidence will be discarded</div>
Minimum Character Confidence	<input type="text" value="70"/> <div>Minimum character confidence 1-100, characters under this confidence will be discarded</div>
Analytics Complexity	<input type="text" value="Medium"/> <div>Tip: Set low if you're losing plates because lack of performance, Medium: default/normal scenario conditions, High: low quality video</div>
Plate Finder Extra	<input checked="" type="checkbox"/> <div>Enhances plate finding algorithms for difficult scenarios</div>

Minimum Global Confidence: Set the minimum confidence level that the whole license plate read must meet in order to be accepted. The global confidence is the average of all individual characters' confidences. The recommended value is 70. Set lower if you see some plates in very bad condition but want to read them.

NOTE! Setting the Minimum Global Confidence too low will cause the OCR engine attempt to read other items such as vehicle signage etc.

Minimum character Confidence: Set the minimum confidence level that a single character must meet in order to be accepted. The recommended value is 50.

NOTE! In regions with open grammars such as the USA keep these two values high, e.g. 90-80 respectively. Higher values mean a lower probability of false positives and a lower probability of missing plates.

Analytics Complexity: This is the complexity of the analytics to be applied during the ALPR Engine's stage of plate reading. Set this according to the OCR mode and type of traffic expected. There are three options.

Low: Recommended for very high-speed traffic where the OCR needs to work faster and your preference is for plate detection over perfect recognition.

Medium (Default) Recommended when the OCR mode is set to free-flow.

High: Recommended when the OCR mode is set to signal (triggered).

CAUTION! Higher complexities give more accurate reading but make the ALPR engine run slower.


Plate Finder Extra: Enhances plate finding algorithms for difficult scenarios.

CAUTION! The enhancement results in more accurate reading but makes the ALPR engine run slower.

Reporting

Vaxtor License Plate Recognition App is able to output all plate reads in real time using a variety of standard protocols so that the plate reads can be accepted remotely by a variety of programs including MOBOTIXSYNC, which can accept and store plate reads in real time from hundreds cameras.

By selecting one of the listed protocols, a sub-menu will appear with fields for setting up parameters such as remote IP addresses etc.

Reporting 		
Retry Notifications	<input type="checkbox"/>	Retry failed notifications (MOBOTIX SYNC and JSON only)
Send Test	<input type="checkbox"/>	Send a fake read (TEST) when settings are stored or when the camera is started
Text Overlay		
MxMessage		
MOBOTIX HUB Analytic Event		
Enable	<input type="checkbox"/>	Enable MOBOTIX HUB Analytic Event reporting
MOBOTIX HUB Transaction		
Enable	<input type="checkbox"/>	Enable MOBOTIX HUB Transaction reporting
MOBOTIX SYNC		
Enable	<input type="checkbox"/>	Send all results to the configured MOBOTIX SYNC server
JSON		
Enable	<input type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
XML		
Enable	<input type="checkbox"/>	Enable XML HTTP/HTTPS POST reporting
Milestone Analytic Event		
Enable	<input type="checkbox"/>	Enable analytic event reporting
TCP Client		
Enable	<input type="checkbox"/>	Enable TCP client reporting
TCP Server		
Enable	<input type="checkbox"/>	Enable TCP server reporting
FTP		
Enable	<input type="checkbox"/>	Enable FTP reporting
Network Optix		
Enable	<input type="checkbox"/>	Enable Network Optix reporting
Genetec Security Center		
Enable	<input type="checkbox"/>	Enable Genetec reporting
Genetec LPR Plugin		
Enable	<input type="checkbox"/>	Enable Genetec LPR Plugin reporting
UTMC		
Enable	<input type="checkbox"/>	Enable UTMC reporting

Basic Settings

Reporting

Retry Notifications	<input checked="" type="checkbox"/>	Retry failed notifications (MOBOTIX SYNC and JSON only)
Retry Period	<input type="text" value="1"/>	Amount of seconds between notification retries
Send Test	<input type="checkbox"/>	Send a fake read (TEST) when settings are stored or when the camera is started

Retry notifications: Check to retry failed notifications (MOBOTIX SYNC and JSON only).

Retry period: Amount of seconds between notification retries.

Send test: Check to send a fake read (TEST) when settings are stored or when the camera is started.

Text Overlay

Text Overlay

Overlay Template	<input type="text" value="\$date\$ - \$plateutf8\$"/>	Template to use on the overlay, check the manual for available keywords
Fade out timer	<input type="text" value="0"/>	Amount of seconds that the overlay will be visible or 0 to make it perpetual
Show plate image	<input type="checkbox"/>	Display a small image with the plate number detected
Image position (x)	<input type="text" value="5"/>	Coordinate position for the image (x)
Image position (y)	<input type="text" value="50"/>	Coordinate position for the image (y)

Text Overlay

Overlay Template: Define template to use on the overlay. Check the [Variables / Template Fields, p. 44](#)[Variables / Template fields](#) for available keywords.

Fade out timer: Set the amount of seconds that the overlay will be visible or 0 to make it perpetual.

Show plate image: Check to display a small image with the container code detected.

Image position (x): x coordinate position for the image.

Image position (y): y coordinate position for the image.

MxMessage

MxMessage

MxMessage Template	<input \"\$direct\""="" \"\$roid\$,="" \"direction\":="" area\":="" type="text" value="{\"/>	Defines the template of customized part of the MxMessage. Check the manual for available keywords
Subpath	<input type="text"/>	

MxMessage

MxMessage Template: Define template of customized part of the MxMessage. [Variables / Template Fields, p. 44](#)

Subpath: Define a subpath for the MxMessage. Check the [Variables / Template Fields, p. 44](#) [Variables / Template fields](#) for available keywords.

MOBOTIX HUB Analytic Event

MOBOTIX HUB Analytic Event

Enable	<input checked="" type="checkbox"/>	Enable MOBOTIX HUB Analytic Event reporting
URL	<input type="text" value="http://mobotixhubserver.com:9090/"/>	Destination URL
Camera name	<input type="text" value="10.X.X.X"/>	Camera name or IP address as defined in MOBOTIX HUB

MOBOTIX HUB Analytic Event: With the Analytics Events feature it is possible to send MAD (Milestone Alert Data) formatted alerts to the MOBOTIX HUB event server over TCP/IP.

Enable: Check to enable and configure MOBOTIX HUB Analytic Event reporting.

URL: Enter the corresponding MOBOTIX HUB Server URL (e.g. <http://mobotixhubserver.com:9090/>)

Camera name: Enter the camera name or IP address of this camera as defined in MOBOTIX HUB.

MOBOTIX HUB Transaction

MOBOTIX HUB Transaction

Enable	<input checked="" type="checkbox"/>	Enable MOBOTIX HUB Transaction reporting
Port	<input type="text" value="30001"/>	MOBOTIX HUB Server TCP Port
Template	<input type="text" value="@ \$plateutf8\$ @"/>	Template to use on the message, check the manual for available keywords

MOBOTIX HUB Transaction: With the Analytics Events feature it is possible to send transaction data to a MOBOTIX HUB server over TCP/IPport.

Enable:Check to enable and configure MOBOTIX HUB Transaction reporting.

Port: MOBOTIX HUB Server TCP Port.

Template: Template used when reporting. Check the [Variables / Template Fields, p. 44](#)[Variables / Template fields](#) for available keywords.

MOBOTIX SYNC

NOTE! The options in this section also apply to Vaxtor Helix servers.

MOBOTIX SYNC

Enable	<input checked="" type="checkbox"/>	Send all results to the configured MOBOTIX SYNC server
URL	<input type="text"/>	MOBOTIX SYNC full URL address (https://mysync.server.com/sync)
API Key	<input type="text"/>	MOBOTIX SYNC API Key
Heartbeat	<div>300<div></div></div>	Heartbeat timer in seconds (10 - 300) or 0 if heartbeat is disabled
Camera ID	<div>1<div></div></div>	MOBOTIX SYNC camera ID assigned to this camera
Overview Camera ID	<div>0<div></div></div>	MOBOTIX SYNC overview camera ID assigned to this camera (0 if none)
Sync lists	<div>0<div></div></div>	Synchronize lists with MOBOTIX SYNC server

MOBOTIX SYNC: MOBOTIX SYNC protocol is an encrypted version of the Vaxtor protocol.

Enable:Check to enable and configure the reporting to a MOBOTIX SYNC server.

URL: Enter the full URL of your configured MOBOTIX SYNC server using this syntax https://<ip_or_server_name>/sync). When reporting to a Vaxtor Helix server, enter https://<ip_or_server_name>/helix6.

API Key: Enter the MOBOTIX SYNC (or Helix) API key generated from your server application.

Heartbeat: Sends a heartbeat every x seconds to the specified server (enter 0 to disable).

Camera ID: Enter MOBOTIX SYNC (or Helix) camera ID assigned to this particular camera.

Overview Camera ID: Enter the MOBOTIX SYNC (or Helix) overview camera ID assigned to this particular camera (set to 0 if none).

Sync lists: Synchronizes the lists with the MOBOTIX SYNC (or Helix) server.

JSON

JSON		
Enable	<input checked="" type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
URL	<input type="text" value="https://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="text"/>	Password to use on the authentication. Blank if none.
JSON Template	<input type="text" value='{`{"plate":"\$plate\$","date":"\$date\$","ir`"/'/>	Template to use on the message, check the manual for available keywords

JSON : JSON is a compact data format in an easy-to-read text form for data exchange between applications.

Enable: Check to enable and configure JSON HTTP/HTTPS POST reporting.

URL: Enter the destination URL (e.g., 3rd party server) where the generated meta data should be sent to.

Username: Username to be used for authentication (leave blank if no authentication is used).

Password: Password to be used for authentication (leave blank if no authentication is used).

JSON Template: Defines the content / scheme of the transmitted JSON notification. Check the [Variables / Template Fields, p. 44](#) [Variables / Template fields](#) for available keywords.

XML

JSON		
Enable	<input checked="" type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
URL	<input type="text" value="https://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="text"/>	Password to use on the authentication. Blank if none.
JSON Template	<input type="text" value='{`{"plate":"\$plate\$","date":"\$date\$","ir`"/'/>	Template to use on the message, check the manual for available keywords

XML : XML is a compact data format in an easy-to-read text form for data exchange between applications.

Enable: Check to enable and configure XML HTTP/HTTPS POST reporting.

URL: Enter the destination URL (e.g., 3rd party server) where the generated meta data should be sent to.

Username: Username to be used for authentication (leave blank if no authentication is used).

Password: Password to be used for authentication (leave blank if no authentication is used).

XML Template: Defines the content / scheme of the transmitted XML notification. Check the [Variables / Template Fields, p. 44](#) [Variables / Template fields](#) for available keywords.

Milestone Analytic Event

Milestone Analytic Event		
Enable	<input checked="" type="checkbox"/>	Enable analytic event reporting
URL	<input type="text" value="http://milestoneserver.com:9090/"/>	Destination URL
Camera name	<input type="text" value="10.X.X.X"/>	Camera name or IP address as defined in Milestone

Milestone Analytic Event: With the Analytics Events feature it is possible to send MAD (Milestone Alert Data) formatted alerts to the Milestone event server over TCP/IP

Enable: Check to enable and configure MOBOTIX HUB Analytic Event reporting.

URL: Enter the corresponding Milestone Server URL (e.g. http://milestoneserver.com:9090/)

Camera name: Enter the camera name or IP address of this camera as defined in Milestone.

TCP Client

TCP Client		
Enable	<input checked="" type="checkbox"/>	Enable TCP client reporting
Server IP	<input type="text"/>	Server IP to which the messages are going to be sent
Port	<input type="text" value="30001"/>	Server TCP port to which the messages are going to be sent
Template	<input type="text" value="@ \$plateutf8\$@"/>	Template to use on the message, check the manual for available keywords

TCP Client:

Enable: Check to enable and configure TCP client reporting

Server IP: Enter the URL of the server to which the MxMessages will be sent.

Port: Enter the TCP port of the server.

Template: Defines the content / scheme of the transmitted TCP message. Check the [Variables / Template Fields](#), p. 44 [Variables / Template fields](#) for available keywords.

TCP Server

TCP Server		
Enable	<input checked="" type="checkbox"/>	Enable TCP server reporting
Port	<input type="text" value="30000"/>	Server TCP port
Template	<input type="text" value="@ \$plateutf8\$@"/>	Template to use on the message, check the manual for available keywords

TCP Server: You can send event data as text file and images files to a ftp server.

Enable: Check to enable and configure TCP server reporting.

Server IP: Enter the URL of the server to which the MxMessages will be sent.

Port: Enter the TCP port of the server.

Template: Defines the content / scheme of the transmitted TCP message. Check the [Variables / Template Fields](#), p. 44 [Variables / Template fields](#) for available keywords.

FTP

FTP		
Enable	<input checked="" type="checkbox"/>	Enable FTP reporting
URL	<input type="text" value="ftp://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="text"/>	Password to use on the authentication. Blank if none.
Filename template	<input type="text" value="\$uuid\$.ftpfiletype\$"/>	Template to use for the filename.
Text file template	<input type="text" value="\$date\$, \$plateutf8\$"/>	Template to use for the content of the text file.
Upload image	<input type="checkbox"/>	Upload the OCR image
Upload overview image	<input type="checkbox"/>	Upload the overview image
Upload patch	<input type="checkbox"/>	Upload the plate patch
Upload text file	<input type="checkbox"/>	Upload the text file

FTP: You can send event data as text file and images files to a ftp server.

Enable: Check to enable and configure FTP server reporting.

URL: Destination URL for the FTP server.

Username: Username if required, blank if none.

Password: Password if required, blank if none.

Filename Template: Template to use for the filename.

Text file template: Template to use for the content of the text file.

Upload image: Enables the upload of an image.

Upload overview image: Enables the upload of an overview image.

Upload patch: Enables the upload of a plate patch image (crop of the recognized code).

Upload text file: Enables the upload of a text file.

Network Optix

Network Optix		
Enable	<input checked="" type="checkbox"/>	Enable Network Optix reporting
URL	<input type="text" value="https://nxserver:7001/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication.
Password	<input type="password"/>	Password to use on the authentication.
Network Optix Camera Id	<input type="text"/>	Camera Id set in Network Optix Video Management Software
Source	<input type="text" value="LPR"/>	Source value sent with the generic event.
Caption	<input type="text" value="\$plateutf8\$"/>	Template to use for the caption.
Description	<input type="text" value="\$plateutf8\$ (\$country\$)"/>	Template to use for the description.

Network Optix: You can send event data to a Network Optix VMS server.

Enable: Check to enable and configure Network Optix server reporting.

URL: Destination URL for the Network Optix server.

Username: Username for authentication.

Password: Password for authentication.

Network Optix Camera ID: Camera ID as set in the Network Optix video management software.

Source: Source value sent with the generic event.

Caption: Template to use for the caption Check the [Variables / Template Fields, p. 44](#)[Variables / Template fields](#) for available keywords.

Description: Template to use for the description. Check the [Variables / Template Fields, p. 44](#)[Variables / Template fields](#) for available keywords.

Genetec Security Center

Genetec Security Center	
Enable	<input checked="" type="checkbox"/> Enable Genetec reporting
Installation type	<div>Production</div> <div>Type of installation. Check with Genetec the correct type according with your license.</div>
URL	<div></div> <div>Destination URL</div>
Username	<div></div> <div>Username to use on the authentication.</div>
Password	<div></div> <div>Password to use on the authentication.</div>
Camera Logical Id	<div>0</div> <div>Camera Logical Id configured on Genetec Security Center</div>
Template	<div>\$plateutf8\$</div> <div>Template to use for bookmarks and custom events.</div>
Create bookmarks	<input checked="" type="checkbox"/> Create a new bookmark with each plate read
Raise custom events	<input checked="" type="checkbox"/> Raise a new custom event with each plate read
Custom Event Id	<div>0</div> <div>Custom Event Id</div>

Genetec Security Center: You can send event data to a Genetec Security Center server.

Enable: Check to enable and configure Genetec Security Center server reporting.

Installation type: Select the installation type that corresponds to your license.

URL: Destination URL for the Genetec Security Center server.

Username: Username for authentication.

Password: Password for authentication.

Camera Logical ID: Camera ID as set in Genetec Security Center.

Template: Template to use for bookmarks and custom events. Check the [Variables / Template Fields, p. 44](#) [Variables / Template fields](#) for available keywords.

Create bookmarks: Creates a new bookmark with each plate read by the app.

Raise custom events: Raises a new custom event with each plate read by the app.

Custom Event ID: Set a custom event ID.

Variables / Template Fields

Vaxtor License Plate Recognition App only reserved variables

Template field	Category	Description	Example
\$category\$	plate info	License plate category for countries that support it	Private
\$country\$:	plate info	3 letter country code	GER
\$direction\$	analytics	Enumerate with the vehicle direction (0: Unknown, 1: Towards, 2: Away, 3: Stopped)	1
\$plate\$:	plate info	License plate text / number	LUCY1909
\$plateimage\$	image	Plate crop JPEG image encoded in base64	
\$platejpegsize\$	image	JPEG size in bytes	3881
\$plateutf8\$:	plate info	License plate text / number in UTF8 format	LUCY1909

Template field	Category	Description	Example
\$speed\$	analytics	Vehicle speed (km/h)	123
\$state\$	plate info	License plate code state (for US license plates codes only)	Florida

Shared reserved variables

Variable	Category	Description	Example
\$absolutebottom\$	image	Plate bottom position based on the total image height (0-1).	0.44
\$absoluteleft\$	image	Plate left position based on the total image width (0-1).	0.59
\$absoluteright\$	image	Plate right position based on the total image width (0-1).	0.66
\$absolutetop\$	image	Plate top position based on the total image height (0-1).	0.37
\$blacklist\$	lists & conditions	Description on the blacklist linked to the code/-plate.	
\$blacklistdescription\$	lists & conditions	Description specified in the blacklist record	Suspicious vehicle
\$bottom\$	image	Bottom coordinate for the code/plate on the image (pixels).	477
\$cameraid\$	other	Camera OCR ID	

Configuration of Vaxtor License Plate Recognition App

Reporting

Variable	Category	Description	Example
\$charheight\$	plate info	Average character height (pixels).	33
\$confidence\$	plate info	Global confidence (0-100).	99
\$date\$	date & time	ISO 8601 Date with UTC offset appended	2023-09-19T23:47:01.65+02:00
\$day\$	date & time	Day (UTC) in two digits. Includes leading zero if single-digit number.	19
\$etx\$	other	End of text control character (HEX 03).	
\$dwelltime\$	analytics	Time spent in monitored area, in seconds	336
\$formatted\$	plate info	Plate contents in human-readable format. Empty if no result.	LU CY 1909
\$height\$	image	OCR image height in px.	1080
\$id\$	other	Database ID for this read.	
\$hour\$	date & time	Hour (UTC) in two digits using the 24-hour clock-.Includes leading zero if single-digit number.	23
\$ifblacklist\$...\$ifblacklist\$	lists & conditions	If the plate is on the blacklist, returns the text between these templates.	\$ifblacklist\$ Content to append \$ifblacklist\$
\$iflist\$...\$iflist\$	lists & conditions	If the plate is on llist, returns the text between these templates.	\$iflist\$ Content to append \$iflist\$

Variable	Category	Description	Example
\$ifnolist\$...\$ifnolist\$	lists & conditions	If the plate is not on any list, returns the text between these templates.	\$ifnolist\$ Content to append \$ifnolist\$
\$ifnotblacklist\$...\$ifnotblacklist\$	lists & conditions	If the plate is not on the blacklist, returns the text between these templates.	\$ifnotblacklist\$ Content to append \$ifnotblacklist\$
\$ifnotwhitelist\$...\$ifnotblacklist\$	lists & conditions	If the plate is not on the whitelist, returns the text between these templates.	\$ifnotwhitelist\$ Content to append \$ifnotwhitelist\$
\$ifwhitelist\$...\$ifwhitelist\$	lists & conditions	If the plate is on the whitelist, returns the text between these templates.	\$ifwhitelist\$ Content to append \$ifwhitelist\$
\$image\$	image	Full image, JPEG encoded in base64.	
\$imageid\$	other	Signal ID in case of a trigger read.	
\$imagesize\$	image	Full image size in bytes	297249
\$left\$	image	Left coordinate for the code/plate on the image (pixels)	1255
\$localday\$	date & time	Day (local) in two digits. Includes leading zero if single-digit number.	15
\$localhour\$	date & time	Hour (local) in two digits using the 24-hour clock. Includes leading zero if single-digit number.	12

Variable	Category	Description	Example
\$localmin\$	date & time	Minute (local) in two digits. Includes leading zero if single-digit number.	23
\$localmonth\$	date & time	Month (local) in two digits. Includes leading zero if single-digit number.	11
\$localsec\$	date & time	Second (local) in two digits. Includes leading zero if single-digit number.	48
\$localyear\$	date & time	Year (local) in four digits	2024
\$min\$	date & time	Minute (UTC) in two digits. Includes leading zero if single-digit number.	47
\$month\$	date & time	Month (UTC) in two digits. Includes leading zero if single-digit number.	11
\$multiplate\$	plate info	Amount of times that the plate has been read before reporting	4
\$nolist\$	lists & conditions	True or False	
\$overviewimage\$	image	Overview JPEG image encoded in base64.	
\$overviewimagesize\$	image	Overview image size in bytes.	297249
\$processingtime\$	Plate info	Processing time in milliseconds.	122

Variable	Category	Description	Example
\$right\$	image	Right coordinate for the code/plate on the image (pixels)	1269
\$roid\$	plate info	Recognition Area ID where the license plate number is found	1
\$sec\$	date & time	Second (UTC) in two digits. Includes leading zero if single-digit number.	10
\$sensor\$	other	Camera sensor ID where the plate number is found (0, 1).	0
\$signalid\$	plate info	Identifier provided on the triggering HTTP request	ab12cd34
\$stx\$	other	Start of text control character (HEX 02).	
\$tag\$	plate info	Hashed plate number. Same plate produces the same hash on repetitions.	9612548
\$timestamp\$	date & time	ISO 8601 date with UTC offset appended (yyyy-MM-ddTHH:mm:sszzz)	2024-09-19T23:47:01.65+02:00
\$top\$	image	Top coordinate for the code/plate on the image (pixels).	456
\$utcdatetime\$	date & time	ISO 8601 date UTC	2024-09-19T21:47:01.65Z

Variable	Category	Description	Example
\$uuid\$	plate info	Universally unique identifier (UUID) generated at the time of license plate detection.	de5027d5-191d-4d3d-987b- dc104cc27d5c
\$whitelist\$	lists & conditions	Description on the whitelist linked to the code/plate.	
\$width\$	image	OCR image width.	

Genetec LPR Plugin

Genetec LPR Plugin

Enable

☒

Enable Genetec LPR Plugin reporting

URL

Destination URL

Username

Username to use on the authentication.
Blank if none.

Password

Password to use on the authentication.
Blank if none.

Camera ID

Unique Camera indentificator.

Camera name

Camera name.

Latitude

Camera position latitude in decimal degrees format. E.g. 0.00000 or -0.00000.
For wrong latitude and longitud values, the default value will be 0 for both

Longitude

Camera position longitude in decimal degrees format. E.g. 0.00000 or -0.00000.
For wrong latitude and longitud values, the default value will be 0 for both

Genetec LPR Plugin: You can send event data to a Genetec LPR Plugin server.

Enable: Check to enable and configure Genetec LPR Plugin server reporting.

Installation type: Select the installation type that corresponds to your license.

URL: Destination URL for the Genetec Security Center server.

Username: Username for authentication.

Password: Password for authentication.

Camera ID: Add a unique camera identifier.

Camera name: Add a name for this camera for easy identification.

Latitude: Latitude of camera position in decimal degrees from 0.00000 to 360.00000.

Longitude: Longitude of camera position in decimal degrees from 0.00000 to 360.00000.

NOTE! If one of the Longitude/Latitude values is invalid, the app will assume latitude/longitude values of 0.00000/0.00000.

UTMC

You can send LPR event data to a Urban Traffic Management and Control System.

UTMC		
Enable	<input checked="" type="checkbox"/>	Enable UTMC reporting
ID	<input type="text" value="1"/>	Camera ID
URL	<input type="text"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication.
Password	<input type="text"/>	Password to use on the authentication.
Allow empty responses	<input checked="" type="checkbox"/>	Allow empty responses as valid ones
Send plates in realtime	<input checked="" type="checkbox"/>	Try to send plate number as soon as it is read
Send plate number	<input checked="" type="checkbox"/>	Send plate number field
Send tag	<input type="checkbox"/>	Send tag field (anonymized plate number)
Send OCR image	<input checked="" type="checkbox"/>	Send the OCR image as ANPRImage
Send plate patch	<input checked="" type="checkbox"/>	Send plate patch as platePatch
Send overview image	<input checked="" type="checkbox"/>	Send overview image as overviewImage
Heartbeat period (seconds)	<input type="text" value="60"/>	
Diagnostic period (seconds)	<input type="text" value="60"/>	
Retry period (seconds)	<input type="text" value="60"/>	
Plates per package	<input type="text" value="1"/>	

- **Enable:** Check to enable and configure UTMIC reporting.
- **Installation type:** Select the installation type that corresponds to your license.
- **URL:** Destination URL for the Genetec Security Center server.
- **Username:** Username for authentication.
- **Password:** Password for authentication.
- **Camera Logical ID:** Camera ID as set in Genetec Security Center.
- **Template:** Template to use for bookmarks and custom events. Check the [Variables / Template Fields](#), [p. 44Variables / Template fields](#) for available keywords.
- **Create bookmarks:** Creates a new bookmark with each plate read by the app.
- **Raise custom events:** Raises a new custom event with each plate read by the app.
- **Custom Event ID:** Set a custom event ID.

Advanced

In this section you find useful tools for calibration and trouble shooting.

Advanced

Log level

info

Info: Default log level. Debug: Enable debug log level, useful to diagnostic messages received from third parties. Trace: Enable trace log level, useful to diagnostic messages sent to third parties.

Show Log File On Screen

☐

If enabled, the on-screen log file will be displayed on the selected sensor

Sensor

Right sensor

Sensor where the on-screen log file is displayed

Show Calibration Grid

☐

If enabled, display on the OCR sensor a 20 pixels height grid

Log level: Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

Info: Default log level

Trace: Select e.g. for diagnostic messages received from third parties

Debug: Select for complete log files for debug purposes

Show log file on screen: Check to display the on-screen log file on the selected sensor

Sensor: Select the sensor on which the on-screen log file is displayed

Show Calibration Grid: Check to display on the OCR sensor a 20 pixels height grid

Storing the Configuration

To store the configuration you have the following options:



- Click **Set** to activate your settings and to save them until the next reboot of the camera.
- Click **Factory** to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click **Restore** to undo your most recent changes that have not been stored in the camera permanently.
- Click **Close** to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

MxMessageSystem

What is MxMessageSystem?

MxMessageSystem is a communication system based on name oriented messages. This means that a message must have a unique name with a maximum length of 32 bytes.

Each participant can send and receive messages. MOBOTIX cameras can also forward messages within the local network. This way, MxMessages can be distributed over the entire local network (see Message Area: Global).

For example, a MOBOTIX 7 series camera can exchange a MxMessage generated by a camera app with an Mx6 camera that does not support certified MOBOTIX apps.

Facts about MxMessages

- 128-bit encryption ensures privacy and security of message content.
- MxMessages can be distributed from any camera of the Mx6 and 7 series.
- The message range can be defined individually for each MxMessage.
 - **Local:** Camera expects a MxMessage within its own camera system (e.g. through a Certified App).
 - **Global:** the camera expects a MxMessage that is distributed in the local network by another MxMessage device (e.g. another camera of the 7 series equipped with a certified MOBOTIX app).
- Actions that the recipients are to perform are configured individually for each participant of the MxMessageSystem.

MxMessageSystem: Processing the automatically generated app event

Checking automatically generated app events

NOTE! After successfully activating the app (see [Activation of the Certified App Interface, p. 24](#)), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e.g. VaxALPR).

Environment Events		<input checked="" type="checkbox"/>
Image Analysis Events		<input checked="" type="checkbox"/>
Internal Events		<input checked="" type="checkbox"/>
Message Events		<input checked="" type="checkbox"/>
ColorRecognition	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete Edit... 1
FFLPR_MMCR	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
MxActivitySensor	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
MxAnalytics	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
ObjRec	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
VaxALPR	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
VaxALPRMMC	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
Meta Events		<input checked="" type="checkbox"/>
Signal Events		<input checked="" type="checkbox"/>
Time Events		<input checked="" type="checkbox"/>

2. Click **Edit** ① to display and configure the event properties in detail.

VaxALPR

☐ Inactive ☐ Delete

5

Event Dead Time:
Time to wait [0..3600 s] before the event can trigger anew.

Event Sensor Type ☐ IP Receive ☒ MxMessageSystem ☐ MQTT Subscription

Event Sensor Type:
Choose the message sensor.

Event on receiving a message from the MxMessageSystem.

VaxALPR

Message Name:
Defines an MxMessageSystem name to wait for.

Local

Message Range:
There are two different ranges of message distribution:
Global: across all cameras within the current LAN.
Local: camera internal.

No Filter

Filter Message Content:
Optionally choose how to ignore messages containing *Filter Value*. Select *No Filter* to trigger on any message with defined *Message Name*.
The *Boolean Filter* triggers on JSON values `true/false`, or `1/0`, and for some JSON strings like `"on"/"off"`, `"yes"/"no"`.
For *JSON Comparison*, *Regular Expression*, *Value Filter*, and *Interval Notation* define the compared value as *Filter Value* below.

Add new profile

Action handling - Configuration of an Action Group

CAUTION! To use events, trigger Action Groups or record images the general arming of the camera must be enabled ([http\(s\)/<camera IP address>/control/settings](http(s)/<camera IP address>/control/settings))

An Action Group defines which action(s) is (are) triggered by the Vaxtor License Plate Recognition App event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<camera IP address>/control/actions](http(s)://<camera IP address>/control/actions)).

2. Click **Add new group** ① and give a meaningful name.
3. Click **Edit** ②, to configure the group.

4. Enable **Arming** ③ of the Action Group.
5. Select your message event in the **Event Selection** list ④. To select multiple events, hold the shift key.
6. Click **Add new Action** ⑤.

7. Select a proper action from list **Action Type and Profile**⑥ .

The screenshot shows the 'MOBOTIX' interface for configuring an 'Action Group' for device 'D71 mx10-32-75-149'. The main section is 'Action Type and Profile', which contains a list of actions. The action 'IP Notify: MxMC-Gridview' is selected and highlighted with a blue bar, and a circled '6' is placed next to it. Other actions in the list include 'FTP: FTP-Webcam', 'FTP: FTP-AlarmClip', 'FTP: FTP-Archiving', 'FTP: FTP-Day-Period', 'E-Mail: AlarmMail', 'E-Mail: NotifyMail', 'E-Mail: MailWithMxPEGClip', 'E-Mail: MailWithStoryImages', 'E-Mail: MailSystemStatus24', 'IP Notify: MxMC-Alarm', 'IP Notify: MxMC-Liveview', 'IP Notify: TCPMessage', 'IP Notify: HttpRequest', 'IP Notify: ObscureAreaOn', 'IP Notify: ObscureAreaOff', 'Play Sound: StandardSounds', 'Device Out: ~IrlLightOff', 'Device Out: ~IrlLightOn', and 'Device Out: ~IrlLightToggle'. Other sections include 'Event Selection' (with a dropdown set to '(No time table)'), 'Action Details', 'Actions' (with a dropdown set to 'FTP: FTP-Webcam' and a 'Delete' button), and 'Explanation' (with sub-sections for 'Action Type and Profile', 'Action Timeout or Duration', and 'Action Chaining'). At the bottom, there are buttons for 'Set' (circled with a '7'), 'History', 'Restore', and 'Close' (circled with an '8').

NOTE! If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

8. Click on the **Set** ⑦ to confirm the settings.
9. Click on **Close**⑧ to save your settings permanently.

Action settings - Configuration of the camera recordings

1. In the camera web interface, open: **Setup Menu / Event Control / Recording** ([http\(s\)/<camera IP address>/control/recording](http(s)/<camera IP address>/control/recording)).

The screenshot shows the 'Recording' configuration page in a web browser. The browser address bar shows 'D71 mx10-32-75-149 Recording'. The page has a blue header with 'General Settings'. Under 'Arming', the 'Value' is 'Enabled' (marked with a circled 1). The 'Explanation' for Arming includes: 'Arm Recording: Controls camera recording. Enabled: activate recording. Off: deactivate recording. St: recording armed by signal input. CS: recording armed by custom signal as defined in General Event Settings. From Master: copies recording arming state from master camera.' Below this is a 'Time Table Profile' dropdown set to '(No time table)'. The 'Storage Settings' section has 'Recording (REC)' set to 'Event Recording' (marked with a circled 2). The 'Explanation' for Recording Mode includes: 'Type of event and story recording. Snap Shot Recording: stores single JPEG pictures. Event Recording: stores stream files for every event using MxPEG codec. Continuous Recording: continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using Start Recording, Retrigger Recording and Stop Recording.' Under 'Start Recording', a dropdown menu is open showing options: 'Message: ObjRec', 'Message: VaxALPR' (marked with a circled 3), 'Message: VaxALPRMMC', '(Signal: SI)', and 'Signal: UC'. The 'Start Recording' explanation says: 'Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first.' Below this are 'Max fps' (set to 0), 'Event Frame Rate' (set to 10 s), 'Recording Time Before Event' (set to 0), and 'Recording Time' (set to 10 s). At the bottom are buttons: 'Set' (marked with a circled 4), 'Factory', 'Restore', 'Close' (marked with a circled 5), and 'More'.

2. Activate **Arm Recording**① .
3. Under **Storage Settings / Recording (REC)** select a **Recording mode**② . The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
4. In list **Start recording**③ select the message event just created.
5. Click on the **Set**④ to confirm your settings.


6. Click on **Close**⑤ to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

MxMessageSystem: Processing the meta data transmitted by apps

Meta data transferred within the MxMessageSystem

For each event, the app also transfers meta data to the camera. This data is sent in the form of a JSON schema within a MxMessage.

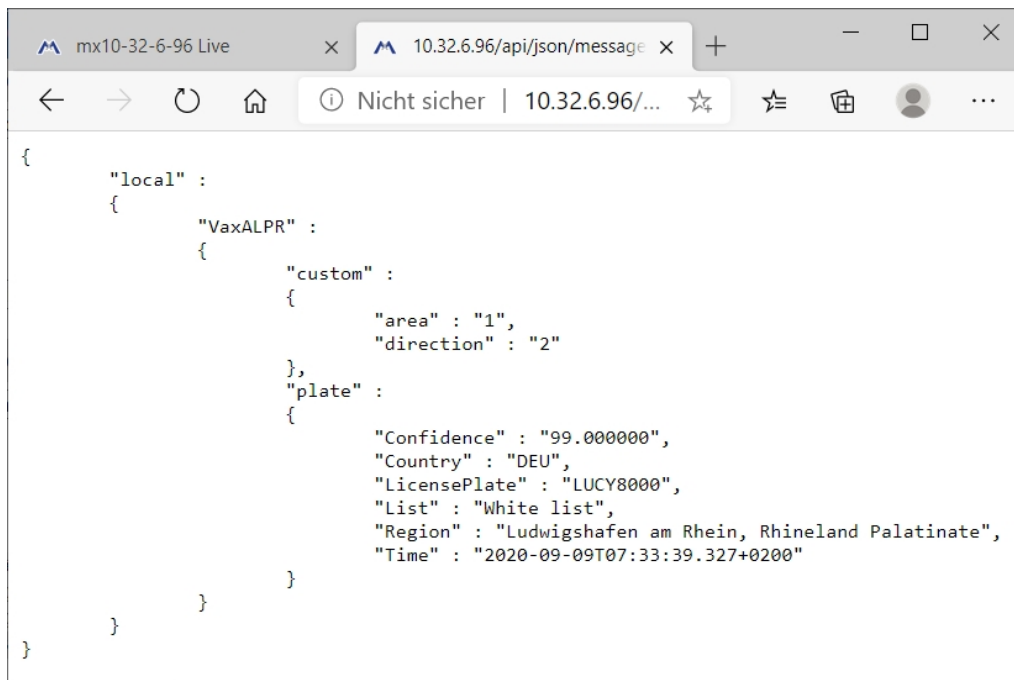

The screenshot shows a web browser window with two tabs. The active tab is titled '10.32.6.96/api/json/message' and displays a JSON object. The address bar shows 'Nicht sicher | 10.32.6.96/...' and the page content is a JSON schema representing meta data.

```
{
  "local" :
  {
    "VaxALPR" :
    {
      "custom" :
      {
        "area" : "1",
        "direction" : "2"
      },
      "plate" :
      {
        "Confidence" : "99.000000",
        "Country" : "DEU",
        "LicensePlate" : "LUCY8000",
        "List" : "White list",
        "Region" : "Ludwigshafen am Rhein, Rhineland Palatinate",
        "Time" : "2020-09-09T07:33:39.327+0200"
      }
    }
  }
}
```

NOTE! To view the meta data structure of the last App event, enter the following URL in the address bar of your browser: [http\(s\)://IPAdresseOfYourCamera/api/json/messages](http(s)://IPAdresseOfYourCamera/api/json/messages)

Creating a Custom Message Event

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e.g. VaxLPR).

Environment Events				<input checked="" type="checkbox"/>	
Image Analysis Events				<input checked="" type="checkbox"/>	
Internal Events				<input checked="" type="checkbox"/>	
Message Events				<input checked="" type="checkbox"/>	
ColorRecognition	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete	Edit...	1
FFLPR_MMCR	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete		
MxActivitySensor	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete		
MxAnalytics	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete		
ObjRec	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete		
VaxALPR	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete		
VaxALPRMMC	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete		
Meta Events				<input checked="" type="checkbox"/>	
Signal Events				<input checked="" type="checkbox"/>	
Time Events				<input checked="" type="checkbox"/>	

- Click **Edit** ① to display and configure the event properties in detail.

VaxALPR ① Inactive Delete

5 Event Dead Time:
Time to wait [0..3600 s] before the event can trigger anew.

Event Sensor Type: ☐ IP Receive ☒ MxMessageSystem ☐ MQTT Subscription

Event on receiving a message from the MxMessageSystem.

VaxALPR.plate.LicensePlate ② Message Name:
Defines an MxMessageSystem name to wait for.

Local Message Range:
There are two different ranges of message distribution:
Global: across all cameras within the current LAN.
Local: camera internal.

JSON Comparison Filter Message Content:
Optionally choose how to ignore messages containing *Filter Value*. Select *No Filter* to trigger on any message with defined *Message Name*.
The *Boolean Filter* triggers on JSON values *true/false*, or *1/0*, and for some JSON strings like *"on"/"off"*, *"yes"/"no"*.
For *JSON Comparison*, *Regular Expression*, *Value Filter*, and *Interval Notation* define the compared value as *Filter Value* below.

"LUCY8000" ③ Filter Value:
Define either a valid reference value as a string (in JSON format) without line breaks, or an extended regular expression, a number, or a minimum/maximum interval (*[a;b]*).
Open help for examples.

Set ③ Factory Restore Close ④

- Click on the event (e.g. VaxALPR) s to open the event settings.
- Configure the parameters of the event profile as follows:
 - **Message Name:** Enter the "Message Name" ② according to the event documentation of the corresponding app (see [Examples for message names and filter values of the Vaxtor License Plate Recognition App](#), p. 64)
 - **Message Range:**
 - Local: Default settings for the Vaxtor License Plate Recognition App
 - Global: (MxMessage is forwarded from another MOBOTIX camera in the local network.
 - **Filter Message Content:**
 - **No Filter:** Trigger on any message according to the defined **Message Name**.
 - **JSON Comparison:** Select if filter values are to be defined in JSON format.
 - **Regular Expression:** Select if filter values are to be defined as regular expression.

- **Filter Value:**③ see [Examples for message names and filter values of the Vaxtor License Plate Recognition App](#), p. 64.

CAUTION! “Filter Value” is used to differentiate the MxMessages of an app / bundle. Use this entry to benefit from individual event types of the apps (if available).

Choose “No Filter” if you want to use all incoming MxMessages as generic event of the related app.

5. Click on the **Set**④ to confirm your settings.
6. Click on **Close**⑤ to save your settings permanently.

Examples for message names and filter values of the Vaxtor License Plate Recognition App

	MxMessage-Name	Filter value
Generic Event	VaxALPR	
White list Event	VaxALPR.plate.List	“White list”
Black list Event	VaxALPR.plate.List	“Black list”
Not listed Event	VaxALPR.plate.List	“Not listed”
Unique license plate event	VaxALPR.plate.LicensePlate	License plate code as “STRING”; e.g. “LUCY8000” (compare Meta data transferred within the MxMessageSystem , p. 61)
Incoming Vehicle Event	VaxALPR.custom.direction	“1”
Outgoing Vehicle Event	VaxALPR.custom.direction	“2”

