

# Guideline

## Vaxtor Aircraft Identification Number Recognition App

© 2024 MOBOTIX AG



# Table of Contents

<b>Table of Contents</b>	<b>2</b>
<b>Before You Start</b>	<b>5</b>
Support	6
MOBOTIX Support	6
MOBOTIX eCampus	6
MOBOTIX Community	6
Safety Notes	7
Legal Notes	7
<b>About Vaxtor Aircraft Identification Number Recognition App</b>	<b>9</b>
Smart Data Interface to MxManagementCenter	9
<b>Technical Specifications</b>	<b>10</b>
<b>Licensing Certified Apps</b>	<b>12</b>
License Activation of Certified Apps in MxManagementCenter	12
Managing Licenses in MxManagementCenter	16
<b>Camera, image and scene requirements</b>	<b>19</b>
Recommendations on mounting and adjusting	22
Troubleshooting	22
<b>Activation of the Certified App Interface</b>	<b>23</b>
<b>Configuration of Vaxtor Aircraft Identification Number Recognition App</b>	<b>25</b>
Basic Settings	25
Recognition Areas	26
List Management	27
Video	28
Aircraft Identification Number	29
Environment	30
OCR	32
Reporting	33
Basic Settings	35
Text Overlay	35
MxMessage	36
MOBOTIX HUB Analytic Event	36
MOBOTIX HUB Transaction	36
MOBOTIX SYNC	37
JSON	38
XML	38

---

Milestone Analytic Event .....	39
TCP Client .....	39
TCP Server .....	39
FTP .....	40
Network Optix .....	41
Genetec Security Center .....	42
Variables / Template Fields .....	43
Advanced .....	49
Storing the Configuration .....	50
<b>MxMessageSystem .....</b>	<b>51</b>
What is MxMessageSystem? .....	51
Facts about MxMessages .....	51
<b>MxMessageSystem: Processing the automatically generated app event .....</b>	<b>52</b>
Checking automatically generated app events .....	52
Action handling - Configuration of an Action Group .....	53
Action settings - Configuration of the camera recordings .....	56
<b>Advanced Configuration: Processing the meta data transmitted by apps .....</b>	<b>58</b>
Meta data transferred within the MxMessageSystem .....	58
Creating a Custom Message Event .....	60
Examples for message names and filter values of the Vaxtor Aircraft Identification Number Recognition App .....	62

---





## Before You Start

<b>Support .....</b>	<b>6</b>
<b>Safety Notes .....</b>	<b>7</b>
<b>Legal Notes .....</b>	<b>7</b>

# Support

## MOBOTIX Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates.

Please visit [www.mobotix.com](http://www.mobotix.com) > **Support** > **Help Desk**.



## MOBOTIX eCampus

The MOBOTIX eCampus is a complete e-learning platform. It lets you decide when and where you want to view and process your training seminar content. Simply open the site in your browser and select the desired training seminar.

Please visit [www.mobotix.com/ecampus-mobotix](http://www.mobotix.com/ecampus-mobotix).



## MOBOTIX Community

The MOBOTIX community is another valuable source of information. MOBOTIX staff and other users are sharing their information, and so can you.

Please visit [community.mobotix.com](http://community.mobotix.com).



# Safety Notes

- This camera must be installed by qualified personnel and the installation should conform to all local codes.
- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- Do not replace batteries of the camera. If a battery is replaced by an incorrect type, the battery can explode.
- External power supplies must comply with the Limited Power Source (LPS) requirements and share the same power specifications with the camera.
- When using a power adapter, the power cord shall be connected to a socket-outlet with proper ground connection.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.

# Legal Notes

## Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

## Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on [www.mobotix.com](http://www.mobotix.com) under **Support > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

## RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see [www.mobotix.com](http://www.mobotix.com), **Support > Download Center > Marketing & Documentation > Brochures & Guides > Certificates**).

## Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

## Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply with the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at [www.mobotix.com](http://www.mobotix.com) by clicking on the corresponding link at the bottom of every page.

It is the User's responsibility to comply with all applicable local, state, national and foreign laws, rules, treaties and regulations in connection with the use of the Software and Product, including those related to data privacy, the Health Insurance Portability and Accountability Act of 1996 (HIPPA), international communications and the transmission of technical or personal data.

# About Vaxtor Aircraft Identification Number Recognition App

## Recognition of ICAO- and FAA-issued identification numbers (AIN)

The certified Vaxtor Aircraft Identification Number Recognition App recognizes, based on deep learning processes AIN codes (Aircraft Identification Number) which adhere to the International standard. The OCR engine takes advantage of many current integrations and publishing capabilities that have been developed over many years.

- Recognition of ICAO- and FAA-issued identification numbers
- Identification and tracking in real-time during parking, take-off and landing
- Infrastructure expansion possible without having to interfere with existing air traffic processes and operations
- MOBOTIX events via MxMessageSystem
- Consolidated event search via MxManagementCenter Smart Data Interface and / or MOBOTIX HUB
- meta data transfer through generic transmission protocols and / or pre-defined 3rd party interfaces
- Two lists for individual actions (e.g. access granted/denied, alarm, etc.)

**CAUTION!** Thermal sensors are not supported by this app.

## Smart Data Interface to MxManagementCenter

This app has a Smart Data interface to MxManagementCenter.

With the MOBOTIX Smart Data System, transaction data can be linked to the video recordings made at the time of the transactions. Smart Data source can be e.g. MOBOTIX Certified Apps (no license required) or general Smart Data sources (license required) like POS systems or license plate recognition systems.

The Smart Data System in MxManagementCenter enables you to quickly find and review any suspicious activities. The Smart Data Bar and the Smart Data View are available for searching and analyzing transactions. The Smart Data Bar provides a direct overview of the most recent transactions (from the last 24 hours) and for this reason it is convenient to use it for reviews and searches.

**NOTE!** For information on how to use the Smart Data System, see the corresponding online help of the camera software and MxManagementCenter.

# Technical Specifications

## Product Information

Product Name	Vaxtor Aircraft Identification Number Recognition App
Order Code	Mx-APP-VX-AIN
Supported MOBOTIX Cameras	Mx-M73A, Mx-S74A
Minimum Camera Firmware	v7.3.0.x
MxManagementCenter compatibility	<ul style="list-style-type: none"><li>min. MxMC v2.5.3</li><li>Configuration: Advanced Config license required</li><li>Event Search: Smart Data Interface license included</li></ul>
MOBOTIX HUB compatibility.	<ul style="list-style-type: none"><li>min. MOBOTIX HUB version: 2021 R1</li><li>min. MOBOTIX HUB license level (Analytics Events): L2</li><li>min. MOBOTIX HUB license level for Event Search Plug-In: L4</li></ul>

## Product Features

App Features	<ul style="list-style-type: none"><li>Recognition of ICAO- and FAA-issued identification numbers</li><li>Operations up to a speed of 50 km/h</li><li>Recognition log (Smart Data / Event Search via MxManagementCenter)</li><li>MOBOTIX events via MxMessageSystem</li><li>Two lists for individual actions (e.g. access granted/denied, alarm, etc.)</li><li>Free flow and Signaled mode</li></ul>
Maximum number of recognition areas	1
Maximum number of enrolled AIN codes	5000 per list
Meta Data / Statistic formats	JSON, XML
Trial License	30-day trial license pre-installed

MxMessageSystem supported Yes

Integration Interfaces	<ul style="list-style-type: none"> <li>■ MxMC Smart Data</li> <li>■ IP Notification</li> <li>■ Milestone X-Protect (Analytics Events, Transmission Plug-In)</li> <li>■ Network Optix NxWitness</li> <li>■ MOBOTIX SYNC</li> <li>■ Genetec Security Center (Custom Events, Bookmarks)</li> <li>■ generic 3rd party integration through FTP and / or XML / JSON via HTTP(S)</li> <li>■ compare supported camera's interfaces</li> </ul>
------------------------	---

MOBOTIX Events Yes

ONVIF Events Yes (Generic Message event)

## Supported Aircraft Identification Numbers

Supported Aircraft Identification Numbers ICAO- and FAA-issued identification numbers

## Scene Requirements

Character Height 20px - 50px

Maximum Vertical Angle 30°

Maximum Horizontal Angle < 25°

Maximum Tilt Angle < 25°

## Technical App Specifications

Synchronous / Asynchronous App asynchronous

Simultaneous execution of other apps No

Accuracy min. 99% (considering scene requirements)

Processed frame rate typ. 10 fps

Detection time typ. 300 ms per number

# Licensing Certified Apps

The following licenses are available for the Vaxtor Aircraft Identification Number Recognition App:

- **30-day test license** pre-installed
- **permanent commercial license**

The usage period begins with activation of the app interface (see [Activation of the Certified App Interface](#), p. 23)

**NOTE!** For buying or renewing a license, contact your MOBOTIX Partner.

**NOTE!** Apps are usually pre-installed with the firmware. In rare cases, apps must be downloaded from the website and installed. In this case see [www.mobotix.com](http://www.mobotix.com) > **Support** > **Download Center** > **Marketing & Documentation**, download and install the app.

## License Activation of Certified Apps in MxManagementCenter


After a test period commercial licenses must be activated for use with a valid license key.

### Online-Activation

After receiving the activation IDs, activate them in MxMC as follows:


1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.



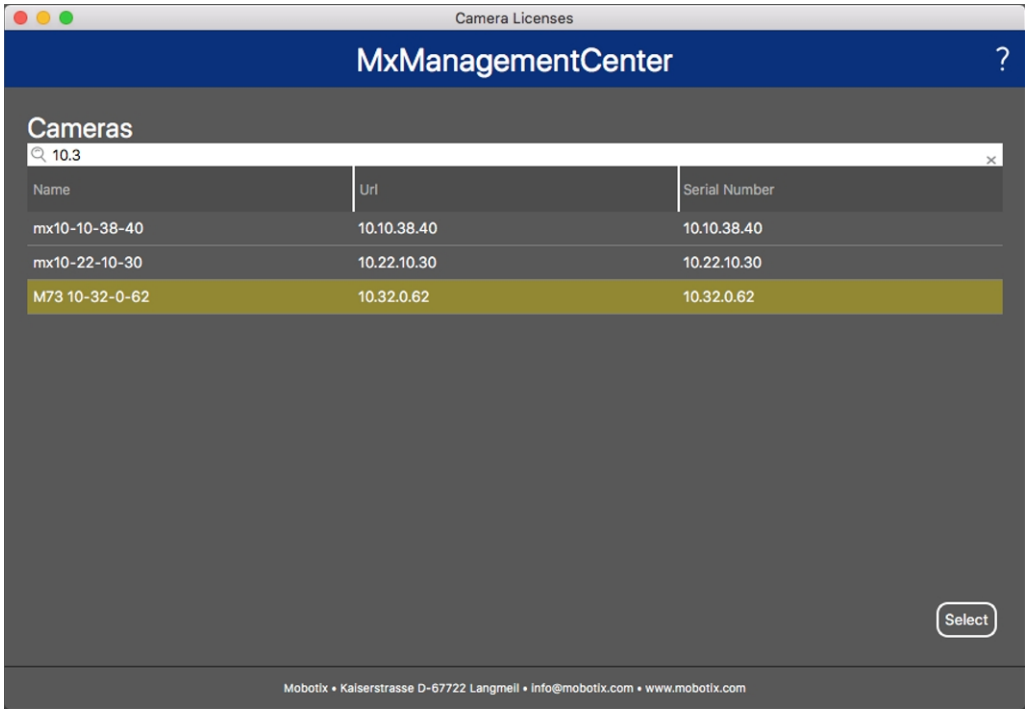



**NOTE!** If necessary, correct the time set on the camera.

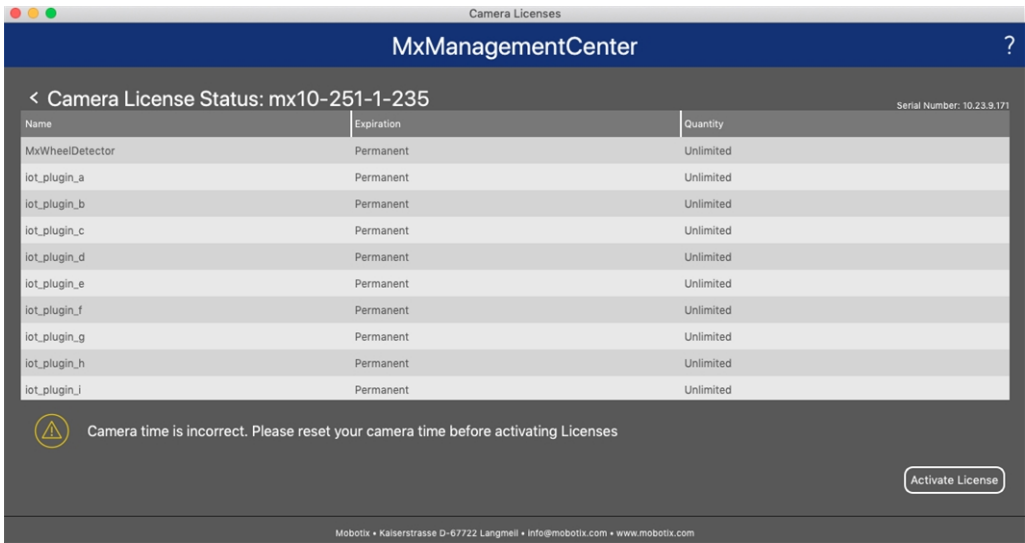
1. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.



**NOTE!** If necessary, correct the time set on the camera.

2. Enter a valid Activation ID and specify the number of licenses to install on this computer.
3. If you want to license another product, click on . In the new row, enter the appropriate Activation ID and the number of licenses you want.
4. To remove a line click .

- When you have entered all Activation IDs, click **Activate License Online**. During activation, **MxMC** connects to the license server. This requires an Internet connection.

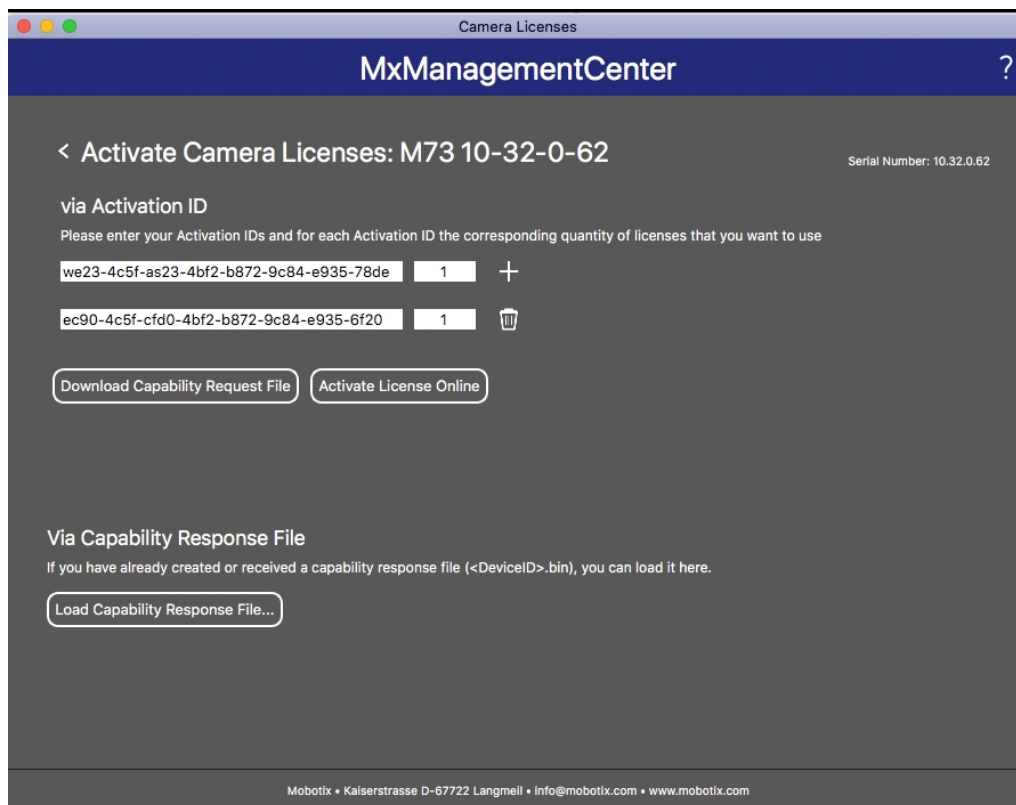

**Fig. 1: Adding licenses**

#### Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.


#### Failed activation (missing internet connection)

If the license server cannot be reached, e.g. due to a missing internet connection, apps can also be activated offline. (see [Offline Activation](#), p. 14).

## Offline Activation


For offline activation, the partner/installer from whom you purchased the licenses can generate a capability response (.bin file) on the license server to activate their licenses.

- Select from the menu **Window > Camera App Licenses**.
- Select the camera on which you want to license apps and click **Select**.

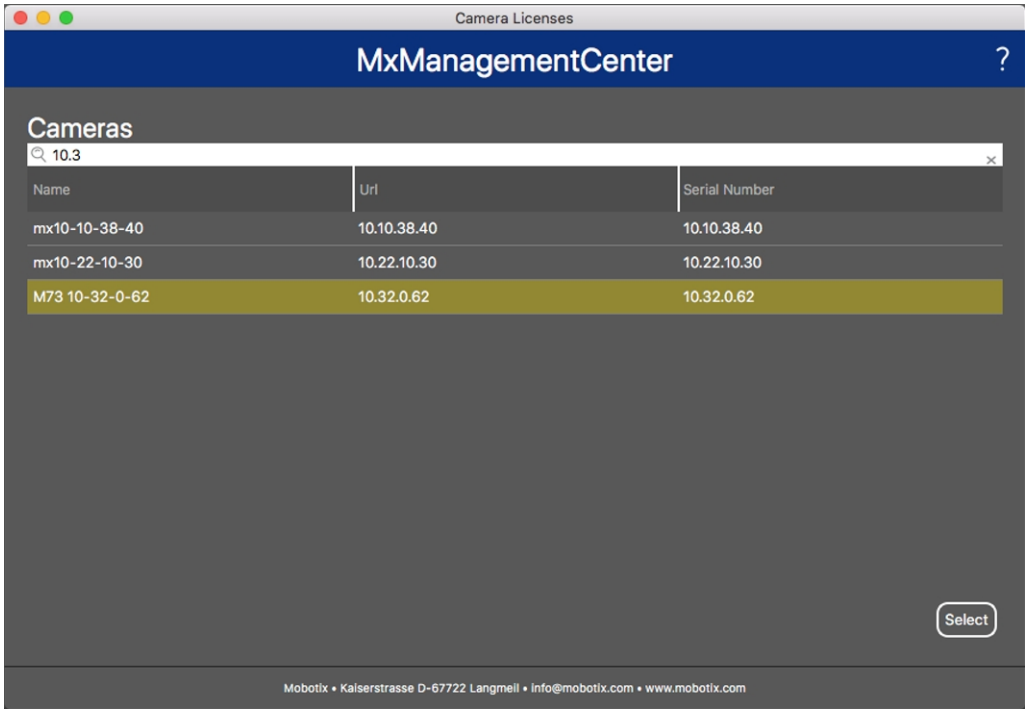

**NOTE!** If necessary, correct the time set on the camera.

3. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

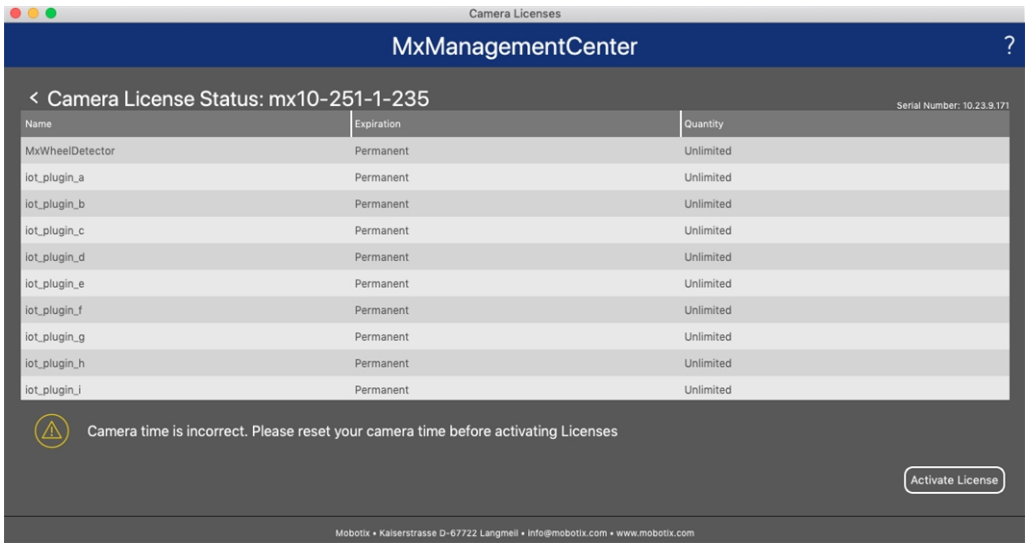


**NOTE!** If necessary, correct the time set on the camera.

4. Enter a valid Activation ID and specify the number of licenses to install on this computer.
5. If you want to license another product, click on . In the new row, enter the appropriate **Activation ID** and the number of licenses you want.

6. If necessary, click  to remove a line.
7. When you have entered all Activation IDs, click **Download Capability Request File (.lic)**, and send it to your partner/installer.

**NOTE!** This file allows the partner / installer from whom you purchased the licenses to generate a capability response file (.bin ) on the license server.

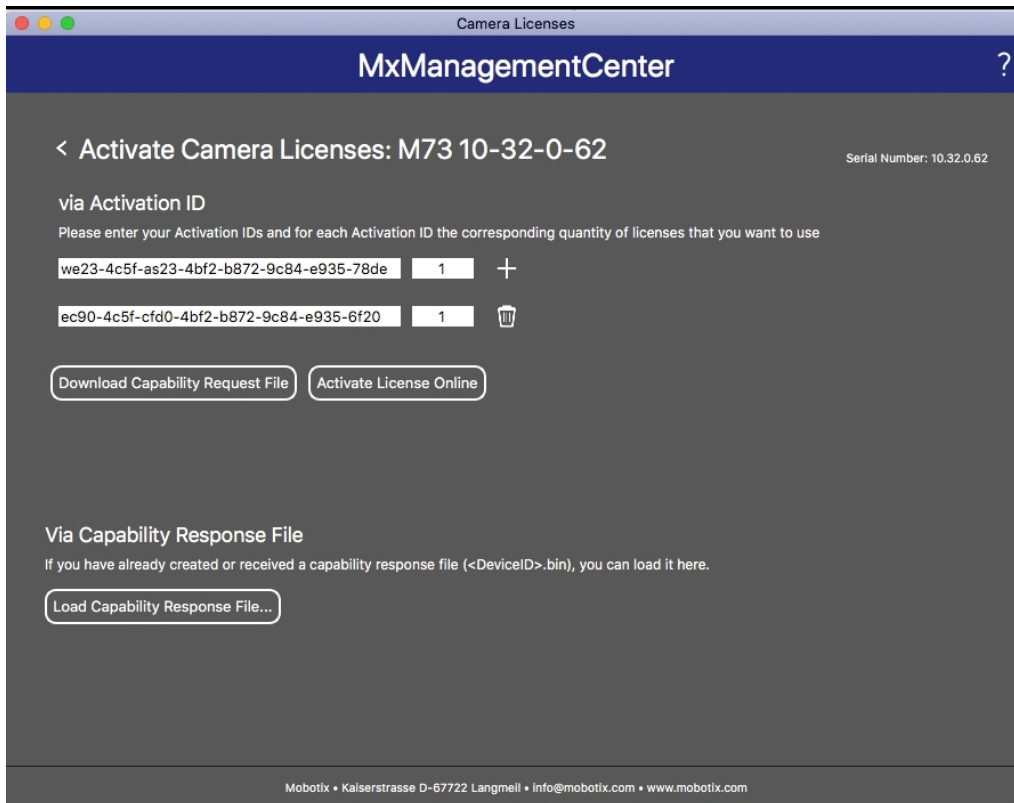

Camera Licenses

## MxManagementCenter

< Activate Camera Licenses: M73 10-32-0-62 Serial Number: 10.32.0.62

via Activation ID

Please enter your Activation IDs and for each Activation ID the corresponding quantity of licenses that you want to use

we23-4c5f-as23-4bf2-b872-9c84-e935-78de	1	+
ec90-4c5f-cfd0-4bf2-b872-9c84-e935-6f20	1	🗑

Download Capability Request File Activate License Online

Via Capability Response File

If you have already created or received a capability response file (<DeviceID>.bin), you can load it here.

Load Capability Response File...

Mobotix • Kaiserstrasse D-67722 Langmeil • info@mobotix.com • www.mobotix.com

8. Click Load Capability Response File and follow the instructions.


### Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.


## Managing Licenses in MxManagementCenter

In MxManagementCenter you can comfortably manage all licenses that have been activated for a camera.

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

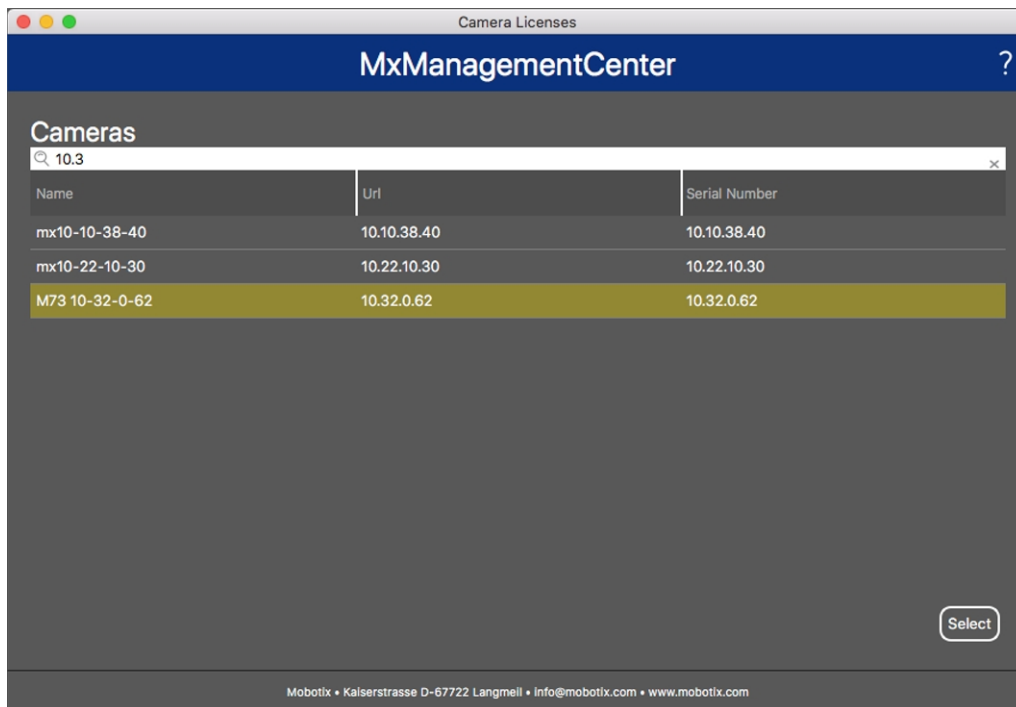

An overview of the licenses installed on the camera may be displayed.

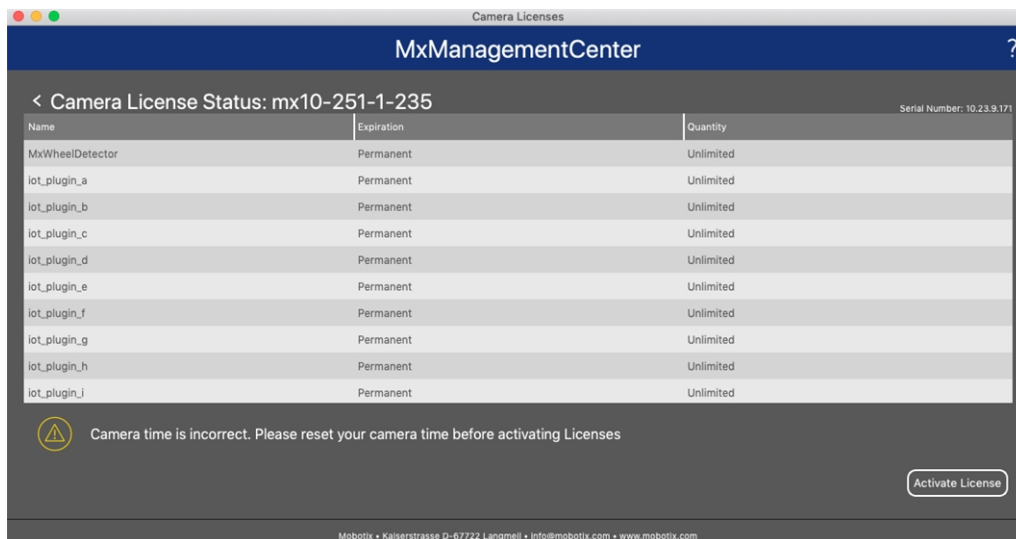

**NOTE!** If necessary, correct the time set on the camera.

Column	Explanation
Name	Name of the licensed app
Expiration	the time limit of the license

Column	Explanation
Quantity	Number of licenses purchased for a product.
Serial Number	Unique identification determined by MxMC for the device used. If problems occur during licensing, please have the device ID ready.

---

**Synchronize licenses with server**

When the program starts, there is no automatic comparison of the licenses between the computer and the license server. Therefore, click **Update** to reload the licenses from the server.

**Update licenses**

To update temporary licenses, click **Activate Licenses**. The dialog for updating/activating licenses opens.

**NOTE!** You need administrator rights to synchronize and update licenses.

# Camera, image and scene requirements

The camera should be setup so that the combination of the distance, the lens's focal length and the camera's resolution provide an image that can be accurately analyzed by the OCR engine. Therefore the following pre-requisites must be fulfilled for the scene:

## Quality of the AIN code to be captured in the image

- The AIN code must be high-contrast and clearly legible, i.e. as clean as possible, without dents or holes and well illuminated.
- The code must comply with the AIN standard
- Character height
  - To reliably recognize the code in the best possible quality, the height of the characters in the image must be between 20 px and 50 px.

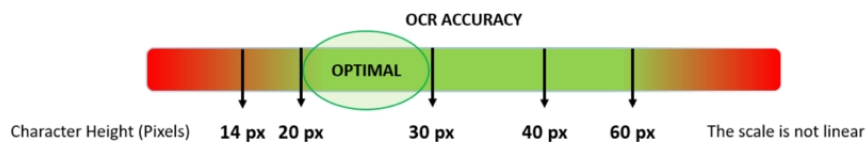


Fig. 2: Minimum character height

- Maximum rotation angle:
  - Vertical:  $< 25^\circ$
  - Slope:  $< 15^\circ$
  - Horizontal:  $< 25^\circ$

## Example of clearly recognizable AIN code



Fig. 3: Correct angle minimizes the risk of false recognition

## Frame rate

The selection of the correct frame rate influences the recognition quality significantly.

**Recommended frame rate:** 10 fps

## Shutter Speed (Exposure time)

Shutter speed, also known as the “exposure time”, is the length of time a camera shutter is open for in order to expose light onto the camera sensor. The shutter speed is measured in seconds, or fractions of a second. The bigger the denominator, the faster the speed. For example, 1/250<sup>th</sup> means one two-hundred-and-fiftieth of a second or four milliseconds.

*(1 second = 1000 milliseconds)*

### Examples for recommended exposure times

Airplane speed	minimum exposure time (sec)
Stationary	1/125 <sup>th</sup> (8 milliseconds)
Very slow	1/500 <sup>th</sup> (2 milliseconds)
Slow	1/1000 <sup>th</sup> (1 milliseconds)



**NOTE!** AIN codes are always read perpendicular to the camera and across the field of view, so that higher shutter speeds are required than, for example, for vehicles moving towards the camera. Fast-moving air-planes can therefore not be read.

## Resolution

The resolution of the camera determines the amount of detail that can be captured. The smaller the object detail, the higher the resolution that is required. There are several factors that determine the detail captured:

- The resolution (pixel size) of the camera sensor. This sensor (normally CMOS) where the light eventually falls and a typical IP camera has a sensor resolution of 2 or 4 Megapixels.
- The resolution of the camera's electronics. Most CCTV cameras can support a minimum of 1920 x 1080 – but may be set to a lower resolution if not needed.
- The quality and focal length of the lens. The quality of the optics can play a part in challenging circumstances. The focal length (zoom factor) determines the field of view that can be seen.
- The quality of the images can be influenced by factors such as the type of lighting used.

**Recommended resolution:** max. 1920 x 1080 px

## Focal length

The focal length of the lens determines how “zoomed in” the image is. It is usually expressed in millimeters (e.g., 6 mm, 25 mm, or 50 mm).

The focal length defines the angle of view (how much of the scene will be captured) and the magnification (how large individual elements will be). The longer the focal length, the narrower the angle of view and the higher the magnification. The shorter the focal length, the wider the angle of view and the lower the magnification.

In the case of zoom lenses, both the minimum and maximum focal lengths are stated, for example 10–40 mm.

**NOTE!** The lens should be **IR corrected** to avoid out of focus images. IR Corrected lenses should be used on both day/night and monochrome cameras in all lighting conditions in order to achieve a crisp sharp image.

## Illumination

AIN Codes are normally painted on to the wagons and are not reflective. Therefore sufficient ambient lighting must be used to adequately illuminate the text so that it can be read at a reasonably fast shutter speed without the camera adding too much gain to brighten the image. (a maximum gain of about 12 is advised).

**NOTE!** Adding gain effectively amplifies the video signal, including any noise which can result in a very grainy image which is prone to OCR errors.

## Recommendations on mounting and adjusting

- Depth of focus is a very important parameter. If you are using a camera with a CS-mount lens, use a fixed lens. Fixed lens are better for container code recognition due to greater depth of focus. Megapixel lens is also strongly recommended.
- Respect changing light conditions (e.g. due to sunrises and sunset) when choosing the place of mounting. Direct sunlight beams can distort a picture. If the code is facing a direct sunlight consider using a lens with auto iris mode.
- If mounting a camera on a roadside or trackside pole check how the pole reacts to heavy cars or a convoy of cars. Some poles have tangible tremor, this could make container code recognition almost impossible.
- It is recommended to turn down WDR and BLC. In most cases, they will make the picture more pretty, but at the cost of smudging details like an edges of letters in the container code. For the same reason keep digital noise reduction as low as possible.
- On certain rare conditions there may be a cases of false detections e.g. because of recognizing image parts that structurally or semantically look similar to a container code(e.g. fences or ads). To minimize this:
  - Adjust the region of interest accordingly. It may be a good idea to make it smaller, or change it's shape, omitting the parts, which potentially may be false detected.
  - There may be cases, when the best performance will occur by changing angle of lens or moving the camera. In some cases, shooting a front container code is better.

## Troubleshooting

Correct OCR-based reading of codes printed on rail wagons is difficult or impossible if the captured images have any of the following characteristics:

- Over- or under exposed
- Blurred or distorted
- Unevenly lit
- Acute camera angle
- Low contrast
- Damaged or badly painted text
- Bad weather conditions like fog, snow or heavy rain

# Activation of the Certified App Interface

**CAUTION!** The Vaxtor Aircraft Identification Number Recognition App does not consider obscure areas defined for the live image. Therefore there is no pixelation in obscure areas while configuring the app and during image analysis by the app.

**NOTE!** The user must have access to the setup menu ([http\(s\)://<camera IP address>/control](http(s)://<camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<camera IP address>/control/app\\_config](http(s)://<camera IP address>/control/app_config)).

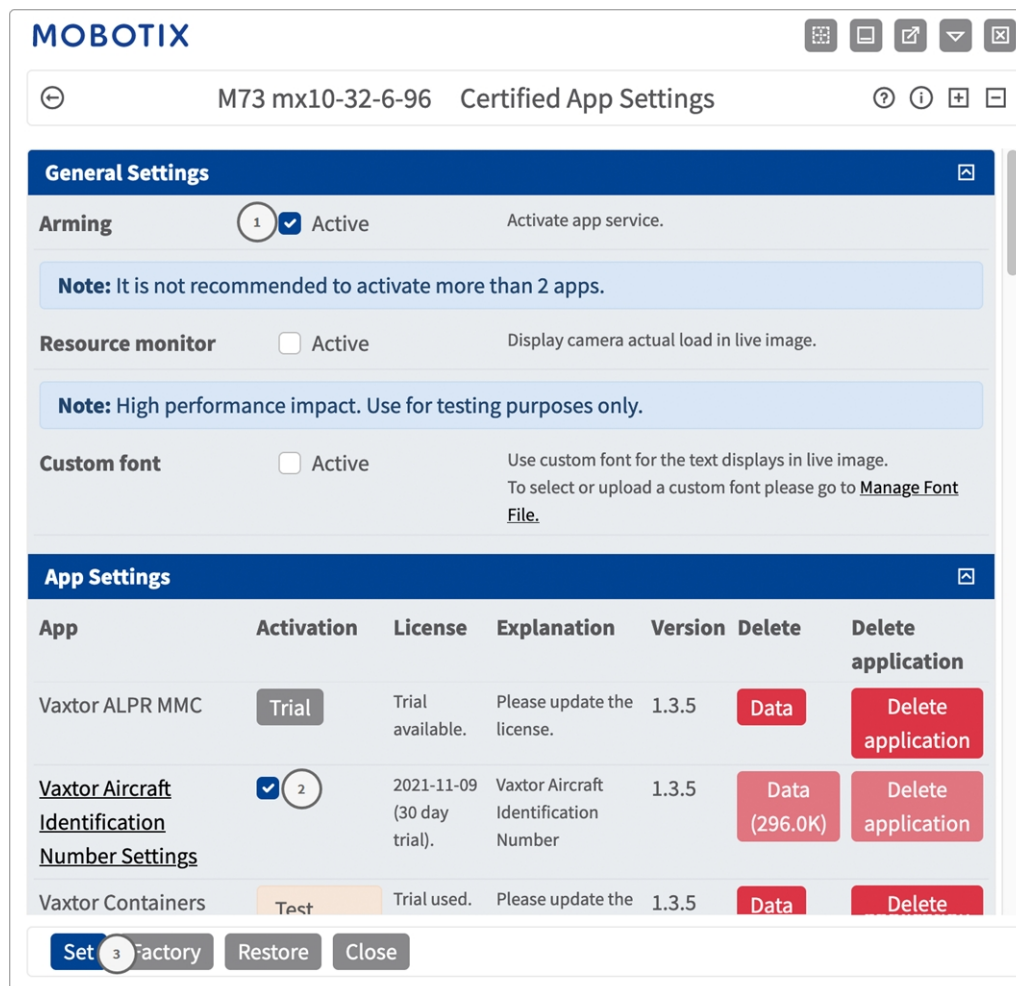


Fig. 4: Activation of Certified Apps

2. Under **General Settings** activate the **Arming** ① of the app service.
3. Under **App Settings** check the **Active** option ② and click **Set** ③ .
4. Click on the name of the App to be configured to open the Apps user interface.

5. For configuration of the App see [Configuration of Vaxtor Aircraft Identification Number Recognition App](#), S. 1.

# Configuration of Vaxtor Aircraft Identification Number Recognition App

**NOTE!** For best performance and results in AIN code processing make sure to have scene set up to meet the [Camera, image and scene requirements](#).

**NOTE!** The user must have access to the setup menu ([http\(s\)://<camera IP address>/control](http(s)://<camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<camera IP address>/control/app\\_config](http(s)://<camera IP address>/control/app_config)).
2. Click on the name of the **Vaxtor Aircraft Identification Number Recognition App**.

The configuration window of the app appears with the following options:

## Basic Settings

The following configurations should be taken into account:

The screenshot shows the 'Vaxtor Aircraft Identification Number Settings' window. At the top, the MOBOTIX logo is on the left, and a row of icons (grid, window, share, dropdown, close) is on the right. Below the logo, the camera ID 'M73 mx10-32-6-96' is displayed. The title bar of the settings window reads 'Vaxtor Aircraft Identification Number Settings'. The main content area is titled 'Vaxtor Aircraft Identification Number' and contains three settings: 'Working Mode' set to 'Freeflow' with a dropdown arrow, 'Enable MxMessage' checked, and 'Enable Overlay' checked. To the right of these settings are descriptive text blocks: 'Signaled: The application will only attempt to read an aircraft identification number when the signal is activated. Freeflow: The application continuously captures aircraft identification numbers.', 'Send a mxmessage when an aircraft identification number is read', and 'Display an overlay on all the sensors when an aircraft identification number is read'. At the bottom, there is a 'Recognition Areas' section with a checkbox and a row of four buttons: 'Set', 'Factory', 'Restore', and 'Close'.

Vaxtor Aircraft Identification Number	
<b>Working Mode</b>	Freeflow
<b>Enable MxMessage</b>	<input checked="" type="checkbox"/>
<b>Enable Overlay</b>	<input checked="" type="checkbox"/>
<b>Recognition Areas</b>	

Set Factory Restore Close

**Working mode:** The following modes are available:

**Free flow:** The application continuously captures AIN codes.

**Signaled:** The application will only attempt to read an AIN code when a signal is triggered accordingly.

**NOTE!** In signaled mode an signal ID will be sent with the signal event.

**Enable MxMessage:** Check to enable the processing of AIN code events in the MxMessageSystem..

**Enable Overlay:** Check to enable the display of the AIN code recognition result in the live view.

## Recognition Areas

A Recognition Area is an area within the video frame where the OCR analytics takes place. You can draw a polygon and choose whether the area to look for plates in Inside or Outside this region. You can set multiple areas to respect complex situations.

**NOTE!** Using Recognition Areas can decrease OCR processing time and also reduce false positives. The whole AIN code must be in or out the Recognition Area to pass the test.

⊖

M73 mx10-32-6-96 Vaxtor USDOT Settings

ⓘ ⓘ ⛶ ⌵

Recognition Areas

Recognition Area Type

inclusion

⌵

Recognition Area Type. Inclusion: only the usdots inside the recognition area will be detected. Exclusion: only the usdots outside the recognition area will be detected

Show Recognition Area

☐

Show the recognition area on the USDOT sensor

Edit Recognition Area

Position

599 x 275

Size

265 x 388

Edit Rectangle

🗑️ 2

⛶ 1

Define multiple detection zones as a rectangle. To do this, press the "Edit Rectangle" button. You can draw a rectangle in the camera image with the mouse. The corners are moved using the large handles.

**Recognition Area Type:** Check to activate the sending of events according to the following configuration

**Inclusion:** only the plates inside the recognition area will be detected.

**Exclusion:** only the plates outside the recognition area will be detected.

**Show Recognition Area:** Check to display the recognition area in the camera image.

**Edit Recognition Area:** Click the **plus** icon ① to define a new recognition area. The following options are available:

**ID:** Enter or select a unique value to identify the recognition area

**Position:** The coordinates of the upper right corner point of the rectangular recognition area.

**Size:** The size in pixels of the rectangular recognition area.

**Edit Rectangle:** Click to switch into the Live View, where you can draw a recognition area.

**Delete:** Click the **bin** icon ② to delete the recognition area.

### Drawing a Recognition Area in the Live View


In the live view simply click and drag a rectangular recognition area.

Drag the corner points to refine the recognition area.

In the top right corner of the live view click **Submit** to adopt the coordinates of the rectangle.

## List Management

You can define a black list and a white list with up to 1000 AIN codes per list. If an AIN code from one of the lists is recognized, a corresponding event is sent within the MxMessageSystem of the camera.

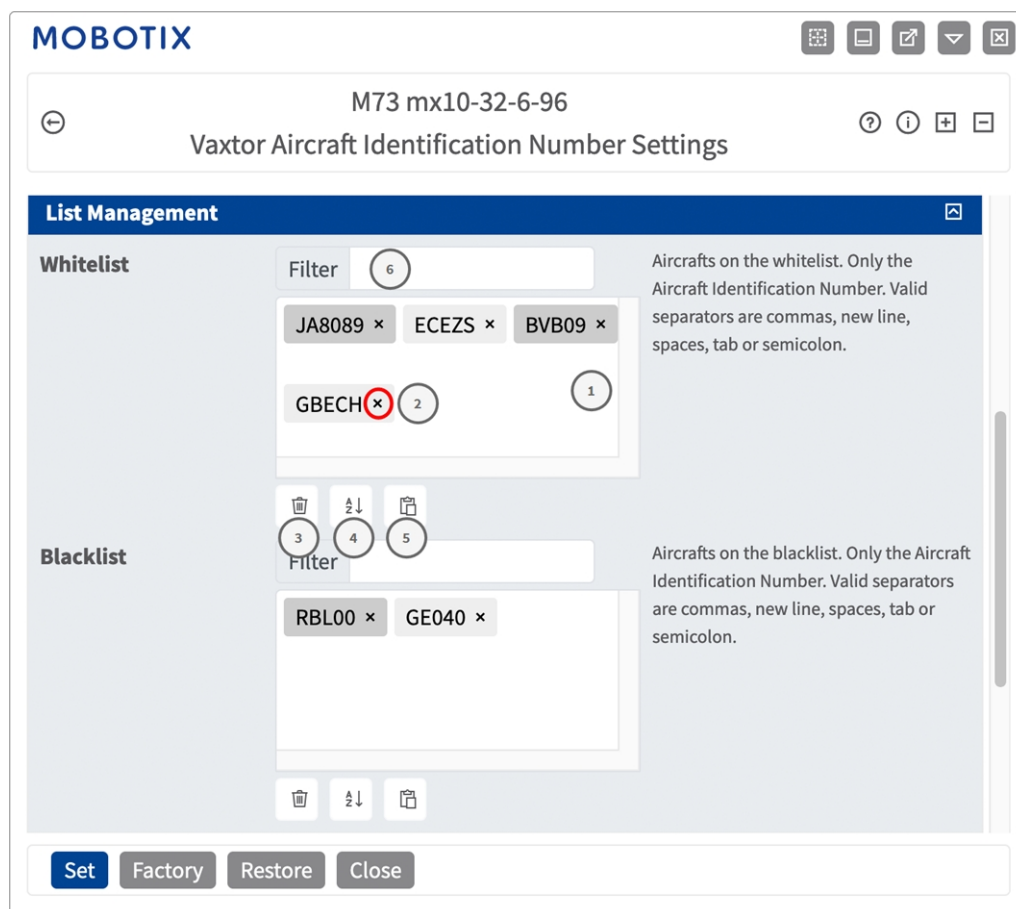

#### Adding an AIN code to a list

1. Enter the AIN code text into the text field ① and click **Enter**.

#### Adding multiple AIN codes from a text file

1. Make sure that your text file contains one license plate per line.
2. Copy the relevant codes from the text file and paste them into the text field ① .

#### Deleting an AIN code from a list

1. Click on the small **x**② to the right of the AIN code.

#### Deleting all codes from a list

1. Click the trash icon ③ .

#### Sorting all AIN codes from a list alphabetically

1. Click the sort icon ④ .

#### Copy all codes from a list to the clip board

1. Click the copy to clipboard icon ⑤ .

#### Filtering AIN codes

1. Enter the AIN code or parts of it into the filter text field ⑥ . Only codes containing the filter text are displayed accordingly

## Video

In the video tab you can specify video quality of the video to be analyzed.



**MOBOTIX**

M73 mx10-32-6-96

Vaxtor Aircraft Identification Number Settings

**Video**

**OCR Sensor** Right sensor Sensor used to recognize aircraft identification numbers

**Overview Sensor** None Sensor used to capture overview images when an aircraft identification number is detected

**Resolution** 1920x1080 Working resolution. Adjust the resolution and the camera zoom to capture the aircraft identification numbers on the optimum range. Changing this option will require a camera reboot

**Minimum Character Height** 20 Minimum character height in pixels (14-70). Tip: optimal reading size is 25 pixels height

**Maximum Character Height** 42 Maximum character height in pixels (14-70). Tip: optimal reading size is 25 pixels height

Set Factory Restore Close

**OCR sensor:** Select the camera sensor to be used for AIN code recognition.

**NOTE!** Changing this option requires a camera reboot.

**Overview Sensor:** Optionally select a sensor used to capture overview images when an AIN code is detected.

**Resolution:** Set the working resolution (current maximum is 1080p). Adjust the resolution and the camera zoom to capture the codes on the optimum range.

**NOTE!** Changing this option requires a camera reboot.

**Minimum Character Height:** the minimum height that an AIN code's characters should be before being read. The characters should be about 20-30 pixels high.

**Maximum Character Height:** the maximum height is about 20-30 pixels.

**NOTE!** The recommended difference between the min and max heights is about 10 pixels.

## Aircraft Identification Number

Here you can specify the length of the AIN codes to be captured

MOBOTIX

M73 mx10-32-6-96

Vaxtor Aircraft Identification Number Settings

Aircraft Identification Number

Minimum Aircraft Identification Number Characters

5

Minimum number of characters that the aircraft identification number have (4-12)

Maximum Aircraft Identification Number Characters

9

Maximum number of characters that the aircraft identification number have (4-12)

Set

Factory

Restore

Close

**Minimum Aircraft Identification Number Characters:** Minimum number of characters that the aircraft identification number has (2-16).

**Maximum Aircraft Identification Number Characters:** Maximum number of characters that the aircraft identification number has (2-16).

# Environment

Here you can adjust the settings that are significantly influenced by the environmental conditions.

MOBOTIX

M73 mx10-32-6-96

Vaxtor Aircraft Identification Number Settings

Environment

Same Aircraft Identification Number Delay

60

Minimum elapsed time to report the same aircraft identification number twice (seconds)

Same Aircraft Identification Number Character Distance

2

Maximum difference between two aircraft identification numbers to be considered as the same (Levenshtein distance)

Maximum Slope Angle

20

Aircraft identification number maximum slope angle (0-30)

Maximum Recognition Period

500

Maximum time the OCR can spend reading one or more times the same aircraft identification number (multiple samples) until making its final decision (ms)

Minimum Aircraft Identification Number Occurrences

1

Minimum number of times the aircraft identification number should be read within the "Max Recognition Period"

Maximum Aircraft Identification Number Occurrences

5

Maximum number of times the aircraft identification number should be read within the "Max Recognition Period". If the OCR reaches this number before the maximum recognition period expires, it will force out the aircraft identification number result

Reported Image

First

Define which image from the pool is returned with the metadata

Set

Factory

Restore

Close

**Same Aircraft Identification Number Delay:** Minimum elapsed time in seconds to report the same AIN twice. This is to prevent multiple reporting of the same plate in situations when the traffic is slow or stationary.

**Example:** If an aircraft stops and the AIN is reported but the aircraft doesn't move for 30 seconds, then this delay should be set to say 60 seconds or more to prevent a duplicate read.

**NOTE!** When using triggered mode, it is recommended that you set the delay to 0 seconds.

**Same Aircraft Identification Number Character Distance:** Set the number of characters that two readings of the same AIN must differ by to be considered different. The camera is capable of reading a AIN several times as it passes through the field of view. If one character is misread on one of the reads, then by setting this value to 2 then both reads will contribute towards the reported AIN text.

**Maximum Slope Angle:** Set the angle of slope of an AIN that the engine should attempt to read up to (0-30°).

**Maximum Recognition Period:** Maximum time the OCR can spend reading one or more times the same AIN (multiple samples) until making its final decision (ms).

31 / 63

**Minimum Aircraft Identification Number Occurrences:** Minimum number of times the AIN should be read within the "Max Recognition Period" before being reported.

**Maximum Aircraft Identification Number Occurrences:** Set the maximum number of times that an AIN should be read before being reported (this may happen before the timeout).

**Reported Image:** Define which image from the pool is returned with the meta data. An AIN is normally read several times as it passes through the camera’s field of view. You may want to use the largest (last) image for oncoming aircrafts and the first image for aircrafts moving away from the camera.

# OCR

In the OCR (Optical Character Recognition) tab you can set parameters to ensure the best possible recognition results.

OCR

Minimum Global Confidence

80

Minimum global confidence 1-100, plates under this confidence will be discarded

Minimum Character Confidence

70

Minimum character confidence 1-100, characters under this confidence will be discarded

Analytics Complexity

Medium

Tip: Set low if you’re losing plates because lack of performance, Medium: default/normal scenario conditions, High: low quality video

Plate Finder Extra

☒

Enhances plate finding algorithms for difficult scenarios

**Minimum Global Confidence:** Set the minimum confidence level that the whole AIN read must meet in order to be accepted. The global confidence is the average of all individual characters’ confidences. The recommended value is 70. Set lower if you see some plates in very bad condition but want to read them.

**NOTE!** Setting the Minimum Global Confidence too low will cause the OCR engine attempt to read other items such as vehicle signage etc.

**Minimum character Confidence:** Set the minimum confidence level that a single character must meet in order to be accepted. The recommended value is 50.

**NOTE!** Higher values mean a lower probability of false positives and a lower probability of missing AIN.

**Analytics Complexity:** This is the complexity of the analytics to be applied during the ALPR Engine's stage of plate reading. Set this according to the OCR mode and type of traffic expected. There are three options.

**Low:** Recommended for very fast moving aircrafts where the OCR needs to work faster and your preference is for AIN detection over perfect recognition.

**Medium (Default)** Recommended when the OCR mode is set to free-flow.

**High:** Recommended when the OCR mode is set to signal (triggered).

**CAUTION!** Higher complexities give more accurate reading but make the ALPR engine run slower.

**Plate Finder Extra:** This is the complexity of the analytics to be applied during the ALPR Engine's stage of AIN finding. Set this to one of the following three values:

**Low:** apply up to 3 levels

**Medium:** apply up to 8 levels


**High:** apply up to 12 levels

**CAUTION!** Higher complexities give more accurate reading but make the ALPR engine run slower.

## Reporting

Vaxtor Aircraft Identification Number Recognition App is able to output all plate reads in real time using a variety of standard protocols so that the plate reads can be accepted remotely by a variety of programs including MOBOTIXSYNC, which can accept and store plate reads in real time from hundreds cameras.

By selecting one of the listed protocols, a sub-menu will appear with fields for setting up parameters such as remote IP addresses etc.

Reporting

Retry Notifications

☐

Retry failed notifications (MOBOTIX SYNC and JSON only)

Send Test

☐

Send a fake read (TEST) when settings are stored or when the camera is started

Text Overlay

MxMessage

MOBOTIX HUB Analytic Event

Enable

☐

Enable MOBOTIX HUB Analytic Event reporting

MOBOTIX HUB Transaction

Enable

☐

Enable MOBOTIX HUB Transaction reporting

MOBOTIX SYNC

Enable

☐

Send all results to the configured MOBOTIX SYNC server

JSON

Enable

☐

Enable JSON HTTP/HTTPS POST reporting

XML

Enable

☐

Enable XML HTTP/HTTPS POST reporting

Milestone Analytic Event

Enable

☐

Enable analytic event reporting

TCP Client

Enable

☐

Enable TCP client reporting

TCP Server

Enable

☐

Enable TCP server reporting

FTP

Enable

☐

Enable FTP reporting

Network Optix

Enable

☐

Enable Network Optix reporting

Genetec Security Center

Enable

☐

Enable Genetec reporting

Genetec LPR Plugin

Enable

☐

Enable Genetec LPR Plugin reporting

UTMC

Enable

☐

Enable UTMC reporting

## Basic Settings

Reporting		
Retry Notifications	<input checked="" type="checkbox"/>	Retry failed notifications (MOBOTIX SYNC and JSON only)
Retry Period	1	Amount of seconds between notification retries
Send Test	<input type="checkbox"/>	Send a fake read (TEST) when settings are stored or when the camera is started

**Retry notifications:** Check to retry failed notifications (MOBOTIX SYNC and JSON only).

**Retry period:** Amount of seconds between notification retries.

**Send test:** Check to send a fake read (TEST) when settings are stored or when the camera is started.

## Text Overlay

Text Overlay		
Overlay Template	\$date\$ - \$plateutf8\$	Template to use on the overlay, check the manual for available keywords
Fade out timer	0	Amount of seconds that the overlay will be visible or 0 to make it perpetual
Show plate image	<input type="checkbox"/>	Display a small image with the plate number detected
Image position (x)	5	Coordinate position for the image (x)
Image position (y)	50	Coordinate position for the image (y)

### Text Overlay

**Overlay Template:** Define template to use on the overlay. Check the [Variables / Template fields](#) / [Template Fields](#), p. 43 for available keywords.

**Fade out timer:** Set the amount of seconds that the overlay will be visible or 0 to make it perpetual.

**Show plate image:** Check to display a small image with the container code detected.

**Image position (x):** x coordinate position for the image.

**Image position (y):** y coordinate position for the image.

## MxMessage

<b>MxMessage</b>		
<b>MxMessage Template</b>	<input "="" type="text" value='{"area": "\$roidid\$", "direction": "\$direct'/>	Defines the template of customized part of the MxMessage. Check the manual for available keywords
<b>Subpath</b>	<input type="text"/>	

### MxMessage

**MxMessage Template:** Define template of customized part of the MxMessage. [Check the Variables / Template fieldsVariables / Template Fields, p. 43](#) for available keywords.

**Subpath:** Define a subpath for the MxMessage. Check the [Variables / Template fieldsVariables / Template Fields, p. 43](#) for available keywords.

## MOBOTIX HUB Analytic Event

<b>MOBOTIX HUB Analytic Event</b>		
<b>Enable</b>	<input checked="" type="checkbox"/>	Enable MOBOTIX HUB Analytic Event reporting
<b>URL</b>	<input type="text" value="http://mobotixhubserver.com:9090/"/>	Destination URL
<b>Camera name</b>	<input type="text" value="10.X.X.X"/>	Camera name or IP address as defined in MOBOTIX HUB

**MOBOTIX HUB Analytic Event:** With the Analytics Events feature it is possible to send MAD (Milestone Alert Data) formatted alerts to the MOBOTIX HUB event server over TCP/IP.

**Enable:** Check to enable and configure MOBOTIX HUB Analytic Event reporting.

**URL:** Enter the corresponding MOBOTIX HUB Server URL (e.g. <http://mobotixhubserver.com:9090/>)

**Camera name:** Enter the camera name or IP address of this camera as defined in MOBOTIX HUB.

## MOBOTIX HUB Transaction

<b>MOBOTIX HUB Transaction</b>		
<b>Enable</b>	<input checked="" type="checkbox"/>	Enable MOBOTIX HUB Transaction reporting
<b>Port</b>	<input type="text" value="30001"/>	MOBOTIX HUB Server TCP Port
<b>Template</b>	<input type="text" value="@ \$plateutf8\$@"/>	Template to use on the message, check the manual for available keywords



**MOBOTIX HUB Transaction:** With the Analytics Events feature it is possible to send transaction data to a MOBOTIX HUB server over TCP/IP port.

**Enable:** Check to enable and configure MOBOTIX HUB Transaction reporting.

**Port:** MOBOTIX HUB Server TCP Port.

**Template:** Template used when reporting. Check the [Variables / Template fields](#) [Variables / Template Fields](#), p. 43 for available keywords.

## MOBOTIX SYNC

**NOTE!** The options in this section also apply to Vaxtor Helix servers.

MOBOTIX SYNC		
Enable	<input checked="" type="checkbox"/>	Send all results to the configured MOBOTIX SYNC server
URL	<input type="text"/>	MOBOTIX SYNC full URL address (https://mysync.server.com/sync)
API Key	<input type="text"/>	MOBOTIX SYNC API Key
Heartbeat	<input type="text" value="300"/>	Heartbeat timer in seconds (10 - 300) or 0 if heartbeat is disabled
Camera ID	<input type="text" value="1"/>	MOBOTIX SYNC camera ID assigned to this camera
Overview Camera ID	<input type="text" value="0"/>	MOBOTIX SYNC overview camera ID assigned to this camera (0 if none)
Sync lists	<input type="text" value="0"/>	Synchronize lists with MOBOTIX SYNC server

**MOBOTIX SYNC:** MOBOTIX SYNC protocol is an encrypted version of the Vaxtor protocol.

**Enable:** Check to enable and configure the reporting to a MOBOTIX SYNC server.

**URL:** Enter the full URL of your configured MOBOTIX SYNC server using this syntax https://<ip\_or\_server\_name>/sync). When reporting to a Vaxtor Helix server, enter https://<ip\_or\_server\_name>/helix6.

**API Key:** Enter the MOBOTIX SYNC (or Helix) API key generated from your server application.

**Heartbeat:** Sends a heartbeat every x seconds to the specified server (enter 0 to disable).

**Camera ID:** Enter MOBOTIX SYNC (or Helix) camera ID assigned to this particular camera.

**Overview Camera ID:** Enter the MOBOTIX SYNC (or Helix) overview camera ID assigned to this particular camera (set to 0 if none).

**Sync lists:** Synchronizes the lists with the MOBOTIX SYNC (or Helix) server.

# JSON

JSON

Enable	<input checked="" type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
URL	<input type="text" value="https://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="password"/>	Password to use on the authentication. Blank if none.
JSON Template	<input "="" type="text" value='{"plate":"\$plate\$", "date":"\$date\$", "ir'/>	Template to use on the message, check the manual for available keywords

**JSON :** JSON is a compact data format in an easy-to-read text form for data exchange between applications.

**Enable:**Check to enable and configure JSON HTTP/HTTPS POST reporting.

**URL:** Enter the destination URL (e.g., 3rd party server) where the generated meta data should be sent to.

**Username:** Username to be used for authentication (leave blank if no authentication is used).

**Password:** Password to be used for authentication (leave blank if no authentication is used).

**JSON Template:** Defines the content / scheme of the transmitted JSON notification. Check the [Variables / Template fieldsVariables / Template Fields, p. 43](#) for available keywords.

# XML

JSON

Enable	<input checked="" type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
URL	<input type="text" value="https://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="password"/>	Password to use on the authentication. Blank if none.
JSON Template	<input "="" type="text" value='{"plate":"\$plate\$", "date":"\$date\$", "ir'/>	Template to use on the message, check the manual for available keywords

**XML :** XML is a compact data format in an easy-to-read text form for data exchange between applications.

**Enable:** Check to enable and configure XML HTTP/HTTPS POST reporting.

**URL:** Enter the destination URL (e.g., 3rd party server) where the generated meta data should be sent to.

**Username:** Username to be used for authentication (leave blank if no authentication is used).

**Password:** Password to be used for authentication (leave blank if no authentication is used).

**XML Template:** Defines the content / scheme of the transmitted XML notification. Check the [Variables / Template fieldsVariables / Template Fields, p. 43](#) for available keywords.

## Milestone Analytic Event

Milestone Analytic Event		
Enable	<input checked="" type="checkbox"/>	Enable analytic event reporting
URL	<input type="text" value="http://milestoneserver.com:9090/"/>	Destination URL
Camera name	<input type="text" value="10.X.X.X"/>	Camera name or IP address as defined in Milestone

**Milestone Analytic Event:** With the Analytics Events feature it is possible to send MAD (Milestone Alert Data) formatted alerts to the Milestone event server over TCP/IP

**Enable:** Check to enable and configure MOBOTIX HUB Analytic Event reporting.

**URL:** Enter the corresponding Milestone Server URL (e.g. <http://milestoneserver.com:9090/>)

**Camera name:** Enter the camera name or IP address of this camera as defined in Milestone.

## TCP Client

TCP Client		
Enable	<input checked="" type="checkbox"/>	Enable TCP client reporting
Server IP	<input type="text"/>	Server IP to which the messages are going to be sent
Port	<input type="text" value="30001"/>	Server TCP port to which the messages are going to be sent
Template	<input type="text" value="@\${plateutf8}\$@"/>	Template to use on the message, check the manual for available keywords

### TCP Client:

**Enable:** Check to enable and configure TCP client reporting

**Server IP:** Enter the URL of the server to which the MxMessages will be sent.

**Port:** Enter the TCP port of the server.

**Template:** Defines the content / scheme of the transmitted TCP message. Check the [Variables / Template fields](#) [Variables / Template Fields](#), p. 43 for available keywords.

## TCP Server

TCP Server		
Enable	<input checked="" type="checkbox"/>	Enable TCP server reporting
Port	<input type="text" value="30000"/>	Server TCP port
Template	<input type="text" value="@\${plateutf8}\$@"/>	Template to use on the message, check the manual for available keywords

**TCP Server:** You can send event data as text file and images files to a ftp server.

**Enable:**Check to enable and configure TCP server reporting.

**Server IP:** Enter the URL of the server to which the MxMessages will be sent.

**Port:** Enter the TCP port of the server.

**Template:** Defines the content / scheme of the transmitted TCP message. Check the [Variables / Template fieldsVariables / Template Fields](#), p. 43 for available keywords.

FTP

FTP

Enable	<input checked="" type="checkbox"/>	Enable FTP reporting
URL	<input type="text" value="ftp://myserver/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication. Blank if none.
Password	<input type="password"/>	Password to use on the authentication. Blank if none.
Filename template	<input type="text" value="\$uuid\$.ftpfiletype\$"/>	Template to use for the filename.
Text file template	<input type="text" value="\$date\$, \$plateutf8\$"/>	Template to use for the content of the text file.
Upload image	<input type="checkbox"/>	Upload the OCR image
Upload overview image	<input type="checkbox"/>	Upload the overview image
Upload patch	<input type="checkbox"/>	Upload the plate patch
Upload text file	<input type="checkbox"/>	Upload the text file

**FTP:** You can send event data as text file and images files to a ftp server.

**Enable:** Check to enable and configure FTP server reporting.

**URL:** Destination URL for the FTP server.

**Username:** Username if required, blank if none.

**Password:** Password if required, blank if none.

**Filename Template:** Template to use for the filename.

**Text file template:** Template to use for the content of the text file.

**Upload image:** Enables the upload of an image.

**Upload overview image:** Enables the upload of an overview image.

**Upload patch:** Enables the upload of a plate patch image (crop of the recognized code).

**Upload text file:** Enables the upload of a text file.

## Network Optix

Network Optix		
Enable	<input checked="" type="checkbox"/>	Enable Network Optix reporting
URL	<input type="text" value="https://nxserver:7001/"/>	Destination URL
Username	<input type="text"/>	Username to use on the authentication.
Password	<input type="password"/>	Password to use on the authentication.
Network Optix Camera Id	<input type="text"/>	Camera Id set in Network Optix Video Management Software
Source	<input type="text" value="LPR"/>	Source value sent with the generic event.
Caption	<input type="text" value="\$plateutf8\$"/>	Template to use for the caption.
Description	<input type="text" value="\$plateutf8\$ (\$country\$)"/>	Template to use for the description.

**Network Optix:** You can send event data to a Network Optix VMS server.

**Enable:** Check to enable and configure Network Optix server reporting.

**URL:** Destination URL for the Network Optix server.

**Username:** Username for authentication.

**Password:** Password for authentication.

**Network Optix Camera ID:** Camera ID as set in the Network Optix video management software.

**Source:** Source value sent with the generic event.

**Caption:** Template to use for the caption Check the [Variables / Template fields](#)[Variables / Template Fields](#), p. 43 for available keywords.

**Description:** Template to use for the description. Check the [Variables / Template fields](#)[Variables / Template Fields](#), p. 43 for available keywords.

## Genetec Security Center

Genetec Security Center	
Enable	<input checked="" type="checkbox"/> Enable Genetec reporting
Installation type	<div>Production</div> Type of installation. Check with Genetec the correct type according with your license.
URL	<div></div> Destination URL
Username	<div></div> Username to use on the authentication.
Password	<div></div> Password to use on the authentication.
Camera Logical Id	<div>0</div> Camera Logical Id configured on Genetec Security Center
Template	<div>\$plateutf8\$</div> Template to use for bookmarks and custom events.
Create bookmarks	<input checked="" type="checkbox"/> Create a new bookmark with each plate read
Raise custom events	<input checked="" type="checkbox"/> Raise a new custom event with each plate read
Custom Event Id	<div>0</div> Custom Event Id

**Genetec Security Center:** You can send event data to a Genetec Security Center server.

**Enable:** Check to enable and configure Genetec Security Center server reporting.

**Installation type:** Select the installation type that corresponds to your license.

**URL:** Destination URL for the Genetec Security Center server.

**Username:** Username for authentication.

**Password:** Password for authentication.

**Camera Logical ID:** Camera ID as set in Genetec Security Center.

**Template:** Template to use for bookmarks and custom events. Check the [Variables / Template fields](#) for available keywords.

**Create bookmarks:** Creates a new bookmark with each plate read by the app.

**Raise custom events:** Raises a new custom event with each plate read by the app.

**Custom Event ID:** Set a custom event ID.

## Variables / Template Fields

### AIN only reserved variables

Template field	Category	Description	Example
\$confidencecode\$	plate info	Confidence value of the app	99
\$controldigit\$	plate info	Control digit for the code	123
\$countrycode\$	plate info	AIN Country code	
\$direction\$	plate info	(0: unknown, 1: left, 2: right)	1
\$directionstr\$	plate info	(Unknown, Left, Right)	left
\$serialnumber\$	plate info	AIN Serial number	1231233
\$aincode\$	plate info	AIN code.	
\$vehicletype\$	plate info	AIN vehicle type code.	

### Shared reserved variables

Variable	Category	Description	Example
\$absolutebottom\$	image	Plate bottom position based on the total image height (0-1).	0.44
\$absoluteleft\$	image	Plate left position based on the total image width (0-1).	0.59
\$absoluteright\$	image	Plate right position based on the total image width (0-1).	0.66
\$absolutetop\$	image	Plate top position based on the total image height (0-1).	0.37

## Configuration of Vaxtor Aircraft Identification Number Recognition App

### Reporting

Variable	Category	Description	Example
\$blacklist\$	lists & conditions	Description on the black-list linked to the code/-plate.	
\$blacklistdescription\$	lists & conditions	Description specified in the blacklist record	Suspicious vehicle
\$bottom\$	image	Bottom coordinate for the code/plate on the image (pixels).	477
\$cameravid\$	other	Camera OCR ID	
\$charheight\$	plate info	Average character height (pixels).	33
\$confidence\$	plate info	Global confidence (0-100).	99
\$date\$	date & time	ISO 8601 Date with UTC offset appended	2023-09-19T23:47:01.65+02:00
\$day\$	date & time	Day (UTC) in two digits. Includes leading zero if single-digit number.	19
\$etx\$	other	End of text control character (HEX 03).	
\$dwelltime\$	analytics	Time spent in monitored area, in seconds	336
\$formatted\$	plate info	Plate contents in human-readable format. Empty if no result.	LU CY 1909
\$height\$	image	OCR image height in px.	1080
\$id\$	other	Database ID for this read.	
\$hour\$	date & time	Hour (UTC) in two digits using the 24-hour clock-.Includes leading zero if single-digit number.	23



Variable	Category	Description	Example
\$ifblacklist\$...\$ifblacklist\$	lists & conditions	If the plate is on the blacklist, returns the text between these templates.	\$ifblacklist\$ Content to append \$ifblacklist\$
\$iflist\$ ...\$iflist\$	lists & conditions	If the plate is on list, returns the text between these templates.	\$iflist\$ Content to append \$iflist\$
\$ifnolist\$...\$ifnolist\$	lists & conditions	If the plate is not on any list, returns the text between these templates.	\$ifnolist\$ Content to append \$ifnolist\$
\$ifnotblacklist\$...\$ifnotblacklist\$	lists & conditions	If the plate is not on the blacklist, returns the text between these templates.	\$ifnotblacklist\$ Content to append \$ifnotblacklist\$
\$ifnotwhitelist\$...\$ifnotblacklist\$	lists & conditions	If the plate is not on the whitelist, returns the text between these templates.	\$ifnotwhitelist\$ Content to append \$ifnotwhitelist\$
\$ifwhitelist\$...\$ifwhitelist\$	lists & conditions	If the plate is on the whitelist, returns the text between these templates.	\$ifwhitelist\$ Content to append \$ifwhitelist\$
\$image\$	image	Full image, JPEG encoded in base64.	
\$imageid\$	other	Signal ID in case of a trigger read.	
\$imagesize\$	image	Full image size in bytes	297249
\$left\$	image	Left coordinate for the code/plate on the image (pixels)	1255
\$localday\$	date & time	Day (local) in two digits. Includes leading zero if single-digit number.	15

## Configuration of Vaxtor Aircraft Identification Number Recognition App

### Reporting

---

Variable	Category	Description	Example
\$localhour\$	date & time	Hour (local) in two digits using the 24-hour clock-.Includes leading zero if single-digit number.	12
\$localmin\$	date & time	Minute (local) in two digits. Includes leading zero if single-digit number.	23
\$localmonth\$	date & time	Month (local) in two digits. Includes leading zero if single-digit number.	11
\$localsec\$	date & time	Second (local) in two digits. Includes leading zero if single-digit number.	48
\$localyear\$	date & time	Year (local) in four digits	2024
\$min\$	date & time	Minute (UTC) in two digits. Includes leading zero if single-digit number.	47
\$month\$	date & time	Month (UTC) in two digits. Includes leading zero if single-digit number.	11
\$multiplate\$	plate info	Amount of times that the plate has been read before reporting	4
\$nolist\$	lists & conditions	True or False	
\$overviewimage\$	image	Overview JPEG image encoded in base64.	
\$overviewimagesize\$	image	Overview image size in bytes.	297249

---

Variable	Category	Description	Example
\$processingtime\$	Plate info	Processing time in milliseconds.	122
\$right\$	image	Right coordinate for the code/plate on the image (pixels)	1269
\$roid\$	plate info	Recognition Area ID where the license plate number is found	1
\$sec\$	date & time	Second (UTC) in two digits. Includes leading zero if single-digit number.	10
\$sensor\$	other	Camera sensor ID where the plate number is found (0, 1).	0
\$signalid\$	plate info	Identifier provided on the triggering HTTP request	ab12cd34
\$stx\$	other	Start of text control character (HEX 02).	
\$tag\$	plate info	Hashed plate number. Same plate produces the same hash on repetitions.	9612548
\$timestamp\$	date & time	ISO 8601 date with UTC offset appended (yyyy-MM-ddTHH:mm:sszzz)	2024-09-19T23:47:01.65+02:00
\$top\$	image	Top coordinate for the code/plate on the image (pixels).	456
\$utctime\$	date & time	ISO 8601 date UTC	2024-09-19T21:47:01.65Z

Variable	Category	Description	Example
\$uuid\$	plate info	Universally unique identifier (UUID) generated at the time of license plate detection.	de5027d5-191d-4d3d-987b- dc104cc27d5c
\$whitelist\$	lists & conditions	Description on the whitelist linked to the code/plate.	
\$width\$	image	OCR image width.	

## Advanced

In this section you find useful tools for calibration and trouble shooting.

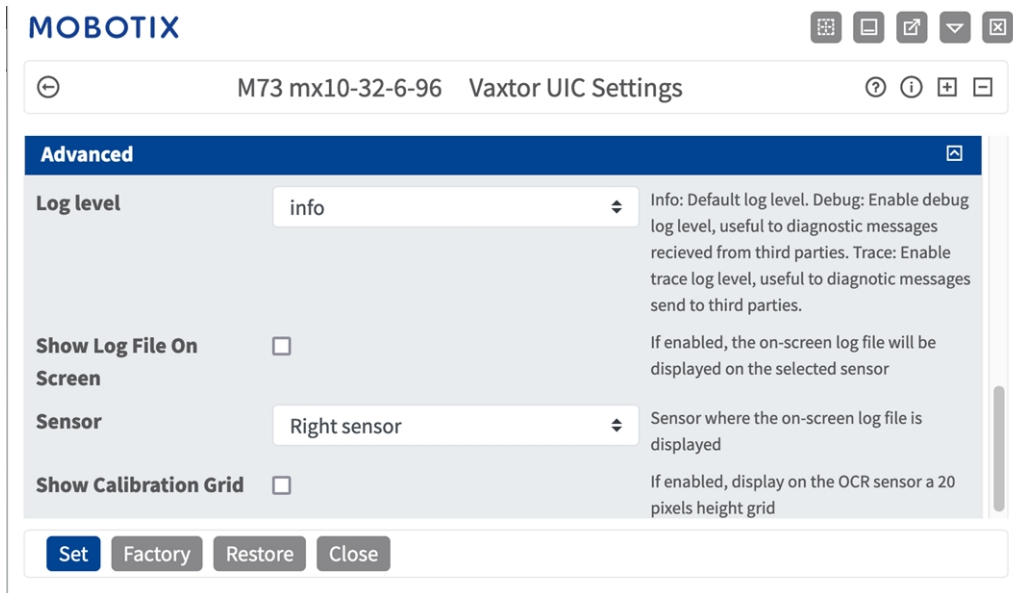


Fig. 5: Advanced

**Log level:** Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

**Info:** Default loge level

**Trace:** Select e.g. for diagnostic messages received from third parties

**Debug:** Select for complete log files for debug purposes

**Show log file on screen:** Check to display the on-screen log file on the selected sensor

**Sensor:** Select the sensor on which the on-screen log file is displayed

**Show Calibration Grid:** Check to display on the OCR sensor a 20 pixels height grid

## Storing the Configuration

To store the configuration you have the following options:



Fig. 6: Storing the configuration

- Click on the **Set** button to activate your settings and to save them until the next reboot of the camera.
- Click on the **Factory** button to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click on the **Restore** button to undo your most recent changes that have not been stored in the camera permanently.
- Click on the **Close** button to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

## Advanced

In this section you find useful tools for calibration and trouble shooting.

Advanced	
Log level	<div>info</div> <div>Info: Default log level. Debug: Enable debug log level, useful to diagnostic messages received from third parties. Trace: Enable trace log level, useful to diagnostic messages sent to third parties.</div>
Show Log File On Screen	<div><input type="checkbox"/></div> <div>If enabled, the on-screen log file will be displayed on the selected sensor</div>
Sensor	<div>Right sensor</div> <div>Sensor where the on-screen log file is displayed</div>
Show Calibration Grid	<div><input type="checkbox"/></div> <div>If enabled, display on the OCR sensor a 20 pixels height grid</div>

**Log level:** Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

**Info:** Default log level

**Trace:** Select e.g. for diagnostic messages received from third parties

**Debug:** Select for complete log files for debug purposes

**Show log file on screen:** Check to display the on-screen log file on the selected sensor

**Sensor:** Select the sensor on which the on-screen log file is displayed

**Show Calibration Grid:** Check to display on the OCR sensor a 20 pixels height grid

## Storing the Configuration

To store the configuration you have the following options:



- Click **Set** to activate your settings and to save them until the next reboot of the camera.
- Click **Factory** to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click **Restore** to undo your most recent changes that have not been stored in the camera permanently.
- Click **Close** to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

# MxMessageSystem

## What is MxMessageSystem?

MxMessageSystem is a communication system based on name oriented messages. This means that a message must have a unique name with a maximum length of 32 bytes.

Each participant can send and receive messages. MOBOTIX cameras can also forward messages within the local network. This way, MxMessages can be distributed over the entire local network (see Message Area: Global).

For example, a MOBOTIX 7 series camera can exchange a MxMessage generated by a camera app with an Mx6 camera that does not support certified MOBOTIX apps.

## Facts about MxMessages


- 128-bit encryption ensures privacy and security of message content.
- MxMessages can be distributed from any camera of the Mx6 and 7 series.
- The message range can be defined individually for each MxMessage.
  - **Local:** Camera expects a MxMessage within its own camera system (e.g. through a Certified App).
  - **Global:** the camera expects a MxMessage that is distributed in the local network by another MxMessage device (e.g. another camera of the 7 series equipped with a certified MOBOTIX app).
- Actions that the recipients are to perform are configured individually for each participant of the MxMessageSystem.

# MxMessageSystem: Processing the automatically generated app event

## Checking automatically generated app events

**NOTE!** After successfully activating the app (see [Activation of the Certified App Interface, p. 23](#)), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e.g. VaxOCRAircraft).

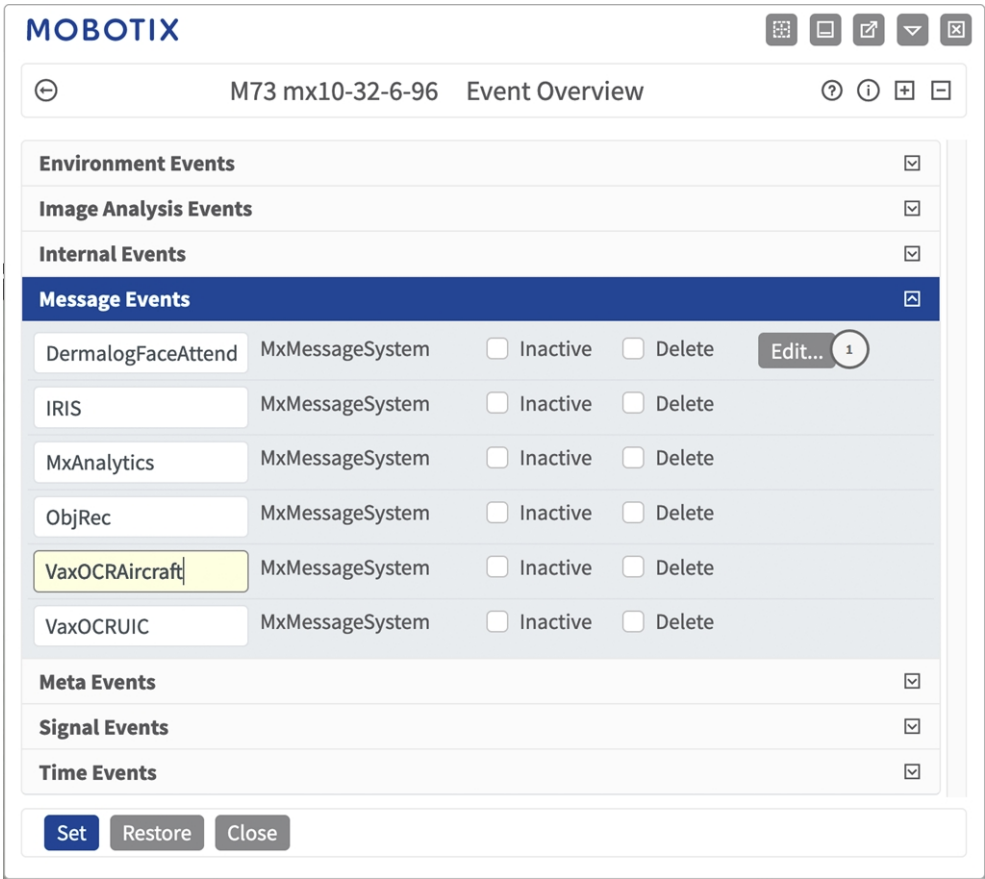



- Click **Edit** <sup>①</sup> to display and configure the event properties in detail.

**MOBOTIX**

M73 mx10-32-6-96 Message Events

Events	Value	Explanation
DermalogFaceAttendance	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete
IRIS	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete
MxAnalytics	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete
ObjRec	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete
<b>VaxOCRAircraft</b>	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete

**Event Dead Time:**  
Time to wait [0..3600 s] before the event can trigger anew.

**Event Sensor Type:**  
Choose the message sensor.

**Event Sensor Type:**  
☐ IP Receive  
☒ MxMessageSystem

Event on receiving a message from the MxMessageSystem.

**Message Name:**  
Defines an MxMessageSystem name to wait for.

**Message Range:**  
There are two different ranges of message distribution:  
*Global:* across all cameras within the current LAN.  
*Local:* camera internal.

**Filter Message Content:**  
Optionally choose how to ignore messages containing *Filter Value*. Select *No Filter* to trigger on any message with defined *Message Name*.

**Set** **Factory** **Restore** **Close**

## Action handling - Configuration of an Action Group

**CAUTION!** To use events, trigger Action Groups or record images the general arming of the camera must be enabled ([http\(s\)://<camera IP address>/control/settings](http(s)://<camera IP address>/control/settings))

An Action Group defines which action(s) is (are) triggered by the Vaxtor Aircraft Identification Number Recognition App event.

- In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<camera IP address>/control/actions](http(s)://<camera IP address>/control/actions)).

MOBOTIX

⌕

M73 mx10-32-6-96

Action Group Overview

?

i

+

-

VisualAlarm

☐ Delete

⌕

Arming

Events & Actions

Edit

Off

(select all)

Edit...

(No time table)

VA

VXAircraftAction

☐ Delete

⌕

Arming

Events & Actions

Edit

Enabled

-

Edit... 2

(No time table)

Add new group 1

Set

Restore

Close

- 2. Click **Add new group**① and give a meaningful name.
- 3. Click **Edit**② , to configure the group.

MOBOTIX

M73 mx10-32-6-96 Action Group Details

General Settings	Value	Explanation
Action Group	VXAircraftAction	Name: The name is purely informational.
	Enabled ③	Arming: Controls this action group: Enabled: activate the group. Off: deactivate the group. S: group armed by signal input. CS: group armed by custom signal as defined in General Event Settings.
	(No time table)	Time Table: Time table for this action profile (Time Tables).
Event Selection	<div> <div>Message: MxAnalytics</div> <div>Message: ObjRec</div> <div>Message: VaxOCRAircraft ④</div> <div>Message: VaxOCRUIIC</div> <div>(Signal: SI)</div> <div>Class: UC</div> </div>	Event Selection: Select the events which will trigger the actions below. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <b>activated</b> first.
Action Details	5	Action Deadtime: Time to wait [0..3600 s] before a new action can take place.
	Simultaneously	Action Chaining: Choose how the status of each subaction influences the execution of all others. Simultaneously: All actions are executed simultaneously. Simultaneously until first success: Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated. Consecutively: All actions are executed in the specified order. Consecutively until first success: Consecutive execution, but as soon as one action succeeds, the following actions are not executed. Consecutively until first failure: Consecutive execution, but as soon as one action fails, the following actions are not executed.
Actions	Value	Explanation
Add new action ⑤		

Set Factory Restore Close

- Enable **Arming** ③ of the Action Group.
- Select your message event in the **Event selection** list ④ . To select multiple events, hold the shift key.
- Click **Add new Action** ⑤ .
- Select a proper action from list **Action Type and Profile** ⑥ .

FTP: FTP-Webcam

FTP: FTP-AlarmClip

FTP: FTP-Archiving

FTP: FTP-Day-Period

E-Mail: AlarmMail

E-Mail: NotifyMail

E-Mail: MailWithMxPEGClip

E-Mail: MailWithStoryImages

E-Mail: MailSystemStatus24

⑥

✓ IP Notify: MxMC-Alarm

IP Notify: MxMC-Liveview

IP Notify: MxMC-Gridview

IP Notify: TCPMessage

IP Notify: HttpRequest

IP Notify: ObscureAreaOn

IP Notify: ObscureAreaOff

Play Sound: StandardSounds

Device Out: ~IrLightOff

Device Out: ~IrLightOn

Device Out: ~IrLightToggle

soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated.

Consecutively: All actions are executed in the specified order.

Consecutively until first success: Consecutive execution, but as soon as one action succeeds, the following actions are not executed.

Consecutively until first failure: Consecutive execution, but as soon as one action fails, the following actions are not executed.

Actions

Action 1

☐ Delete

Add new action

Note: You may need admin rights to execute some actions.

Profile, MxMessageSystem, MxMC-Alarm

Signal Out, Visual Alarm, Phone Call, IP Notify, Image

Set Factory Restore Close

55 / 63


**NOTE!** If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can+ add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

8. Click on the **Set** button at the end of the dialog box to confirm the settings.

# Action settings - Configuration of the camera recordings

1. In the camera web interface, open: **Setup Menu / Event Control / Recording**([http\(s\)/<camera IP address>/control/recording](http(s)/<camera IP address>/control/recording)).

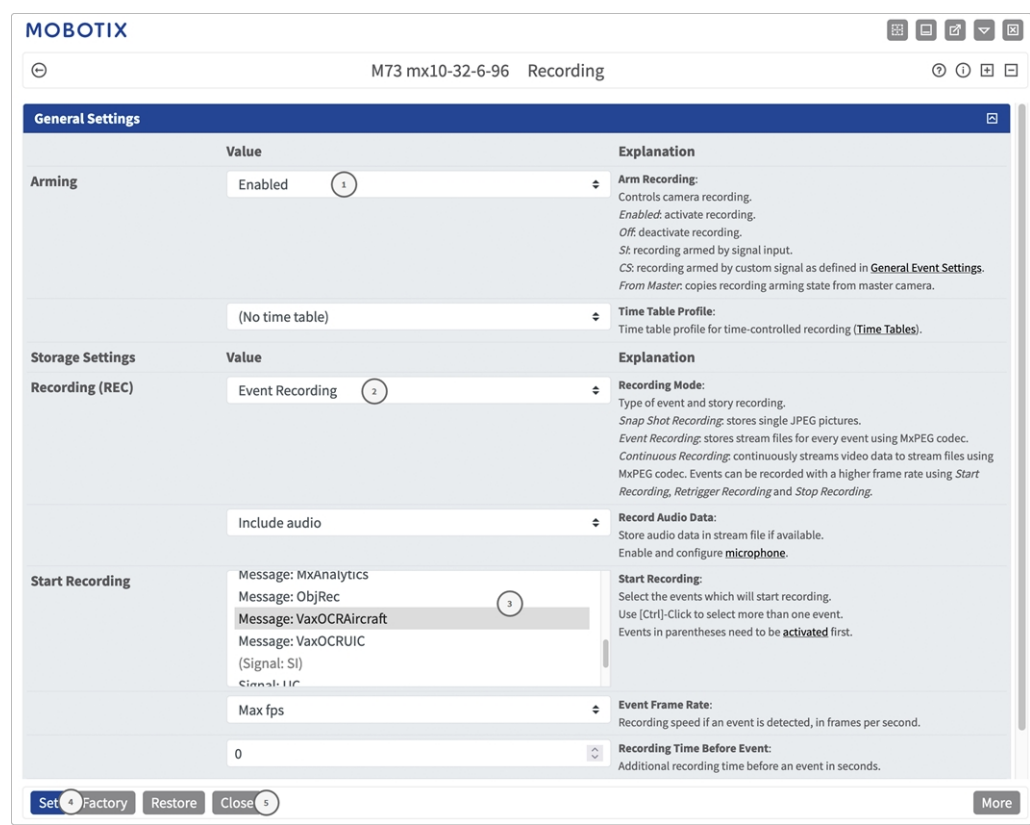

2. Activate **Arm Recording**<sup>①</sup> .
3. Under **Storage Settings / Recording (REC)** select a **Recording mode**<sup>②</sup> . The following modes are available:

- Snap Shot Recording
  - Event Recording
  - Continuous Recording
4. In list **Start recording**③ select the message event just created.
  5. Click on the **Set**④ button at the end of the dialog box to confirm the settings.
  6. Click on **Close**⑤ to save your settings permanently.

**NOTE!** Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

# Advanced Configuration: Processing the meta data transmitted by apps

## Meta data transferred within the MxMessageSystem

For each event, the app also transfers meta data to the camera. This data is sent in the form of a JSON schema within a MxMessage.



Fig. 7: Aircraft number (AIN) on a plane



Fig. 8: Example: Meta data transmitted within a MxMessage of the Vaxtor Aircraft Identification Number Recognition App

**NOTE!** To view the meta data structure of the last App event, enter the following URL in the address bar of your browser: [http\(s\)://IPAdresseOfYourCamera/api/json/messages](http(s)://IPAdresseOfYourCamera/api/json/messages)

# Creating a Custom Message Event

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e.g. VaxOCRAIN).

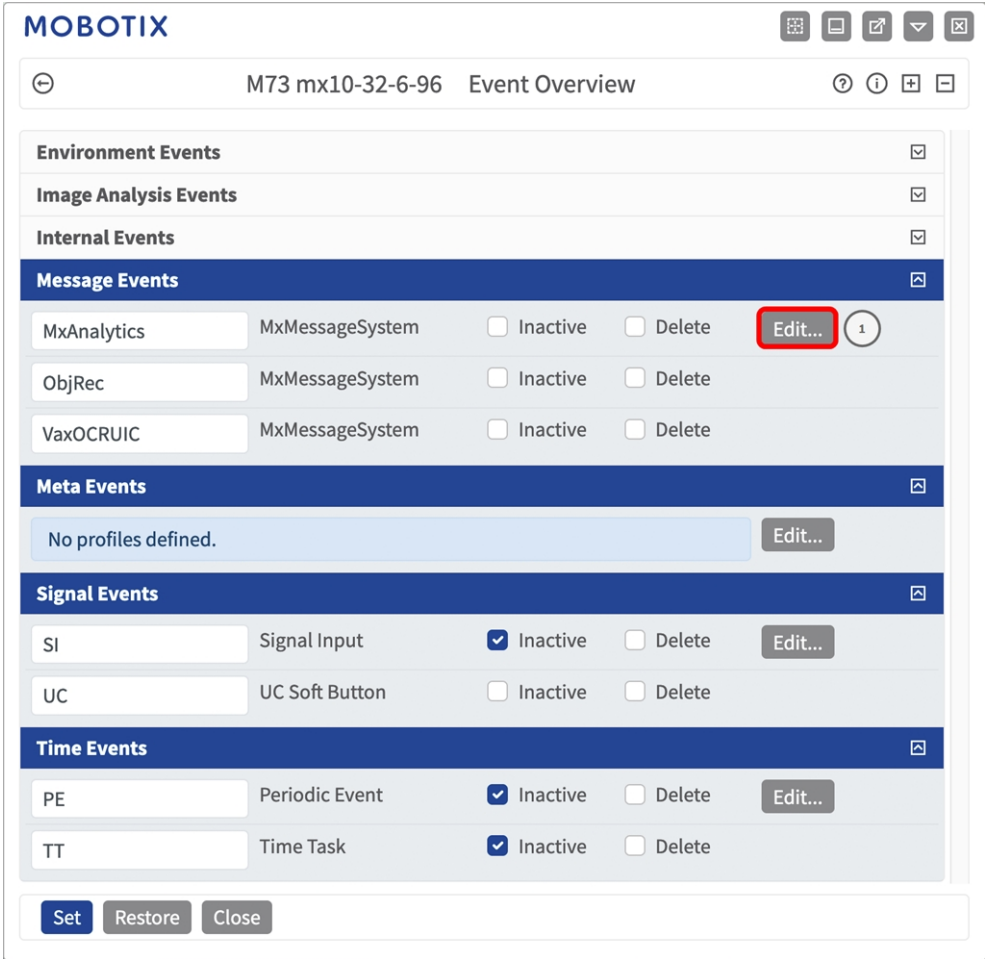


Fig. 9: Example: Generic message event from Vaxtor Aircraft Identification Number Recognition App



- Click **Edit** ① to display and configure the event properties in detail.

**MOBOTIX**

M73 mx10-32-6-96 Message Events

Attribute	Value	Explanation
IP Receive	8000	Port: TCP port to listen on.

Events	Value	Explanation
MxAnalytics	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete	
ObjRec	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete	
VaxOCRUIIC ①	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete	

5

**Event Dead Time:**  
Time to wait [0..3600 s] before the event can trigger anew.

**Event Sensor Type:**  
Choose the message sensor.

☐ IP Receive  
☒ MxMessageSystem

Event on receiving a message from the MxMessageSystem.

VaxOCRUIIC.uic.List ②

**Message Name:**  
Defines an MxMessageSystem name to wait for.

Local

**Message Range:**  
There are two different ranges of message distribution:  
*Global:* across all cameras within the current LAN.  
*Local:* camera internal.

JSON Comparison

**Filter Message Content:**  
Optionally choose how to ignore messages containing *Filter Value*. Select *No Filter* to trigger on any message with defined *Message Name*.

"White List" ③

**Filter Value:**  
Define either a valid reference value as a string (in JSON format) without line breaks, or an extended regular expression. Open help for examples.  
This parameter allows using variables.

Add new profile

Set ④ factory Restore Close

Fig. 10: Example: List message event

- Click on the event (e.g. VaxOCRRAIN) ① to open the event settings.
- Configure the parameters of the event profile as follows:
  - **Message Name:** Enter the "Message Name" ② according to the event documentation of the corresponding app (see [Examples for message names and filter values of the \[%=CameraApps.ProductName\]](#))

- **Message Range:**
  - Local: Default settings for the Vaxtor Aircraft Identification Number Recognition App
  - Global: (MxMessage is forwarded from another MOBOTIX camera in the local network.
- **Filter Message Content:**
  - **No Filter:** Trigger on any message according to the defined **Message Name**.
  - **JSON Comparison:** Select if filter values are to be defined in JSON format.
  - **Regular Expression:** Select if filter values are to be defined as regular expression.
- **Filter Value:**③ see [Examples for message names and filter values of the \[%=CameraApps.ProductName](#).

**CAUTION!** “Filter Value“ is used to differentiate the MxMessages of an app / bundle. Use this entry to benefit from individual event types of the apps (if available).

Choose “No Filter” if you want to use all incoming MxMessages as generic event of the related app.

2. Click on **Set**④ at the end of the dialog box to confirm the settings.

# Examples for message names and filter values of the Vaxtor Aircraft Identification Number Recognition App

	MxMessage-Name	Filter value
Generic Event	VaxOCRAIN	
White list Event	VaxOCRAIN.ain.List	“White list”
Black list Event	VaxOCRAIN.ain.List	“Black list”
Not listed Event	VaxOCRAIN.ain.List	“Not listed”
Unique identifaction num-ber event	VaxOCRAIN.ain.AINCode	AIN code as “STRING” e.g. “33 85 4956626-7 (compare <a href="#">Meta data transferred within the MxMessageSystem</a> )

