

# Quick Installation

## MOBOTIX D71

© 2026 MOBOTIX AG



BeyondHumanVision

**MOBOTIX**

Document ID: Mx\_QI\_Mx-D71(A/B)-8DNxxx/Mx-D71(A/B)-4DNxxx\_V1.50\_EN  
V1.50, 9/23/2026, Order Code: Mx-D71(A/B)-8DNxxx/Mx-D71(A/B)-4DNxxx

# Table of Contents

---

|                                          |           |
|------------------------------------------|-----------|
| <b>Table of Contents</b>                 | <b>2</b>  |
| <b>Before You Start</b>                  | <b>5</b>  |
| Support                                  | 6         |
| MOBOTIX Support                          | 6         |
| MOBOTIX eCampus                          | 6         |
| MOBOTIX Community                        | 6         |
| Safety Notes                             | 6         |
| Legal Notes                              | 7         |
| Notes on System Security                 | 8         |
| Protective Measures                      | 9         |
| Notes on Cabling                         | 9         |
| Fire Protection                          | 10        |
| Lightning and Surge Protection           | 10        |
| <b>Drilling Template</b>                 | <b>11</b> |
| Drilling Template D71                    | 12        |
| <b>Scope of Delivery</b>                 | <b>17</b> |
| MOBOTIX D71: Scope of Delivery           | 18        |
| Mounting Supplies: Scope of Delivery     | 19        |
| Wall Mount: Scope of Delivery            | 20        |
| In-Ceiling Set: Scope of Delivery        | 21        |
| <b>Technical Specifications</b>          | <b>23</b> |
| Order Information                        | 24        |
| Hardware                                 | 24        |
| Image and Video Properties               | 26        |
| General Software Features                | 26        |
| Video Analysis                           | 27        |
| Video Management Software                | 27        |
| Model Variants                           | 27        |
| Dimensions                               | 29        |
| In-Ceiling Set                           | 30        |
| <b>Mounting</b>                          | <b>31</b> |
| Adjusting the Camera Lens                | 32        |
| Removing the Dome                        | 32        |
| Focusing the Camera Lens                 | 33        |
| Attaching the Anti Glare Ring            | 35        |
| Attaching the Dome                       | 36        |
| Mounting Options                         | 36        |
| Mounting the Camera Without Accessories  | 37        |
| Mounting with the On-Wall Set            | 39        |
| Installing a Mini-Box in the On-Wall Set | 42        |
| Mounting with the In-Ceiling Set         | 44        |
| Mounting with the Wall Mount             | 46        |
| Mounting on a Corner (Corner/Pole Mount) | 48        |
| Mounting on a Pole (Corner/Pole Mount)   | 49        |
| Connecting the Camera                    | 51        |
| Connecting a USB-C Device                | 51        |
| Connecting I/O Devices                   | 51        |
| Assignment of I/O-Sockets                | 53        |
| Connecting the Camera to the Network     | 54        |

---

|                                                |           |
|------------------------------------------------|-----------|
| <b>Operating the Camera</b> .....              | <b>57</b> |
| Getting Started .....                          | 58        |
| Boot Options of the Camera .....               | 58        |
| Initial Camera Setup .....                     | 60        |
| Check the Preconditions .....                  | 60        |
| Access the Camera .....                        | 61        |
| Find the "Real" IP Address of the Camera ..... | 64        |
| Network Settings on the Camera in MxMC .....   | 64        |
| <b>Camera Software in the Browser</b> .....    | <b>67</b> |
| Access the Camera in the Web Browser .....     | 68        |
| Basic Settings .....                           | 68        |
| <b>Maintenance</b> .....                       | <b>71</b> |
| Replacing the microSD card .....               | 72        |
| Cleaning the Camera .....                      | 73        |



## Before You Start

This section contains the following information:

|                                       |          |
|---------------------------------------|----------|
| <b>Support</b> .....                  | <b>6</b> |
| <b>Safety Notes</b> .....             | <b>6</b> |
| <b>Legal Notes</b> .....              | <b>7</b> |
| <b>Notes on System Security</b> ..... | <b>8</b> |
| <b>Protective Measures</b> .....      | <b>9</b> |

## Support

### MOBOTIX Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates.

Please visit [www.mobotix.com > Services > Help Desk](http://www.mobotix.com > Services > Help Desk).



### MOBOTIX eCampus

The MOBOTIX eCampus is a complete e-learning platform. It lets you decide when and where you want to view and process your training seminar content. Simply open the site in your browser and select the desired training seminar.

Please visit [www.mobotix.com/ecampus-mobotix](http://www.mobotix.com/ecampus-mobotix).



### MOBOTIX Community

The MOBOTIX community is another valuable source of information. MOBOTIX staff and other users are sharing their information, and so can you.

Please visit [community.mobotix.com](http://community.mobotix.com).



## Safety Notes

- This product must be installed by qualified personnel and the installation should conform to all local codes.
- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.

- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- Do not replace batteries of the device. If a battery is replaced by an incorrect type, the battery can explode.
- External power supplies must comply with the Limited Power Source (LPS) requirements and share the same power specifications with the camera.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.

## Legal Notes

### Copyright Notice!

© 2021 MOBOTIX AG. All rights reserved.

This document and its contents are the property of MOBOTIX AG and are protected by applicable copyright laws. Any reproduction, distribution, modification, or use of this document, in whole or in part, without prior written permission of MOBOTIX AG is strictly prohibited.

All product names, trademarks, logos, and brands referenced in this document are the property of their respective owners. These may include, but are not limited to, trademarks and certification marks of third-party organizations. The use of such marks is for identification and informational purposes only and does not imply any affiliation with or endorsement by the respective trademark owners. MOBOTIX AG acknowledges the rights of all trademark holders and makes no claim to trademarks owned by third parties.

### Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

### Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on [www.mobotix.com](http://www.mobotix.com) under **Services > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

### RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EU) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see [www.mobotix.com](http://www.mobotix.com), **Services > Download Center > Marketing & Documentation > Brochures & Guides > Certificates**).

## Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

## Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at [www.mobotix.com](http://www.mobotix.com) by clicking on the corresponding link at the bottom of every page.

## FCC Disclaimer

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

# Notes on System Security

To protect the camera against cybersecurity threats, the following security measures are enabled by default:

- Password must be changed when camera software is accessed for the first time.
- Public access is disabled.
- Intrusion detection is enabled.
- Timeout for grouping accesses from the same client into a single log entry is set to 60 minutes.
- IP addresses of offending HTTP clients are blocked.

The following measures are recommended after the installation has been completed:

### Camera Web Interface

- **Admin Menu > Network Setup > Web Server:**
  - **Enable intrusion detection:** Enable notifications for repeated unsuccessful login attempts.
  - **Notification threshold:** Set the value as low as possible (for example, 5 minutes).

## MxManagementCenter

- Menu View > Components View > Secure System:
  - **Enable encrypted HTTPS:** Disable all services that require unencrypted HTTP (for example, IP notify messages). Router settings may need to be adjusted when using remote access.
  - **User Management** (for all users):
    - **Force Complex Password:** Enabled
    - **Log out on Inactivity:** 5 minutes

For more information on this new feature, please read the «Cyber Protection Guide» on [www.mobotix.com](http://www.mobotix.com) (under **Services > Download Center > Documentation > Brochures & Guides > Cyber Security**).

## Protective Measures

### WARNING!

When laying cables indoors and outdoors, the current regulations for cable laying, lightning and fire protection must always be observed.

MOBOTIX cameras and devices are protected against the effects of minor over voltages by a number of measures. However, these measures cannot prevent larger surge voltages from causing damage to the camera. When installing the cameras outdoors, special attention should therefore be paid to lightning protection and the associated dangers for the building and network infrastructure.

In general, you should only have MOBOTIX cameras and devices installed by certified specialist companies that are familiar with the installation and safe operation of network devices and the underlying regulations for lightning and fire protection as well as the current technology for preventing damage from surge voltages.

## Notes on Cabling

- **Data cable:** Only double-shielded CAT5 cable or better (S/STP) may be used as data cable for the Ethernet interface.

### NOTE!

For outdoor use, special requirements apply for the cables to be used and the lightning protection.

- **Cable length:** The individual cable sections must not exceed the maximum permissible lengths in order to ensure perfect data transmission.
- **Avoidance of induction:** Data cables may only be laid parallel to power or high-voltage lines if the prescribed minimum distances are observed.
- Only use MOBOTIX cables and connectors to ensure IP66 weather resistance.

## Fire Protection

When laying cables for the power supply, the relevant country-specific regulations (e.g. VDE in Germany) and the fire protection regulations valid at the installation site must be observed.

## Lightning and Surge Protection

Measures should always be taken to protect this device from electrical surge damage.

### **NOTE!**

Electrical surge protection available using the MX-Overvoltage-Protection-Box, which is available as an accessory.


Further information on how to avoid damage caused by lightning and over voltage is available from manufacturers of lightning and over voltage protection devices.

## Drilling Template

Open this file in a PDF viewer (Adobe Reader or similar) and print the file **without scaling (original size)**.

### NOTE!

Drilling template: [www.mobotix.com](http://www.mobotix.com) > Services > Download Center > Marketing & Documentation > Drilling Templates.

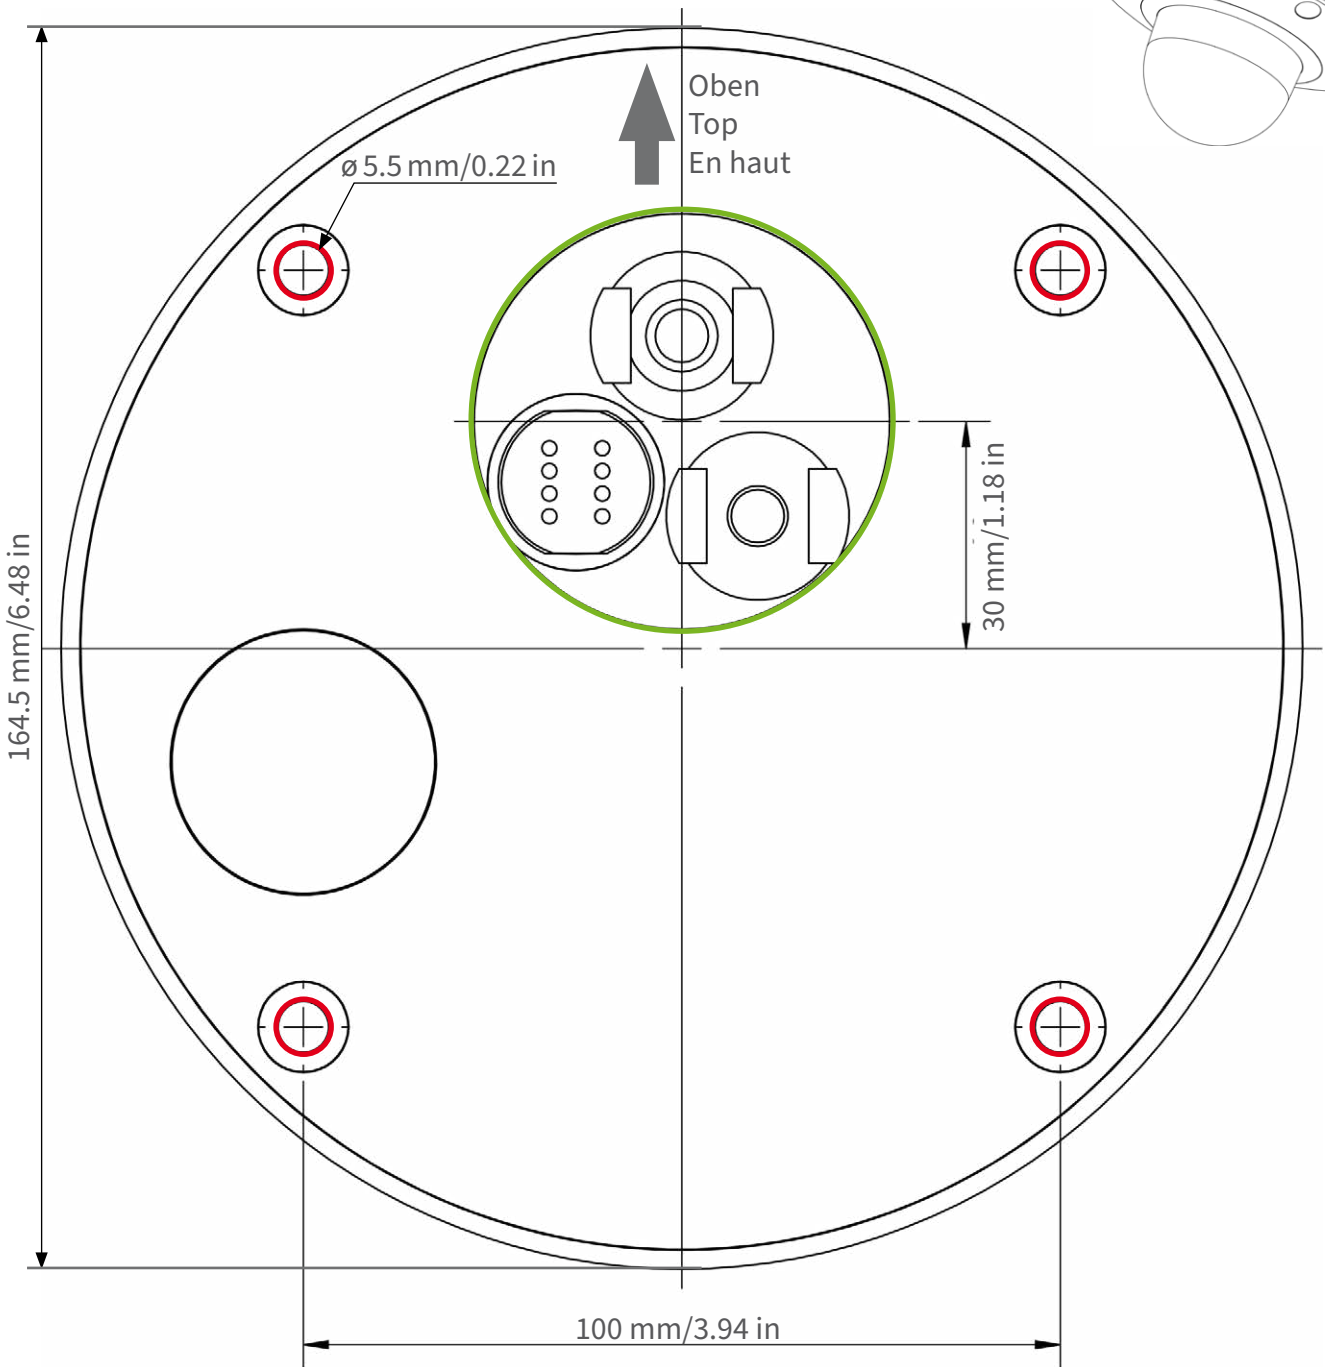

Ausschnitt für Kabel und Anschlüsse  
Cutout for cables and connectors  
Découpe pour les câbles et les connexions




**Nur in Originalgröße kopieren oder ausdrucken!**



**Always copy or print at 100% of original size!**

**Copier ou imprimer uniquement aux dimensions d'origine !**



**Copier ou imprimer uniquement aux dimensions d'origine !**

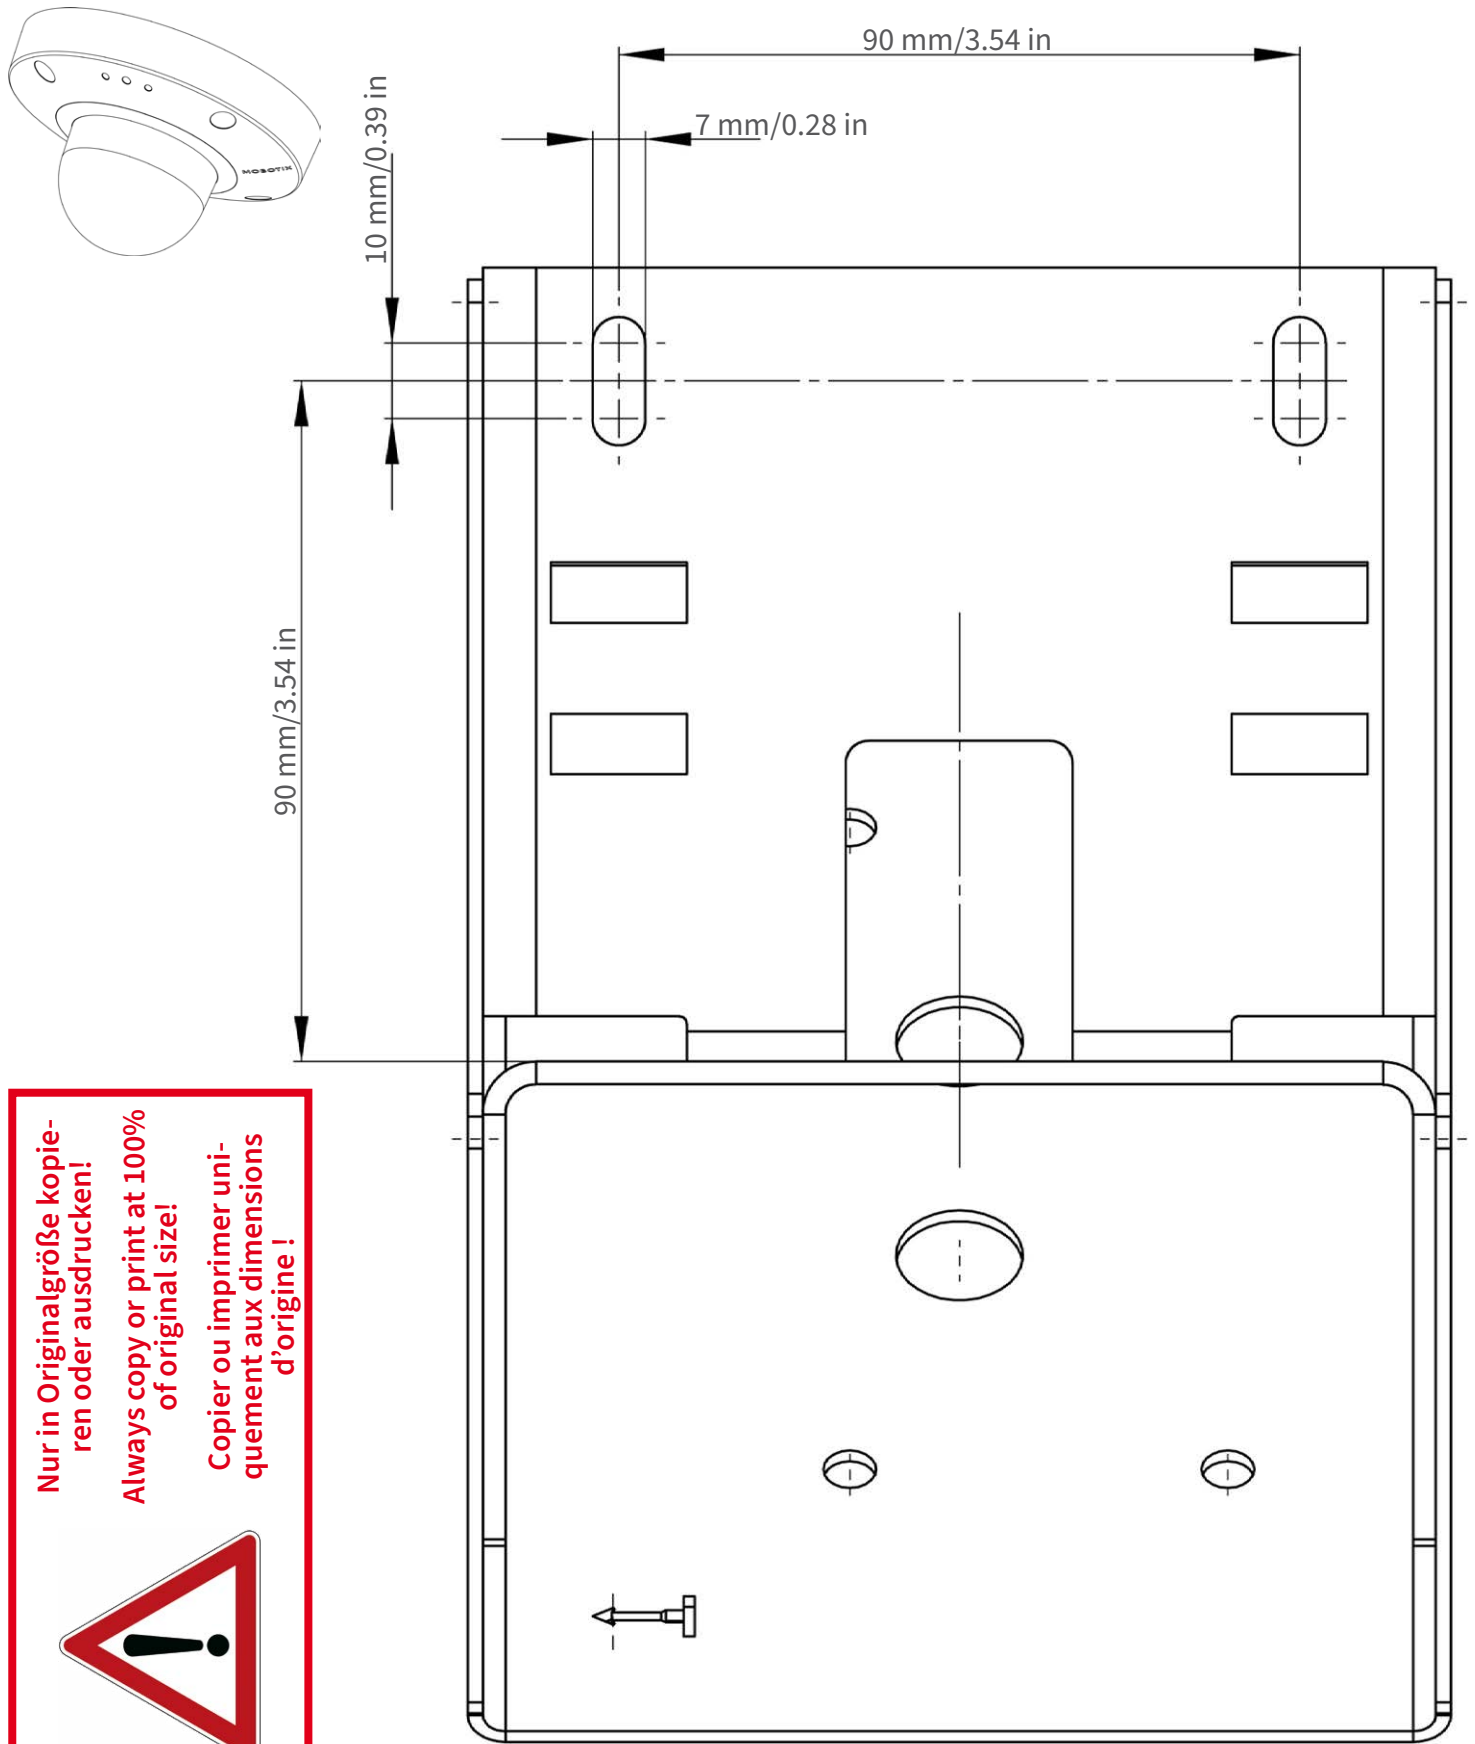

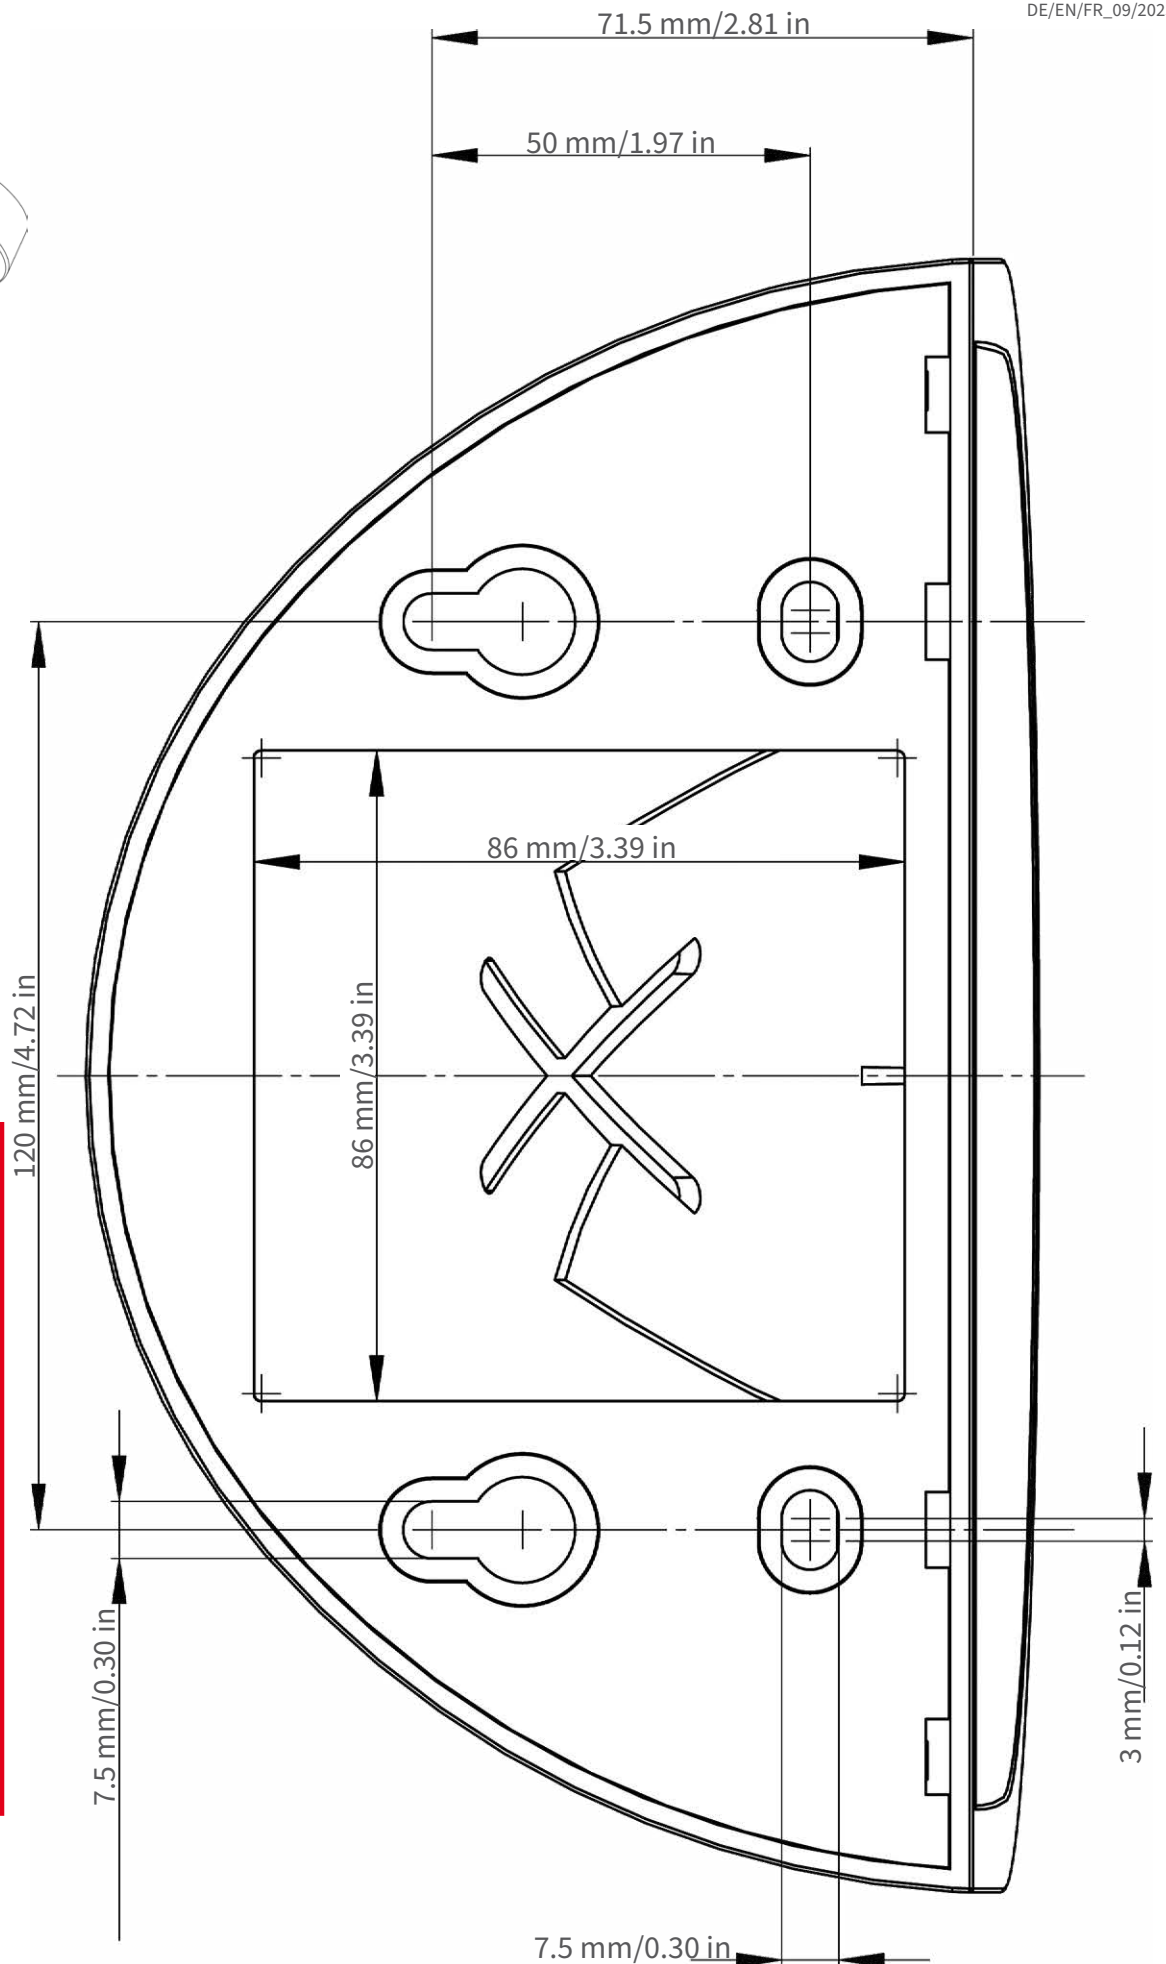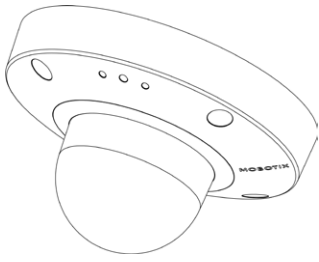


**Nur in Originalgröße kopieren oder ausdrucken!**

**Always copy or print at 100% of original size!**

**Copier ou imprimer uniquement aux dimensions d'origine !**



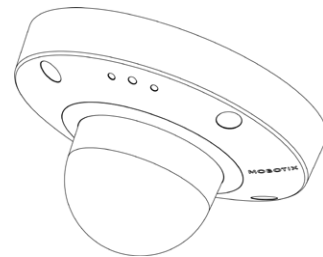

Ø 200 mm / 7.87 in



**Nur in Originalgröße kopieren oder ausdrucken!**

**Always copy or print at 100% of original size!**

**Copier ou imprimer uniquement aux dimensions d'origine !**

## Scope of Delivery

This section contains the following information:

|                                                   |           |
|---------------------------------------------------|-----------|
| <b>MOBOTIX D71: Scope of Delivery .....</b>       | <b>18</b> |
| <b>Mounting Supplies: Scope of Delivery .....</b> | <b>19</b> |
| <b>Wall Mount: Scope of Delivery .....</b>        | <b>20</b> |
| <b>In-Ceiling Set: Scope of Delivery .....</b>    | <b>21</b> |


# MOBOTIX D71: Scope of Delivery



## Scope of delivery MOBOTIX D71 Body

| Item | Count | Description                                                                          |
|------|-------|--------------------------------------------------------------------------------------|
| 1.1  | 1     | I/O dome, white (installed)                                                          |
| 1.2  | 1     | USB plug, blue (installed)                                                           |
| 1.3  | 1     | Bayonet catch for USB port, blue (installed)                                         |
| 1.4  | 1     | Ethernet plug, blue (installed)                                                      |
| 1.5  | 1     | Bayonet catch for Ethernet port, blue (installed)                                    |
| 1.6  | 1     | Ethernet patch cable RJ45, 50 cm/19.7 in                                             |
| 1.7  | 1     | SD card cover (installed)                                                            |
| 1.8  | 1     | SD card 8 GB (installed)                                                             |
| 1.9  | 1     | Mounting supplies (see <a href="#">Mounting Supplies: Scope of Delivery, p. 19</a> ) |
| 1.10 | 1     | Camera Connection Flyer                                                              |
| 1.11 | 1     | Important Safety Information                                                         |
| 1.14 | 2     | Anti-glare ring                                                                      |


## Mounting Supplies: Scope of Delivery

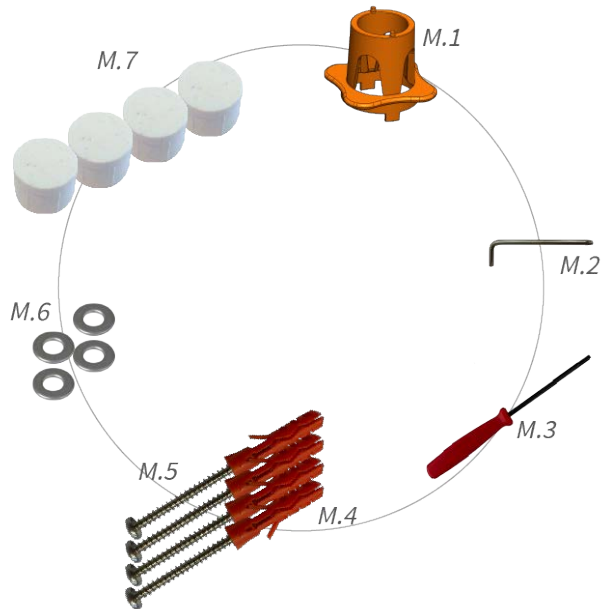

### Scope of Delivery D71 Mounting Supplies

| Item | Count | Description                               |
|------|-------|-------------------------------------------|
| M.1  | 1     | D71 lens wrench, orange                   |
| M.2  | 1     | Torx wrench 3.5 mm                        |
| M.3  | 1     | Allen wrench 2.5 mm                       |
| M.4  | 4     | Dowels 8 mm                               |
| M.5  | 4     | Stainless steel pan head-screws 4.5x60 mm |
| M.6  | 4     | Stainless steel washers Ø5.3 mm           |
| M.7  | 4     | Sealing plugs, white                      |


Wall Mount: Scope of Delivery

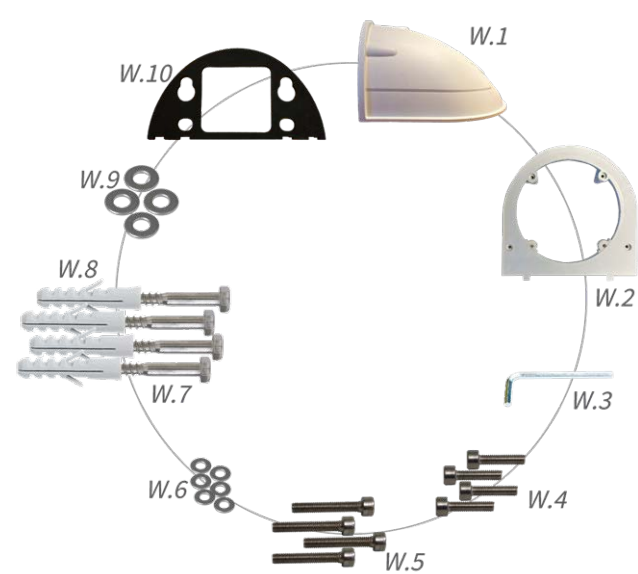

Scope of Delivery Wall Mount

| Item | Count | Description                             |
|------|-------|-----------------------------------------|
| W.1  | 1     | Wall Mount upper shell, white           |
| W.2  | 1     | Bottom plate, white                     |
| W.3  | 1     | Allen wrench 3 mm                       |
| W.4  | 2     | Stainless steel Allen screws 4x18 mm    |
| W.5  | 4     | Stainless steel Allen screws 4x40 mm    |
| W.6  | 6     | Stainless steel washers Ø4.3 mm         |
| W.7  | 4     | Stainless steel hex head screws 6x50 mm |
| W.8  | 4     | Dowels 8 mm                             |
| W.9  | 4     | Stainless steel washers Ø6.3 mm         |
| W.10 | 1     | Adhesive wall sealing, black            |

## In-Ceiling Set: Scope of Delivery

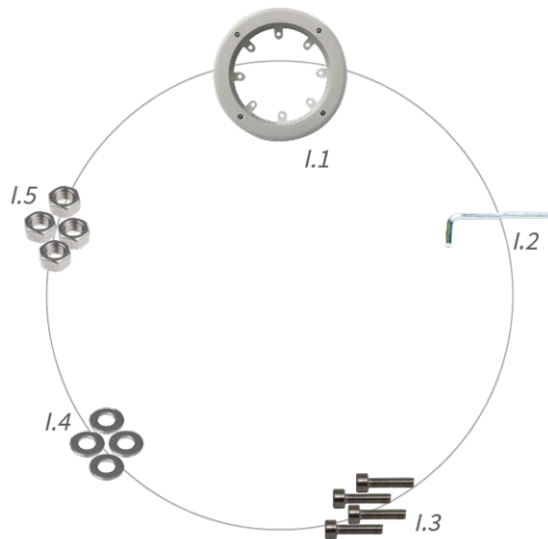

### Scope of Delivery In-Ceiling Set

| Item | Count | Description                           |
|------|-------|---------------------------------------|
| I.1  | 1     | In-Ceiling Set                        |
| I.2  | 1     | Allen wrench 5 mm                     |
| I.3  | 4     | Stainless steel Allen screws M6x30 mm |
| I.4  | 4     | Stainless steel washers M6            |
| I.5  | 4     | Stainless steel hexagon nut M6        |



---

## Technical Specifications

This section contains the following information:

|                                   |           |
|-----------------------------------|-----------|
| <b>Order Information</b>          | <b>24</b> |
| <b>Hardware</b>                   | <b>24</b> |
| <b>Image and Video Properties</b> | <b>26</b> |
| <b>General Software Features</b>  | <b>26</b> |
| <b>Video Analysis</b>             | <b>27</b> |
| <b>Video Management Software</b>  | <b>27</b> |
| <b>Model Variants</b>             | <b>27</b> |

Order Information

|                                                                                                                                                                          |                                       |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
| Name                                                                                                                                                                     | MOBOTIX D71                           |
| Order Code:                                                                                                                                                              | Mx-D71(A/B)-8DNxxx/Mx-D71(A/B)-4DNxxx |
| <b>NOTE!</b> When ordering, select either the <b>A</b> or the <b>B</b> camera variant (e.g. Mx-<camera> <b>A</b> -<sensor/lens> or Mx-<camera> <b>B</b> -<sensor/lens>). |                                       |

Hardware

|                                                                    |                                                                                                                                                                                                                                                                                                        |                                           |  |
|--------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|--|
| Image sensor (DN)                                                  | 4K 3840x2160/4MP 2688x1512                                                                                                                                                                                                                                                                             |                                           |  |
| Light sensitivity                                                  | <ul style="list-style-type: none"><li>■ Color sensor (day): 0,1 lx @ 1/60 s; 0,005 lx @ 1 s</li><li>■ BW sensor (night): 0,02 lx @ 1/60 s; 0,001 lx @ 1 s</li></ul>                                                                                                                                    |                                           |  |
| Exposure control                                                   | Manual and automatic mode<br>1 s to 1/16,000 s                                                                                                                                                                                                                                                         |                                           |  |
| IK protection class                                                | IK10                                                                                                                                                                                                                                                                                                   |                                           |  |
| IP / NEMA protection class                                         | IP66 / NEMA 4X                                                                                                                                                                                                                                                                                         |                                           |  |
| Operating temperature range                                        | -40 to 65 °C/-40 to 149 °F                                                                                                                                                                                                                                                                             |                                           |  |
| Min. cold start temperature                                        | -30 °C/-22 °F                                                                                                                                                                                                                                                                                          |                                           |  |
| Relative Humidity                                                  | 5% to 95%, non-condensing                                                                                                                                                                                                                                                                              |                                           |  |
| Internal DVR Storage                                               | Internal microSD card (SDHC/SDXC), 8 GB out of the box, max. 1 TB.                                                                                                                                                                                                                                     |                                           |  |
| Allowed cable dimensions for cables connected to the PCB terminals | <i>Conductor cross section</i>                                                                                                                                                                                                                                                                         |                                           |  |
|                                                                    | AWG                                                                                                                                                                                                                                                                                                    | 20 - 26                                   |  |
|                                                                    | Rigid                                                                                                                                                                                                                                                                                                  | 0.14mm <sup>2</sup> - 0.5mm <sup>2</sup>  |  |
|                                                                    | Flexible                                                                                                                                                                                                                                                                                               | 0.14mm <sup>2</sup> - 0.5mm <sup>2</sup>  |  |
|                                                                    | Flexible with ferrule                                                                                                                                                                                                                                                                                  | 0.25mm <sup>2</sup> - 0.34mm <sup>2</sup> |  |
| Input                                                              | Contact Closure (no galvanic isolation necessary) or up to 30 Vrms AC / V50 DC<br><br>Switching thresholds: <ul style="list-style-type: none"><li>■ Input &gt; 1.6V leads to a detected HIGH</li><li>■ Input &lt; 0.9V leads to a detected LOW (after a high)</li></ul><br>max. length for cables: 50m |                                           |  |

|                             |                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Output                      | <p><b>D71-A</b></p> <p>Requires pull-up resistor and external power supply (10mA / max 30 Vrms AC / max. 50V DC)</p> <p>Output may be loaded with max. 50mA</p> <p>max. length for cables: depends on loop impedance of the connected cable.</p> <p><b>D71-B</b></p> <p>Dry contact, form A (max 30 Vrms / max, 50V DC/ 60 W/ 2A DC)</p> |
| Microphone/Speaker          | <p>Integrated Microphone:</p> <ul style="list-style-type: none"> <li>■ Sensitivity: -35 dB +/-4 dB (0 dB = 1 V/pa, 1 kHz)</li> </ul> <p>Integrated Loudspeaker:</p> <ul style="list-style-type: none"> <li>■ 0.9 W at 8 Ohm</li> </ul> <p>Line in / Line out</p>                                                                         |
| Integrated illumination     | 850 nm IR, up to 30 m/100 ft<br>(may be more depending on scene)                                                                                                                                                                                                                                                                         |
| Tampering Detection         | Integrated Shock Sensor                                                                                                                                                                                                                                                                                                                  |
| Max. power consumption      | <ul style="list-style-type: none"> <li>■ Max. 25 W/521 mA at 48 VDC</li> <li>■ Max. 25 W/1042 mA at 24 VDC</li> </ul>                                                                                                                                                                                                                    |
| Average power consumption   | 9.5 W                                                                                                                                                                                                                                                                                                                                    |
| Electrical surge protection | Available with MX-Overvoltage-Protection-Box (not part of the scope of delivery)                                                                                                                                                                                                                                                         |
| PoE standard                | PoE Plus (802.3at-2009)/Class 4 (Class 3 can be enabled via HW switch. <b>Note:</b> IR illumination requires Class 4)                                                                                                                                                                                                                    |
| Interfaces                  | <ul style="list-style-type: none"> <li>■ Ethernet 1000BaseT (RJ45 according to EIA/TIA-568B)</li> <li>■ USB-C/USB2.0; High-Speed (<math>V_{out} = 5.1\text{ V}</math>, <math>I_{out} = 0.9\text{ A}</math>, <math>P_{out} = 4.5\text{ W}</math>)</li> </ul>                                                                              |
| Status LED                  | multicolor (red, blue, green)                                                                                                                                                                                                                                                                                                            |
| Mounting Options            | Wall- or ceiling-mountable                                                                                                                                                                                                                                                                                                               |
| Dimensions<br>(Ø x height)  | 164 x 96 mm                                                                                                                                                                                                                                                                                                                              |
| Weight                      | Gross weight: 1.180g                                                                                                                                                                                                                                                                                                                     |
| Housing                     | Aluminum, PBT-30GF                                                                                                                                                                                                                                                                                                                       |
| Standard accessories        | See <a href="#">MOBOTIX D71: Scope of Delivery, p. 18</a>                                                                                                                                                                                                                                                                                |
| MTBF                        | 80,000 hours                                                                                                                                                                                                                                                                                                                             |
| Certificates                | EN 50121-4, EN 55032, EN 55035, EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 61000-6-4, EN 62368-1, EN 63000, AS/NZS CISPR32, 47 CFR Part 15b, NRTL                                                                                                                                                                                      |
| Protocols                   | DHCP (client and server), DNS, ICMP, IGMP v3, IPv4, IPv6, HTTP, HTTPS, FTP, FTPS, MQTT, NFS, NTP (client and server), RTP, RTCP, RTSP, SFTP, SIP (client and server), SMB/CIFS, SNMP, SMTP, SSL/TLS 1.3, TCP, UDP, VLAN, VPN, Zero-conf/mDNS                                                                                             |
| Manufacturer warranty       | 5 years                                                                                                                                                                                                                                                                                                                                  |

# Image and Video Properties

|                           |                                                                                                 |
|---------------------------|-------------------------------------------------------------------------------------------------|
| Available video codecs    | <ul style="list-style-type: none"><li>▪ H.264, H.265</li><li>▪ MxPEG+</li><li>▪ MJPEG</li></ul> |
| Image resolutions         | VGA 640x360, XGA 1024x576, HD 1280x720, FHD 1920x1080, QHD 2560x1440, 4K UHD 3840x2160          |
| Multi streaming           | H.264, H.265 with triple streaming                                                              |
| Multicast stream via RTSP | Yes                                                                                             |
| Max. image resolution     | 4K UHD 3840x2160/4MP 2688x1512                                                                  |
| Max. frame rate (fps)     | MxPEG: 20@4K, H.264: 30@4K, H.265: 30@4K                                                        |

# General Software Features

| Feature                    | Properties                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WDR                        | Up to 120 dB                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Software features          | <ul style="list-style-type: none"><li>▪ H.264, H.265 Multistreaming</li><li>▪ Multicast stream via RTSP</li><li>▪ Digital pan, tilt, zoom/vPTZ (up to 8x zoom)</li><li>▪ Genetec protocol integration</li><li>▪ Programmable exposure zones</li><li>▪ Snapshot recording (pre/post-alarm images)</li><li>▪ Continuous recording</li><li>▪ Event recording</li><li>▪ Time-controlled flexible event logic</li><li>▪ Weekly schedules for recordings and actions</li><li>▪ Event video and image transfer via FTP and email</li><li>▪ Playback and QuadView via web browser</li><li>▪ Animated logos on the image</li><li>▪ Master/Slave functionality</li><li>▪ Privacy zone scheduling</li><li>▪ Remote alarm notification (network message)</li><li>▪ Programming interface (HTTP API)</li><li>▪ MxMessageSystem</li></ul> |
| ONVIF compatibility        | Profile G, S, T, (M with later firmware release)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Master/Slave functionality | Yes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Remote alarm notification  | Email, network message (HTTP/HTTPS), SNMP, MxMessageSystem, MQTT                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

| Feature                      | Properties                                                                                                                                                                                                                                                                                                           |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DVR/image storage management | <ul style="list-style-type: none"> <li>■ On internal microSD card</li> <li>■ On external USB and NAS devices</li> <li>■ Different streams for live image and recording</li> <li>■ MxPEG+ only</li> <li>■ MxFFS with buffered archive, pre- and post-alarm images, storage monitoring with error reporting</li> </ul> |
| Camera and data security     | User and group management, SSL connections, IP-based access control, IEEE 802.1X, intrusion detection, digital image signature                                                                                                                                                                                       |
| Firmware Tampering Detection | Digital Signature                                                                                                                                                                                                                                                                                                    |

## Video Analysis

| Feature                | Properties                                            |
|------------------------|-------------------------------------------------------|
| Video motion detection | Yes                                                   |
| MxActivitySensor       | Version 1.0, 2.1, 3.0 and object-based MxAnalytics AI |
| MxAnalytics            | Yes                                                   |
| MOBOTIX App support    | Yes                                                   |

## Video Management Software

| Feature                | Properties                                                                                                                                                                                                     |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOBOTIX HUB            | Yes<br><a href="http://www.mobotix.com &gt; Services &gt; Download Center &gt; Software Downloads">www.mobotix.com &gt; Services &gt; Download Center &gt; Software Downloads</a>                              |
| MxManagementCenter     | Yes (latest version recommended)<br><a href="http://www.mobotix.com &gt; Services &gt; Download Center &gt; Software Downloads">www.mobotix.com &gt; Services &gt; Download Center &gt; Software Downloads</a> |
| MOBOTIX LIVE App       | Yes, available in Google Play Store (Android) and Apple App Store (iOS).                                                                                                                                       |
| 3rd Party VMS Software | See ONVIF Profile S/G/T specification                                                                                                                                                                          |

## Model Variants

**NOTE!** When ordering, select either the **A** or the **B** camera variant (e.g. Mx-**<camera>A**-**<sensor/lens>** or Mx-**<camera>B**-**<sensor/lens>**).

| Order Code                         | Horizontal Angle of View |
|------------------------------------|--------------------------|
| <b>4K Image Sensor (3840x2160)</b> |                          |
| Mx-D71(A/B)-8DN050                 | 95°                      |

Technical Specifications

Model Variants

---

| Order Code                          | Horizontal Angle of View |
|-------------------------------------|--------------------------|
| Mx-D71(A/B)-8DN080                  | 60°                      |
| Mx-D71(A/B)-8DN100                  | 45°                      |
| Mx-D71(A/B)-8DN150                  | 30°                      |
| Mx-D71(A/B)-8DN280                  | 15°                      |
| <b>4MP Image Sensor (2688x1512)</b> |                          |
| Mx-D71(A/B)-4DN050                  | 95°                      |
| Mx-D71(A/B)-4DN080                  | 60°                      |
| Mx-D71(A/B)-4DN100                  | 45°                      |
| Mx-D71(A/B)-4DN150                  | 30°                      |
| Mx-D71(A/B)-4DN280                  | 15°                      |



---

For a complete list of lenses for MOBOTIX cameras, please see the Lens Table document for MOBOTIX 7 models on [www.mobotix.com](http://www.mobotix.com) > [Services](#) > [Download Center](#) > [Marketing & Documentation](#) > [Lens Table](#).


## Dimensions

**NOTE!**

Drilling template: [www.mobotix.com](http://www.mobotix.com) > Services > Download Center > Marketing & Documentation > Drilling Templates.

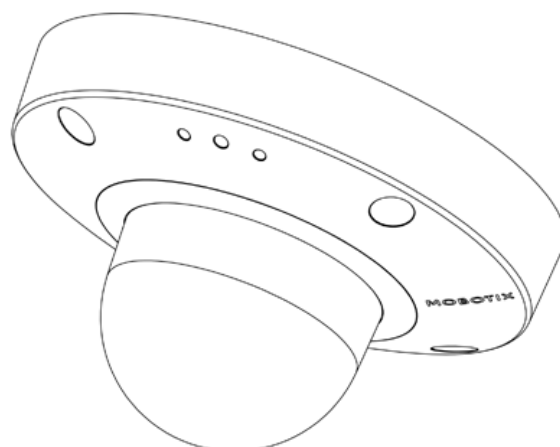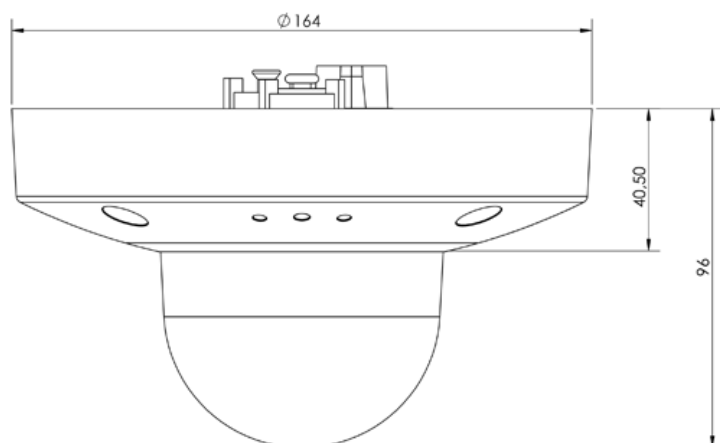

In-Ceiling Set

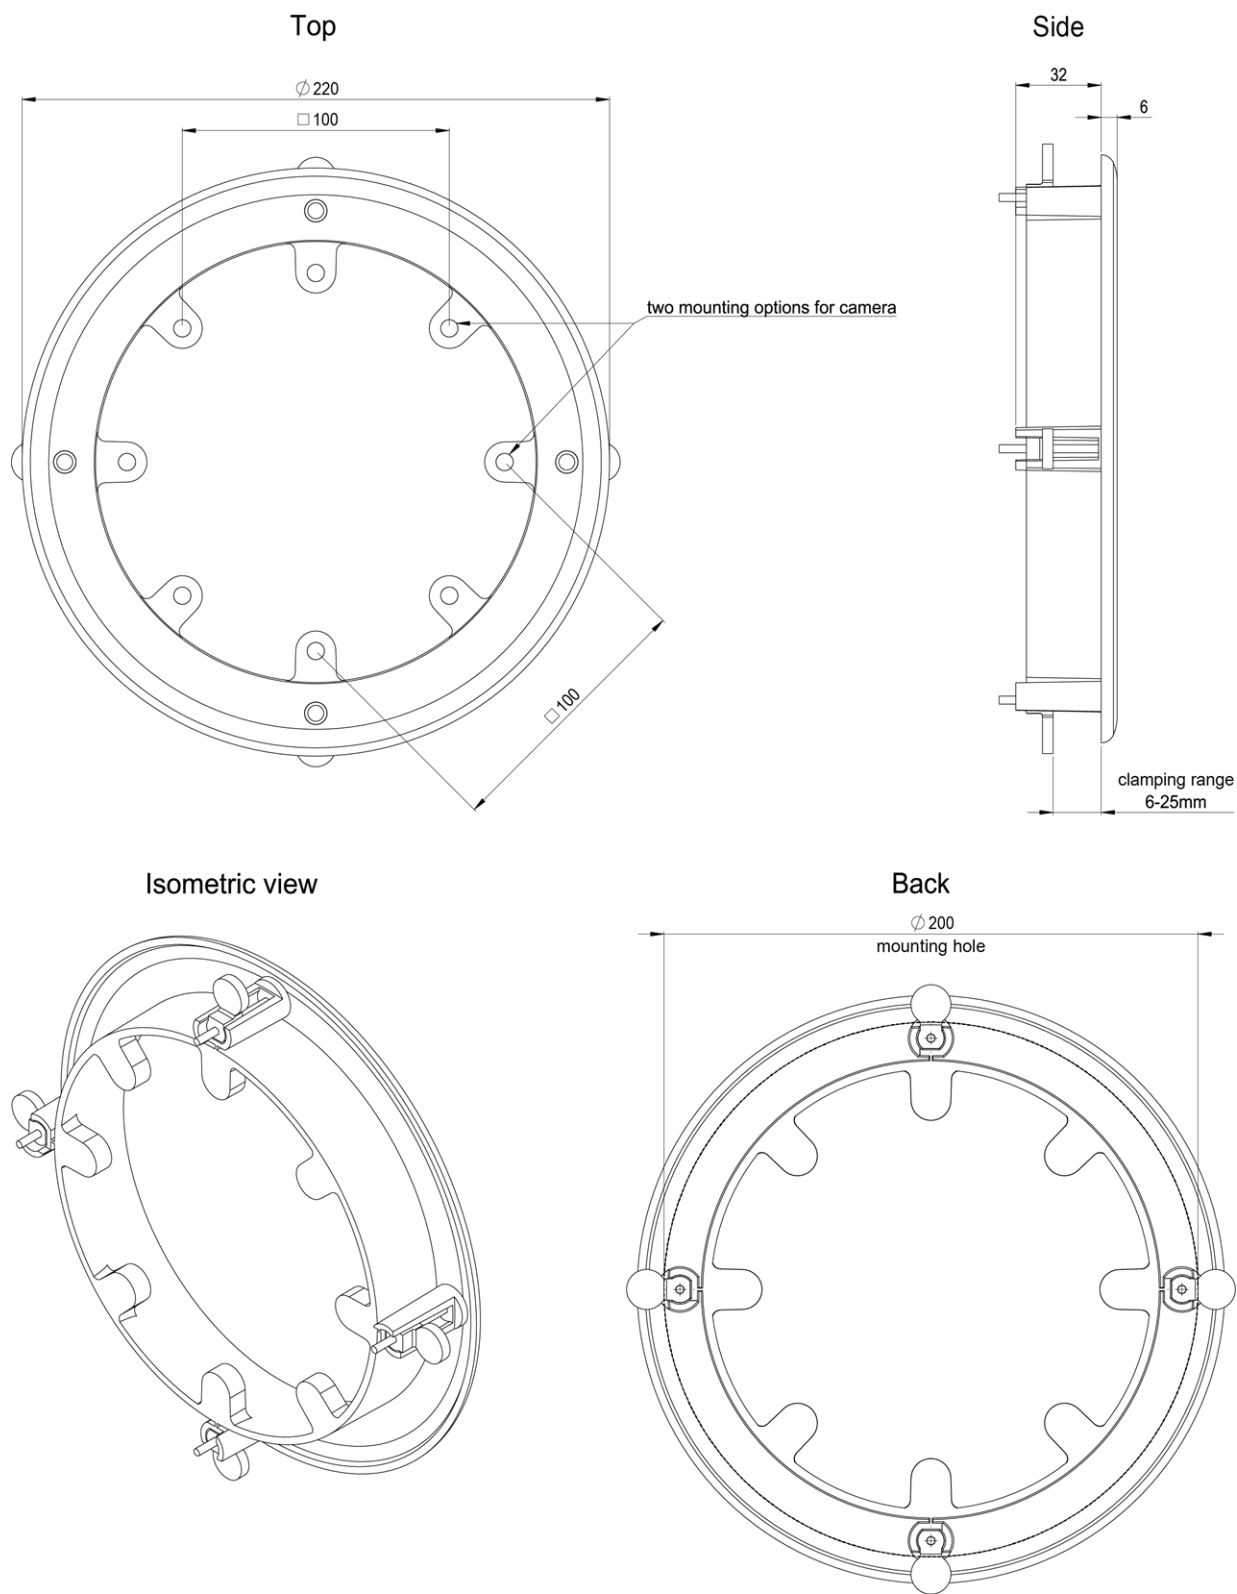

## Mounting

This section contains the following information:

|                                        |           |
|----------------------------------------|-----------|
| <b>Adjusting the Camera Lens</b> ..... | <b>32</b> |
| <b>Mounting Options</b> .....          | <b>36</b> |
| <b>Connecting the Camera</b> .....     | <b>51</b> |

## Adjusting the Camera Lens

Adjusting the camera at the mounting position will ensure that you will see the desired field of view later on.

**CAUTION!**

When adjusting the image focus or the field of view of the camera, always make sure that you can see the live image of the camera on your monitor. See [Camera Software in the Browser, p. 67](#).

## Removing the Dome

1. Remove the cover of the clamping ring ① by turning counterclockwise until resistance is felt.



2. Loosen the four fastening screws from the clamping ring with the supplied Allen wrench [M.3, p. 19](#) and then carefully pull off the dome.



3. Pull the dome off upwards.

## Focusing the Camera Lens

1. Release the two horizontal and the two vertical attached Allen screws① on both sides of the lens mount with the supplied Allen wrench [M.3, p. 19](#).



2. Aim the camera by rotating ② and panning ③ the lens mount.



### CAUTION!

Never use force when adjusting the direction of the camera, as this could damage the camera beyond repair.

3. Fasten the two horizontal and the two vertical attached Allen screws① on both sides of the lens mount.

## Mounting

### Adjusting the Camera Lens

---

4. Release the screw ④ on top of the lens mount for aiming the lens.



5. Aim the lens ⑤ by turning it with the orange lens wrench, [M.1, p. 19](#).



#### **CAUTION!**

Overturning may damage the sensor board on which the lens is mounted.

Do not turn the lens more than the noticeable stop.

6. Tighten the screw ④ on top of the lens mount.

#### **NOTE!**

The lens can only be focused when the screw on the top of the lens mount is tightened.

7. Focus the lens ⑥ by turning it with the orange lens wrench [M.1, p. 19](#).



**NOTE!**

After focusing, further adjustment of the focusing must be made due to the optical properties of the dome.

This table shows the approximate rotations required to optimally adjust the objective to the mounted dome.

| Lens      | Turns (counterclockwise) | Degrees (counterclockwise) |
|-----------|--------------------------|----------------------------|
| 95°/5 mm  | ~ 0                      | ~ 0°                       |
| 60°/8 mm  | ~ 1/16                   | ~ 22.5°                    |
| 45°/10 mm | ~ 1/8                    | ~ 45°                      |
| 30°/15 mm | ~ 1/4                    | ~ 90°                      |
| 15°/28 mm | ~ 1                      | ~ 360°                     |

8. If required, clean the optical surfaces using a clean, lint-free cotton cloth.
9. If not already in place, attach the anti-glare ring to the lens(see [Attaching the Anti Glare Ring, p. 35](#)).
10. Reinsert the dome and the clamping ring, then fasten the four fastening screws with the supplied Allen wrench [M.3, p. 19](#) (see [Attaching the Dome, p. 36](#)).

## Attaching the Anti Glare Ring

The anti-glare ring is used to protect the lens from glare effects that can have a negative effect on the camera image.

**CAUTION!**

The anti-glare ring is not mounted when delivered and should be installed before operating the device.

1. Remove the dome (see [Removing the Dome, p. 32](#))
2. Remove the protective film from the adhesive surface of the anti-glare ring [1.14, p. 18](#).

## Mounting

### Mounting Options

---

3. Carefully press the anti-glare ring ① with the adhesive surface into the recess around the lens.



## Attaching the Dome

1. Insert the dome and the clamping ring, then fasten the four fastening screws with the supplied Allen wrench [M.3, p. 19](#).



2. Attach the cover of the clamping ring ① by turning clockwise until resistance is felt.



## Mounting Options

You can mount the MOBOTIX D71 to any even surfaces e.g. on ceilings or walls without any accessories.

**CAUTION!**

The MOBOTIX D71 camera must be mounted on the ceiling. Only in this way is reliable observation of the nursing beds possible.

**Accessories for Mounting**

- The Wall Mount provides the ideal mounting option for installations where the camera is supposed to point downwards.
- Using the Wall Mount and the stainless steel Corner/Pole Mount, the camera can also be mounted to poles with up to 180 mm/7.1" diameter or to 90° corners.
- With the In-Ceiling Set, you can discreetly install the MOBOTIX D71 Camera in the ceiling with the connections and most components hidden inside the ceiling.

All mounting options provide concealed cabling, thus improving installation security.

**CAUTION!**


- Install only on a flat surface! Unevenness must not exceed 0.5 mm/0.02 in!
- Only use genuine MOBOTIX patch cables to guarantee the weatherproofness!

**NOTE!**

- Before mounting the camera, determine its ideal position and make sure that the field of view is not obstructed in any way. Once the camera has been mounted, you can fine-tune the image.
- If the monitored area changes or the camera has to be installed in a different location, you can simply exchange the lenses.

## Mounting the Camera Without Accessories

The MOBOTIX D71 can be easily installed directly on walls or ceilings. For installation without any accessories, you should first install a flush-mounted wall outlet, since the connectors on the rear of the camera need some space.

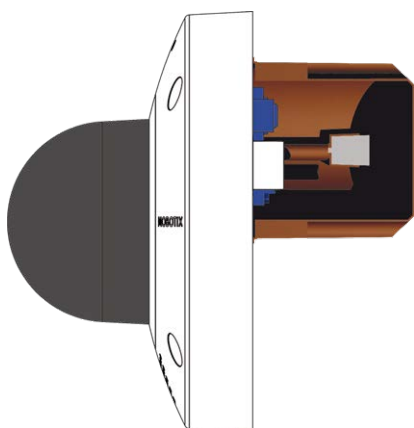


Before mounting the camera, make sure that a network connection with power supply according to the PoE Plus (802.3at-2009) standard is available at the mounting position (see [Connecting the Camera to the Network, p. 54](#)).

#### NOTE!

Do not use the dowels if the installation surface is wood. Only use the screws to fasten the mounting plate directly on the surface. In order to facilitate screwing in wood, the positions should first be pre-drilled using a 2 mm drill bit, for example (drilling depth just slightly less than screw length).

## Step by Step

1. Mark the holes ① for drilling using the drilling template (see [Drilling Template, p. 11](#)). When drilling, use a suitable 8 mm drill bit and drill holes at least 60 mm/1.2 in deep.

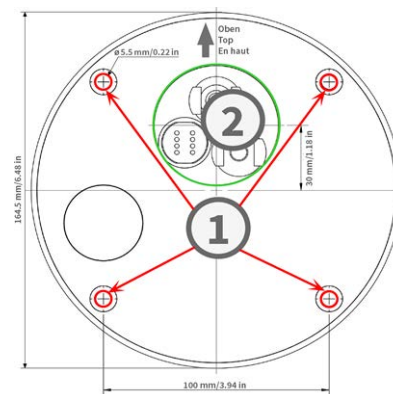

#### NOTE!

The drilling template also includes a circle ② marking the minimum size and position of the wall outlet, in addition to the drilling holes.

2. Fully push the dowels [M.4, p. 19](#) into the holes you drilled.
3. Establish the PoE network connection to the camera (see [Connecting the Camera to the Network, p. 54](#)).
4. Mount the camera using the supplied pan head screws [M.5, p. 19](#).

## Mounting with the On-Wall Set



### CAUTION!

Before mounting the camera, make sure that a network connection with power supply according to the PoE Plus (802.3at-2009) standard is available at the mounting position (see [Connecting the Camera to the Network, p. 54](#)).

The On-Wall Set available in 0° and 10° inclinations allows you to easily mount the MOBOTIX D71 on the wall or ceiling. The camera remains IP65 weatherproof (dust-proof and resistant to water jets). The On-Wall Sets also cover RJ45 wall outlets and has ample space for additional modules ([Installing a Mini-Box in the On-Wall Set, p. 42](#), WiFi, batteries, etc.).

The 10° On-Wall Set is the right choice if you want to mount the MOBOTIX D71 on a wall with the lens pointing vertically downward (90° or more).

### NOTE!

If the 10° On-Wall Set is not used, then the angle of the lens may not exceed 80° for design-related reasons.

### NOTE!


Drilling template: [www.mobotix.com](http://www.mobotix.com) > [Services](#) > [Download Center](#) > [Marketing & Documentation](#) > [Drilling Templates](#).

### NOTE!

Do not use the dowels if the installation surface is wood. Only use the screws to fasten the mounting plate directly on the surface. In order to facilitate screwing in wood, the positions should first be pre-drilled using a 2 mm drill bit, for example (drilling depth just slightly less than screw length).

## Step by Step

1. Mark the holes for drilling using the drilling template (see [Drilling Template, p. 11](#)). When drilling, use a suitable 8 mm drill bit and drill holes with at least 60 mm/1.2 in depth.
2. Fully push the dowels [W.8, p. 20](#) into the holes ① you drilled.

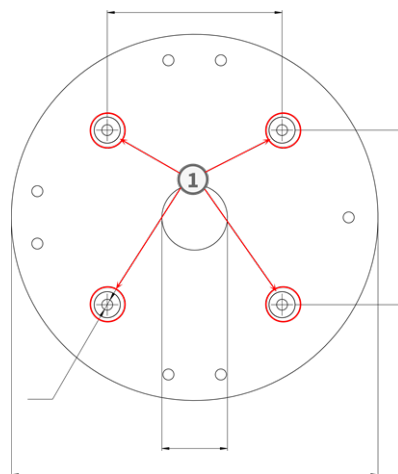

3. If you use the 0° set, close the cable openings ② that are not needed with the enclosed closing plugs. Fix each of them in place from the inside using a small hexagonal nut.




4. Fit the cable gland ③ to the cable opening of the On-Wall Set such that the black rubber seal is on the outside. Fix it in place from the inside using a small hexagonal nut.



5. Mount the On-Wall Set (without the camera) at the intended position using the Torx screws from the accessories ④ .



6. Attach the counter nut ⑤ to the network cable, pass it through the seal from the outside and tighten the nut. The network cable is now screwed into the On-Wall Set, weatherproof.

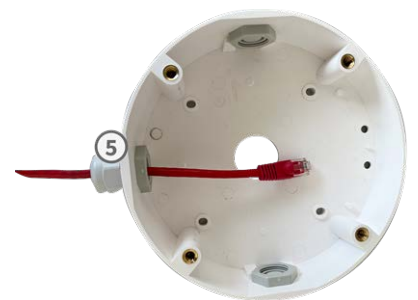

7. Connect the on-site network cable with the camera patch cable using a standard connector. Excess cable can be stored easily within the On-Wall Set (see [Connecting the Camera, p. 51](#)).
8. Remove the rubber plugs from the front of the camera.



9. Using the supplied Allen wrench [W.2, p. 20](#), secure the camera to the bottom plate of the On-Wall Set with four Allen screws [W.5, p. 20](#) and one washer [W.6, p. 20](#) each.
10. Push the rubber plugs [M.7, p. 19](#) into the screw holes of the camera.
11. Connect the camera to the PoE network connection of the building (see [Connecting the Camera to the Network, p. 54](#)).

## Installing a Mini-Box in the On-Wall Set



MOBOTIX offers various interface boxes that can be easily installed in the housing of the On-Wall Set. The following interface boxes are compatible with your camera:


- Overvoltage-Protection-Box LSA  
Network connector with overvoltage protection, LSA version
- Overvoltage-Protection-Box RJ45  
Network connector with overvoltage protection, RJ45 version
- NPA-Box  
Weatherproof PoE injector (IEEE 802.3af) and network connector

Two double-sided adhesive pads are included in the scope of delivery of a mini box.




## Step by Step

1. Stick the adhesive pads to the bottom of the mini box as shown in the image.

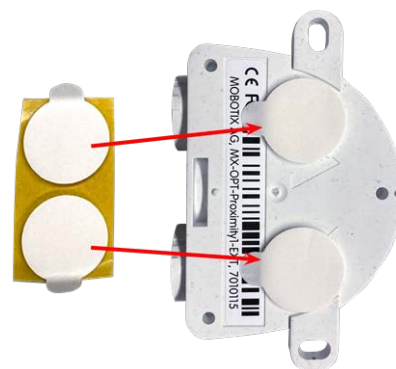

2. Remove the protective foil from the adhesive pads, place the two tabs of the mini box with light pressure on the plastic lugs of the on-wall set.

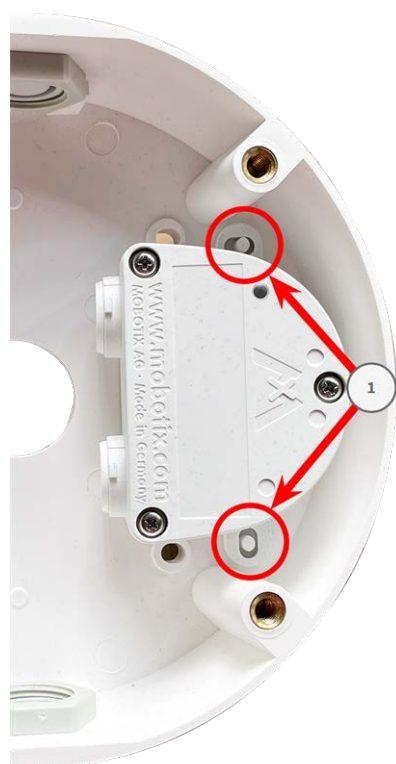

## Mounting with the In-Ceiling Set



### CAUTION!

Before mounting the camera, make sure that a network connection with power supply according to the PoE Plus (802.3at-2009) standard is available at the mounting position (see [Connecting the Camera to the Network, p. 54](#)).


With the In-Ceiling Set, you can discreetly install the MOBOTIX D71 Camera in the ceiling with the connections and most components hidden inside the ceiling. The In-Ceiling Set is particularly suitable if the D71 is to be installed in suspended ceilings of indoor spaces with customer or public traffic (e.g. hotels, restaurants, banks, retail stores, public buildings, etc.).

### NOTE!

Drilling template: [www.mobotix.com](http://www.mobotix.com) > Services > Download Center > Marketing & Documentation > Drilling Templates.

## Step by Step

1. Cut a round hole with a diameter of 200 mm into the ceiling (see [Drilling Template, p. 11](#)).

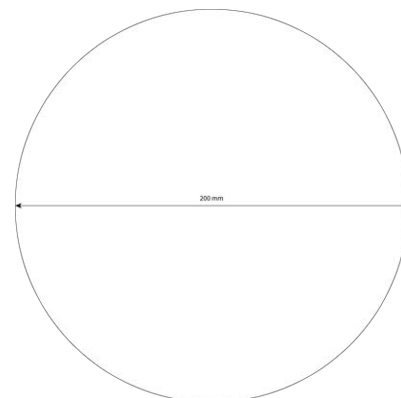

2. Run the network cable above the suspended ceiling and ensure that enough cable slack is available.
3. Remove the rubber plugs from the front of the camera.



4. Connect the on-site network cable with the camera patch cable using a standard connector. Excess cable can be stored easily within the In-Ceiling Set (see [Connecting the Camera, p. 51](#)).
5. Place the In-Ceiling Set in the ceiling opening and tighten the dovetail guides clockwise using a Phillips screwdriver.



6. Push the rubber plugs [M.7, p. 19](#) into the screw holes of the camera.

## Mounting

### Mounting Options

---

7. Connect the camera to the PoE network connection of the building (see [Connecting the Camera to the Network](#), p. 54).

## Mounting with the Wall Mount

### CAUTION!

Before mounting the camera, make sure that a network connection with power supply according to the PoE Plus (802.3at-2009) standard is available at the mounting position (see [Connecting the Camera to the Network](#), p. 54).

The Wall Mount allows you to easily mount the MOBOTIX D71 to walls or extensions, indoors and outdoors. The camera remains IP65 weatherproof (dust-proof and resistant to water jets). The Wall Mount also covers RJ45 wall outlets and has ample space for additional modules (WiFi, batteries, etc.).

Before mounting the MOBOTIX D71 with the Wall Mount, drill the holes for the fixtures. You can use the supplied drilling template (see [Drilling Template](#), p. 11).

### NOTE!


Drilling template: [www.mobotix.com](http://www.mobotix.com) > Services > Download Center > Marketing & Documentation > Drilling Templates.

### NOTE!

Do not use the dowels if the installation surface is wood. Only use the screws to fasten the mounting plate directly on the surface. In order to facilitate screwing in wood, the positions should first be pre-drilled using a 2 mm drill bit, for example (drilling depth just slightly less than screw length).

## Step by Step

1. Mark the holes ① for drilling using the drilling template (see [Drilling Template](#), p. 11). When drilling, use a suitable 8 mm drill bit and drill holes with at least 60 mm/1.2 in depth.

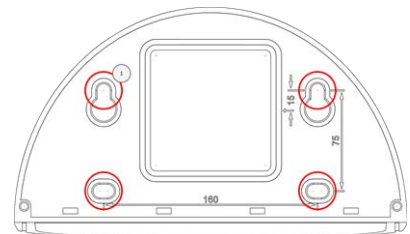

2. Fully push the dowels [W.8](#), p. 20 into the holes you drilled.
3. Remove the protective foil from the black wall sealing [W.10](#), p. 20 and apply it to the back of the Wall Mount (the surface must be clean and free of grease).



4. Pass the network cable through the large square opening into the Wall Mount.

5. Use the supplied hex head screws [W.7, p. 20](#) to install the Wall Mount at the intended position.
6. Remove the rubber plugs from the front of the camera.



7. Prepare the on-site network cable for connection with the camera patch cable using a standard connector. Excess cable can be stored easily within the Wall Mount (see [Connecting the Camera, p. 51](#)).
8. Using the supplied Allen wrench [W.2, p. 20](#), secure the camera to the bottom plate of the Wall Mount with two long Allen screws [W.5, p. 20](#) and one washer [W.6, p. 20](#) each.



9. Connect the camera to the PoE network connection of the building (see [Connecting the Camera to the Network, p. 54](#)).
10. Install the bottom plate [W.2, p. 20](#) with the camera in the Wall Mount:
  - Use two short Allen screws [W.4, p. 20](#) with one washer [W.6, p. 20](#) each to secure the camera on the rear side of the bottom plate ① .




- Use two long Allen screws [W.5, p. 20](#) with one washer [W.6, p. 20](#) each to secure the camera on the front side of the bottom plate ② .
11. Push the rubber plugs [M.7, p. 19](#) into the screw holes of the camera ( ① and ② in the figure above).

## Mounting on a Corner (Corner/Pole Mount)

### CAUTION!

Before mounting the camera, make sure that a network connection with power supply according to the PoE Plus (802.3at-2009) standard is available at the mounting position (see [Connecting the Camera to the Network](#), p. 54).

### Dimensions MOBOTIX D71 Corner/Pole Mount

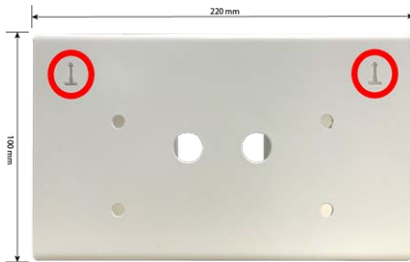


### NOTE!

When installing, the arrows of the mount must point upwards.




## Step by Step


1. Mark the four dowel holes ① on the corner of the building using the drilling template. Make sure that the arrows ② on the Corner/Pole Mount point upwards.

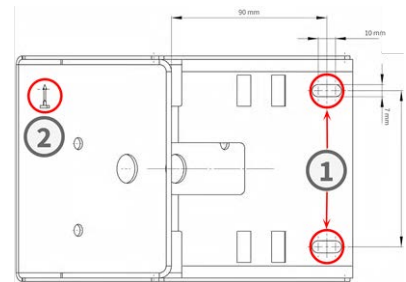

2. Drill the holes with a 10 mm wall drill then place the included dowels in the drilled holes.

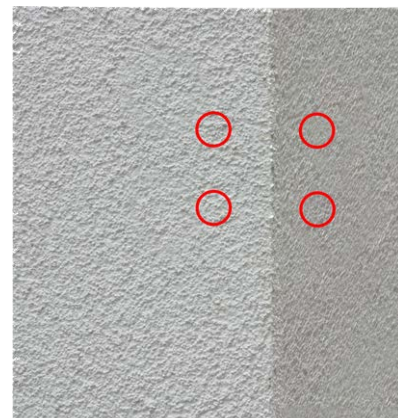

3. Push the supplied network cable through one of the holes ① .

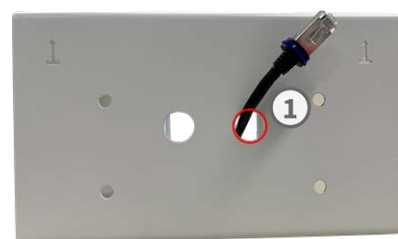

4. Screw the Corner/Pole Mount into place on the corner of the building using the wood screws and washers.



5. Proceed by mounting the Wall Mount to the Corner/Pole Mount as described in [Mounting with the Wall Mount, p. 46](#).

## Mounting on a Pole (Corner/Pole Mount)

### CAUTION!

Before mounting the camera, make sure that a network connection with power supply according to the PoE Plus (802.3at-2009) standard is available at the mounting position (see [Connecting the Camera to the Network, p. 54](#)).

### NOTE!

The pole should have a diameter between 60 and 180 mm.

For dimensions of the Corner/Pole Mount, please refer to [Dimensions MOBOTIX D71 Corner/Pole Mount, p. 48](#).

## Step by Step


1. Guide the supplied stainless steel straps along the cutouts in the Corner/Pole Mount as shown in the figure.



2. Prepare the pole mount with steel straps
3. Tighten the stainless steel straps on the Corner/Pole Mount with a screwdriver. If necessary, the ends of the straps can be cut off.



4. Push the supplied network cable through one of the holes ① .

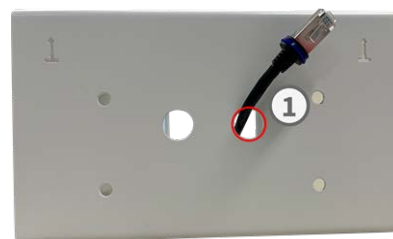

5. Prepare the network cabling
6. Proceed by mounting the Wall Mount to the Corner/Pole Mount as described in [Mounting with the Wall Mount, p. 46](#).


## Connecting the Camera

All connections to the camera (network, MiniUSB, inputs/outputs) can be made directly on the camera. No further accessories are required for this. A PoE switch provides the camera's power supply.

### Connecting a USB-C Device

The camera has a USB-C port that allows connecting external storage media or extension boxes, for example.

1. To uncover the USB-C port, remove the bayonet catch by rotating it counter-clockwise, then remove the blue rubber plug.

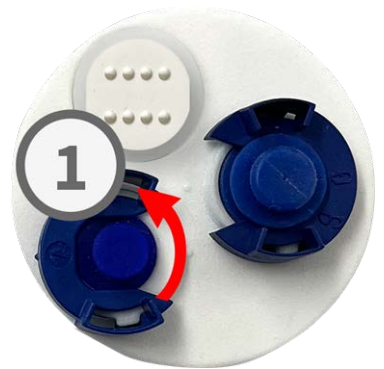

2. Plug the USB-C connector into the port and press in firmly until the blue sealing ring clicks into place.



3. Attach the bayonet catch and turn it clockwise until it clicks in the locked position.
4. Connect the USB-C device to the other end of the USB cable.

### Connecting I/O Devices

The camera has an I/O connection terminal allows multiple I/O devices to be connected.

#### CAUTION!

Before you proceed, pay attention to the intended use or polarity of the slots (see [Assignment of I/O-Sockets, p. 53](#)).

## Mounting

### Connecting the Camera

---

1. To uncover the I/O connectors, remove the white I/O cover ① by rotating it counter-clockwise.




2. Insert the cables of the I/O devices through the openings provided in the I/O cover.



3. Plug the connection wires of the respective units into the corresponding slots ② of the connection terminal and check their tight fit.




4. Attach the white I/O cover ③ by rotating it clockwise.

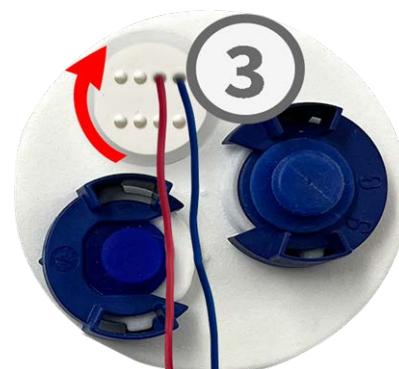

## Assignment of I/O-Sockets

The MOBOTIX D71 has an I/O terminal that allows connecting multiple I/O devices.

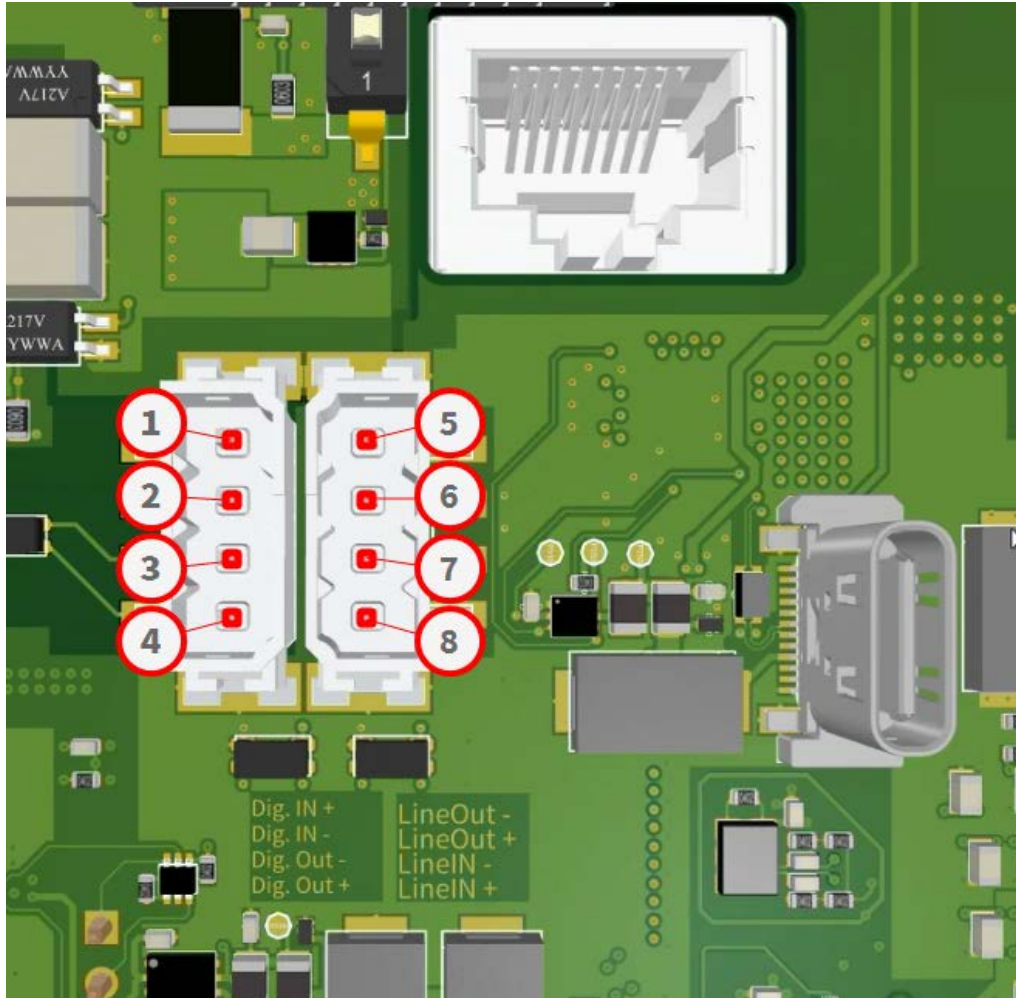

The slots are assigned as follows:

- |                 |              |
|-----------------|--------------|
| ① Digital IN +  | ⑤ Line OUT - |
| ② Digital IN -  | ⑥ Line OUT + |
| ③ Digital OUT - | ⑦ Line IN -  |
| ④ Digital OUT + | ⑧ Line IN +  |

## Connecting the Camera to the Network

### CAUTION!

- The PoE switch must provide Class 4 according to PoE Plus (802.3at-2009) as well as the 100/1000 Mbps Ethernet interface of the camera.
- It is highly recommended to use an uninterruptible power supply (UPS) for the switch.
- The maximum length of the network cable for remotely supplying power is 100 m (300 ft).




## Connecting the camera to the network

1. To uncover the RJ45 network connector, remove the bayonet catch ① by rotating it counter-clockwise and pull it off with the blue rubber plug.




2. Plug the supplied patch cable ② into the network connector and press the plug in firmly until the blue sealing ring clicks into place.

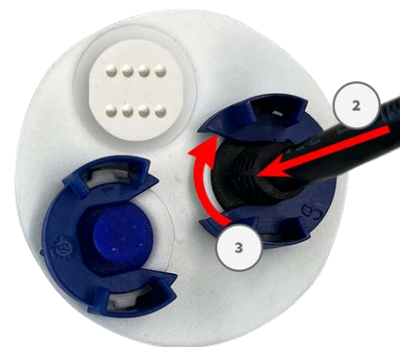

3. Attach the bayonet catch ③ by rotating it clockwise.

4. Connect the supplied patch cable [1.6, p. 18](#) with the PoE network connection of the building using a standard connector.

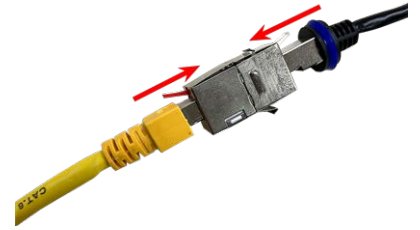



---

## Operating the Camera

This section contains the following information:

|                                         |           |
|-----------------------------------------|-----------|
| <b>Getting Started</b> .....            | <b>58</b> |
| <b>Boot Options of the Camera</b> ..... | <b>58</b> |
| <b>Initial Camera Setup</b> .....       | <b>60</b> |

# Getting Started

You can use the MOBOTIX D71 with any current browser – or with MxManagementCenter.

You can download MxManagementCenter free-of-charge from [www.mobotix.com > Services > Download Center > Software Downloads](http://www.mobotix.com > Services > Download Center > Software Downloads).

1. **Connect the camera to the network.** The network cable will also provide power to the camera(see [Connecting the Camera to the Network, p. 54](#)).
2. **Establish a connection to the camera and adjust the network settings if required:** By factory default, MOBOTIX cameras are booting as DHCP client with an additional fixed IP address in the 10.x.x.x range (e.g., 10.16.0.128). Local computer networks usually have IP addresses in the 172 or 192 ranges. Depending on whether a DHCP server is present on the local network or if the network has been set up to use fixed IP addresses, there are several possibilities for establishing a connection to the camera and to change its network settings as described in [Initial Camera Setup, p. 60](#).
3. **Configure camera:** You can use the user interface of the camera in a browser or in MxManagementCenter.

## Boot Options of the Camera

By default, the camera starts as DHCP client and automatically tries to get an IP address from a DHCP server. To start the camera in a mode different from the default mode, you can activate the boot menu of the camera.

### NOTE!

Pressing the key of the camera will let the camera announce the current IP address of the camera on the speaker.



### CAUTION!

When opening the camera, do not insert any objects into the housing. This could damage the camera!

1. Disconnect the camera's power supply.
2. Remove the black cover screw ① with a screwdriver.



3. Take a suitable tool for operating the boot menu (e.g. the tweezers [M.3](#)), **but do not use a paper clip or pointed objects!**
4. Reconnect the power supply of the camera.
5. **Activate the boot menu:** The LED at the top of the camera housing lights up 5 to 10 seconds after establishing the power supply and will stay on for 10 seconds. Press the reset key ② with the tool. The camera enters the boot menu, ready for selecting one of the boot options. The LED will flash once. The flash signal will be repeated every second.



**NOTE!**

The number of flashes corresponds to the current boot option.

6. **Switch the boot option:** Press the key (< 1 sec). After the last boot option, the camera returns to the first boot option (LED flashes once).

## Operating the Camera

### Initial Camera Setup

7. **Select a boot option:** Press the key longer (> 2 sec). The camera confirms the selection by flashing the LED rapidly for 3 seconds. After 20 sec, the camera will play a sound according to the table below.

| LED Flashes | Boot Option             | Meaning                                                                                                                                                                                                       | Audio Confirmation |
|-------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| 1x          | •/•                     | This option is not supported on this camera model.                                                                                                                                                            | •/•                |
| 2x          | Factory Defaults        | Starts the camera with factory defaults (factory default IP address, users and passwords will not be reset).                                                                                                  | <b>Boing</b>       |
| 3x          | Automatic IP Address    | Starts the camera as DHCP client and tries to obtain an IP address from a DHCP server. If a DHCP server cannot be found or no IP address can be obtained, the camera starts with its factory default address. | <b>Boing-Boing</b> |
| 4x          | Backup Operating System | Starts the camera with the recovery system, e.g., in order to recover from a failed update of the camera software.                                                                                            | <b>Alarm Sound</b> |

#### NOTE!

##### Starting the Camera With Factory Defaults or an Automatic IP Address (DHCP)

The configurations loaded when using the boot options 2 and 3 will not be automatically saved to the camera's flash memory. Upon starting the camera the next time, the camera will use the last configuration it stored. You can store the configuration in the camera's flash memory using the **Admin Menu > Store** command.

#### CAUTION!

- Note that you can restore specific parts of the camera configuration afterward by using "Restore" to re-apply the settings still stored in the camera.
- As opposed to resetting the camera using **Admin Menu > Reset configuration to factory defaults**, the user information will not be reset if the camera is booted using the factory defaults.
- When starting the camera with DHCP support (option 2), make sure that the network has a properly functioning DHCP server. If this is not the case, the camera cannot obtain a valid IP address and will fall back to its last IP address.
- You should also make sure that the cameras always get the same IP addresses by mapping the MAC addresses of the cameras to the desired IP addresses.

## Initial Camera Setup

### Check the Preconditions

- Is the camera running (check camera power LED)?
- Is the camera accessible using my current network connection?

- Do I have the necessary information for successfully running the camera on the network?
  - IP address of NTP (*Network Time Protocol*) server.
  - IP address of network gateway (if required).

## Access the Camera

1. Start your web browser.
2. Access the camera using its zeroconf address:
  - Look for the factory IP address such as 10.x.y.z on the sticker on the camera body or the packaging.
  - Enter this address in the address bar of your browser using the following syntax: mx10-x-y-z.local.

### EXAMPLE:

Taking a factory IP address of 10.32.24.129 as an example, you would enter mx10-32-24-129.local in the address bar of your browser.

- Click on **Admin Menu** and enter the default access credentials (admin/meinsm).
3. In the **Quick Installation** dialog, select your language, then click on .




## Operating the Camera

### Initial Camera Setup

---

4. Continue clicking on  and do not change any settings until you reach the **Security** dialog.

Set a password for the admin user of the camera. Make sure you keep the password in a safe place.

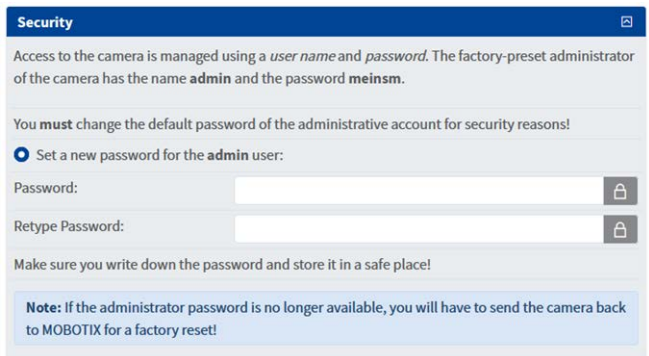

The **Security** dialog box contains the following information:


- Header: **Security**
- Text: "Access to the camera is managed using a *user name* and *password*. The factory-preset administrator of the camera has the name **admin** and the password **meinsm**."
- Text: "You **must** change the default password of the administrative account for security reasons!"
- Radio button selection: "Set a new password for the **admin** user:" (selected)
- Form fields: "Password:" and "Retype Password:" (both with lock icons)
- Text: "Make sure you write down the password and store it in a safe place!"
- Note box: "Note: If the administrator password is no longer available, you will have to send the camera back to MOBOTIX for a factory reset!"

#### NOTE!

Make sure to record the new password in the system documentation!

5. Continue clicking on  and do not change any settings until you reach the **Country Settings** dialog.


Check the time zone and adjust it, if necessary.

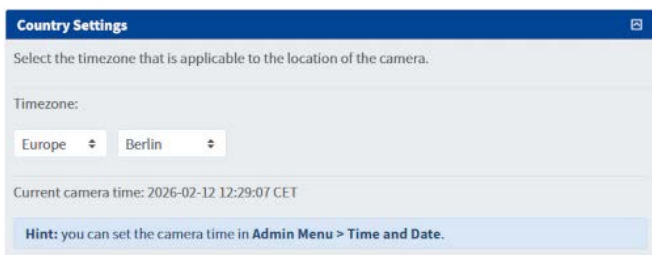

The **Country Settings** dialog box contains the following information:

- Header: **Country Settings**
- Text: "Select the timezone that is applicable to the location of the camera."
- Text: "Timezone:"
- Form fields: "Europe" and "Berlin" (both with dropdown arrows)
- Text: "Current camera time: 2026-02-12 12:29:07 CET"
- Hint box: "Hint: you can set the camera time in Admin Menu > Time and Date."


6. Click on  and in the **Audio Settings** dialog, activate the devices that are available for this camera.

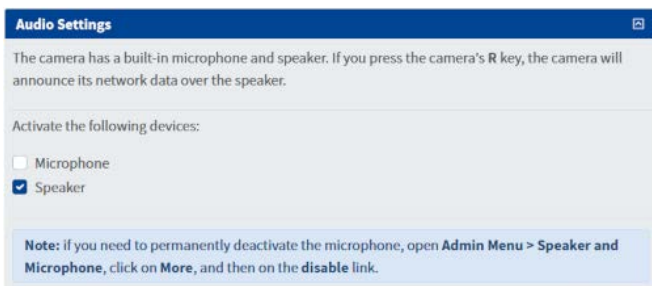

The **Audio Settings** dialog box contains the following information:

- Header: **Audio Settings**
- Text: "The camera has a built-in microphone and speaker. If you press the camera's **R** key, the camera will announce its network data over the speaker."
- Text: "Activate the following devices:"
- Form fields: "Microphone" (unchecked) and "Speaker" (checked)
- Note box: "Note: if you need to permanently deactivate the microphone, open Admin Menu > Speaker and Microphone, click on **More**, and then on the **disable** link."

7. Click on  and in the **Camera Name** dialog, enter a descriptive camera name.

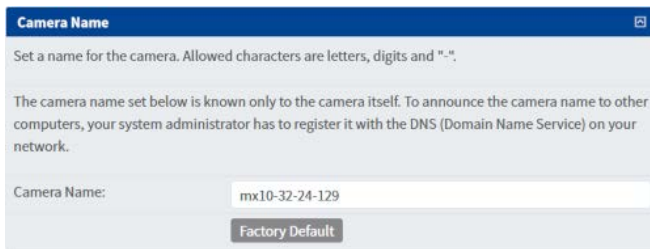

**Camera Name**

Set a name for the camera. Allowed characters are letters, digits and "-".

The camera name set below is known only to the camera itself. To announce the camera name to other computers, your system administrator has to register it with the DNS (Domain Name Service) on your network.

Camera Name:


**Factory Default**

**NOTE!**

Make sure to record this camera name in the system documentation!

8. Continue clicking on  and do not change any settings until you reach the **Time Server** dialog.

Enter the IP address of your network time servers as provided by your network administrator (e.g. 192.168.1.1 ptbtime1.ptb.de; use spaces to separate multiple addresses).




**Time Server**

NTP  Select the protocol offered by remote time servers.

 Enter time server address(es).

If the time server is working properly, the LED to the right of the field turns green. A red LED indicates that the server does not work properly.

9. Click on  and review the information in the **Store Configuration** dialog. If everything is correct, print the page and include it in the system documentation.

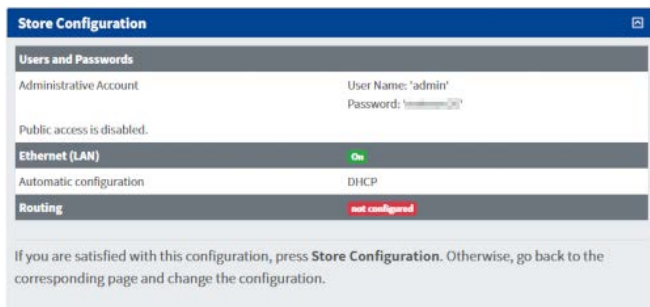

**Store Configuration**

**Users and Passwords**

Administrative Account User Name: 'admin'  
Password: '\*\*\*\*\*'

Public access is disabled.


**Ethernet (LAN)** On

Automatic configuration DHCP

**Routing** not configured

If you are satisfied with this configuration, press **Store Configuration**. Otherwise, go back to the corresponding page and change the configuration.

10. Click on **Store Configuration** and then on **Reboot**.

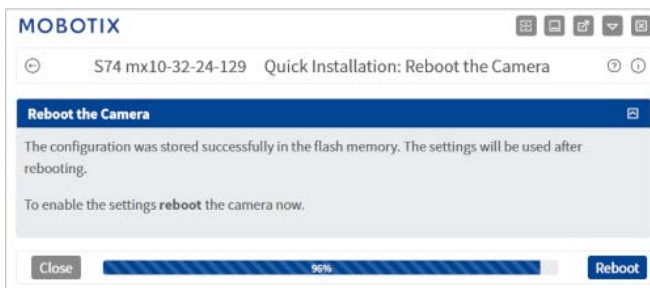

**MOBOTIX**

S74 mx10-32-24-129 Quick Installation: Reboot the Camera

**Reboot the Camera**

The configuration was stored successfully in the flash memory. The settings will be used after rebooting.

To enable the settings **reboot** the camera now.

**Close**  **Reboot**


11. Enter the new password you entered in the **Security** dialog when prompted by the camera.

The camera will now reboot; once it is working again, you will see its live image.

## Find the "Real" IP Address of the Camera

Since you are still using the `mx10-32-24-129.local` zeroconf address, you need to find out the actual IP address of the camera.

1. Click on the **Show Camera Status** icon .
2. In the **Camera Status** dialog, click on **Networking**.
  - The **Camera Name** entry shows the camera's current fully qualified domain name.
  - The **BOOTP/DHCP** status *Client running, got a lease* shows that the camera properly received an IP address.
  - The **IP Address** entry shows the camera's current address.
3. You can use either the **Camera Name** (e.g. `mx10-32-24-129.fritz.box`) or the IP address (e.g. `192.168.1.210`) to access the camera from now on.
4. Open a new browser tab and enter the address (e.g. `mx10-32-24-129.fritz.box` or `192.168.1.210`), then enter the access credentials (`admin/<your new password>`).

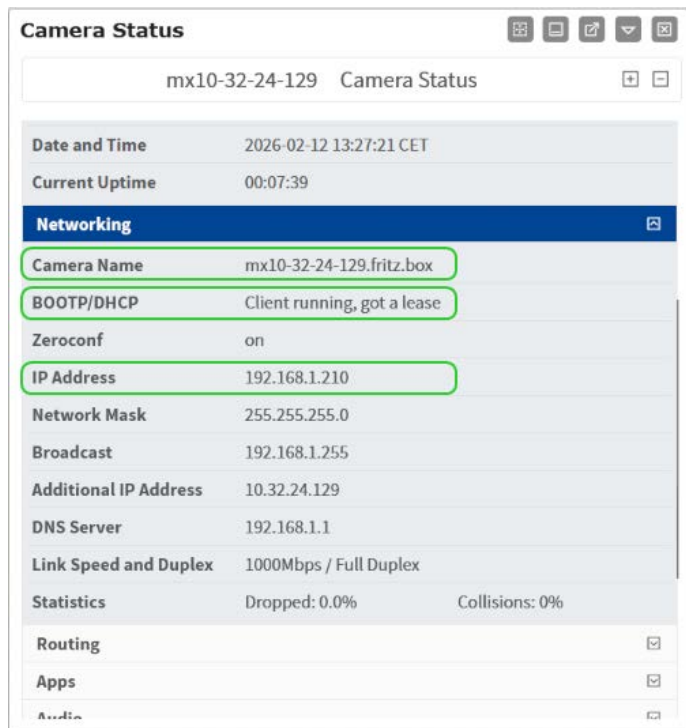

#### NOTE!


Make sure to record this address in the system documentation together with the camera name!

## Network Settings on the Camera in MxMC


MxManagementCenter is a video management software for setting up and using the entire video surveillance system that provides a range of functions for different tasks and user groups. You can download the newest release of MxManagementCenter from the MOBOTIX website ([www.mobotix.com](http://www.mobotix.com) > Services > Download Center > Software Downloads, MxManagementCenter section).

When starting MxManagementCenter for the first time, the configuration wizard opens and automatically starts searching for MOBOTIX cameras. The number of found cameras is shown as a counter next to the **Add Devices** icon. This number is updated automatically if the number of MOBOTIX cameras on the network has changed (i.e., by connecting new/disconnecting existing cameras).

1. Click on **Add Devices**. The cameras are displayed either in a list or as tiles. Use the List and Tile buttons to change the display mode.

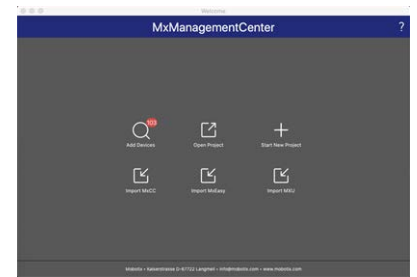

The application automatically monitors and displays the operating status of all cameras using corresponding icons.

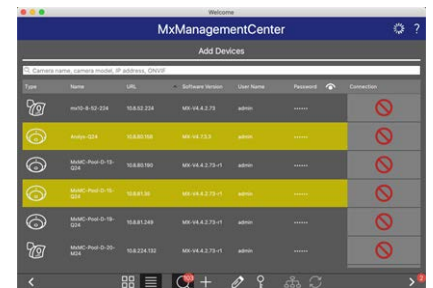

### EXAMPLE:

- The camera is not in the same subnet as the computer.
- The user name and password of the camera are not known.

### NOTE!

Using the Bonjour service ([en.wikipedia.org/wiki/Bonjour\\_\(software\)](https://en.wikipedia.org/wiki/Bonjour_(software))), the application finds not only MOBOTIX cameras on the same subnet, but also in other subnets. Normally, you would not be able to establish any connection to cameras in a different network or subnet.

### NOTE!

This is the case, for example, if you are integrating cameras into a network without DHCP server (i.e. with fixed IP addresses) and the IP address range is different from the 10.x.x.x range supported by the cameras in addition to DHCP. MxManagementCenter can automatically configure such a camera so that it is "integrated" into your existing network.

2. Select the camera you want to set up and click on **Edit Network Settings** at the bottom of the program window. The **Change Network Settings for Selected Devices** dialog opens.
3. Enter the IP address and the subnet mask of the selected camera.



### NOTE!

The IP addresses of the other cameras are automatically incremented by 1.

4. Click on **Apply** to apply the settings.

**NOTE!**

For more information on this feature, please read the MxManagementCenter online help or the Tutorial (see [www.mobotix.com](http://www.mobotix.com) > Services > Download Center > Documentation > Brochures & Guides > Tutorials).

---

## Camera Software in the Browser

This section contains the following information:

|                                                   |           |
|---------------------------------------------------|-----------|
| <b>Access the Camera in the Web Browser .....</b> | <b>68</b> |
| <b>Basic Settings .....</b>                       | <b>68</b> |

## Camera Software in the Browser

### Access the Camera in the Web Browser


The integrated software of the MOBOTIX D71 features a multitude of functions, such as video motion detection, long-term recording, alarm messaging and video IP telephony. Especially remarkable are the AI-based analytics features and the possibility to install third-party apps on the camera. Thanks to the virtual PTZ features, you can continuously zoom into or out of the live image using either the mouse wheel or a joystick.

When recording images or video sequences, you can choose to store either the visible image area of the live image or the full sensor image. This also allows examining the parts of an image or video that had not been visible in the real-time image section on display at the time of the recording.

Instead of using a web browser, you can also download the free MxManagementCenter from the MOBOTIX website ([www.mobotix.com](http://www.mobotix.com) > Support), which allows displaying multiple cameras on one monitor, allows for comfortably searching and evaluating the alarm video clips with audio and provides alerting features. For mobile iOS and Android devices, the free-of-charge MOBOTIX MOBOTIX LIVE App is available.

## Access the Camera in the Web Browser

Once the power and network connection of the MOBOTIX have been established, you can access the interface of the camera software in a web browser.

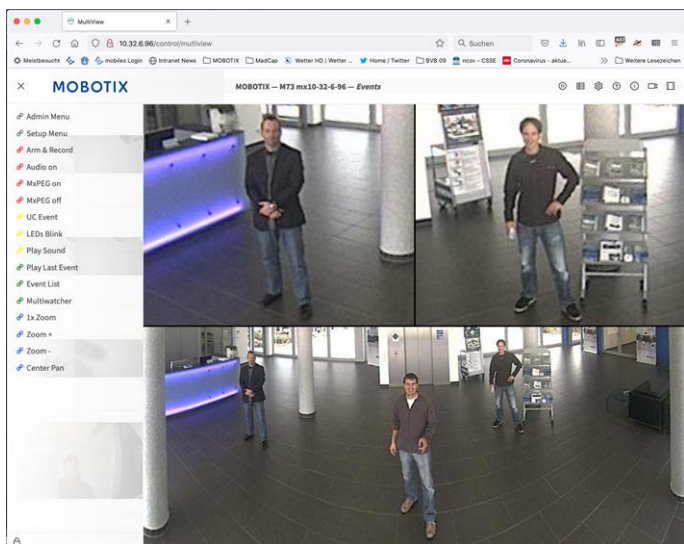

- Enter the camera's IP address in the address field of a web browser.

#### NOTE!

You can find the IP address of the camera, for example, in the camera housing or on the sticker on the packaging.

## Basic Settings

#### NOTE!

You must change the password when logging in for the first time.

**CAUTION!**

Make sure that you store information on user names and passwords in a secure place.

If you lose the administrator password and cannot access the Administration menu, the password can only be reset at the factory. This service is subject to a service charge.

The Quick Installation Wizard will appear automatically when accessing the Administration Menu for the first time. It provides an easy method to adjust the basic camera settings to the current application scenario. For security reasons, it is highly recommended to change the default administrator password after the camera has been configured properly.

**Administering the camera:** You can modify the camera configuration in the Administration Menu or the Setup Menu:

- **Admin Menu:** This menu contains the basic configuration dialogs of the camera (e.g. passwords, interfaces, software update).
- **Setup Menu:** This menu contains the dialogs for configuring the image, event and recording parameters. Some of these settings can be changed using the corresponding Quick Controls in the Live screen.

**NOTE!**

For more information, consult the Reference Manual of the camera (see [www.mobotix.com](http://www.mobotix.com) > **Services** > **Download Center** > **Marketing & Documentation** > **User Manuals**).



---

## Maintenance

This section contains the following information:

|                                   |           |
|-----------------------------------|-----------|
| <b>Replacing the microSD card</b> | <b>72</b> |
| <b>Cleaning the Camera</b>        | <b>73</b> |

## Replacing the microSD card

**CAUTION! Risk of equipment damage and data loss!**

- Before removing the microSD card, disable recording and reboot the camera.
- Disconnect the camera from the power supply.
- Do not touch the circuit board while replacing the microSD card.
- Ensure that the microSD card is not write-protected.

1. **Deactivate storage:** If storage on microSD card is still activated, deactivate it in the camera's web interface: **Admin Menu > Storage on External File Server / Flash Device**, then reboot the camera.
2. Disconnect the camera's power supply.
3. **Open the screw cap:** Using a coin or wide screwdriver, turn the screw cap ① on the back of the camera to the left and remove it.



4. Disconnect the camera's power supply.
5. **Unlock the microSD card holder:** Flip up the metal cover ② of microSD card (e.g. with a fingernail).
6. **Remove the microSD card**
7. **Insert microSD card:** Insert the new microSD card in the holder and close the metal cover with light pressure until it snaps in.
8. **Close the screw cap:** Reinsert the screw cap and turn it to the right using a wide screwdriver.



9. **Activate storage:**

- Format a new microSD card as outlined in the camera's *Storage on External File Server / Flash Device* online help topic.
- If the microSD card already is formatted with MxFFS, you can activate storage in **Admin Menu > Storage on External File Server / Flash Device**. After rebooting the camera, recording will automatically resume.

10. **Reboot the camera.**

## Cleaning the Camera

Clean the camera housing using a mild alcohol-free detergent without abrasive particles.

If the lens or dome cover is dirty from the installation process, clean it using a lint-free cotton cloth. Make sure that the lens is still in focus after cleaning and adjust the lens' focus if required.

To protect the camera from damage, only use the supplied mounting supplies (see [Mounting Supplies: Scope of Delivery, p. 19](#)).



EN\_09/26

MOBOTIX AG • Am Stundenstein 2 • D-67722 Winnweiler • Tel.: +49 6302 9816-103 • sales@mobotix.com • www.mobotix.com  
MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX AG 2021