



\*Variant Mx-Q26B supports MOBOTIX MxBus modules

# **Q26 Hemispheric**

Quick Install



Beyond **Human Vision** 

# **MOBOTIX**

# Standard Delivery Q26



		5
Item	Count	Part Name
1.1	1	Camera housing
1.2	1	Lens (installed)
1.3	1	Lens wrench
1.4	1	MicroSD card (SDXC, SDHC pre-installed)
1.5	1	Ethernet patch cable CAT5 0.5 m/1.64 ft
1.6	1	Allen wrench 3 mm
1.7	1	Allen wrench 2 mm
1.8	1	Torx wrench TX20
1.9	1	Outer shell
1.10	4	Mounting ring
1.11	4	Stainless steel washers 5.3 mm dia.
1.12	4	Dowels 8 mm
1.13	4	Stainless steel Torx screws 4.5x60 mm
1.14	4	Stainless steel washers 4.3 mm dia.
1.15	1	Stainless steel Allen screws M4x16 mm
1.16	2	Cable lock with bayonet catch (Ethernet patch cable, MiniUSB)


# Connections and Initial Operation of the Q26

You can find detailed information on the installation and connections of the Q26 in the Q25 Camera Manual (PDF, available on www.mobotix.com > Support > Download Center > Documentation > Manuals).

Please note that the boot options of this camera have changed compared to its predecessor (see «Boot Options of the Q26» on page 1) and the camera only has one key ("R"). Regarding the rest of the initial operation of the Q26, please see the Q25 Camera Manual in Chapter 3, «Initial Operation». All other tasks require access to the camera's user interface in the browser. Enter the camera's IP address into the address bar of the browser (user "admin", password "meinsm"; password must be changed upon first login – camera software V5.1.x and higher).





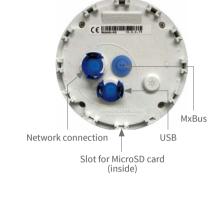

## Prepare the Camera

Mounting Options of the Q26

## Remove the outer shell of the Q26 (if installed). Then, remove the bayonet

cable (item 1.5) into the network connection and secure it again with the bayonet lock.

lock and the blue plug from the network connection. Insert the patch





### After drilling the holes for fixtures (see «Drilling Template Without Accessories»), attach the mounting ring of the Q26 at the designated position using dowels and screws. Next, connect the cabling, point the camera into the

Installation on Walls or Ceilings Without Accessories

viewing direction and adjust the focus of the lens (see «Adjusting the Lens Focus of the Q26» on page 2). Finally, install the camera's outer shell.





### After drilling the holes for fixtures (see «Drilling Template Without Accessories»), attach the On-Wall Set at the designated position using dowels and screws, then lead the cabling into the On-Wall Set. Next, remove the

Installation With On-Wall Set/On-Wall Set 10° (Accessory)

mounting ring of the Q26, connect the cabling and install the camera on the On-Wall Set. Finally, install the camera's outer shell.



### ries»), remove the mounting ring of the Q26 and install the camera in the Cavity Wall Installation Set. Next, connect the cabling and install the camera together with the Cavity Wall Installation Set into the cut-out and

Installation With Cavity Wall Installation Set (Accessory)

fasten it using the winged cams. Finally, press the decoration ring onto the camera and lock it in place using the toothed wrenches. Installation With Outdoor Wall Mount (Accessory) Remove the cover plate of the Outdoor Wall Mount. After drilling the

holes for fixtures (see «Drilling Template Without Accessories»), attach the Outdoor Wall Mount at the designated position using dowels and screws,

After cutting out the hole (see «Drilling Template Without Accesso-




### then lead the cabling into the mount. Next, remove the mounting ring of the Q26, connect the cabling and click the camera into the clamps of the

cover plate of the Outdoor Wall Mount. Then attach the cover plate with the camera to the Outdoor Wall Mount. Finally, install the camera's outer shell. Installation With Pole Mount and Outdoor Wall Mount (Accessory) Lead the cabling from the rear through the Pole Mount and attach to a pole (using steel straps). Then attach the Outdoor Wall Mount to the Pole Mount.

The remaining installation of the Q26 follows the steps under «Installation

Remove the lens using the lens wrench and remove the lens gasket. Screw



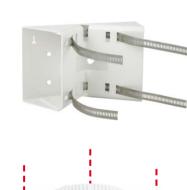

## the lens back into the lens mount and correct the lens' focus (see «Adjusting the Lens Focus of the Q26» on page 2). Screw in the reinforced dome

Installation of the Vandalism Kit (Accessory)

With Outdoor Wall Mount (Accessory)» above.

and set the four spacers onto the mounting ring of the camera. Place the stainless steel outer shell onto the camera and tighten it using the four security screws.



Flash Device; activate recording again in the same dialog).

Inserting/Exchanging the SD Card All camera models can use the integrated MicroSD card (SDHC) to record video data. In order to exchange the MicroSD card, please proceed as outlined in the following instruction. For information on reliable SD cards, please see the MOBOTIX website www.mobotix.com > Support > Download Center >

**Documentation > White Lists** in the document MicroSD Card Whitelist for MOBOTIX Cameras.

Insert the MicroSD card and gently press with Remove the back of the camera housing. If a MicroSD card has been installed, gently press your finger as indicated by the arrow until you with your finger as indicated by the arrow until hear another click. Make sure that the SD card

When replacing the SD card, make sure that recording has been deactivated in the browser (Admin Menu > Storage > Storage on External File Server /

card is protruding slightly and can be easily removed. Boot Options of the Q26

you hear a **click**. Then release the SD card. The



housing.

1 x

2. Insert the SD card

Meaning Option

is fully inserted. Install the back of the camera



**Boing Boing** 

Alarm Sound

1. Remove the SD card

By default, the camera starts as DHCP client and automatically tries to get an IP address from a DHCP server. To start the camera in a mode different from the default mode, you can activate the boot menu of the camera.

• Disconnect the camera's power supply.

• Make sure that you have suitable item such as a paper clip at hand, but never use sharp or pointed objects!

1. Preparing the Camera

2. Activating the Boot Menu


for one second (the number of flashes indicates the current boot option).

To go to the next boot option, briefly press the key again (< 1 sec). After the

last boot option, the camera returns to the first option (LED flashes once).

The red LED lights up 5 to 10 seconds after establishing the power supply and will stay on for 10 seconds.

Briefly press the key by inserting the paper clip into the hole indicated by the red circle in the figure. The camera enters the boot menu, ready for selecting one of the boot options. The LED now flashes once and repeats the flash signal after pausing

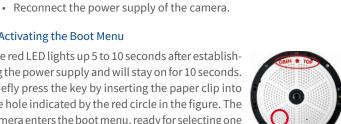

## Starts the camera with the recovery sys-Recovery tem, e.g., in order to recover from a failed update of the camera software. System \*Only on cameras with audio option and installed speaker. 3. Selecting a Boot Option

model.

passwords will not be reset).

Starts the camera as DHCP client and

or no IP address can be obtained, the camera starts with its factory default

tries to obtain an IP address from a DHCP server. If a DHCP server cannot be found

Factory

Defaults

Automatic

IP Address

Press the paper clip longer (> 2 sec) into the hole. The camera confirms the selection by flashing rapidly three times. You can now remove the paper clip. After 20 sec, the camera will confirm the selection by playing a sound according to the table above.

If nothing is selected, the camera will resume its normal boot process after a certain time.

If installed, remove the dome (using the wide side of the lens wrench, item 1.3) before proceeding.

Check the live image from the camera in the browser (enter the camera's IP address in the browser address bar). Activate the focusing aid in the browser (Focusing Aid quick control, Activated value).



Using the lens wrench (item 1.3), carefully turn the lens in clockwise or counter-clockwise direction until the red area of the focusing aid is as small as possible.

Once the focus is adjusted properly, deactivate control, Disabled value).

Reinstall the dome, if required.

the focusing aid again (Focusing Aid quick



## **Important Notes**

### **Safety Warnings**

Notes on Installing:

- · This product must not be used in locations exposed to
- the dangers of explosion. • Make sure that you install this product as outlined in Chapter 2,
- «Installation» of the corresponding manual. A faulty installation can damage the camera! • When installing this product, make sure that you are only using gen-
- uine MOBOTIX parts and MOBOTIX connection cables. • Only install this product on suitable, solid materials that provide for
- a sturdy installation of the fixing elements used. Electrical installation: Electrical systems and equipment may

fied electrician in accordance with the applicable electrical guidelines.

only be installed, modified and maintained by a qualified

electrician or under the direction and supervision of a quali-

Make sure to properly set up all electrical connections.

Electrical surges: MOBOTIX cameras are protected against the effects of small electrical surges by numerous measures. These measures, however, cannot prevent the camera from being damaged when stronger electrical surges occur. Special care should be taken when installing the camera outside of buildings to ensure proper protection against lightning, since this also protects the building and the whole network infrastructure.

Max. power consumption of attached extension modules: The power consumption of all attached **MxBus modules** must not exceed 2,5 W. When attaching modules to the MxBus connector  ${\bf and}$  the USB socket, the  ${\bf power}$   ${\bf consumption}$  of all  ${\bf attached}$ modules must not exceed 3 W, if the camera is powered by PoE class 3. If PoE class 2 is used, the power consumption of all attached modules must not exceed 1 W!

Never touch the lens: Due to the high performance of the Q26, the area of the image sensor **can get quite hot**, especially when the ambient temperature is also high. This does not affect the proper functioning of the camera in any way. For this reason, the product must not be installed within the reach of persons without dome.

**Power off before opening the camera:** Make sure the power supply to the camera is disconnected before opening the camera housing (e.g., when exchanging the SD card or when opening the body to attach wires).

Network security: MOBOTIX products include all of the necessary configuration options for operation in Ethernet networks in compliance with data protection laws. The operator is responsible for the data protection concept across the entire system. The basic settings required to prevent misuse can be configured in the software and are password-protected. This prevents unauthorized parties

# **Legal Notes**

from accessing these settings.

Legal aspects of video and sound recording: You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX products. Depending on national laws and the installation location of the Q26, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to  $familiarize\ themselves\ with\ all\ applicable\ regulations\ and\ to\ comply\ with$ these laws. MOBOTIX AG is not liable for any illegal use of its products.

Disposal Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals

Disclaimer MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the General Terms and Conditions from our website at www.mobotix.com

contain specific directions if the product contains a battery).

by clicking on the **COS** link at the bottom of every page.

Technical Specifications Q26		
Model Variants	Mx-Q26A/B*-6D016 (daylight image sensor, color) Mx-Q26A/B*-6N016 (night image sensor, Black&White)	
	*Variant Mx-Q26B supports MOBOTIX MxBus modules	
Lens Option	B016 (focal length 1.6 mm, f/2.0, image angle 180°x180°)	
Sensitivity	Color sensor (daylight): 0,1 lx @ 1/60s; 0,005 lx @ 1s	
Sensitivity	Black&White sensor (night): 0,02 lx @ 1/60s; 0,001 lx @ 1s	
Image Sensor	1/1.8" CMOS, 6MP (3072x2048), Progressive Scan	
Max. Image Size	6MP (3072x2048)	
Image Formats	Freely configurable 4:3, 8:3, 16:9 or custom formats (image cropping), e.g., 2592x1944 (5MP), 2048x1536 (QXGA), 1920x1080 (Full-HD), 1280x960 (MEGA)	
Max. Frame Rate	MxPEG: 42@HD(1280x720), 34@Full-HD, 24@QXGA, 15@5Mp, 12@6MP	
max. Frame Rate	M-JPEG: 26@HD(1280x720), 13@Full-HD, 9@QXGA, 5@5Mp, 4@6MP	
	H.264: 25@Full-HD, 20@QXGA	
Video Codec	MxPEG, M-JPEG, JPEG (max. output size 6MP)	
viaco coacc	H.264 (max. output size QXGA, bandwidth limitation applicable)	
ONVIF	ONVIF-S (camera software V5.2.x and higher, 2 <sup>nd</sup> half of 2018)	
	In the camera on MicroSD card (SDXC, SDHC pre-installed)	
	External, on USB device	
	External, on NAS	
DVR	Separate live image and full image recording – MxFFS with archiving function	
	Pre- and post-alarm images	
	Automatic DVR monitoring with error notification	
Software	MxManagementCenter	
Image Processing	MxLEO, backlight compensation, automatic white balance, distortion correction	

PTZ	Digital pan/tilt/zoom, continuous up to 8X
Alarm/Events	Temperature sensor, shock detector (with firmware version 5.0.1 ar higher), microphone, additional sensors/IOs via MxMessageSystem notification via e-mail, FTP, IP telephony (VoIP, SIP), visual/sound alarms, pre- and post-alarm images
Intelligent Video Analysis	MxActivitySensor, video motion analysis, MxAnalytics
	Microphone/speaker, both 16bit/16kHz (HD wideband audio)
Audio	Lip-synchronous audio, audio recording
	VoIP/SIP telephony, intercom, remote controlling using key codes
Interfaces	Ethernet 100Base-T, MiniUSB, MxBus*; inputs/outputs and RS232 via accessories
	*Only variant Mx-Q26B
Security	User/group management, HTTPS/SSL, IP address filter, IEEE 802.12 intrusion detection, digital image signature, MxFFS
Certifications	EN55022:2010; EN55024:2010; EN50121-4:2006, EN61000-6-1:2007; EN 61000-6-2:2005, EN61000-6-3:2007+A1:2011, EN61000-6-4:2007+A1:2011, AS/ NZS CISPR22:2009+A1:2010, CFR47 FCC part1!
Power Supply	Power over Ethernet IEEE 802.3af
Power Consumption	Typ. 4W
Power Consumption of	At MxBus: max. 2,5 W, at USB: max. 2.5 W, total max. 3 W
External Devices	The power consumption of the camera will increase accordingly!
Protection Classes	IP66 IK06, IK10 with Vandalism Kit
Ambient Temperature	-30 to 50 °C/-22 to 122 °F
Dimensions/Weight	Diameter x height: $160 \times 48 \text{ mm/}6.30 \times 1.89 \text{ in;}$ weight: approx. $350 \text{ g}$
Standard Delivery	Housing (high-resistance composite, PBT) white, mounting supplied mounting wrenches, 50 cm/20 in patch cable, software, MicroSD ca

# **Dimensions**





On-Wall Set

Q26 without accessories

distortion correction








On-Wall Set 10°


Cavity Wall Installation Set



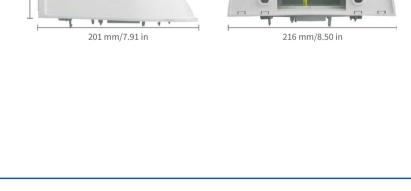

ø 5.5 mm/0.22 in

**Drilling Template Without Accessories** 

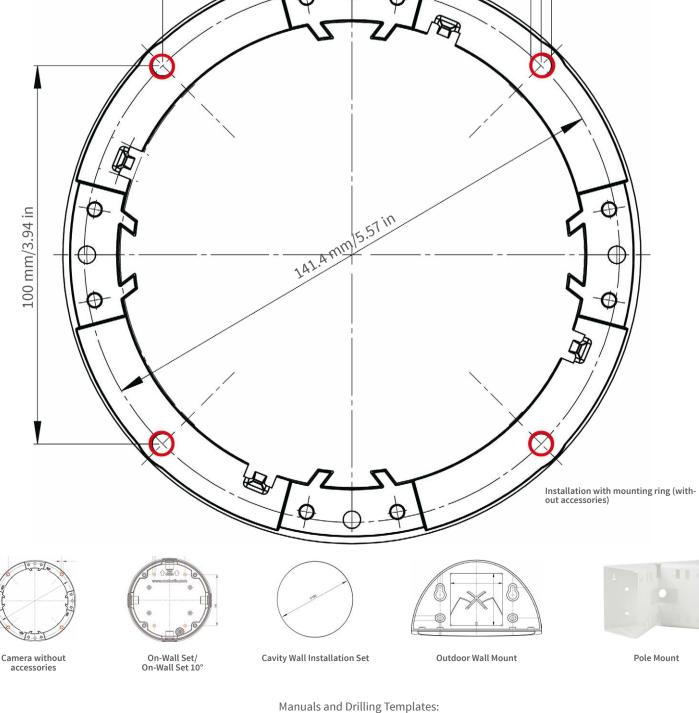

125 mm/4.92 in

100 mm/3.94 in



information on www.mobotix.com: Products > Indoor Cameras > Q26 Hemispheric

 Support > Download Center > Documentation > Certificates & Declarations of Conformity MOBOTIX, the MX logo, MxPEG and MxActivitySensor are trademarks of MOBOTIX AG registered in the Euro-

www.mobotix.com > Support > Download Center > Documentation > Manuals > Q26 Hemispheric