

System Manual Part 1

System Overview and Installation

DoorStation T26





T26-CamCore (camera module)

- Allround view with no blind spots
- Internal memory
- Speaker
- Microphone



Access module (KeypadRFID or BellRFID)

- Keyless access (RFID and PIN)
- Operate voice mailbox
- Contact remote stations
- Incl. RFID transponder cards



Info Module/Info Module Mx2wire+

- With integrated Mx2wire+ unit (optional)
- Data and power (PoE) via two-wire connection
- Instead of connection via network cable
- For two-wire cables up to 500 m



MX-DoorMaster (indoors)

- Opens door, doorbell on/off
- Status LEDs for door and messages
- Backup power supply with battery
- Connects to door opener and sensors

Table of Contents

SYSTEM MANUAL PART 1 – SYSTEM OVERVIEW AND INSTALLATION

This T26 System Manual Part 1, «System Overview and Installation» is supplemented by the *T26 System Manual Part 2, «Initial Operation and Configuration»*. If you no longer have a manual at your disposal, you can download a PDF file from the MOBOTIX website (www.mobotix.com > Support > Download Center > Documentation > Manuals).

TABLE OF CONTENTS

Legal Notes	6
Safety Warnings	7
Foreword	8
Overview of the System Components	22
1 System Overview	24
1.1 Outdoor Station	24
1.1.1 Hemispheric Camera T26-CamCore	24
1.1.2 ETH Module (Ethernet Terminal Board)	26
1.1.3 Access Module KeypadRFID	28
1.1.4 Access Module BellRFID	30
1.1.5 Info Module	32
1.1.6 Info Module Mx2wire+ (With Mx2wire+ Indoor Unit)	34
1.1.7 Housing and Module Frames	38
1.2 MX-DoorMaster	44
1.3 Remote Stations	46
1.3.1 MxDisplay+	46
1.3.2 MOBOTIX MxBell	48
1.3.3 MxManagementCenter	49
1.4 Accessories	50
1.4.1 NPA-PoE Set	50
1.4.2 IO Module (Extended Terminal Board)	51
1.4.3 MX-Overvoltage-Protection-Box	51
1.4.4 MX-GPS-Box	52
1.4.5 Additional Devices for PoE Power Supply	52
1.4.6 Additional Video Remote Stations	53
1.4.7 Door Sensors	53
1.4.8 Electrical Door Opener	53
2 Installation	54
2.1 Overview: Connection and Wiring Diagrams	54
2.1.1 With MX-DoorMaster	54
2.1.2 Without MX-DoorMaster	56
2.1.3 With Info Module Mx2wire+ and MX-DoorMaster	58

Table of Contents

2.1.4	Recommendation for Cabling	60
2.1.5	Installation Tip: Replacing an Existing Doorbell by a T26	62
2.2	Remote Stations and Network Connection	64
2.2.1	Notes on Cable Lengths and Power Supply	64
2.2.2	Direct Connection of One Remote Station	64
2.2.3	Network Connection with Multiple Remote Stations	65
2.3	Mounting the Frame and Housing	68
2.3.1	Determining the Installation Position	68
2.3.2	Inserting the Cables	70
2.3.3	Attaching the Housing	72
2.3.4	Cabling in the On-Wall Housing	74
2.3.5	Mounting the Terminal Board and Fitting the Network Cable	76
2.3.6	Applying the Gasket	77
2.3.7	Attaching the Frame and Connecting the Theft Protection	78
2.3.8	Mechanical Theft-Protection Lock	80
2.4	Installing the T26 Modules	82
2.4.1	Installing the T26-CamCore Camera Module	82
2.4.2	Preparing the BellRFID Access Module	86
2.4.3	Installing the Access Module (KeypadRFID/BellRFID)	88
2.4.4	Installing the Info Module	92
2.4.5	Installing the Info Module Mx2wire+	94
2.4.6	Labeling the Info Module	96
2.4.7	Removing, Exchanging and Modifying Modules	98
2.5	Installing the MX-DoorMaster	100
2.5.1	Overview of Connectors	100
2.5.2	Connection Diagrams for Door Opener Versions	102
2.5.3	Mounting Instructions	104
2.5.4	Installation Using Cavity or In-Wall Socket	107
2.6	Installing the Mx2wire+ Indoor Unit	110
2.6.1	Overview of Mx2wire+ Technology and Connectors	110
2.6.2	Mounting Instructions	112
2.6.3	Installation Using Cavity or In-Wall Socket	113
2.6.4	Installation With Surface-Mounted Socket	115
2.6.5	Function of Mx2wire+ Status LEDs	117
2.7	Connecting External Devices to the Door Station	118
2.7.1	Using the IO Module	118
2.7.2	Using the Signal Outputs of the Access Module (KeypadRFID/BellRFID)	122
2.8	Finishing the Installation	124
2.8.1	Checking the Wiring and Activating Theft Protection	124
2.8.2	Configuring the MX-DoorMaster	126

Table of Contents

Table of Contents



LEGAL NOTES



Legal aspects of video and sound recording: You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX products. Depending on national laws and the installation location of the T26, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

SAFETY WARNINGS

Notes on Installing:

- This product must not be used in locations exposed to the dangers of explosion.
- Make sure that you install this product as outlined in Chapter 2, «Installation» of the corresponding manual. A faulty installation can damage the camera!
- When installing this product, make sure that you are only using genuine MOBOTIX parts and MOBOTIX connection cables.
- Only install this product on suitable, solid materials that provide for a sturdy installation of the fixing elements used.



Electrical installation: Electrical systems and equipment may only be installed, modified and maintained by a qualified electrician or under the direction and supervision of a qualified electrician in accordance with the applicable electrical guidelines. Make sure to properly set up all electrical connections.



Electrical surges: MOBOTIX cameras are protected against the effects of small electrical surges by numerous measures. These measures, however, cannot prevent the camera from being damaged when stronger electrical surges occur. Special care should be taken when installing the camera outside of buildings to ensure proper protection against **lightning**, since this also protects the building and the whole network infrastructure.



Max. power consumption of attached extension modules: The power consumption of all attached **MxBus modules** must **not exceed 3 W**. When attaching modules to the MxBus connector **and** the USB socket, the **power consumption of all attached modules must not exceed 4 W, if the camera is powered by PoE class 3**. If **PoE class 2** is used, **the power consumption of all attached modules must not exceed 1 W!**



Risk of overheating when exposed to direct sunlight: When mounting a black, dark gray or amber-colored T26 DoorStation in locations where the device is exposed to direct sunlight, the housing temperature can exceed the maximum allowed temperature limit. This can result in electronic failures and injuries especially when touching exterior metal parts. If the intended use of the device is at an (unprotected) outdoor location, you should only install white or silver-colored modules and frames. This product must not be installed within the reach of persons without the dome.



Power off before opening the camera: Make sure the power supply to the camera is disconnected before opening the camera housing (e.g., when inserting or exchanging lenses, lens units and SD cards).



Network security: MOBOTIX products include all of the necessary configuration options for operation in Ethernet networks in compliance with data protection laws. The operator is responsible for the data protection concept across the entire system. The basic settings required to prevent misuse can be configured in the software and are password-protected. This prevents unauthorized parties from accessing these settings.



FOREWORD

Dear MOBOTIX customer,

Congratulations on your decision to purchase an exceptionally versatile and innovative DoorStation “made in Germany.” The T26 system contains a hemispheric door camera with a 6 megapixel color sensor (T26-CamCore) and captures the entire room 180° from wall to wall and from floor to ceiling without any blind spots.



Another plus – the improved light sensitivity of the 6MP sensors, which drastically reduces exposure times. In conjunction with MxLEO, the exposure and image optimization program working in the background, the camera generates perceptibly better and more detailed images especially under low-light conditions. This significantly reduces motion blur that is typical of longer exposure times with little light and thus provides much more image detail (faces, etc.) for proper identification.

Chapter 1, «System Overview», of this manual contains all product details and the technical information of the system. Chapter 2, «Installation», deals with the installation of the T26 with a direct network connection or the optional connection via two (existing) wires. The T26 Systemhandbuch Teil 2 will demonstrate how you operate the door station and configure it to meet your specific needs. The system manuals are supplemented by the

T26 Quick Guide.

For installing the DoorStation and for running it on a day-to-day basis, MOBOTIX recommends using the MxDisplay+. The MxManagementCenter video management software, which is tailored to MOBOTIX cameras, can be downloaded from the MOBOTIX website free of charge: www.mobotix.com > Support > Download Center > Software Downloads. The tutorial for the application is available under Support > Download Center > Documentation > Brochures & Guides > Tutorials. MOBOTIX also provides a mobile solution for iOS/Android devices (iOS 10/Android 4.4 and higher). Search for “MOBOTIX AG” in the App Store or on Google Play to find the free MOBOTIX MxBell app.

If you still have any questions, our support and international sales staff are available at intl-support@mobotix.com from Monday through Friday.

We would like to thank you for your trust and wish you all the best with your new high-performance MOBOTIX T26 DoorStation.

MOBOTIX

BeyondHumanVision
noisiVnsmuHbnoy6

XITOBOT



More security thanks to
maximum overview



What Are the Specific Advantages of A MOBOTIX DoorStation?

The new DoorStation from MOBOTIX offers an innovative, powerful solution that is easy to install and takes a different approach to the solutions available on the market up to now. The T26 is based on the international video telephony standard VoIP/SIP. All of the modules offered for outdoor use are weatherproof, maintenance-free and can be used in temperatures ranging from -30 to 50 °C/-22 to 122 °F. Here are the most important system advantages at a glance:

Allround View Without Blind Spots

With 6 megapixel image sensor and internal memory, this hemispheric door camera records the entire entrance area. No blind spots from wall to wall and from floor to ceiling.

Two-Way Video Communication Worldwide

When the doorbell rings, a connection is established with an IP video phone or a standard computer via the network. For two-way video communication and for opening the door.

Recording With Sound

The camera in the door station can record events automatically. For example, when someone rings the doorbell or if something moves in front of the door.

Keyless Access

Who has access and who doesn't? The door opener can be controlled tamper-proof using the KeypadRFID with a PIN code or an RFID transponder.

Integrated Message Function

Digital voice messages for residents can be left directly at the door station and played back after authentication.

Very Simple Installation

The door station is connected to the network via an Ethernet cable or via two-wire cabling thanks to Mx2wire+ technology.

The T26 modules are available individually or in a set




MOBOTIX integrates hemispheric technology into existing systems of third-party manufacturers, thus providing added security thanks to superior overview images and event-controlled recording of video and sound.

Which Advantages Does MOBOTIX Offer Over Other Video Door Stations?


Thanks to its HiRes image quality, decentralized technology and a wide range of features, MOBOTIX offers not only an outstanding door camera but also a professional security camera in a single device. **MOBOTIX Hemispheric Video Technology** was successfully introduced to the network video market in 2008. This technology is an important component of the MOBOTIX video door stations, which provide perfect, high-resolution overview images thanks to a fisheye lens with a 180° angle of view. This allows the camera to cover the entire entrance area from wall to wall and from floor to ceiling without any blind spots, and without ever needing to mechanically pan or tilt.

But the camera, with its unrivaled image quality and panoramic view, is much more than just a modern “door spy.” The camera has an integrated high-speed processor that provides a range of functions similar to those available in MOBOTIX security cameras used in banks and airports. Thanks to the **Integrated Video Motion Detection**, when the camera registers movement in the image or detects suspicious noises, it automatically starts recording **smooth video with sound** while simultaneously sending an **e-mail or SMS** to the residents of the building or to a security company.

In addition, a **message may be left for the residents** at the door station; it works just like a telephone answering machine with the addition of video and audio recording by the camera module. Additionally, an **audio message for visitors** can be played back automatically when the doorbell button is pushed.

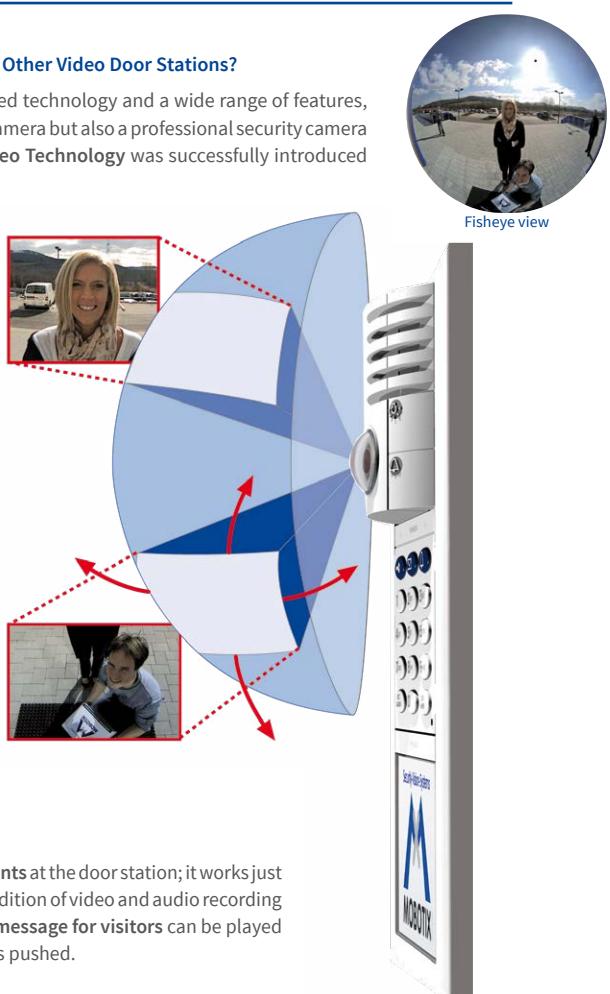

The camera captures the entire hemispherical area in front of the camera lens and displays it in a user-friendly format as a corrected image or image section, or as an HD Super 180° panorama

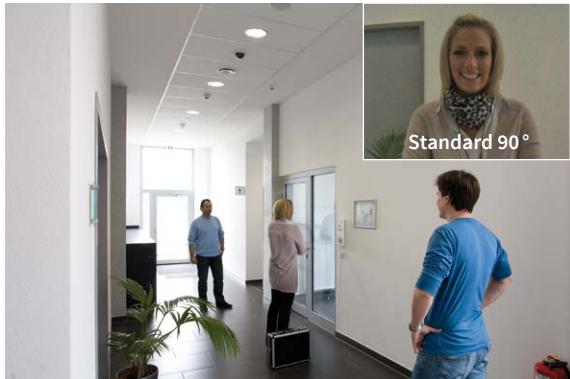

Seeing the entire scene with the T26

Hemispheric HiRes Camera

Thanks to the fisheye lens with its 180° angle of view, the camera records the entire entrance area without having to be mechanically panned or tilted – **without any blind spots, from wall to wall, floor to ceiling**. It's impossible to "slip by" this camera. On the monitor located at the remote station, the operator can change the current image section in seconds: from a close-up of the visitor all the way to an overview panorama.

The hemispheric T26-CamCore door camera has a virtual, purely digital PTZ feature (pan/tilt/zoom). The image captured by the hemispheric camera

can be zoomed smoothly, and you can simultaneously move to any section of the image in seconds, for example, using the mouse or zoom feature of the MxDisplay+. This is similar to a mechanical PTZ camera, but without the maintenance and wear.

A Superior Overview Increases Security

The fisheye lens of the camera records the entire hemisphere of the scene without any blind spots and displays this image as the first part of the 360° full image. Here, there are technical limitations – predominantly at the edges of the image, where the geometric shape of the objects is heavily distorted, making them difficult for the human eye to evaluate.



T26 360° Full Image



HD Super 180° Panorama

Original T26 image: 1280 x 480

For this reason, the camera uses its integrated software to correct the images in the live view so that it can deliver user-friendly images at the remote video station. The operator can now **digitally tilt, pan and zoom** the image from the comfort of the remote station.


180° Angle of View Without Blind Spots

Conventional door cameras have a standard 90° lens, meaning that they are only able to capture visitors standing directly in front of the lens. However, much of the time, the door station is not mounted in the immediate vicinity of the door, so the camera is at an angle to the visitor (see image). Even in this case, **thanks to its 180° angle of view, the T26 delivers perfect images**.



Right: Original
MOBOTIX T26 image

Original image MOBOTIX T26

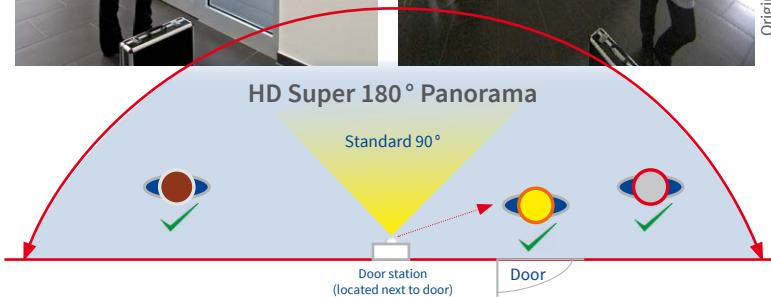

Direct Views Up and Down

And the hemispheric camera can do much, much more: it can record the area on the floor in front of the door, for example, even the often overlooked area underneath the door station. **And the T26 does all of this using only its software – without the need for moving parts or motors.** This camera is silent, discreet and unobtrusive.

Also, this quick look down is incredibly practical when checking, for example, whether the daily paper is already in front of the door. Of course, it is also possible to look upwards under the ceiling as well.



Original MOBOTIX T26 image
(enlarged image section)

6-Megapixel Image Sensor Technology

The latest 6-megapixel image sensor technology used in the camera has improved the frame rate as well as the image quality for the camera images with max. QXGA resolution and brings a new level of detail to your zoomed images (+41 %) Thanks to the new sensors that feature a nearly four times higher light sensitivity, the camera also delivers convincing color images at dusk and in heavy rainfall. At night, the optional black and white sensor now also provides HiRes images up to QXGA size (the predecessor M12 offered a max. of 1.3 megapixels only). This means that the camera can deliver live or recorded QXGA images day or night.

Product Overview: T26 Modules

In addition to the hemispheric HiRes camera, the latest MOBOTIX development also includes a multifunctional access module with transponder technology for keyless access and control of message functions. This module is available either with a keypad for PIN – code access (KeypadRFID) or as a bell button module with interchangeable button sets (BellRFID).

A particular advantage of the T26 is the minimal amount of cabling involved – either a standard Ethernet cable (for example, CAT7) or existing bell wire is sufficient to connect the door station to the network in the building and to supply it with power. Only a PoE switch is necessary to connect remote stations (VoIP video phone or computer) and supply power. The PoE switch can be located in an electrical cabinet, for example.



Hemispheric Door Camera with Allround View and No Blind Spots (T26-CamCore)

With 6 megapixel image sensor and internal storage, this hemispheric door camera records the entire entrance area. No blind spots from wall to wall and from floor to ceiling. The camera can record events automatically. For example, when someone rings the doorbell or if something moves in front of the door. The camera module with a remote station can be used as a compact basic video door station thanks to the integrated doorbell and light buttons. The camera saves high-resolution video with lip-synchronous sound directly to the integrated MicroSD flash card (up to 64 GB) without requiring an external storage device or computer and with no additional network load. The storage space is for up to 800,000 panorama images or 66 hours of video recordings.



Access Modules with Contactless RFID Technology (KeypadRFID or BellRFID)

Both MOBOTIX-developed modules can be used for several functions. Outside, the modules function as an access control interface, either by entering a code (KeypadRFID) or by means of keyless access using a transponder (e.g., the supplied RFID cards). Instead of a keypad, the BellRFID module uses illuminated bell buttons, which can be labeled using the free-of-charge labeling service on the MOBOTIX website. The layout of the bell buttons is variable and can be adjusted anytime later.



The modules can also be used by visitors and residents to record and play back messages (video mailbox). **Please note that you can currently attach only one access module (i.e., either KeypadRFID or BellRFID) to an DoorStation.**

Info Module without/with Mx2wire+ Technology (Info Module/Info Module Mx2wire+)

The info module features a backlit house number field and may also include an optional Mx2wire+ unit. This unit is needed if the outdoor station is to be connected to the PoE switch with an existing bell wire via a second Mx2wire+ indoor unit instead of directly using an Ethernet cable.



Door Opener Module with Backup Power Supply (MX-DoorMaster)

The door station may be coupled with a MX-DoorMaster with access code memory, making it impossible to open the door by forcibly removing the system and bypassing the connecting cable. A built-in rechargeable battery powers both the electrical door opener and the access module in the outdoor station and guarantees that the door can be accessed using a transponder or PIN even in the case of power failure. For indoor installations, the MX-DoorMaster also functions as a doorbell. The device features two status LEDs and two function buttons (doorbell, door opener).



T26 Components: Outside

Terminal boards			
	ETH Module: Securely connects the camera module with the mounted 8 wires of the network patch cable via RJ45 connector. Only for T26 versions without Mx2wire+.		MX-OPT-I02
	IO Module: The board provides an additional 8 signal inputs and 3 signal outputs to connect external devices (doorbell, light, etc.).		MX-OPT-I01
Modules			
The camera module is also available with a particularly light-sensitive B/W sensor (MX-T26M-SecNight-N12)		T26-CamCore: Fisheye lens (for 360° panorama view) and integrated live image correction, high-resolution 6 megapixel color sensor, speaker, microphone and MicroSD data storage for approx. 250 one-minute video clips or 60,000 VGA images.	MX-T26M-Sec-D12
One admin and several user RFID cards are included with an access module (KeypadRFID/BellRFID)		KeypadRFID/BellRFID access module: Keyless and scheduled access using key codes (KeypadRFID) or an RFID transponder card. Interchangeable bell buttons with high-quality labels (BellRFID). The voice mailbox can also be operated via the access module.	MX-Keypad1-EXT MX-Bell1-core
The indoor unit is always part of the Info Module Mx2wire+		Info Module: Provides the option to display the house number and/or name to the door station. The module is equipped with permanent backlighting using energy-saving and long-lasting LED technology.	MX-Info1-EXT
		Info Module Mx2wire+: The info module with Mx2wire+ technology and a second Mx2wire+ unit for mounting inside the building offers users not only the standard info module functions but also the option to connect and supply power to the door station via existing two-wire cabling instead of a network cable.	Mx2wire+Info1-EXT
Frame			
		Single frame: 131 x 143 x 18 mm (W x H x D). Integrated electromagnetic theft protection. Includes special key for module unlocking, housing gasket and installation material.	MX-OPT-Frame-1-EXT
		Double frame: 131 x 233 x 18 mm (W x H x D). Integrated electromagnetic theft protection. Includes special key for module unlocking, housing gasket and installation material.	MX-OPT-Frame-2-EXT
		Triple frame: 131 x 333 x 18 mm (W x H x D). Integrated electromagnetic theft protection. Includes special key for module unlocking, housing gasket and installation material.	MX-OPT-Frame-3-EXT

On-wall housing			
	Single on-wall housing: 126 x 138 x 31 mm (W x H x D). Metal-reinforced housing.		MX-OPT-Box-1-EXT-ON
	Double on-wall housing: 126 x 227 x 31 mm (W x H x D). Metal-reinforced housing.		MX-OPT-Box-2-EXT-ON
	Triple on-wall housing: 126 x 327 x 31 mm (W x H x D). Metal-reinforced housing.		MX-OPT-Box-3-EXT-ON
In-wall housing (incl. plasterwork protection)			
	Single in-wall housing: 123 x 138 x 52 mm (W x H x D). The in-wall housing is securely connected with the subsurface or brick work. It can also be used to ensure easy installation in cavities.	MX-OPT-Box-1-EXT-IN	The required flush-mounting opening has the following dimensions (width x height): Single housing: 117 x 129 mm
	Double in-wall housing: 123 x 228 x 52 mm (W x H x D). The in-wall housing is securely connected with the subsurface or brick work. It can also be used to ensure easy installation in cavities.	MX-OPT-Box-2-EXT-IN	Double housing: 117 x 218 mm Triple housing: 117 x 318 mm
	Triple in-wall housing: 123 x 328 x 52 mm (W x H x D). The in-wall housing is securely connected with the subsurface or brick work. It can also be used to ensure easy installation in cavities.	MX-OPT-Box-3-EXT-IN	

T26 Components: Inside

MX-DoorMaster With Backup Power Supply		
	The T26 may be coupled with the MOBOTIX MX-DoorMaster with internal access code memory and battery for back-up power supply, making it impossible to open the door by forcibly removing the system and bypassing the connecting cable.	MX-Door2-INT-PW
Mx2wire+ Indoor Unit		
	An Info Module Mx2wire+ set always consists of two devices that communicate with one another. For this reason, the Info Module Mx2wire+ in the door station also requires a corresponding Mx2wire+ unit to connect to the network and to supply power.	MX-2WirePlus-Info1-EXT
Remote Stations		
	MxDisplay+: MOBOTIX recommends the MxDisplay+ as a wall-mounted, multifunctional video intercom with WiFi and RFID technology for the T26 door station. The touchscreen glass interface allows configuring and controlling the entire MOBOTIX video system. PoE (Power over Ethernet) is used to supply the MxDisplay+ with power.	MX-Display+
	MxManagementCenter video management software: MOBOTIX provides the MxManagementCenter software (for Windows and OS X/macOS systems) free of charge to configure and operate the T26 DoorStation with a network-enabled desktop or notebook computer.	Free of charge
	MOBOTIX MxBell: To operate the T26 DoorStation from mobile devices (iOS 10/Android 4.4 and higher), MOBOTIX provides this free-of-charge app in the App Store and on Google Play.	Free of charge
Accessories		
	NPA-PoE-Set: The MOBOTIX Network Power Adapter Set (NPA-PoE set) is a high-quality, robust, ultra-compact, and – above all – multi-functional PoE injector with three connectors (network, camera/PoE device, computer) and a universal power supply unit with adapter plugs. The Network Power Adapter Set remotely supplies the T26 door station and all other PoE devices with power in accordance with the IEEE 802.3af standard. It is therefore possible to secure the power supply for distances up to 100 m (300 ft) using the network cable. As a result, the DoorStation can be supplied with PoE power via the adapter and connected directly to an MxDisplay+ or to a computer (integrated crossover function).	MX-NPA-POE set

The Mx2wire+ indoor unit is always part of the Info Module Mx2wire+.

Free download at
www.mobotix.com

T26 – the Custom-Made DoorStation

The T26 product line is a modular system that can be adapted to any customer needs. This highly robust and weatherproof outdoor station (IP65, -30 to 50°C/-22 to 122°F) is available in four attractive colors: white, silver, dark gray, black and amber.



white (PW)

silver (SV)

dark gray (DG)

black (BL)

amber (AM)

**Only white
DoorStations should be
exposed to direct
sunlight (risk of
overheating on dark
surfaces)**

The color abbreviation is added at the end of the order number in each case (for example, white T26-CamCore: MX-T26M-Sec-D12-PW)

You will find the **T26 Product Configurator** on the MOBOTIX website, which you can use to plan your individual T26 door station.

You can choose the individual components step-by-step so that no individual component is forgotten. Accessories required for your selected components are automatically added by the configuration tool.

After you have finished the configuration, the system creates a preview image of the system as well as a parts list, which you can hand to your electronics specialist for an installation quote.

The web configurator can be found on the MOBOTIX website under **Product Configurator**.

T26 – a Future-Oriented System

With the T26, MOBOTIX offers a new product range for the home automation market and it will be extended and complemented with other new products.

The most recent example is the **BellRFID bell button module** with one to five keys and integrated RFID technology. And the best part for all MOBOTIX customers: all future T26 innovations are also compatible with T26 systems that have already been purchased.

www.mobotix.com >
Product Configurator



T26 System Manual Part 1

Various configuration examples in all available MOBOTIX colors

Only white DoorStations should be exposed to direct sunlight (risk of overheating on dark surfaces)



Camera in single frame (PW)



Camera in single frame (SV)



Camera in single frame (DG)



Camera in single frame (BL)



Camera in single frame (AM)



Camera and KeypadRFID in double frame (PW)



Camera and KeypadRFID in double frame (SV)



Camera and KeypadRFID in double frame (DG)



Camera and KeypadRFID in double frame (BL)



Camera and KeypadRFID in double frame (AM)



BellRFID access module is also available in all colors!



Camera and info module in double frame (PW)



Camera and info module in double frame (SV)



Camera and info module in double frame (DG)



Camera and info module in double frame (BL)



Camera and info module in double frame (AM)



Camera, KeypadRFID and info module in triple frame (PW)



Camera, KeypadRFID and info module in triple frame (SV)



Camera, KeypadRFID and info module in triple frame (DG)




Camera, KeypadRFID and info module in triple frame (BL)



Camera, KeypadRFID and info module in triple frame (AM)



T26 with KeypadRFID

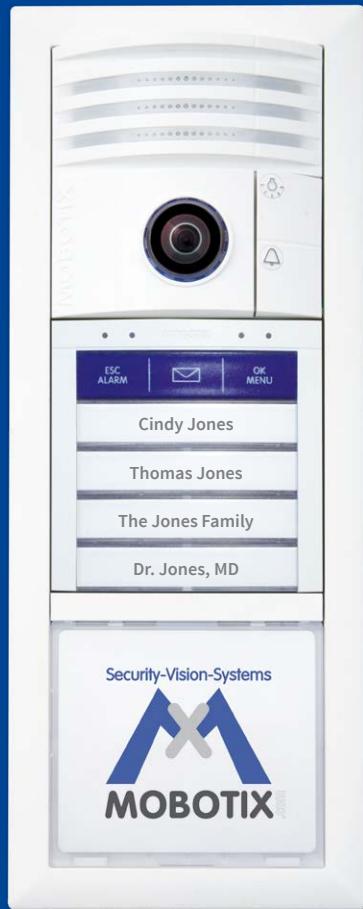

T26 with BellRFID

OVERVIEW OF THE SYSTEM COMPONENTS

What does a typical system look like and what components are included? This section describes the setup for a complete system with a video door station including a MX-DoorMaster, KeypadRFID and Info Module Mx2wire+ with Mx2wire+ technology to connect the door station using existing two-wire cabling. In newer buildings, it is preferable to lay an Ethernet cable directly to the door.

Hemispheric camera (with LEDs)

- Two-way video communication
- Lip-synchronous sound
- Event-controlled recording
- Outdoor light and doorbell button

Access module (KeypadRFID/ BellRFID)

- Open/lock door
- Keyless access (RFID and PIN)
- Operate voice mailbox

Info Module (backlit)

- With Mx2wire+ technology (optional, data transfer and power supply via two-wire connection)



MxBus two-wire cabling:

- Data (9,600 baud) and power (PoE)
- Max. 8 devices to be connected
- Encrypted data transfer
- Power supply and control via camera



MOBOTIX MxBell for mobile devices


- Free-of-charge (via App Store/Google Play)
- For iOS 10/Android 4.4 and higher
- Operation of the T26 DoorStation
- All functions including two-way communication
- Connection via WiFi/UMTS (3G)/LTE (4G)



Computer (remote station)

- MOBOTIX software MxManagementCenter
 - For Windows and OS X/macOS
 - T26 operation
 - All functions including two-way video communication
 - Connection via Ethernet/WiFi

Global access over any Internet connection

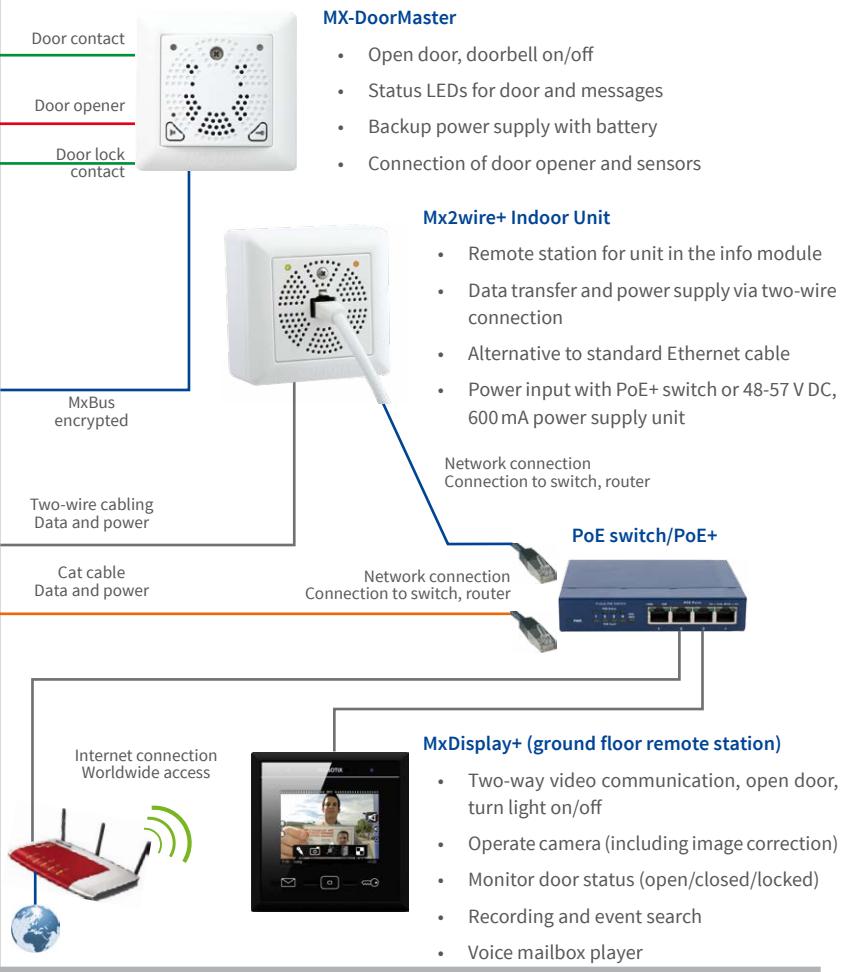

1 SYSTEM OVERVIEW

1.1 Outdoor Station

1.1.1 Hemispheric Camera T26-CamCore

The hemispheric camera with its fisheye lens (for a 360° panorama view) and integrated live image correction boasts a high-resolution 6-megapixel image sensor (color or black&white), speaker, microphone and integrated data storage for approx. 250 one-minute video clips or 60,000 VGA images.



Outdoor Station

Technical Specifications: T26-CamCore	
Model versions	MX-T26-D016, MX-T26-N016
Lens options	B016 Hemispheric 180°
Sensitivity	Color version: 1 lux (t = 1/60 s), 0.005 lux (t = 1/1 s) B/W version: 0.02 lux (t = 1/60 s), 0.001 lux (t = 1/1 s)
Image sensor	1/1.8" CMOS, 6 megapixels, progressive scan
Max. image resolution	Color and B/W: 3072x2048 (6MP)
Image formats	3072x2048 (6MP), 2592x1944 (5MP), 2048x1536 (QXGA), 1920x1080 (Full HD), 1280x960 (MEGA), 1280x720 (HD), 1024x768, 800x600, 768x576 (D1-PAL), 704x576 (TV-PAL), 640x480, 384x288, 320x240, 160x120, custom formats
Max. frame rate (M-JPEG) (live/recording)	HD: 15fps, MEGA: 12fps, QXGA: 6B/s, 5MP: 4B/s, 6MP: 4B/s
Max. video stream (MJPEG) (live/recording/audio)	HD: 30fps, MEGA: 30fps, QXGA: 15B/s, 5MP: 10B/s, 6MP: 8B/s
Image compression	MJPEG, M-JPEG, JPEG
Internal DVR	MicroSD card (SDXC, SDHC pre-installed, max. 64 GB)
External video storage	Directly on NAS and Computer/Server without additional recording software
Software (included)	Firmware of MxDisplay+ video intercom, MxManagementCenter video management software, MOBOTIX MxBell for mobile devices(iOS 10/Android 4.4 and higher)
Image processing	Backlight compensation, automatic white balance, image correction (incl. panorama image correction), video sensor (motion detection)
Virtual PTZ	Digital pan/tilt/zoom (continuous 8x zoom)
Alarm/events	Triggering of events through integrated multiple-window motion detection, temperature sensor, notification over email, FTP, IP telephony (VoIP, SIP), visual/acoustic alarm, pre- and post-alarm images
Audio	Microphone, speaker, G.711, lip-synchronous sound
Video telephony	VoIP/SIP, two-way video communication, remote controlling with key code, event notification
Security	User/group management, HTTPS/SSL, IP address filter, IEEE 802.1x, intrusion detection, digital image signature
Certificates	EMC (EN 55022, CISPR 22, EN 55024, EN 61000-6-1/2, FCC Part15B, CFR 47, AS/NZS 3548)
Power supply	Power over Ethernet (PoE in accordance with IEEE802.3af): PoE class variable depending on operating mode; power consumption: typically 4.5 W; via PoE switch/MOBOTIX PoE adapter/Mx2wire+
Operating conditions	IP65 (DIN EN 60529), -30 to 50 °C/-22 to 122 °F (DIN EN 50155)
Interfaces	Ethernet 10/100, IPv4/IPv6, MiniUSB, MxBus; inputs/outputs, RS232 via accessories
Dimensions (W x H)	99 mm x 99 mm

The camera is also available in a version with a black and white sensor (extremely light-sensitive sensor)

1.1.2 ETH Module (Ethernet Terminal Board)

The Ethernet terminal board ETH Module is used to connect the door station for the T26 versions **without Mx2wire+ technology**. It securely connects the camera module with the 8 connected wires of the network patch cable via RJ45 connector (for installation, see Chapter 2, «Installation»).

ETH Module



Caution

Only use **original MOBOTIX cables** to connect the camera.

Standard cables purchased from other suppliers do not meet the necessary specifications for proper fastening (not impermeable/weatherproof).



Ethernet patch cable

Outdoor Station

The Ethernet terminal board is screwed on to the housing (on-wall or in-wall) behind the camera module.



Alternatively, the extended terminal board IO Module can be used to connect external devices, such as a doorbell

1.1.3 Access Module KeypadRFID

This module is used for keyless and scheduled access to the house or building with an access PIN or RFID transponder card.

Included in delivery:
One admin RFID card
for initial operation and
activating user cards



Included in delivery:
Several user RFID cards
for opening the door and
video mailbox access



Back with housing cover removed



Please note that you can currently attach **only one access module** (i.e., either KeypadRFID or BellRFID) to an DoorStation.

Outdoor Station

Technical Specifications: KeypadRFID	
Functions	Keyless access using RFID card and PIN
Interface	MxBus
User interfaces	RFID (13.56 MHz, Mifare DESFire EV1), illuminated keys, acoustic feedback
Inputs	2 galvanically separated inputs (AC/DC, self-powered, up to 48 V)
Outputs	1 insulated relay output (AC/DC, -48 V/60 W/2 A)
Sensors	Illumination sensor
Protection class	IP65 (DIN EN 60529)
Operating temperature	-30 to 50 °C/-22 to 122 °F (DIN EN 50155)
Power supply	MxBus
Power consumption	typically 1 W
Dimensions (W x H)	99 mm x 99 mm

In the case of a power failure, the access module and the door opener are supplied with power from the battery of the MX-DoorMaster

Technical Specifications: Terminals Used On The KeypadRFID	
Cable cross-section, solid	min. 0.14 mm ² /max. 0.5 mm ²
Cable cross-section, flexible	min. 0.2 mm ² /max. 0.5 mm ²
Cable cross-section, flexible, with wire-end sleeves without plastic sleeves	min. 0.25 mm ² /max. 0.5 mm ²
Cable cross-section AWG/kcmil	min. 24/max. 20
AWG according to UL/CUL	min. 26/max. 20

Recommended wire diameter: 0.6 to 0.8 mm

1.1.4 Access Module BellRFID

This module is used for keyless and scheduled access to the house or building with an RFID transponder card and also has bell buttons for up to five parties (depending on the selected bell button set).

Included in delivery:

One admin RFID card
for initial operation and
activating user cards




Included in delivery:

Several user RFID cards
for opening the door and
video mailbox access



Additional cards (admin/
user) can be ordered
from MOBOTIX

In addition, the BellRFID module allows leaving and retrieving messages on the video mailbox.

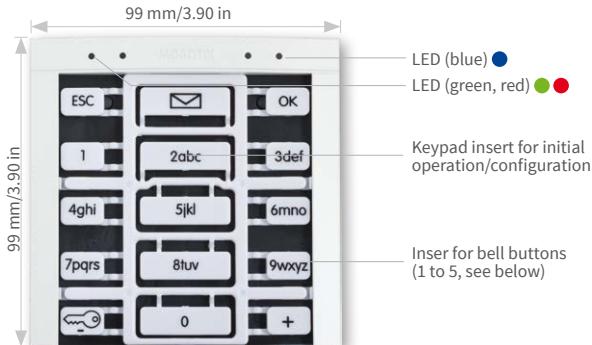

Available Button Sets



MX-Bell1-Button-F1

Large bell button
with function buttons



MX-Bell1-Button-F2

2 medium-size bell buttons
with function buttons



MX-Bell1-Button-F3

1 large, 2 small bell buttons
with function buttons



MX-Bell1-Button-F4

4 small bell buttons
with function buttons



MX-Bell1-Button-05

5 small bell buttons
(no function buttons)



MX-Bell1-Button-XL1

XL bell button
(no function buttons)

Outdoor Station

Back with housing cover removed



Technical Specifications BellRFID

Features	Keyless access using RFID card with 1 to 5 bell buttons (depending on button set)
Interface	MxBus
User interfaces	RFID (13.56 MHz, Mifare DESFire EV1), backlit bell buttons, sound feedback
Inputs	2 galvanically separated inputs (AC/DC, self-powered, up to 48 V)
Outputs	1 insulated relay output (AC/DC, up to 48 V/60 W/2 A)
Sensors	Illumination sensor
Protection class	IP65 (DIN EN 60529)
Operating temperature	-30 to 50 °C/-22 to 122 °F (DIN EN 50155)
Power Supply	MxBus
Power consumption	typ. 1 W
Measurements (width x height)	99 mm x 99 mm

In the case of a power failure, the BellRFID module and the door opener are powered by the battery of the MX-DoorMaster

Technical Specifications: Terminals Used on the BellRFID module

Cable cross-section, solid	min. 0,14 mm ² /max. 0,5 mm ²
Cable cross-section, flexible	min. 0,2 mm ² /max. 0,5 mm ²
Cable cross-section, flexible with wire-end sleeves, without plastic sleeves	min. 0,25 mm ² /max. 0,5 mm ²
Cable cross-section, AWG/kcmil	min. 24/max. 20
AWG according to UL/CUL	min. 26/max. 20


Recommended wire diameter: 0.6 to 0.8 mm

1.1.5 Info Module

The standard info module provides the option to attach the house or building number and/or name to the door station. The module is equipped with permanent backlighting using energy-saving and long-lasting LED technology.



Back with housing cover removed

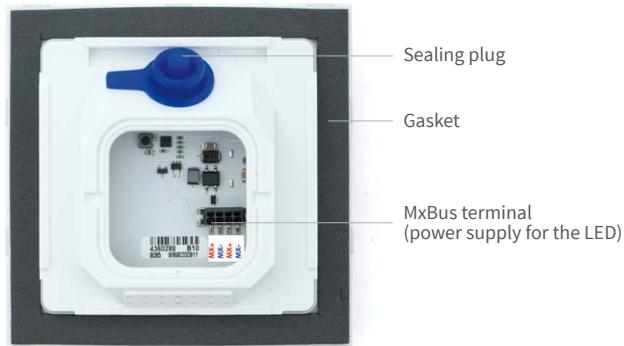

Outdoor Station

Technical Specifications: Info Module	
Functions	Information for visitors on nameplate (name, street number, etc.)
Interfaces	MxBus
User interfaces	Backlit, printable foil (UV-protected)
Protection class	IP65 (DIN EN 60529)
Operating temperature	-30 to 50 °C/-22 to 122 °F (DIN EN 50155)
Power supply	MxBus
Power consumption	typically 0.2 W
Dimensions (W x H)	99 mm x 99 mm

Technical Specifications: Terminals Used on the Info Module	
Cable cross-section, fixed	min. 0.14 mm ² /max. 0.5 mm ²
Cable cross-section, flexible	min. 0.2 mm ² /max. 0.5 mm ²
Cable cross-section, flexible, with wire-end sleeves without plastic sleeves	min. 0.25 mm ² /max. 0.5 mm ²
Cable cross-section AWG/kcmil	min. 24/max. 20
AWG according to UL/CUL	min. 26/max. 20

Recommended wire diameter: 0.6 to 0.8 mm

Note on Labeling

You will find some PDF templates, which you can print out yourself, on the MOBOTIX website (www.mobotix.com).


1.1.6 Info Module Mx2wire+ (With Mx2wire+ Indoor Unit)

The info module with Mx2wire+ technology, combined with a second Mx2wire+ unit to be mounted inside the building, offers users not only the standard info module functions but also the option to connect and supply power to the door station via two-wire cabling instead of a network cable (see Section 1.1.6). Advantage: Simple and cost-effective installation thanks to reuse of already existing two-wire cabling.

The two status LEDs (orange, green) are activated for test purposes within the first 15 minutes after the info module has been powered up



Back with housing cover removed

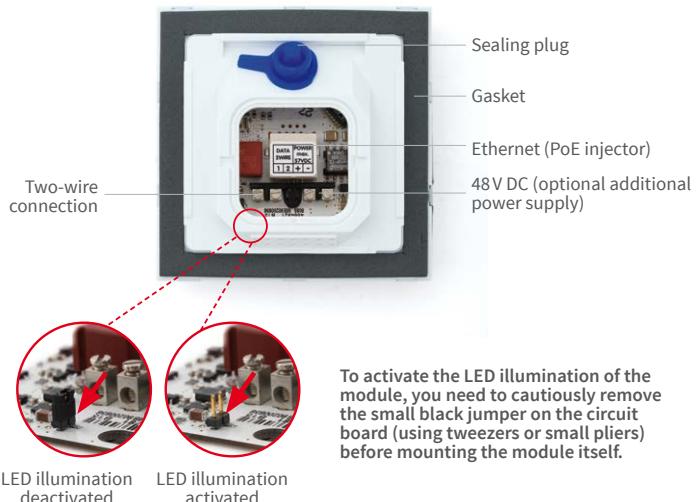

A PoE+ switch or an external voltage connection (48-57 V DC, 600 mA) can be used

Outdoor Station

Technical Specifications: Info Module Mx2wire+	
Data transfer rate	Up to 50 Mbps net (depending on distance)
Interfaces	Ethernet (PoE injector), Mx2wire+ indoor unit, 48-57 V DC, 600 mA (optional additional supply)
Certificates	EMV (EN55022, EN55024, EN61000-6-1, FCC part15B, AS/NZS3548)
Protection class	IP65 (DIN EN 60529)
Operating temperature	-30 to 50 °C/-22 to 122 °F (DIN EN 50155)
Connecting wire thickness	Cable cross-section 0.14 to 2.5 mm ² , diameter 0.4 to 1.6 mm
Dimensions (W x H)	99 mm x 99 mm

Note On Labeling

You will find some PDF templates, which you can print out yourself, on the MOBOTIX website (www.mobotix.com).

Standard Two-Wire Cabling (Installed in Buildings)

Analog Telephone Line or Bell Wire

- Cable type: JY, A2Y and YR (telephone and low-voltage cable)
- Very good availability in buildings
- Core diameter 0.6 to 0.8 mm
- Range (at 50 Mbps): 100 m (0.6 mm), 200 m (0.8 mm)



Power Line (Should No Longer Be Live)

- Cable type: NY (installation cable)
- Widespread availability of cables
- Cables must be disconnected from the power supply!
- Wire cross-section max. 1.5 mm²
- Range (at 40 Mbps): 300 m



Safety Warning

Use this product in compliance with the applicable legal regulations. Electrical systems and equipment may only be installed, modified and maintained by a qualified electrician or under the direction and supervision of a qualified electrician in accordance with the applicable electrical guidelines.



Mx2wire+ Indoor Unit

An Mx2wire+ set always consists of two devices that communicate with one another. For this reason, the necessary unit to connect to the network and to supply power is included with the Info Module Mx2wire+ info module in the door station.



Power supply with PoE+
switch or 48 to 57 V DC,
600 mA (power supply unit)

Outdoor Station

Technical Specifications: Mx2wire+ Indoor Unit	
Data transfer rate	Up to 50 Mbps net (depending on distance)
Interfaces	Ethernet (PoE Class 3), Mx2wire+ info module, 48-57V DC, 600 mA (optional additional supply)
Certificates	EMV (EN55022, EN55024, EN61000-6-1, FCC part15B, AS/NZS3548)
Power supply	PoE+ (PoE IEEE802.3af), performance-related 7 Watt own consumption or 48-57V DC, 600 mA SELV power supply unit
Status display	LED green (network connection, power supply), LED orange (data transfer via AB conductor is active, door station connected)
Protection class	IP20 (DIN EN 60529)
Operating conditions	-5 to 40 °C/23 to 104 °F (DIN EN 50155)
Connecting wire thickness	Cable cross-section 0.14 to 2.5 mm ² , diameter 0.4 to 1.6 mm
Dimensions (W x H x D)	80 mm x 80 mm x 38 mm (in-wall version), 80 mm x 80 mm x 45 mm (on-wall version)

Max. Cable Lengths of Usable Cable Types as Two-Wire Cable of a DoorStation

Cable type		Cable thickness	Max. cable length
Antenna or coaxial cable		0.6 mm (inner core)	100 m (50 Mbps)
Telephone line/bell wire		0.6 mm	100 m (50 Mbps)
		0.8 mm	200 m (50 Mbps)
Installation cable		1.5 mm ²	300 m (40 Mbps)
Network installation cable		Cat7	500 m (45 Mbps)

Notes

The Mx2wire+ set consisting of two units (info module and indoor unit) contains all the components required to establish an Ethernet connection via a two-wire cable.


Please note that the two Mx2wire+ units are matching pairs and preconfigured at the factory. The use of a different Mx2wire+ unit that was not supplied in the original packaging is therefore technically not possible. In case of a defect, both units must always be exchanged for a new Mx2wire+ pair that has been configured by MOBOTIX.

Mx2wire+ pair for T26:
Info Module Mx2wire+ module
with Mx2wire+ indoor unit

1.1.7 Housing and Module Frames

The robust DoorStation can be installed in both on-wall and in-wall systems, it is weather-proof (IP65) and cannot be stolen. The system consists of a housing and a frame. The frame for mounting the modules is simply screwed on to the housing used.

On-Wall Housing (Fig. Triple Housing)

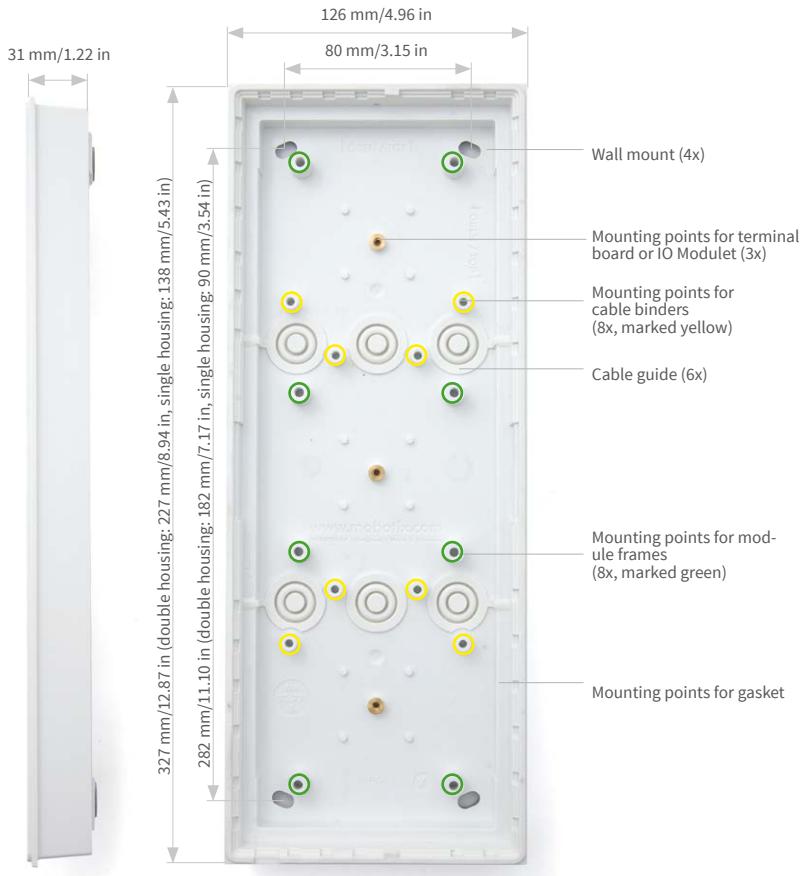

Outdoor Station



In-Wall and Cavity Housing (Fig. Triple Housing)

The blue housing is firmly connected to the subsurface or brick work. It can also be used to ensure easy installation in cavities: Drill opening, position housing and screw tightly in place; the retaining wings, which automatically swing out, secure the housing, while the plastic bars at the edge of the housing prevent it from sliding into the cavity.

The insert prevents the in-wall housing from getting dirty or being deformed during installation




The required integration opening has the following dimensions (width x height):


Single housing:
117 x 129 mm/4.61 x 5.08 in

Double housing:
117 x 218 mm/4.61 x 8.58 in

Triple housing:
117 x 318 mm/4.61 x 12.52 in

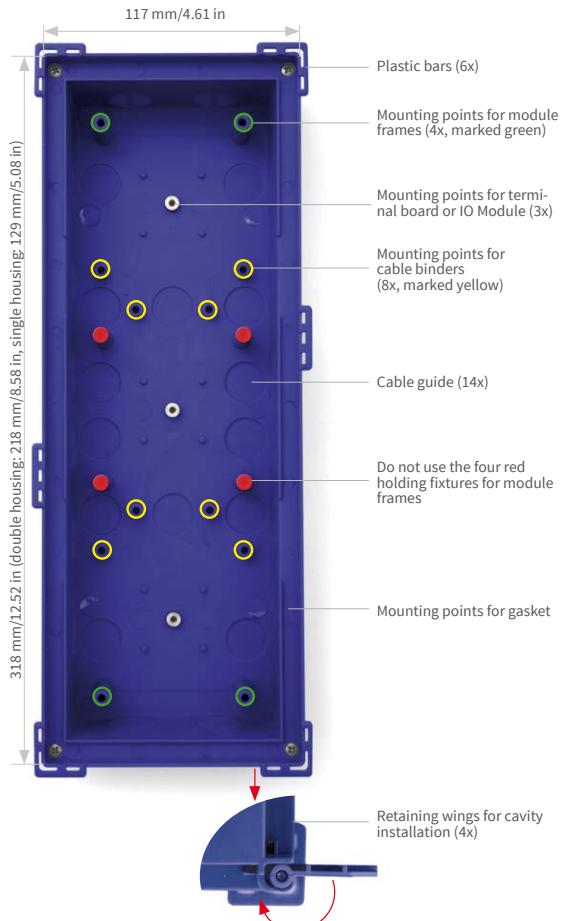


Outdoor Station

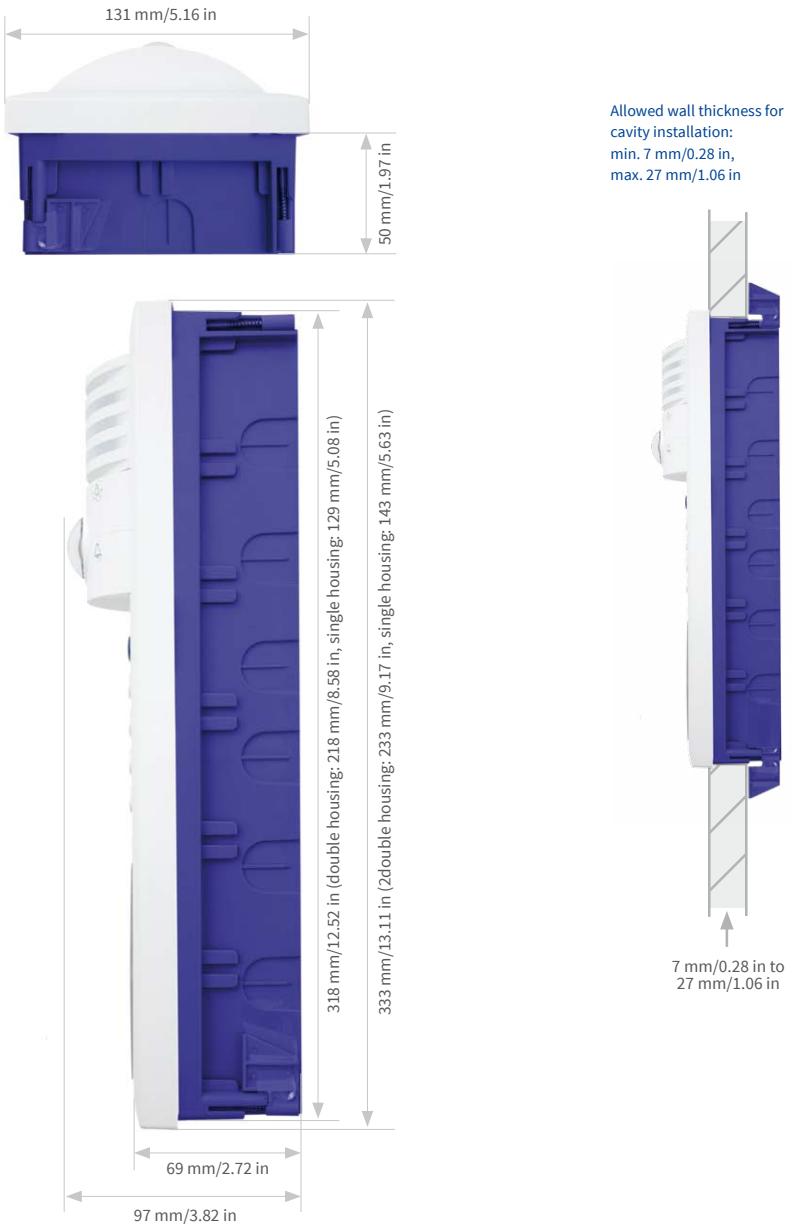

Module Frame (Fig. Triple Frame)

* Ethernet terminal board ETH Module is not required when using Mx2wire+ technology

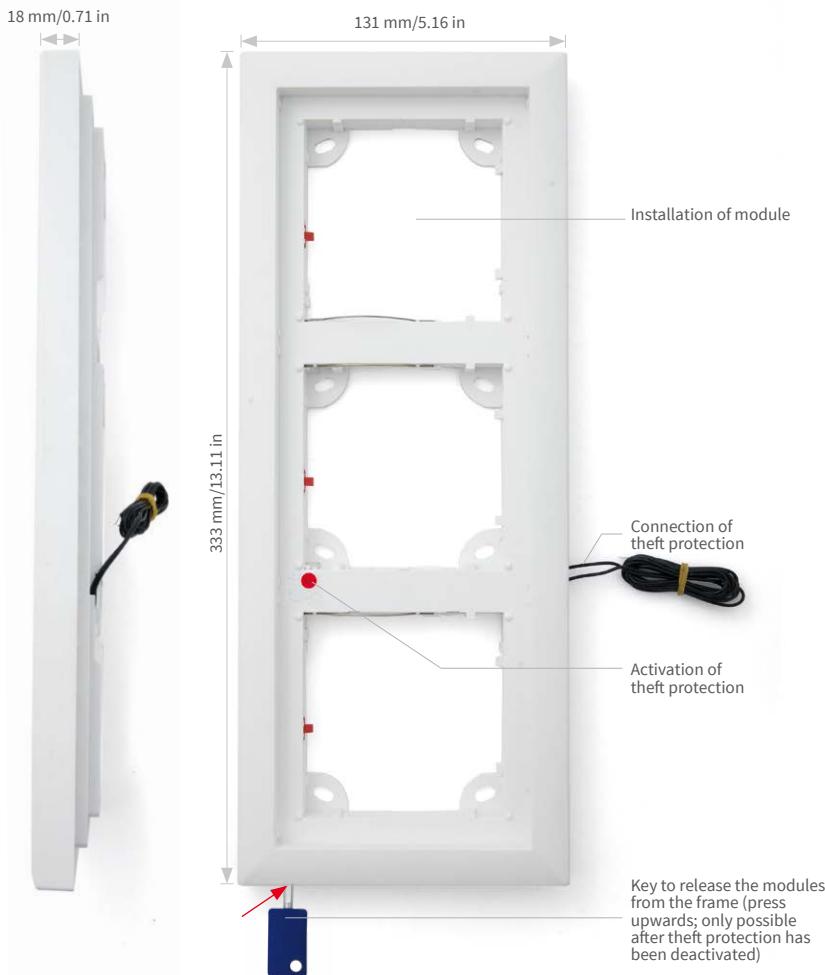

Outdoor Station

T26 Modules
MX-DoorMaster,
KeypadRFID,
Info Module/Info Module Mx2wire+
Frame
With integrated
theft protection
Terminal board*
Ethernet terminal
board or Info Module
Housing
On-wall or in-wall
housing



*Ethernet terminal
board ETH Module is
not required when using
Mx2wire+ technology

1.2 MX-DoorMaster

The T26 can be coupled with the MX-DoorMaster with internal access code memory, making it impossible to open the door by forcibly removing the system and bypassing the connecting cable.



Minimum mounting dimensions:



Outdoor Station

Technical Specifications: MX-DoorMaster	
Functions	Security door opener with internal access code memory
Interfaces	MxBus (max. 50 m distance to door station)
User interfaces	2 status LEDs, 2 function buttons, integrated speaker (doorbell)
Inputs	2 galvanically separated inputs with shared ground connection (AC/DC, self-powered - 48 V)
Outputs	1 isolated relay output (AC/DC, 24V/1A) or 1 connector for standard door opener (6-12V AC) 1 output for MOBOTIX theft protection (12V DC)
Protection class	IP20 (DIN EN 60529)
Operating temperature	-5 to +40°C/+23 to +104°F (DIN EN 50155)
Power supply	MxBus
Power consumption	typically 1 W
Output	max. 10 W
Switch time	max. 5 s
Connecting wire thickness	Cable cross-section 0.14 to 2.5 mm ² , diameter 0.4 to 1.6 mm
Dimensions (W x H x D)	80 mm x 80 mm x 41.5 mm

Max. cable length for MxBus is 50 m

Note

The **battery pack** supplies the electrical door opener and, in the event of a power failure, the access module, which continues to guarantee that the door can be unlocked multiple times. For installations in living areas, the MX-DoorMaster functions also as a doorbell.

Thanks to the battery, the door opener continues to function in the event of a power failure

Supported Door Versions

An electrically-operated standard door opener (6 to 12 VAC, min. nominal resistance 10 ohm, no support for closed-circuit current function) can be connected directly to the MX-DoorMaster and powered by its integrated battery pack. It is not necessary to connect an additional power supply unit.

By integrating an additional power supply unit, door openers with up 24 V AC/DC (max. 1 A) or a self-locking door lock (e.g., electrical lock or “Mediator”) can be connected.

1.3 Remote Stations

1.3.1 MxDisplay+

MOBOTIX recommends the MxDisplay+ as a remote station for the T26. The MxDisplay+ is a wall-mounted multi-functional intercom with WiFi and RFID technology on-board. All MxDisplay+ units are powered via PoE (Power over Ethernet) and you can install several MxDisplay+ units that interact via wireless communication. The touchscreen glass interface allows configuring and controlling the entire MOBOTIX video system – a few swipes will get you an overview over several cameras, will play back the latest video messages or will create an RFID transponder card for your guests.

Controlling the IP Video Door Station Using the Touchscreen



Live view and live access

One MxDisplay+ unit can control several door stations and cameras.



Open doors, switch lights, etc.

Quick access to all door station functions.

Outdoor Station



Fast event overview

MxDISPLAY+ shows you at a glance, which and how many events have been recorded.



Playback of messages and events

Fast and easy navigation through the recordings.



Access and camera configuration

Centralized control of cameras and access control systems.



1.3.2 MOBOTIX MxBell

Never miss another visitor, thanks to push notifications! Use MOBOTIX MxBell on your smartphone or tablet to receive notifications from the doorbell of a MOBOTIX IP Video Door Station and live views from MOBOTIX cameras. This app helps you open the door and enables hands-free talking, automatic camera search, a live view, camera connection via SSL and display of the connection status.


Our new MOBOTIX MxBell version 2.0 is here!

The update scores with its new playback function, which makes it possible to search through the recorded events for the integrated Door Stations and cameras at a specific time point and play back the individual clips. In addition, the Grid view will simultaneously display up to four cameras, which in particular is a great advantage for small installations.

- Never miss another visitor, thanks to push notifications.
- Displays doorbell messages from MOBOTIX IP Video Door Stations.
- Live views from MOBOTIX IP cameras with gesture-controlled PTZ function.
- Open the door from anywhere, hands-free talking.
- Automatic camera search, live view and camera connection using SSL.
- Displays the connection status.
- Supports remote connections and mobile data.
- For iOS 10/Android 4.4 and higher.

Free download from App
Store/Google Play

No license fees!
Free updates!

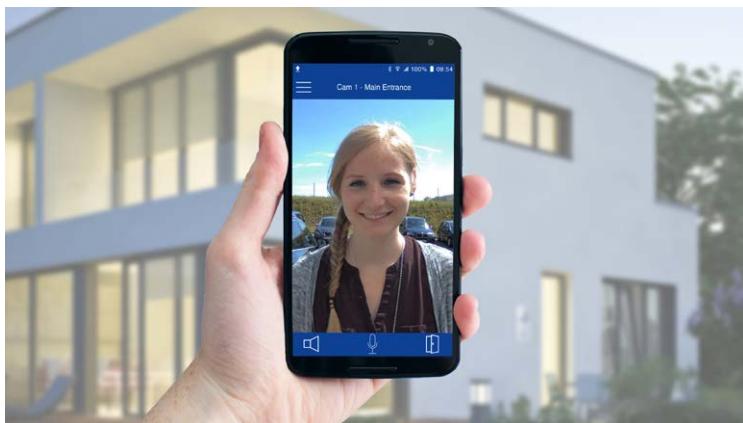

Outdoor Station

1.3.3 MxManagementCenter

MxManagementCenter (MxMC) is a completely new development that focuses on a unique and intuitive user experience. Single and double click, drag&drop, support of several screens and direct view of events and alarm messages are just some of the many advantages of the new software.

MxManagementCenter is perfectly designed in combination with MOBOTIX cameras representing the decentralized concept at its best. MxMC allows controlled recording access via the camera or later directly to the NAS.

A unique feature is the adaptive bandwidth management supporting quality search even over mobile networks with very limited bandwidth. MxMC is 100 % free of charge, requiring no license or update costs and at the same time having no limits in terms of users, screens and cameras.



MxManagementCenter – simple operation of the most important camera functions:

- Integration of an unlimited number of cameras.
- Camera groups with representation in Grid and Graphic views, Grid views with a focus window and many controls.
- Optical and audible alarming of new events.
- Instant Player that allows for quick viewing of the latest events during live video monitoring operation.
- Easy use of multiple monitors by double-clicking on the live image, grid or event image.
- Door station functions (intercom, open door, turn light on/off, etc.).
- Subsequent distortion correction of hemispheric camera images – in live images and in recordings.

Download free of charge
from www.mobotix.com


No license fees!
Free updates!



1.4 Accessories

1.4.1 NPA-PoE Set

The MOBOTIX Network Power Adapter Set (NPA-PoE set) is a high-quality, robust, ultra-compact, and – above all – multifunctional PoE injector with three connectors (network, camera/ PoE device, computer) and a universal power supply unit with adapter plugs. The Network Power Adapter Set supplies the DoorStation and all other PoE devices with power in accordance with the IEEE 802.3af standard. It is therefore possible to secure the power supply for distances up to 100 m (300 ft) using the network cable. As a result, the DoorStation can be supplied with PoE power via the adapter and connected directly to a remote station (integrated crossover function).

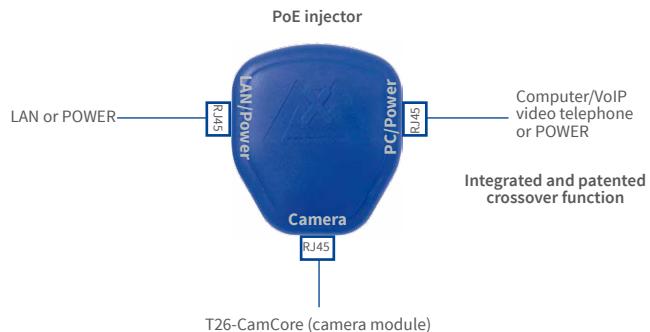

This device is especially practical because the supplied **power supply unit** can be used around the world by changing the adapters as required in just two simple steps. The “E.” version of the NPA-PoE Set is supplied as standard with a European adapter, while the “INT” version includes four adapters (EU, USA, UK, AUS). Another product benefit is the option to connect to power sources from 12 V to 57 V that are independent of the network, which is ideal for solar and battery operation of the door station (e.g., in a holiday home).

MX-NPA-PoE-Set-EN and
MX-NPA-PoE-Set-INT incl.
adapters for EU, US, UK and AUS



Outdoor Station

1.4.2 IO Module (Extended Terminal Board)

In addition to the Ethernet terminal board (ETH Module), MOBOTIX offers an IO Module (MX-OPT-IO1) with extended connection options for the door station (e.g., doorbell buttons, light, garage door opener, etc.).

The board provides 8 switch inputs and 3 switch outputs. The network cable and the camera module T26-CamCore are connected in the same manner as the Ethernet terminal board.



Note

Please read further information on the connection details and on using this product in Section 2.7.1, «Using the IO Module».

1.4.3 MX-Overvoltage-Protection-Box

Order no.: MX-Overvoltage-Protection-Box-RJ45

Order no.: MX-Overvoltage-Protection-Box-LSA

Weatherproof network connector (protection class IP65, -30 to 60°C/-22 to 140°F) **with surge protection of up to 4 kV for MOBOTIX IP cameras**, ideal for replacing the MX-Patch-Box.

At the same time, the MX-Overvoltage-Protection-Box provides a weatherproof connection of a camera's patch cable to a network patch cable (-**RJ45** variant) or a network installation cable (-**LSA** variant).



1.4.4 MX-GPS-Box

Order no.: MX-OPT-GPS1-EXT

The MX-GPS-Box primarily serves as a high-precision time source for systems without an Internet connection. In addition, it can provide triggering based on GPS events (reaching or moving away from a specified position; exceeding or not reaching a specified speed). This interface box can be attached to all MOBOTIX cameras with an MxBus interface.



The MX-GPS-Box is equipped with the same compact housing as the other interface boxes (protection class IP65, -30 to 60 °C/-22 to 140°F). This interface box should not be installed inside of other wall mounts, but on the exterior of the building with a large section of open sky above it. This ensures the best possible reception from GPS satellites and thereby the highest possible accuracy of the received GPS data. The maximum length of the MxBus wiring (0.8 mm diameter wires) is 50 m/55 yd.

1.4.5 Additional Devices for PoE Power Supply

By default, power is supplied to the DoorStation via the network cable that is connected to the Ethernet terminal board behind the camera module. **PoE injectors or switches with integrated PoE power supply according to IEEE 802.3af** can be used to supply power to the network.

PoE switch



Info Module Mx2wire+ with
Mx2wire+ indoor unit



PoE+ According to IEEE 802.3at for Mx2wire+

If the T26 version with Mx2wire+ technology is installed, data and power are supplied to the door station via a two-wire cable, which is connected to the network via an Mx2wire+ indoor unit. Due to the increased energy requirements of the Mx2wire+ technology, PoE supply according to IEEE 802.3af is not sufficient. A PoE injector/switch (performance class PoE+ according to IEEE 802.3at) has to be used instead, or an external voltage source (48 V DC) must be connected to one of the two Mx2wire+ units (info module or indoor unit).

Outdoor Station

Switch or PoE Injector?

A switch connects individual network-enabled devices to one another and delivers data. In the case of a home network, this function is normally performed by an existing router with multiple network ports, which is also capable of connecting to the Internet (such as the Fritz!Box). In this case and if only one T26 door station needs to be supplied with power, it is sufficient to purchase one PoE injector.

When purchasing a switch with an additional PoE power supply, make sure that a sufficient number of ports are supported (this is especially important if other PoE-supplied devices apart from the T26 are connected to the switch).

Furthermore, it is crucial that the switch fulfills all the requirements for using the PoE-supplied door station outdoors (electromagnetic compatibility, lightning and surge protection through galvanically-separated ports).

1.4.6 Additional Video Remote Stations

Thanks to the use of network technology, the T26 is not bound to just one expensive, manufacturer-dependent remote station. It can be connected to any suitable VoIP video phone in the world. In addition to supporting the two-way video communication feature with video and sound, these devices support additional features such as door/light control, image search, quick recording and PTZ functions. So called SIP softphones are also suitable as remote video stations.

1.4.7 Door Sensors

Connection options are also provided on the door station for conventional door and door and door lock sensors (door open/closed, lock open/closed).

1.4.8 Electrical Door Opener

The T26 Door Station should always be connected to an electrical door locking system, which can be activated via the MX-DoorMaster in a tamper-proof manner.

Product Information: Self-Locking Door Lock

Traditional door openers only electromechanically release a locking tab on the door. In order to open an additional, key-locked door without using the key and as described above, a **door lock that can be locked/unlocked electrically is required instead of a traditional door opener (e.g., electromechanical locks, www.assaabloy.com).**

This also applies when the door in question has to be locked at all times for insurance reasons and the keyless door opening function of the T26 is to be used as well (transponder/PIN).

2 INSTALLATION

2.1 Overview: Connection and Wiring Diagrams

The following diagrams are an overview of the wiring plans that will allow you to connect the DoorStation as intended. Please refer closely to the configuration that best suits your particular needs.


2.1.1 With MX-DoorMaster

Using a MX-DoorMaster with decentralized access code memory makes it impossible to open the door by bypassing the connection cable, thereby protecting your system against unauthorized access. A battery, kept fully charged via MxBus at all times, supplies power to the electric door opening mechanism – even in the case of a power failure.


The figure above the connection sections represents the number of cable wires

Black: YSTY 0.8
(recommended)
or 0.6 mm

Orange: Ethernet
Cat. 5 or higher

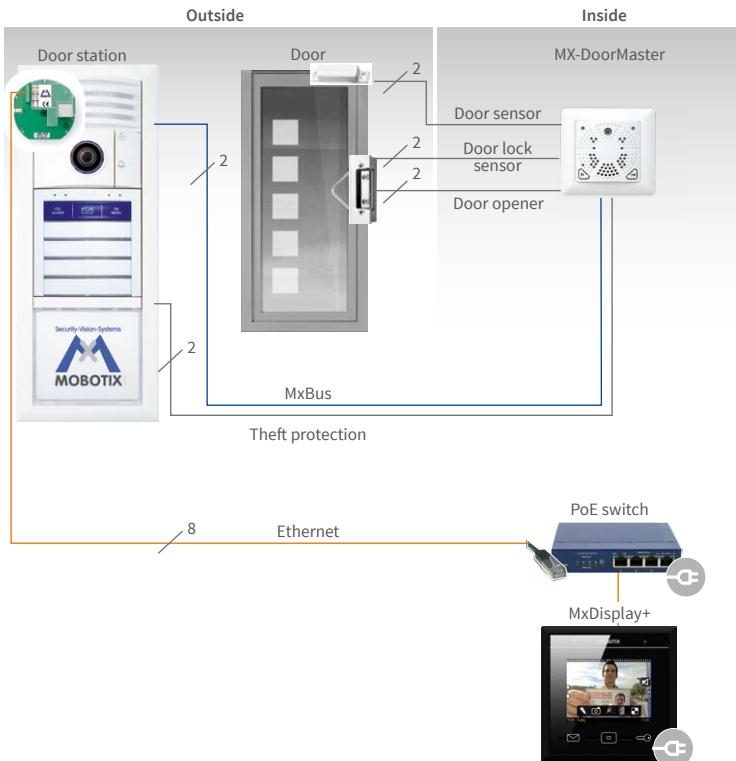

Overview: Connection and Wiring Diagrams

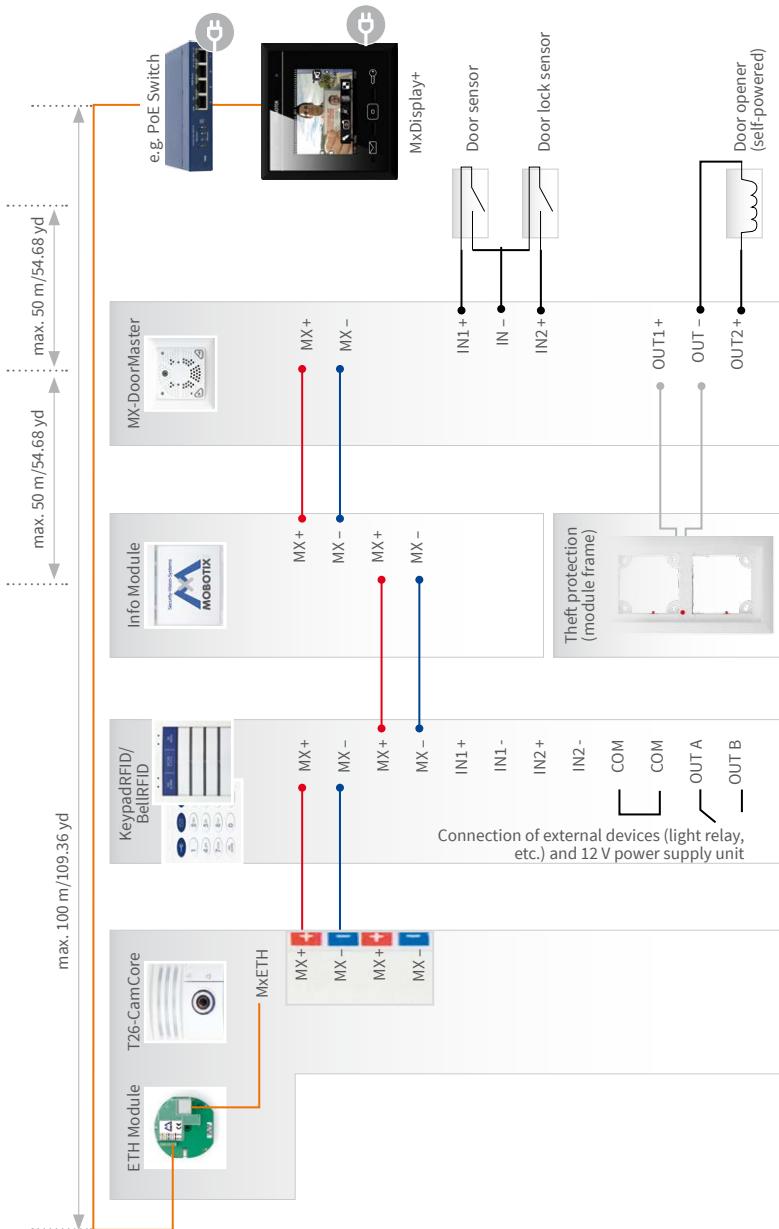

2.1.2 Without MX-DoorMaster

When no MX-DoorMaster is used, the electric door opener/electronic lock (“Mediator”), including the door and door lock sensors, are connected directly to the access module. In addition, an external 12 V voltage is applied to the door mechanism/electronic lock and bridged over to the access module.


The two cables for the electromagnetic theft protection integrated into the T26 frame (otherwise connected to and powered by the MX-DoorMaster) should be conducted inside the building so that they can be connected to a 12 V supply in case modules are exchanged.

The figure above the connection sections represents the number of cable wires

Black: YSTY 0.8 (recommended) or 0.6 mm

Orange: Ethernet
Cat. 5 or higher


The external 12 V supply can be bridged over from the electronic lock to the access module to avoid having to use an additional 12 V cable to the access module

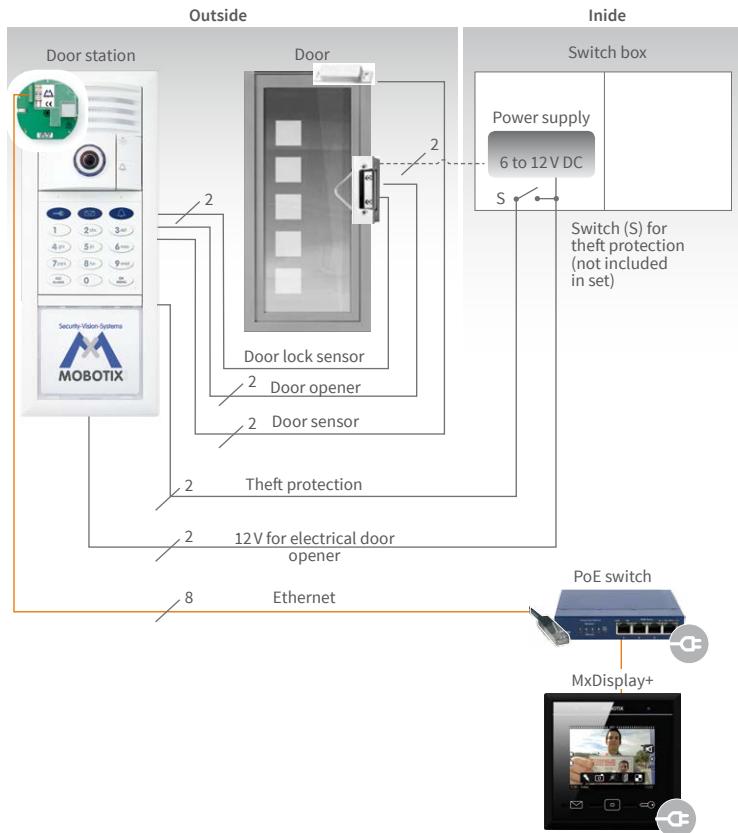

Note

The theft protection is connected to the DC power supply of the door opener via a switch (switch on -> current is flowing -> protection deactivated). If the door opener works with an AC power supply, the theft protection requires its own DC voltage source.

Overview: Connection and Wiring Diagrams

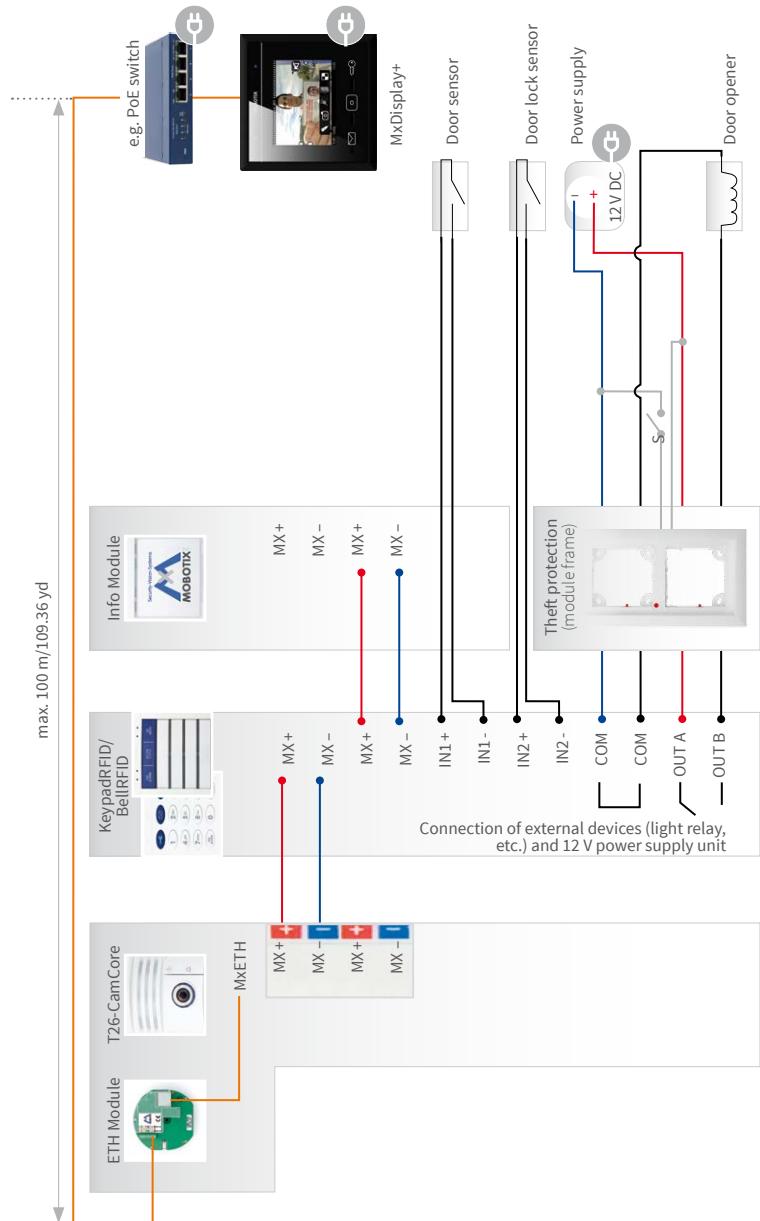

Modules are connected via the looped-through, two-wire MxBus cable that transfers data and power simultaneously (cable included in packaging)

The module terminal designations can be found directly on the module

2.1.3 With Info Module Mx2wire+ and MX-DoorMaster

To be able to use a bell wire already laid in the building to connect the T26 door station to the network and supply it with power, the T26 version with Mx2wire+ technology is required. The two-wire cable must be conducted from the door station info module to a second Mx2wire+ unit inside the building, to which data and power is supplied, for example, via a PoE+ switch.


Installing a MX-DoorMaster with decentralized access code memory makes it impossible to open the door by bypassing the connection cable, and therefore protects against unauthorized access. A battery, kept fully charged via MxBus at all times, supplies power to the electric door opening mechanism (even in the case of a power failure).

The figure above the connection sections represents the number of cable wires


Black: YSTY 0.8 (recommended) or 0.6 mm

Orange: Ethernet
Cat. 5 or higher

The external 12 V power supply including a cable from the switch box is required here for an electronic lock ("Mediator", optional)

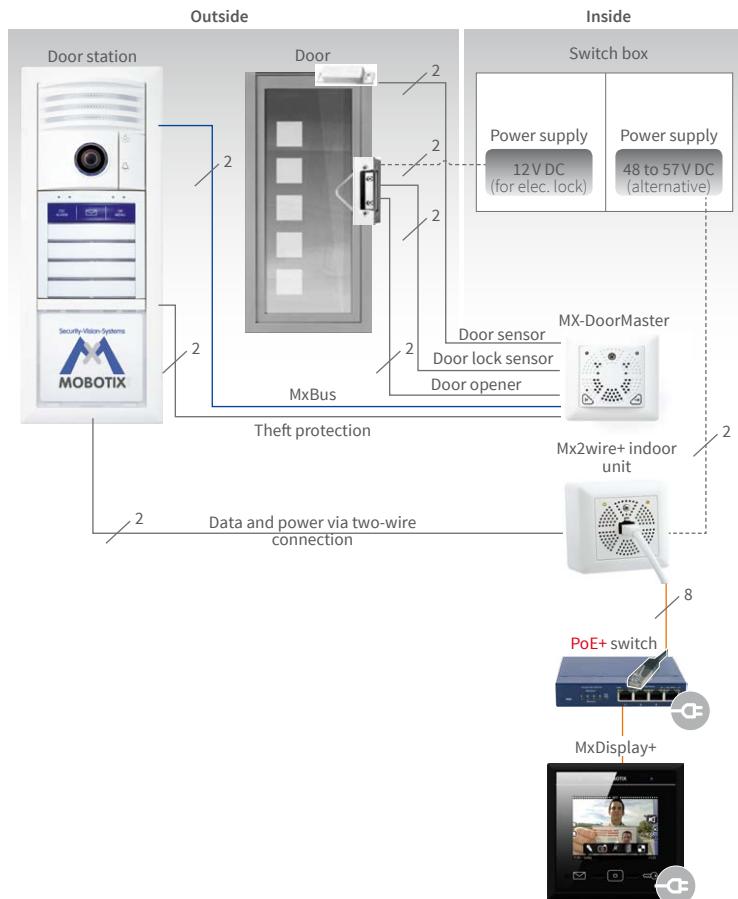

Overview: Connection and Wiring Diagrams

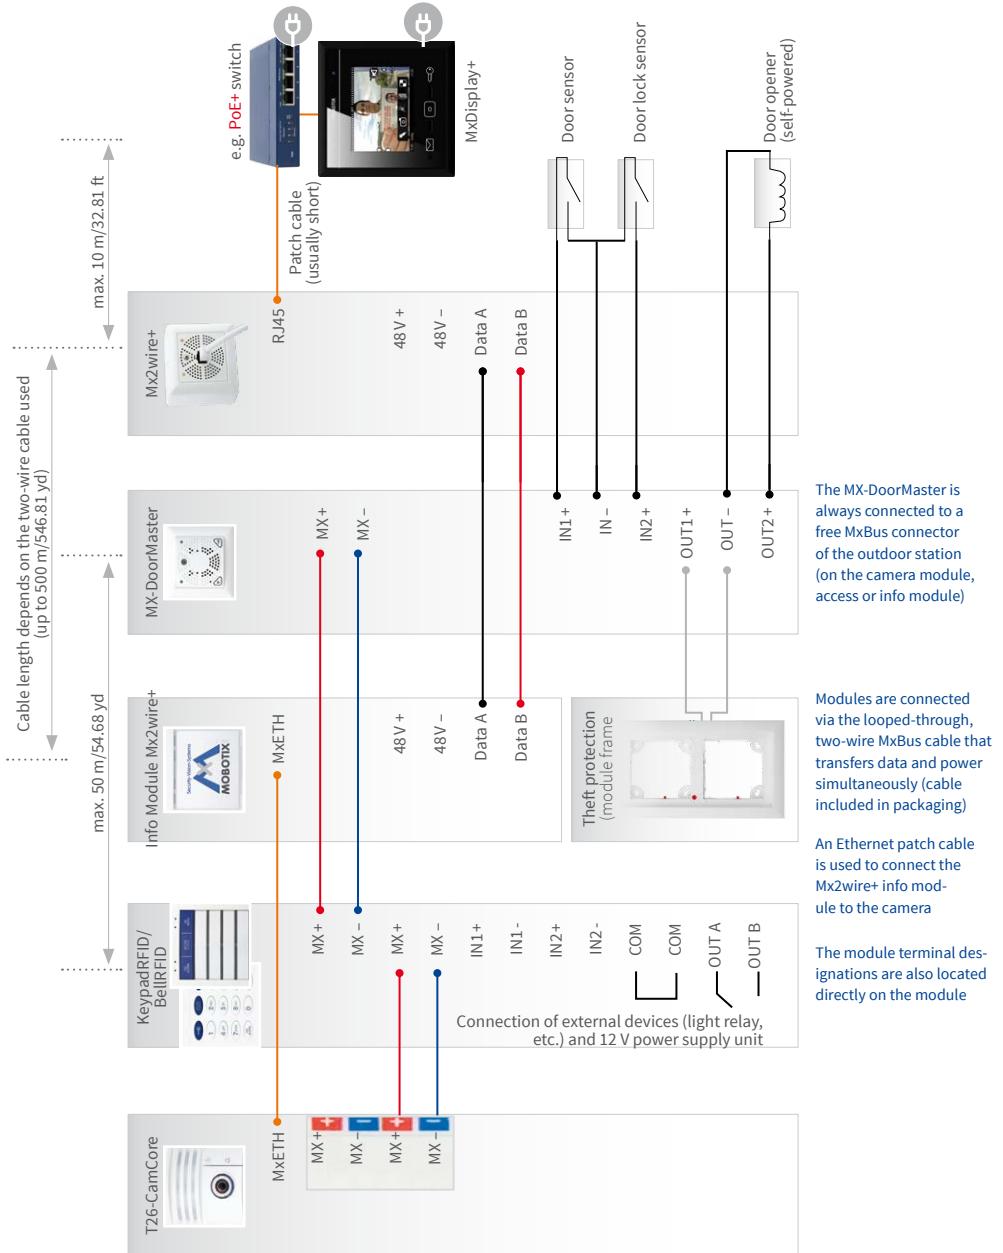

The maximum configuration is specified for these cabling recommendations

2.1.4 Recommendation for Cabling

Depending on the model, the door station and its remote stations require one of the following cabling configurations. Please take note of our cabling recommendations and the maximum cable lengths. Both the network cable and other cables must be stripped at the door station ends.

1

Network cable from the Ethernet terminal board behind the camera module to the switch/injector

- **Recommendation:** Category 5 (Cat 5) Ethernet installation cable or higher; Cat 7 cable is designed for 10 Gbit Ethernet (max. future compatibility)
- **Max. cable length:** 100 m/109.36 yd

2

Two wires from the door station to the MX-DoorMaster for the MxBus connector

- **Recommendation:** YSTY (telephone) solid wire, core diameter 0.6 to 0.8 mm
- **Max. cable length:** 50 m/54.68 yd

3

Cables from the MX-DoorMaster to the electric door opener, the door sensor and the door lock sensor

- **Recommendation:** YSTY (telephone) solid wire, core diameter 0.6 to 0.8 mm
- **Max. cable length:** manufacturer-dependent, max. 50 m/54.68 yd

4

Two wires from the MX-DoorMaster to an additional power supply (for example, 12 V for electronic lock operation)

- **Recommendation:** YSTY (telephone) solid wire, core diameter 0.6 to 0.8 mm
- **Max. cable length:** manufacturer-dependent

5

Two wires from the access module to the 230 V light relay (if present)

- **Recommendation:** YSTY (telephone) solid wire, core diameter 0.6 to 0.8 mm
- **Max. cable length:** manufacturer-dependent

6

Two-wire cable from the Info Module Mx2wire+ to the Mx2wire+ indoor unit (as an alternative to the outdoor station being directly connected to the network)

- **Recommendation:** existing, previously laid bell wire (core diameter 0.6 to 0.8 mm)
- **Max. cable length:** 200 m/218.72 yd (JY, A2Y, YR), 300 m/328.08 yd (NY), 500 m/546.81 yd (Cat 7)

7


Two wires from the door station to the MX-DoorMaster for connecting the MOBOTIX theft protection (for unlocking when exchanging modules)

- **Recommendation:** black two-wire cable already fitted to the frame, possibly extended with YSTY (telephone) solid wire, core diameter 0.6 to 0.8 mm
- **Max. cable length:** 50 m/54.68 yd

The supplied patch cable is used to connect the Info Module Mx2wire+ to the camera

NY: installation cable (not live)

Overview: Connection and Wiring Diagrams

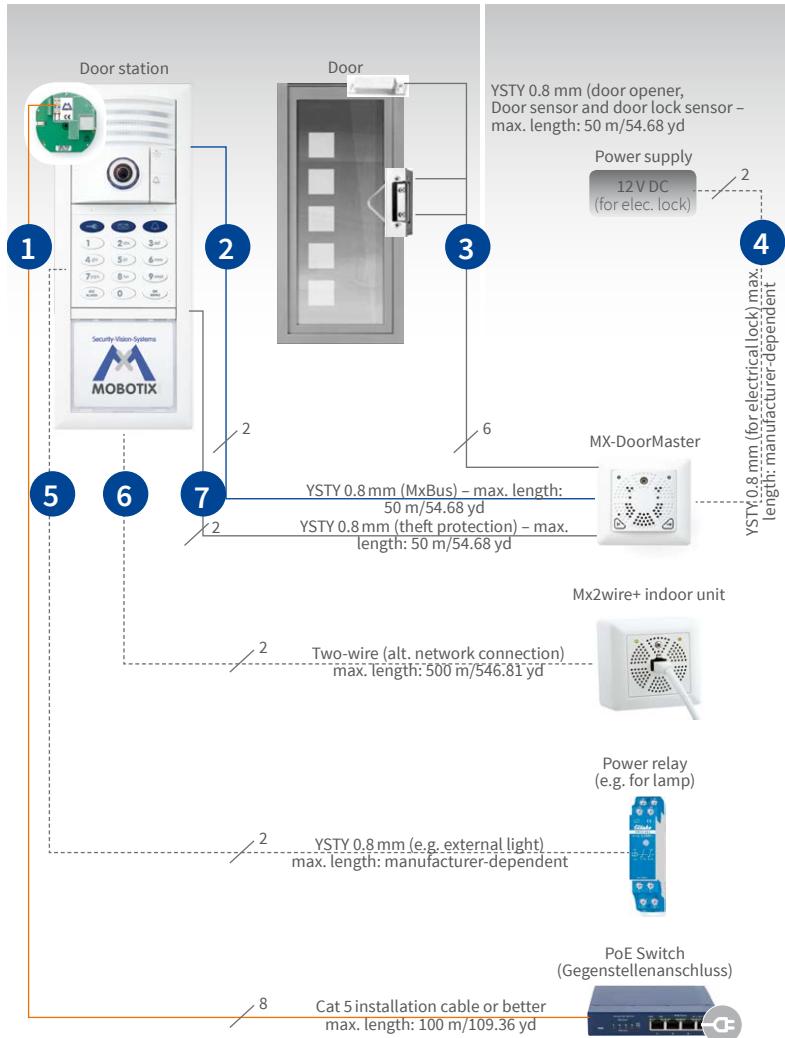


2.1.5 Installation Tip: Replacing an Existing Doorbell by a T26

The MOBOTIX DoorStation, in particular the version with integrated Mx2wire+ technology (for network connection with simultaneous power supply via the same two-wire cable), is an ideal retrofit solution that is very easy and quick to install.

The following two installation steps are normally all that is required to replace an existing, simple doorbell with a complete T26 set including a MX-DoorMaster:

Step 1: Connect the T26 Using a Two-Wire Cable

Disconnect the doorbell from power (by disconnecting the bell transformer), then remove it. Connect the wire pair to the Info Module Mx2wire+ (T26 is mounted directly above the cable). This wire pair is conducted directly to the electrical cabinet, from where it is connected to the power supply and remote stations via the Mx2wire+ indoor unit.

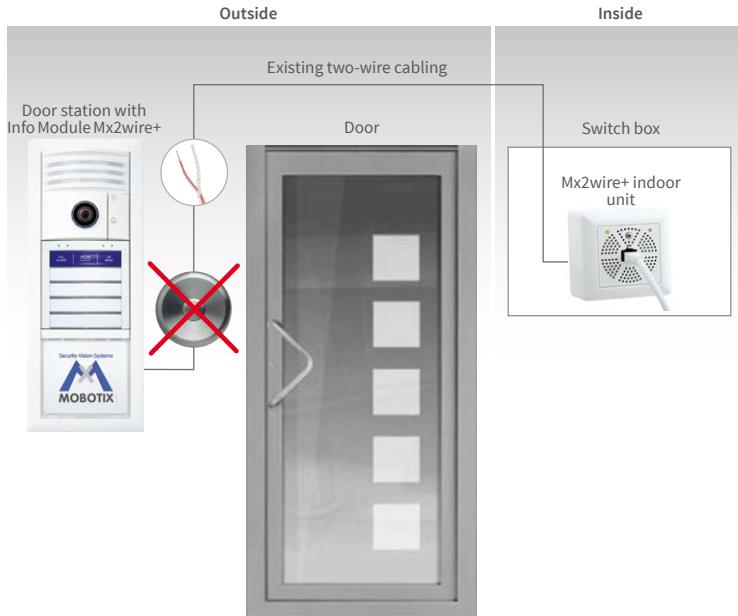

Overview: Connection and Wiring Diagrams

Step 2: Install and Connect the MX-DoorMaster


Install the MX-DoorMaster in a in-wall socket on the wall behind the door station (inside the building). Besides the in-wall socket, only two holes are required for the entire cabling.

Hole A

Use a long drill bit to drill a hole from the door station downwards at an angle, through the brickwork to the in-wall socket of the MX-DoorMaster on the interior wall surface. Insert a 4-wire cable for MxBus and the theft protection (see Section 2.1.4, «Recommendation for Cabling»).

Hole B

Use a shorter drill bit to drill a hole through the brickwork from the door lock/door opener to the in-wall socket of the MX-DoorMaster. Feed the connectors for the door opener, door sensor and door lock sensor through this hole (see Section 2.5, «Installing the MX-DoorMaster»).

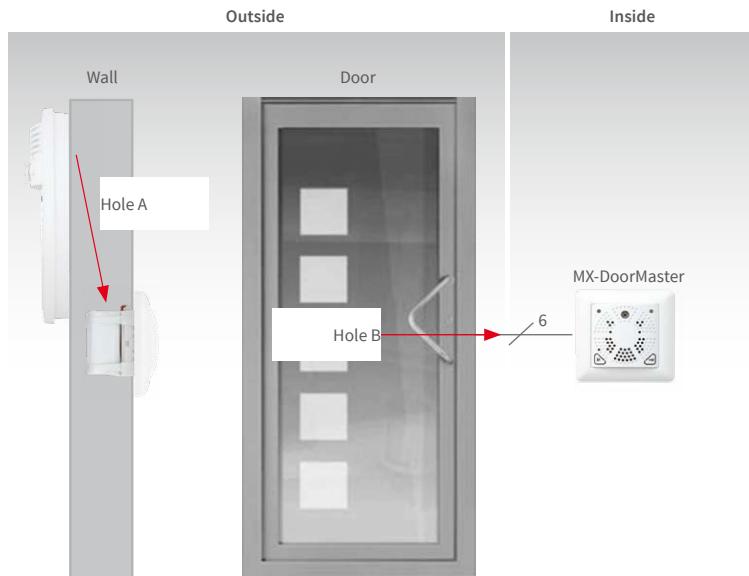

Note

Please contact a specialist (e.g. a locksmith) for the installation and selection of any components that may be required (door opener, magnetic sensors). Door openers and door sensors are available as accessories from other suppliers (e.g. www.assaabloy.com).

2.2 Remote Stations and Network Connection

2.2.1 Notes on Cable Lengths and Power Supply

The T26 door station can only be powered using the Ethernet port of the door camera. A MOBOTIX PoE adapter (MX-NPA-PoE) or other similar, high-quality PoE product conforming to IEEE 802.3af is required to supply the T26 with power (PoE switch). A PoE+ switch (IEEE 802.3at) or a 48 V power supply unit can be used to supply power to the T26 version with Mx2wire+ technology.

The **maximum length** of the network cable for power supply over an Ethernet cable is **100 m**.


Make sure that you only connect the door station or Mx2wire+ indoor unit to switches or routers that support the 10/100 Mbps network interface. Check the LED activity of the corresponding port at the switch or router.

2.2.2 Direct Connection of One Remote Station

If the door station is to be connected for operation to one remote station only (computer with MxManagementCenter or an MxDisplay+ unit), MOBOTIX recommends using a MOBOTIX PoE adapter (MX-NPA-PoE) to supply power to the door station. Connect the devices as shown in the following connection diagram:

Connection Using a MOBOTIX PoE Adapter

The MOBOTIX PoE adapter (MX-NPA-PoE-SET) features a crossover function for direct computer connection, and can either be connected to the mains supply or to other voltage sources (12–57 V)

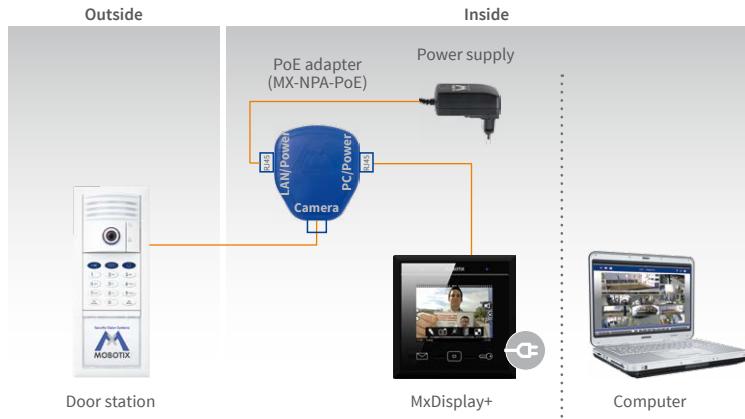


Remote Stations and Network Connection

2.2.3 Network Connection with Multiple Remote Stations


If the door station is to be connected for operation with multiple remote stations (computers with MxManagementCenter or MxDISPLAY+ units) in an existing network (for example, via an Internet box), MOBOTIX again recommends using a MOBOTIX PoE adapter (MX-NPA-PoE) or a switch with multiple ports to supply power to the door station. Connect the devices as shown in the following connection diagram:

Connection Using a PoE Switch

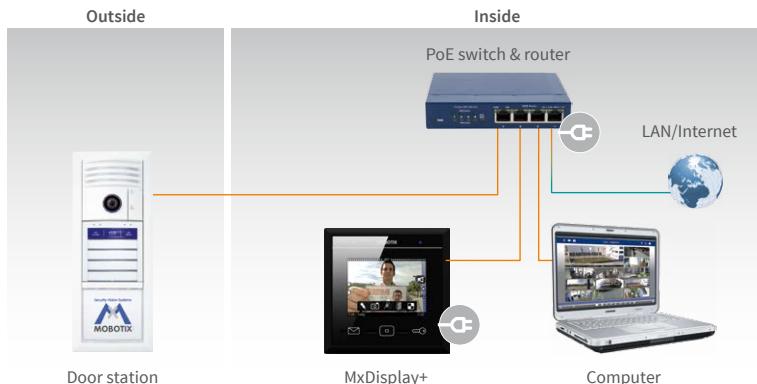

If multiple PoE-supplied end devices (such as several IP cameras) are to be operated, you should consider using a PoE switch

Connection Using MOBOTIX PoE Adapter

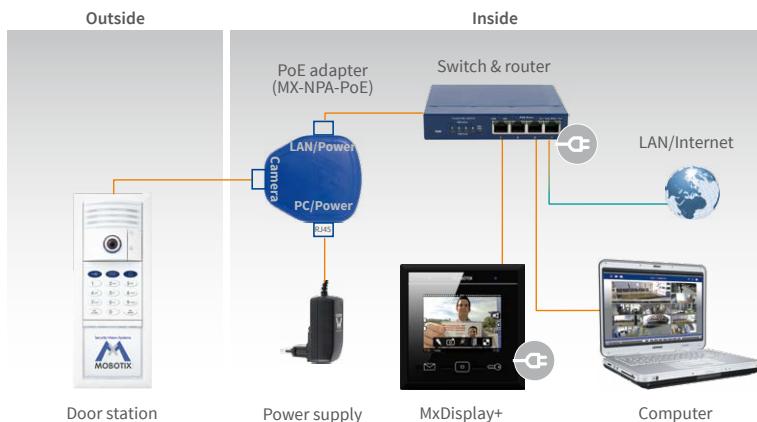


The T26 (with additional PoE power supply, for example, using the MOBOTIX PoE adapter) and its remote stations can also be connected to an existing WLAN router with integrated switch function (DSL box)

Connection with Mx2wire+ and Optional 48 V Power Supply

Note


For a door station with integrated Mx2wire+ technology, an external voltage source (48 V DC) – connected via two wires directly to one of the two Info Module Mx2wire+ units (info module or indoor unit) – can also be used to supply power via the network cable.

An existing DSL box can also be used to connect the Mx2wire+ indoor unit instead of a switch

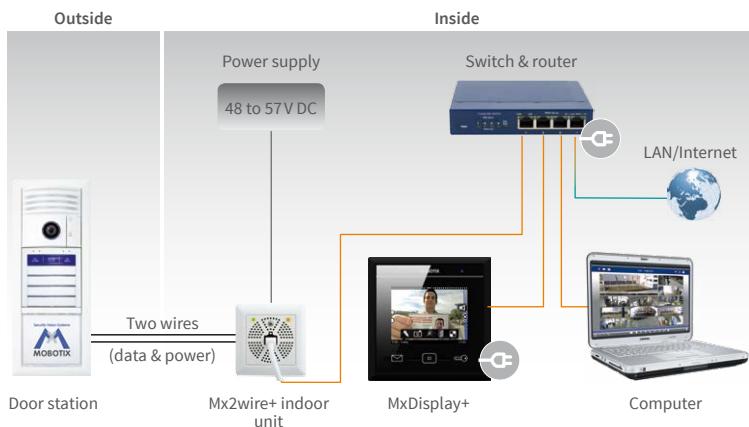

Connection with Mx2wire+ and PoE+ Switch

Although a PoE+ switch complies with the IEEE 802.3at standard, using a 48 V unit to supply power is normally the more economical option if only one end device powered via PoE+ is to be operated

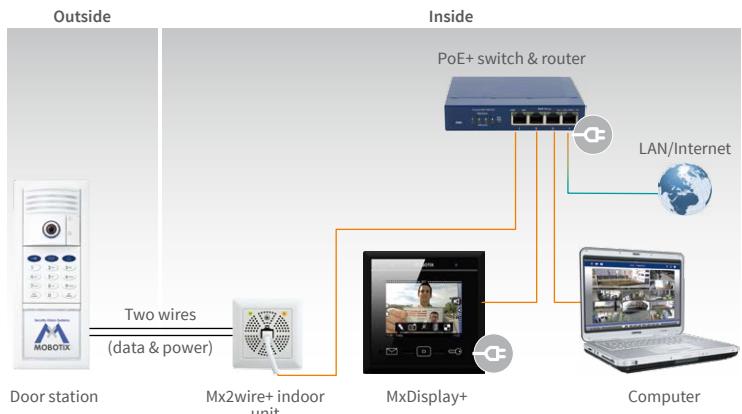


Remote Stations and Network Connection

Connecting Multiple T26 Door Stations

In general, a (PoE) switch can be used to connect several T26 door stations to the same remote stations.

However, only one T26 can be connected to a MX-DoorMaster.

Each transponder card can be programmed in such a way that it can be used on all the existing T26 door stations for opening the door.

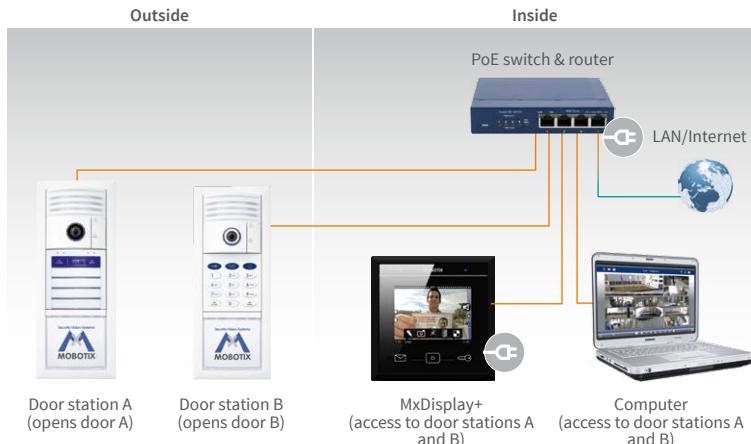

2.3 Mounting the Frame and Housing

A complete T26 door station system includes components that are mounted next to the entrance door, which means they are usually installed outdoors, as well as components such as the MX-DoorMaster, remote stations and power supplies that are installed inside a building.

Please note that only the T26 camera, access module and info module are suitable for outdoor installation (IP65, -30 to 50 °C/-22 to 122 °F). The modules will only be weather-proof if they have been installed correctly using matching MOBOTIX housings and frames.

2.3.1 Determining the Installation Position

Before installing the door station, you need to decide exactly where to install it. In addition to being mounted vertically (most popular installation option), the door station can also be mounted horizontally.

Hint:

To capture good-quality images at night as well, fit an outdoor light approximately 1 m above the door station (with integrated motion sensor)



Vertical installation



Horizontal installation


In a vertical layout, the camera module T26-CamCore is normally positioned right at the top. The access module is located directly underneath, followed by the Info Module/Info Module Mx2wire+.

Note


Position the housing directly above the cables that come out of the wall (network, two-wire cables). None of the connection cables should remain visible, as this would make them vulnerable to manipulation.

Remote Stations and Network Connection

To ensure ease of use, the system should be installed to accommodate people of different heights. The height from the ground to the upper edge of the frame should be at least 1.60 m.

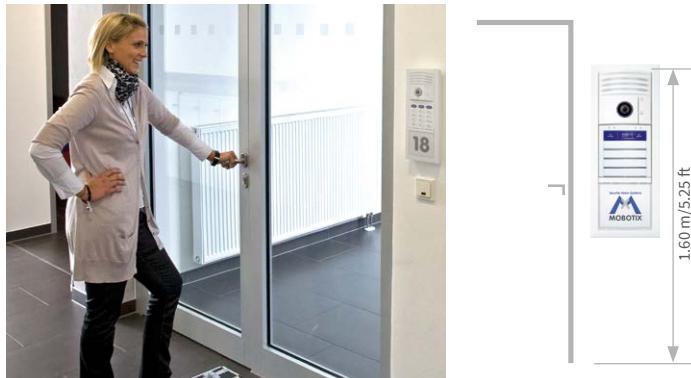

Unlike conventional door cameras, the T26-CamCore with its 180° angle of view is also able to record visitors when they are NOT standing directly in front of the lens. This means that the door station can be mounted quite flexibly, which is particularly useful with wide doors.

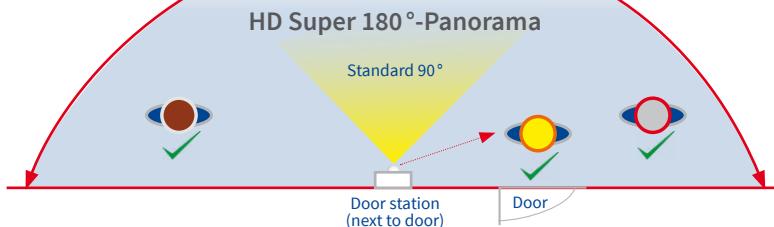

The installation can be on-wall, in-wall or using a cavity socket. MOBOTIX provides two different types of housing for these installation methods. The modules and the frame fitted to the housing are suitable for all installation options.

2.3.2 Inserting the Cables


On-Wall Housing

The housing has cable guides made of elastic rubber to ensure the cable entry points are waterproof.

Use only one cable guide for each cable. Pierce the cable guide you require using a screwdriver or other similar tool and feed the cable into the housing. If the cable is multi-wire, separate the individual wires once the cable is in the housing.

Hint:

Do not open the cable guides up too wide (for example, if you are using a cutter), as cables fed inside the housing must be tightly enclosed (to ensure a tight gasket)

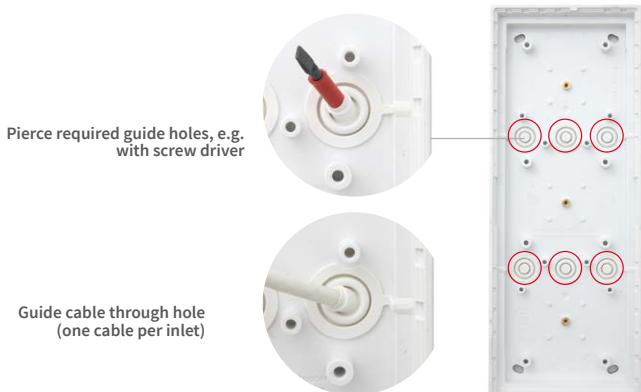


In-Wall and Cavity Housing

The insert prevents the in-wall housing from getting dirty and being deformed during installation in a wall; it must be removed and then positioned again when preparing the cables

Remove the insert and use a screwdriver or similar tool to pierce through all the openings on the rear or on sides required for **inserting cables**. As the housing is embedded in the brickwork, this usually makes for a tight gasket. If in doubt, or when using a cavity housing, you should additionally seal off the cable guides with silicone.



Pierce guide holes as required

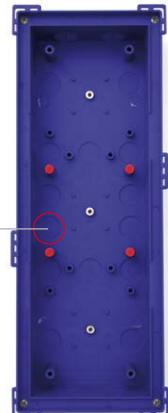


Remote Stations and Network Connection

Important: Pay Attention to the Position of the Cables

When installing the door station, make sure that all the required cables (network, MxBus, theft protection and so on) are laid in such a way that they protrude from the wall directly below the housing openings provided.

This particularly applies to the on-wall housing that has up to six cable guides (triple frame). Only one cable (multi-wire cables may be used) should be inserted into each cable guide. The cables should be long enough so that sufficient cable reserves remain to allow easy cabling within the housing (see Section 2.3.4, «Cabling in the On-Wall Housing»).

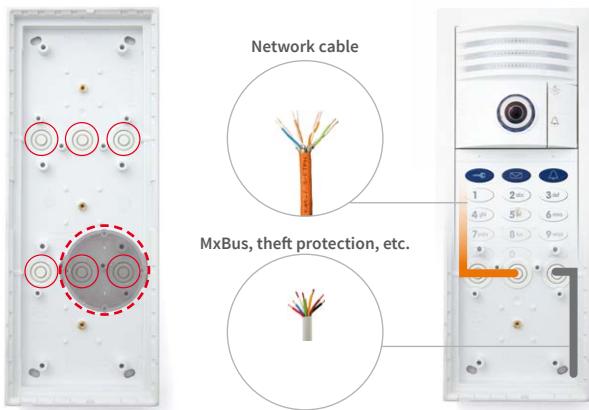

Notes

- Position the housing in the center above the cables.
- Only use one cable in each cable guide.
- Make sure sufficient cable reserves are provided.
- Hint: If longer cable reserves are required, you can mount an additional in-wall socket underneath the on-wall housing (see the dashed line in the figure above).

2.3.3 Attaching the Housing

On-Wall (Fig. Triple Housing)

Drill the four holes and insert the screw anchors (drilling template is included). Ensure that the 'Oben/Top' label points upwards (applies to horizontal and vertical installation). Attach the on-wall housing using four Torx screws and the supplied Torx wrench.




Horizontal installation

Vertical installation

Cavity (Fig. Triple Housing)

When installing the housing in a cavity wall, tighten the cross-head screws embedded in the housing corners until the four retaining wings swing out and clamp the housing tightly to the cavity wall.

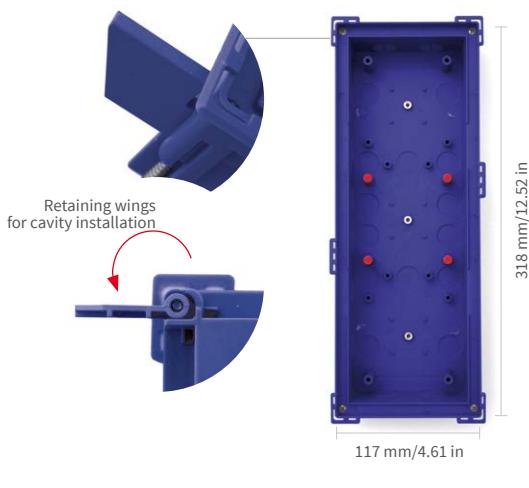

The required installation

opening has the following
dimensions (width x height):

Single housing:

117 x 129 mm/5.08 x 4.61 in

Double housing:

117 x 218 mm/5.08 x 8.58 in

Triple housing:

117 x 318 mm/5.08 x 12.52 in



Allowed wall thickness:

min. 7 mm/0.28 in,

max. 27 mm/1.06 in

Remote Stations and Network Connection

In-Wall (Fig. Triple Housing)

Connect the housing with the subsurface so that the bars fitted to the edge are still visible. The required opening should be 116 x 318 mm. Turn the housing over and use it as a template to mark the holes.

Dimensions for installation opening (W x H x D):

- Single housing: 117 x 129 x min. 52 mm
- Double housing: 117 x 218 x min. 52 mm
- Triple housing: 117 x 318 x min. 52 mm



Hint: Turn the in-wall socket over and use it as a template to mark the hole


Leading edge of housing flush with wall



Caution

Make sure to install the in-wall housing carefully using the inserted protective cardboard so that it is not deformed by any pressure from the surrounding material. Otherwise the frame may not be installed properly and may not be sealed against the weather.

To prevent cement or plaster from soiling the inside of the housing, insert the supplied protective cardboard again before installing the housing in the subsurface of the wall. After you have secured the in-wall housing, you can easily remove the protective cardboard by pushing through the pre-punched opening and simply pulling out the cardboard.

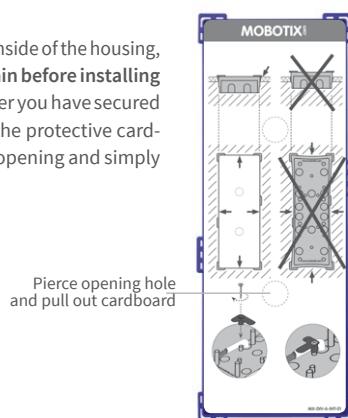


2.3.4 Cabling in the On-Wall Housing

To prevent cables from being damaged when you mount the frame or the T26 modules, make sure that the cables are routed correctly. Please refer to the example cabling shown in the figure below. The packaging material contains four blue cable binders that can be secured to eight designated cable receptacles using screws (recommendation: Phillips PH 2x100).

Several cable binders are included in the delivery kit


Mounting points for cable binders (8x, marked yellow)

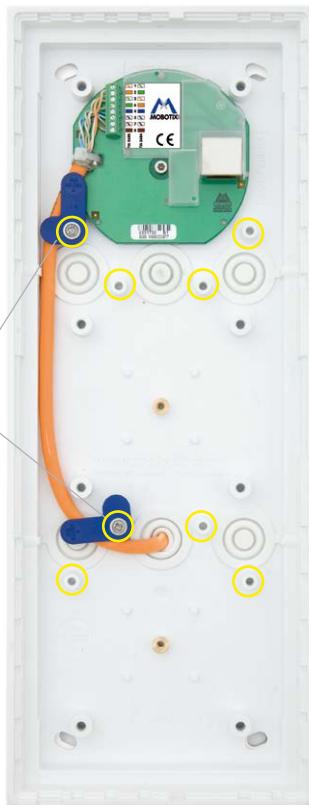

Remote Stations and Network Connection

The T26 housing (on-wall/in-wall) provides sufficient space for cable reserves (see the blue dashed line in the figure).

The red areas are ‘off-limits areas’. No cables should be placed in this area (risk of damage to cables when module is mounted).

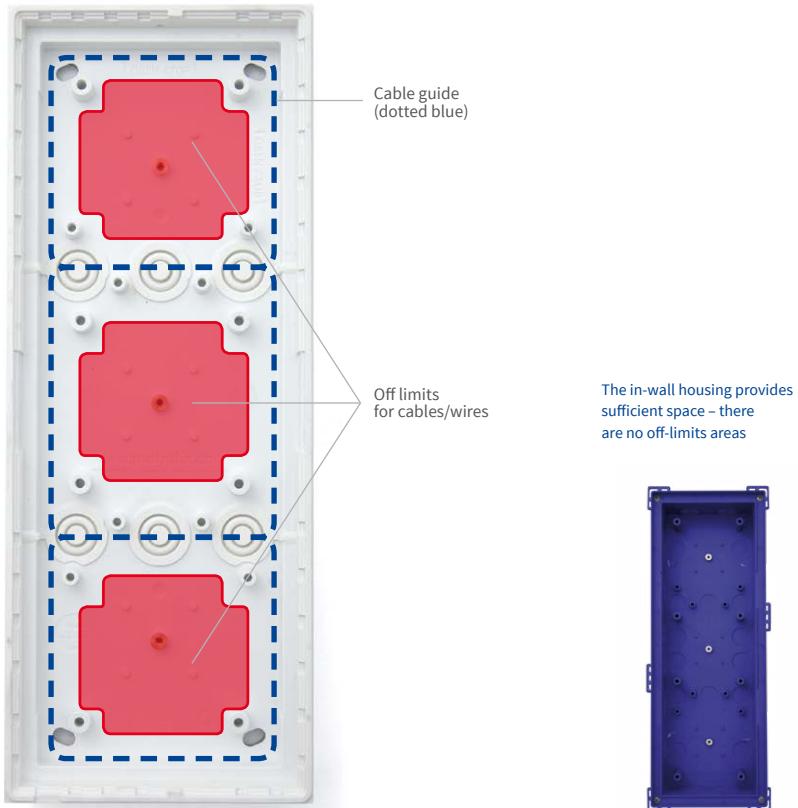


2.3.5 Mounting the Terminal Board and Fitting the Network Cable

Mounting the Ethernet Terminal Board

Screw the board into the housing (flattened side is at the bottom). **The terminal board must be placed behind the camera module.** This step is not necessary for the T26 version with Mx2wire+ technology (two-wire cable replaces Ethernet cable), as an Ethernet terminal board is not required.



For connecting external devices, an expanded terminal board (IO Module) can be mounted in place of the Ethernet terminal board (see Section 2.7.2)

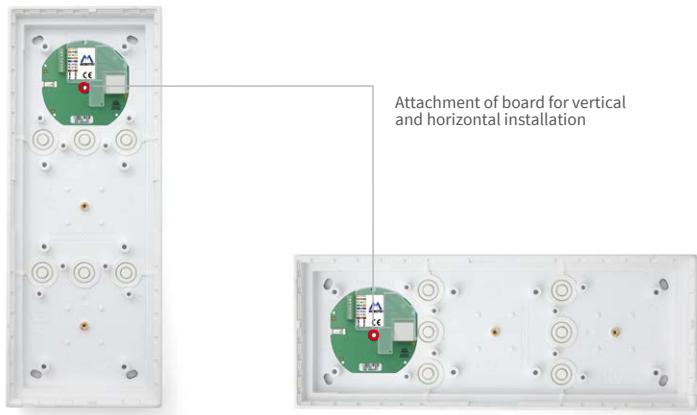


Stripping and Fitting the Network Cable


The Ethernet terminal board provides a link from the network installation cable to the special patch cable of the camera module mounted directly above.

Follow these measurements when stripping the cable

Connect the eight wires of the installation cable (with stripped ends) to the corresponding contacts on the terminal board in accordance with the sticker (fig. **standardized color coding according to TIA-568B**). Fasten the network cable so that its shielding rests on the terminal board contact field (using the enclosed cable tie).

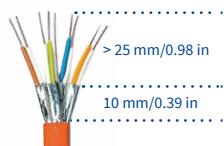

Check whether the network cable at the other end (e.g., PoE switch) is wired according to 568A or 568B (see sticker)

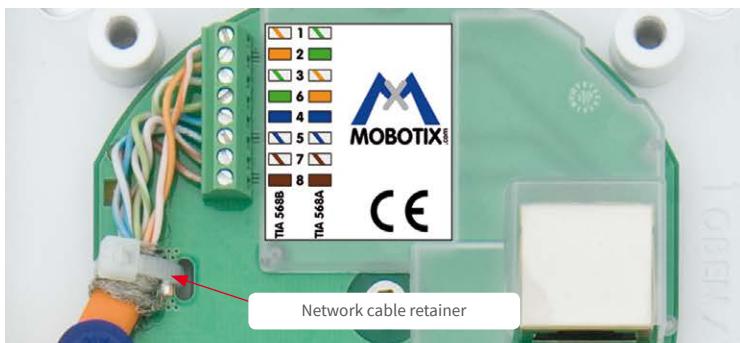


Remote Stations and Network Connection

2.3.6 Applying the Gasket

Remove the protection film and stick the supplied gasket all the way round the inner housing frame, ensuring it fits exactly and taking care not to leave any gaps.


Use a pair of scissors to remove any surplus material. Please ensure that the adhesive surface is clean, dry and free of grease.

On-Wall Housing

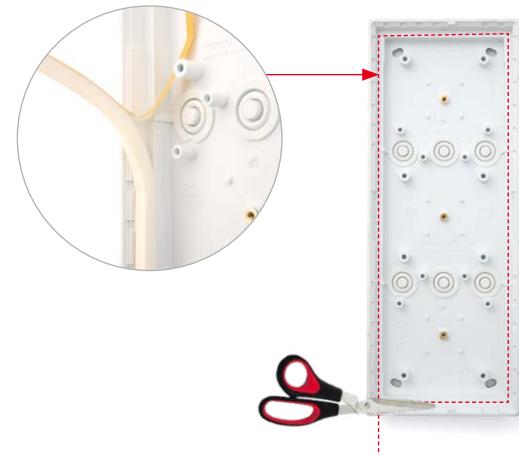

Stick the gasket to the inner frame as shown in the figure

In-Wall and Cavity Housing

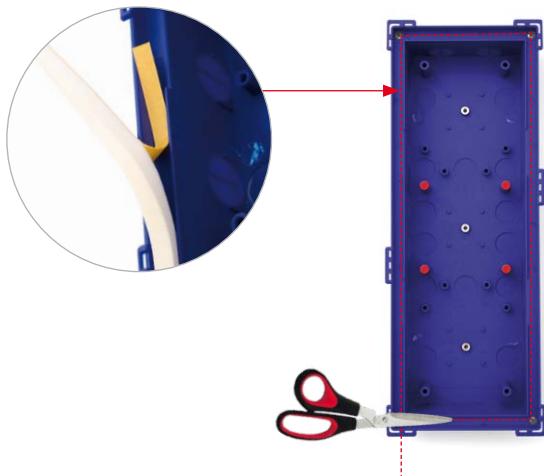


Stick the gasket to the inner frame as shown in the figure

2.3.7 Attaching the Frame and Connecting the Theft Protection

Before the T26 modules can be clicked into the frame, you must screw the frame onto the housing (**recommendation: cross slot PH 2x100**) and lay the black theft protection cable to the inside of the building according to your selected connection option, for example, to the MX-DoorMaster (you may also need to extend the cable). When you attach the frame, make sure that the two openings for the special MOBOTIX key – which is used to remove the door station modules – are located either on the bottom left (vertical mount) or on the bottom right (horizontal mount), and that the maximum torque for the frame screws is not exceeded.


On-Wall (Fig. Triple Housing)

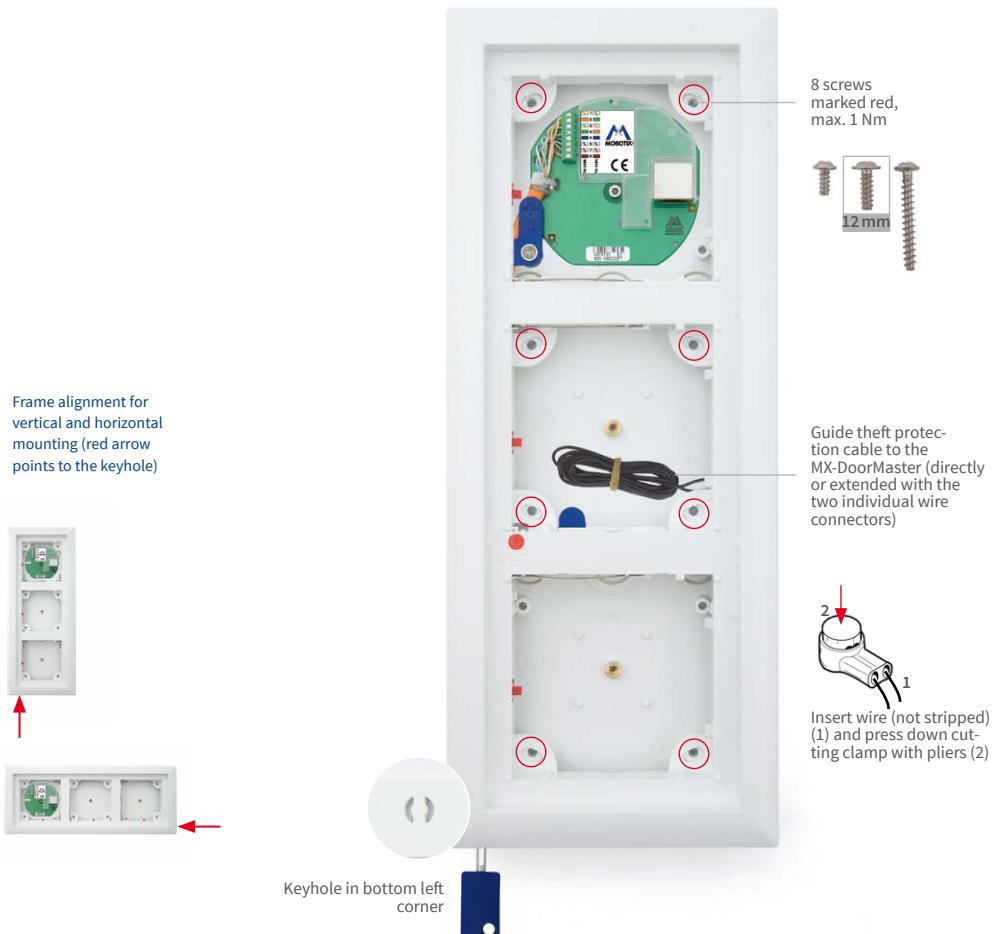

Remote Stations and Network Connection

Cavity and In-Wall (Fig. Triple Housing)

Please note that in this case the module frame may only be screwed onto the four outermost positions on the housing (max. torque: 0.4 Nm).

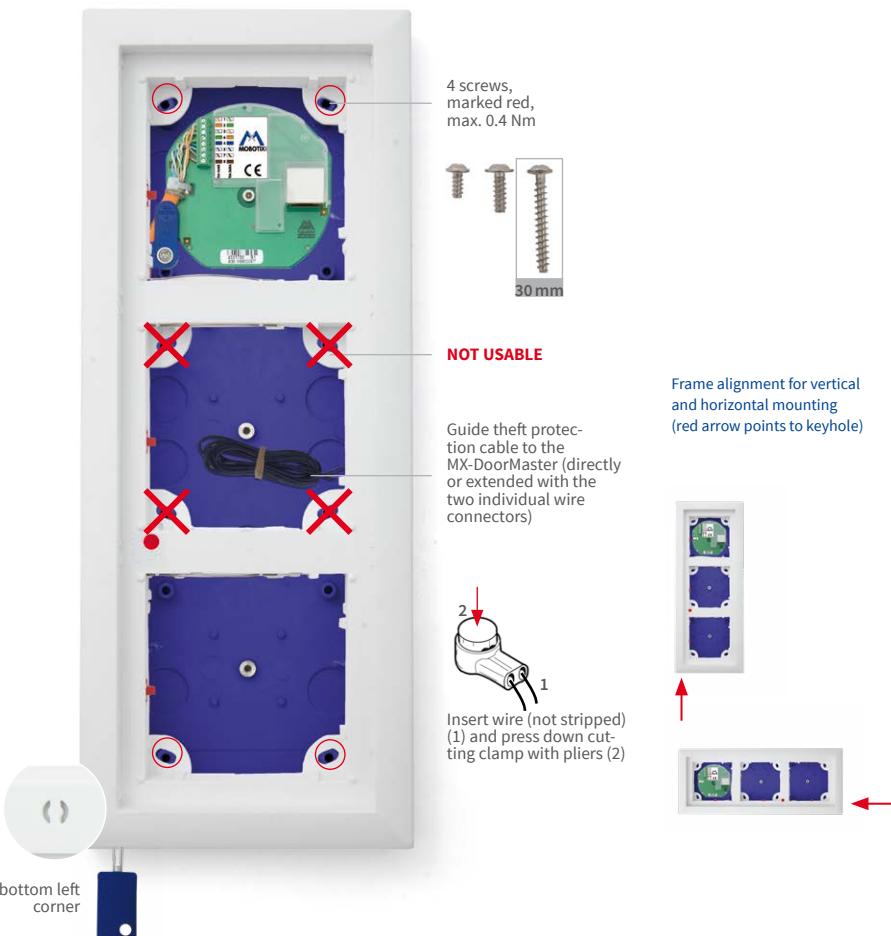

2.3.8 Mechanical Theft-Protection Lock

In the default configuration of the door station, theft protection is **not activated** in the frame. This allows modules that have already been integrated to be removed again during the installation, just using the special key that has been supplied.

Special key



Insert the key into the opening provided and apply light pressure. The red retaining collars on the left or lower side of the frame (depending on whether the frame is mounted vertically or horizontally) loosen and release the modules.

Notes
To activate the mechanical theft protection lock, the module above the red rotating button (triple frame: center module, double frame: upper/left module) must be released from the frame.
Important: After the installation, check the wiring (see Section 2.8.1) and only then activate the theft protection lock.



Remote Stations and Network Connection

Activating the Theft-Protection Lock

Use a screwdriver to turn the red rotating button inside the frame 90 degrees clockwise.

When theft protection is activated, the arrow points to the ‘closed lock’ symbol.



Locked:
Modules **cannot** be
removed from the frame.

Deactivating the Theft-Protection Lock

Turn the red rotating button so that the arrow points to the ‘open lock’ symbol.



Open:
Modules can be removed
from the frame if the special
key has been inserted into
the opening in the frame.

2.4 Installing the T26 Modules



Caution

Beware of short circuits: When you install the modules, the MxBus cable must not be live. Make sure that the network cable is not connected to the PoE switch.



2.4.1 Installing the T26-CamCore Camera Module

Standard Network Connection

The Ethernet terminal board is used to connect the door station for the T26 version without Mx2wire+ technology. It connects the short, pre-installed camera patch cable with the eight split-out wires of the network installation cable (for installation, see Section 2.3.5, «Mounting the Terminal Board and Fitting the Network Cable»).

1. Ensure that the gasket is fitted to the camera module.



2. Connect the supplied MxBus cable to the push terminal on the rear wall of the camera. Remove approximately 5 mm of insulation from the cable ends and push into the terminal.
 - Red wire to + terminal
 - Blue wire to - terminal



Do not swap the
+ and – wires

When using a different-colored cable, make sure the correct polarity is routed




Note

To connect the MxBus cable of the MX-DoorMaster, the two free MxBus terminals of the camera module can be used as an alternative to the MxBus terminals on the access or info module (see Section 2.5, «Installing the MX-DoorMaster»).

Installing the T26 Modules

3. Guide the **MxBus cable** (to be shortened accordingly) into the housing and under the frame so that it can be easily connected to the access module later on. Insert the pre-installed camera module **patch cable** into the RJ45 port on the terminal board.

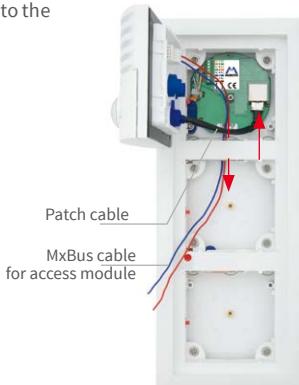

Pay attention to the off-limits areas for cables reserves (see Section 2.3.4)

4. First of all, insert the **right side of the module** into the frame and then press firmly on the **left side**, until the module audibly **clicks** into place.




With horizontal mounting, the modules must first be positioned at the **top** and then pressed downwards firmly

Control click: If you do not hear a click, this means that the module is not properly locked into place. In this case, repeat the last steps, making sure that no cable or foreign object in the housing is preventing the module from properly clicking into place.

Network Connection Using Mx2wire+ Technology

An Ethernet terminal board is not required for the T26 door station with Mx2wire+ technology. Instead, the camera module is connected to the Info Module Mx2wire+ via a MOBOTIX patch cable.

1. Ensure that the **gasket** is fitted to the camera module.

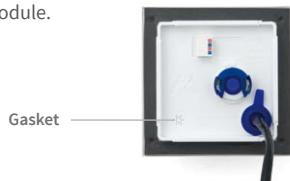

2. Remove the pre-installed camera module patch cable and instead insert the supplied, longer patch cable into the camera housing. Make sure that the blue rubber seal-ing ring is in the correct final position.



3. Feed the **MxBus two-wire cable** from the camera (installa-tion as described in Section 2.4.1) together with the newly fitted **patch cable** into the housing and under the frame, so that the MxBus cable can be fastened to the access module board and the patch cable to the info module.



Installing the T26 Modules

4. First of all, insert the **right side of the module into the frame** and then press firmly on the **left side**, until the module audibly clicks into place.



Control click: If you do not hear a click, this means that the module is not properly locked into place. In this case, repeat the last steps, making sure that no cable or foreign object in the housing is preventing the module from properly clicking into place.



Access Module BellRFID

2.4.2 Preparing the BellRFID Access Module

If the installation of the IP-Video-Türstation with T26 is not followed by the initial operation right away, MOBOTIX recommends to remove the keypad insert and to insert the button set before starting the installation. This way, the soft rubber surface of the T26 base module is well protected until the module is brought into service (bell buttons are then replaced by the keypad insert). Note that the base module is weatherproof even without the bell buttons.


For additional information on installing and removing the button set, see Section 2.4.7, «Removing, Exchanging and Modifying Modules».

1. Label] the name plate(s)

In order to avoid having to remove the module and install it again, you should insert the proper name plates before starting the initial operation. Use our free-of-charge printing service on www.mobotix.com in the **Support** section. Or use the supplied name plates made from sturdy specialty paper and write the names using a UV-resistant marker.

2. Insert the name plate(s)

Remove the silicone insert from the button. Recommendation: Take a suitable tool without a sharp blade, cautiously insert it into the slot, gently press inward and lift the tool as shown.

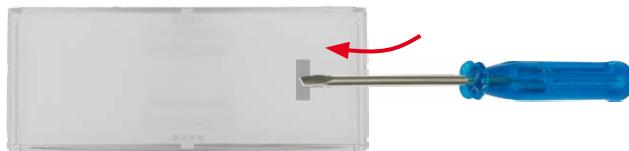


Insert the labeled or printed name plate as shown (the arrows at the side are pointing upwards later on).




Installing the T26 Modules

Place the silicone insert on top of the name plate, push it into the frame at the top and at the bottom of the center, then push its sides into the frame.

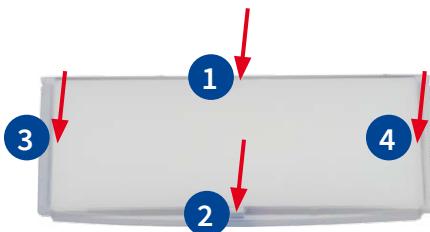

Make sure that the silicone insert properly fits flush into the frame of the bell button as shown to protect the name plate against humidity.

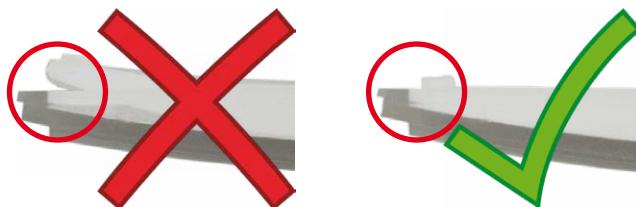

3. Place the keypad insert

Place the supplied keypad insert into the base module (push it into the frame at the top, then push the bottom into the module).



2.4.3 Installing the Access Module (KeypadRFID/BellRFID)



T26 with KeypadRFID



T26 with BellRFID

Installing the KeypadRFID or BellRFID access modules is identical; the pictures in this section show who to install the KeypadRFID. For more information on these access modules, please refer to the corresponding Quick Installation documents (www.mobotix.com>Support>Manuals > DoorStation > Single Components):

- **Quick Installation: KeypadRFID**
- **Quick Installation: BellRFID**

Please pay attention to the different system wiring configurations that apply (described in Section 2.1), depending on whether or not the MX-DoorMaster and external devices (e.g., lights) are used.

1. Ensure that the **gasket** is fitted to the access module.



Gasket

2. Loosen the **rear cover plate** (using a small screwdriver or similar tool) and remove it. You now have a clear view of the connectors located directly on the access module board.



3. Remove **approximately 5 mm of insulation** from each of the cables to be connected and feed each cable through one of the **wire apertures** in the housing (piercing the rubber membrane).



Installing the T26 Modules

4. Connect the two **MxBus cables** that come from the camera module to the access module board.

- Red wire to MX+ terminal
- Blue wire to MX– terminal



See the circuit overview diagram on the next page

5. Connect **two new MxBus cables** to the access module board, and subsequently connect these to the info module to power its backlighting. Make sure that the cables are of the required length and that they are routed correctly (does not apply to Info Module Mx2wire+).

- Red wire to MX+ terminal
- Blue wire to MX– terminal



Do not swap the polarity of the + and – MxBus wires

Note

The two MxBus cables of the **MX-DoorMaster** can be connected to the access module instead of the camera module, if the info module is connected to the MxBus connector of the T26-CamCore door camera.

If no lighting function is required for the info module at all, the MxBus cables do not need to be connected to this module.



6. Connect all the other connection cables (if present):

Standard door opener or relay (for lights etc.):

- First wire to COM terminal
- Second wire to OUT A terminal

External power supply for door opener or power relay (for example, 12 V AC):


- First wire to OUT B terminal
- Second wire to COM terminal

“Door opened/closed” sensor (reed switch, “door sensor”):

- First wire to IN1+ terminal
- Second wire to IN1- terminal

“Door lock unlocked/locked” sensor (“door lock sensor”):

- First wire to IN2+ terminal
- Second wire to IN2- terminal

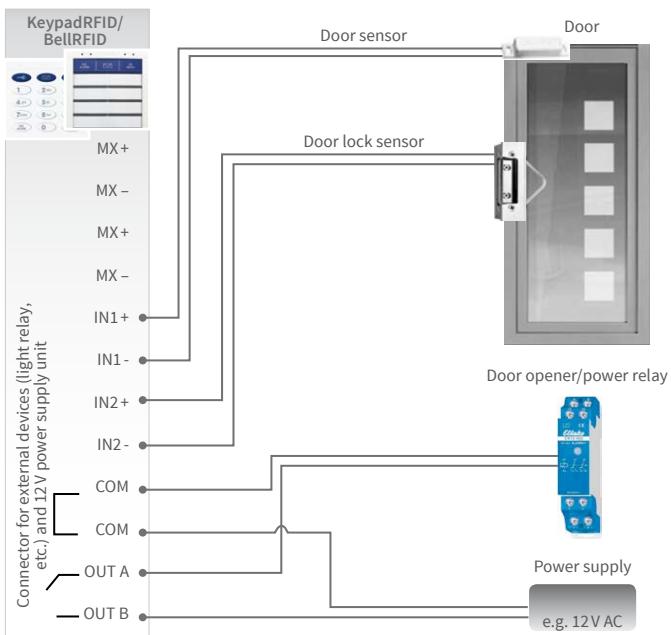

Installing the T26 Modules

- Put the **cover plate** back on.



- First of all, insert the **right side of the module into the frame**. Then press firmly on the **left side**, until the module audibly **clicks** into place.



Only press firmly on the edge of the access module (not in the middle)

Control click: If you do not hear a click, this means that the module is not properly locked into place. In this case, repeat the last steps, making sure that no cable or foreign object in the housing is preventing the module from properly clicking into place.

Caution

Do not activate the **theft protection lock** until you have checked the wiring (see Section 2.8.1). Also test the functionality of the theft protection (see Section 2.4.7, «Removing, Exchanging and Modifying Modules»).



T26 with KeypadRFID



T26 with BellRFID

2.4.4 Installing the Info Module

The info field in the info module of the T26 door station without Mx2wire+ technology is equipped with permanent LED backlighting supplied via MxBus.

1. Ensure that the **gasket** is fitted to the info module.



2. Loosen the **rear cover plate** (using a small screwdriver or similar tool) and remove it. You now have a clear view of the connectors located directly on the info module board.



3. Remove **approximately 5 mm of insulation** from each of the cables to be connected and feed each cable through one of the **wire apertures** in the housing (piercing the rubber membrane with the cable).



Installing the T26 Modules

4. Connect the two **MxBus cables** that come from the access module to the info module board.
 - Red wire to MX+ terminal
 - Blue wire to MX- terminal



As an alternative to the terminals on the access or info module, you can use the two free MxBus terminals of the camera module to connect the MX-DoorMaster (see Section 2.5)

5. Put the **cover plate** back on.



6. First of all, insert the **right side of the module** into the frame. Then press firmly on the **left side**, until the module audibly **clicks** into place.



Control click: If you do not hear a click sound, this means that the module is not properly locked into place. In this case, repeat the last steps, making sure that no cable or foreign object in the housing is preventing the module from properly clicking into place.



T26 with KeypadRFID



T26 with BellRFID



Mx2wire+ indoor unit (for installation, see Section 2.6)

2.4.5 Installing the Info Module Mx2wire+

The info module with integrated Mx2wire+ technology is used to connect the door station to the network via a two-wire cable such as a bell wire and has an info field with permanent LED backlighting.

1. Ensure that the **gasket** is fitted to the info module.




2. Loosen the **rear cover plate** (using a small screwdriver or similar tool) and remove it. You now have a clear view of the connectors located directly on the info module board.



3. Remove **approximately 5 mm of insulation** from each of the cables to be connected and feed each cable through one of the **wire apertures** in the housing (piercing the rubber membrane with the cable).



4. Connect the **two-wire cable**, which leads to the separate **Info Module Mx2wire+ unit in the building**, to the board.
 - First wire to Data 1 terminal
 - Second wire to Data 2 terminal

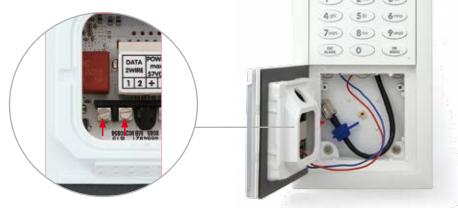

Installing the T26 Modules

5. Remove the blue sealing plug on the module. Feed the **RJ45 connector of the (extended) camera patch cable** into the housing and insert it into the RJ45 port. Make sure that the **rubber sealing ring** on the patch cable is in the correct final position.



6. Put the **cover plate** back on.



7. First of all, insert the **right side of the module into the frame**. Then press firmly on the **left side**, until the module audibly **clicks** into place.



Always mount the module so that the bar with the MOBOTIX lettering is at the top



Control click: If you do not hear a click, this means that the module is not properly mounted. In this case, repeat the last steps, making sure that no cable or foreign object in the housing is preventing the module from properly clicking into place.

2.4.6 Labeling the Info Module

The info module allows you to place a paper label or printer label behind the transparent cover. You can use the enclosed permanent marker to personalize the paper insert by adding your name, contact number, house number and so on.

You will find a PDF template on the MOBOTIX website to help you create your own label. Simply add your personal data to the template and print it onto a sheet of A4 paper. Then simply cut out your 'doorbell label' and insert it into the info module. Before you do this, you will need to remove the info module from the door station frame (see Section 2.4.7, «Removing, Exchanging and Modifying Modules»).

Note

To create a doorbell label that goes with a KeypadRFID module, please make sure to familiarize yourself beforehand with how to configure and operate the door station (see T26-Systemhandbuch Teil 2).

Proceed as follows:

1. Make your personalized doorbell label. To do this, customize the PDF template (Info_Panel.pdf) provided on the MOBOTIX website (www.mobotix.com).



2. Loosen the transparent protective cover on the info module by hand or using a screwdriver, which you position on the side (as shown in red) and use as a lever.




3. Tilt the protective cover downwards and remove the silicone mat and paper insert.



Installing the T26 Modules

4. Place your completed doorbell label (B) behind the transparent protective cover (A).
Insert the silicone mat (C) so that its smooth side is behind the label.

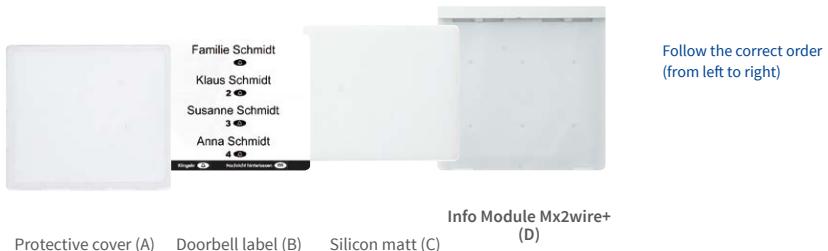


5. Position the protective cover at the bottom of the info module (D) and press the top of the cover until it clicks in place. Now, you can click the info module back into the door station frame.



Info_Panel.pdf (available at www.mobotix.com)

Here are a few examples of doorbell labels that were created using the PDF file template. To open the file requires Adobe Acrobat Reader (free).

Adobe Acrobat Reader:
download from www.adobe.com

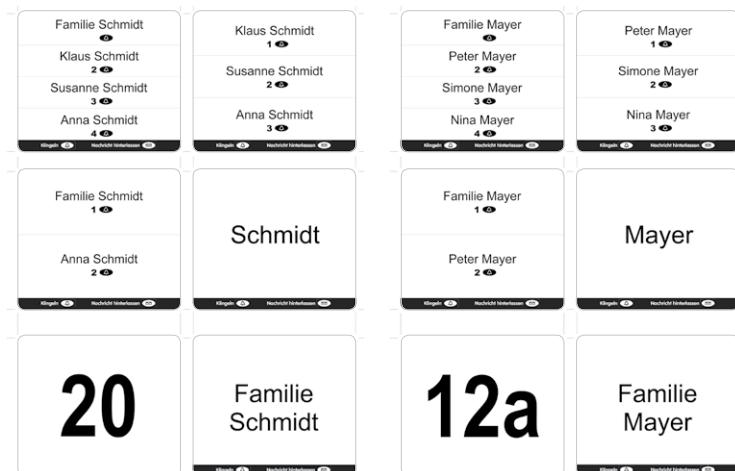

2.4.7 Removing, Exchanging and Modifying Modules

If theft protection has been activated (see Section 2.3.7), you will need to switch this off before you can remove and exchange the modules.

1. Switching off theft protection on the MX-DoorMaster:


Press both buttons on the MX-DoorMaster at the same time for ten seconds to deactivate the theft protection for 90 seconds (blue LED flashes). After this, the protection will be automatically reactivated.



Hold at the same time until the blue LED flashes

2. Switching off theft protection when there is no MX-DoorMaster:

Connect the two cables of the theft protection to the 12 V power supply of the electric door opener via a switch. Theft protection is deactivated for as long as the voltage is applied (switch on).

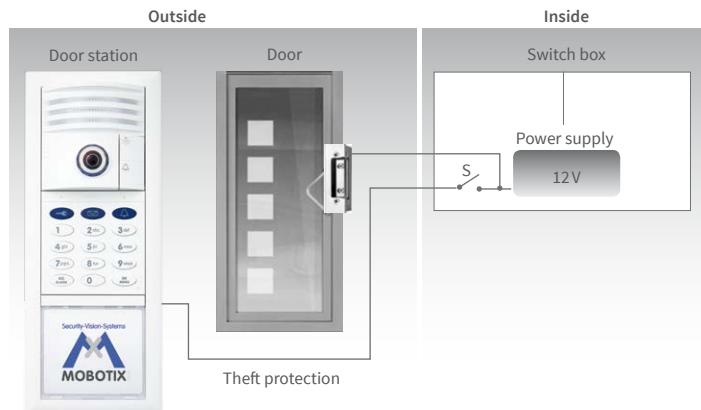

Caution



The theft protection must be disconnected from the voltage again (switch off) **after no more than five minutes** in order to avoid an overload.

Installing the T26 Modules

3. **Removing the modules:** Insert the special MOBOTIX key provided into the split opening on the module frame (bottom left or bottom right, depending on how it has been mounted) and release the modules from the frame by pushing the key in. All the modules in the frame move slightly forward and can be removed. Click (listen for “click” sound) any modules that you do not wish to remove back into place.



The special key is included with the door station



Insert and press

Caution



Make sure that the theft protection has been deactivated before you insert the key, otherwise you risk damaging the frame.

Replacing the Bell Button Set of the BellRFID

If you want to install a different bell button set, you first need to remove the BellRFID module. Next, proceed as outlined in the Section «Changing the Bell Button Set» in the T26-Systemhandbuch Teil 2.



Inserting the Modules

Once the bell buttons have been exchanged, proceed as described in the corresponding subsections of Section 2.4 to re-insert the modules.

2.5 Installing the MX-DoorMaster

2.5.1 Overview of Connectors

The MX-DoorMaster is connected to the door station via the MxBus two-wire cable and the two wires of the **theft protection** cable.

In addition, the four cables of the **door signal contacts** and the two cables of the electrically operated **door opening components** (**standard door opener, electronic lock**) can also be connected to the MX-DoorMaster (see «**Technical Specifications**» in Section 1.2).





The main function of this innovative device is to control the door opener in a tamper-proof manner and record the status of the door (open, closed, closed and locked). The MX-DoorMaster, with its speaker that can be switched off, also functions as a doorbell. It furthermore allows the door to be opened using a button and controls the theft protection in the T26 housing.

Thanks to its built-in batteries, which are kept fully charged via the MxBus cables, the MX-DoorMaster is able to power both the access module in the outdoor station and a connected door opener for several hours in the case of power failure, therefore ensuring that the door can still be accessed without a key.

Integrated emergency
unlocking function

Installing the MX-DoorMaster

MX-DoorMaster System Overview

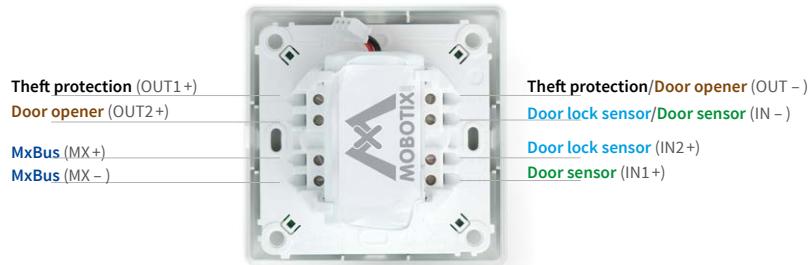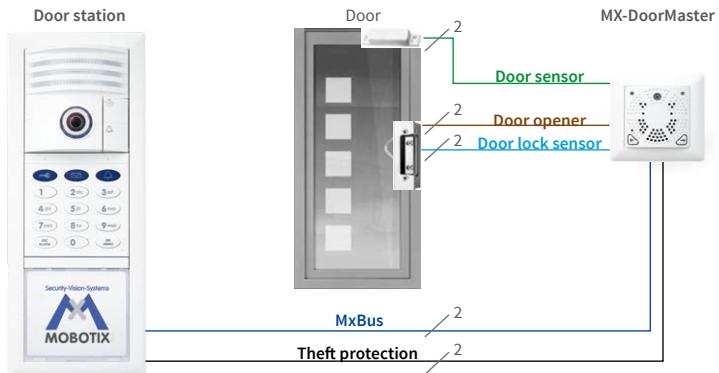

Supported Door Opener Versions

A standard door opener operated with 6 to 12 V AC can be connected directly to the MX-DoorMaster and powered by its integrated battery pack. There is no need to connect an additional power supply unit.

A door opener with an external power supply of up to 24 V AC/DC (max. 1 A) may also be connected, as may the self-locking electronic lock ("Mediator").

The MX-DoorMaster must be configured for the selected door opener version (see Section 2.8.2)


2.5.2 Connection Diagrams for Door Opener Versions

Version 1: Power Supply from MX-DoorMaster Battery (Self-Powered)

The MX-DoorMaster's permanently-charged battery pack provides a supply voltage to the door opener and therefore also bridges power failures.

Self-powered (standard version)


Use the enclosed three-wire connector for terminals that are assigned two wires (IN-/OUT-) (insert unstripped wires and press down cutting clamp with pliers)

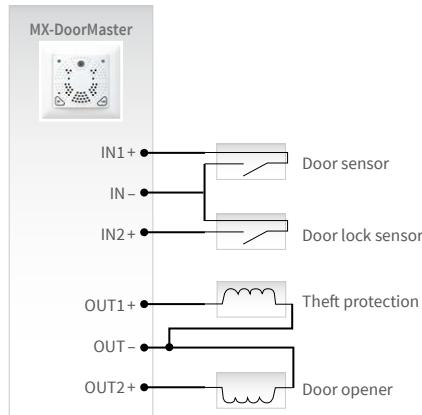

Version 2: Power Supply from External Power Supply Unit (Internal Relay Function)

The MX-DoorMaster's integrated relay function switches a maximum external voltage of 24 V (SELV, max. 1 A).

The MX-DoorMaster has an integrated relay function

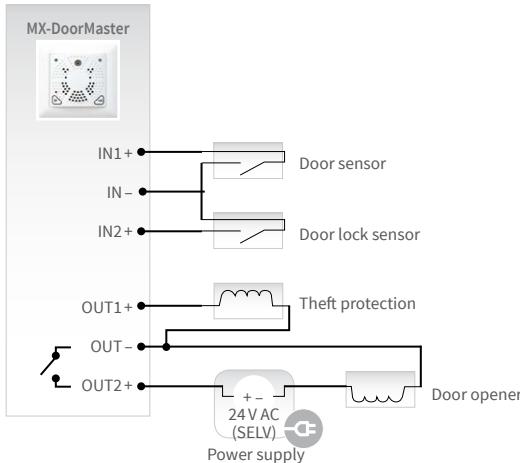

Installing the MX-DoorMaster


Version 3: Self-Locking Electronic Door Lock Including UPS via Battery Pack

In this connection option, the MX-DoorMaster's battery pack powers the system in the event of a power failure and allows the door to be opened without a key. In this case however, theft protection must be controlled using an additional switch (to be ordered separately).

In the following diagram, for example, theft protection is used together with a power supply for the electronic lock. The modules can then be released by pressing the switch.

Note

The theft protection must be disconnected from the voltage again after no longer than five minutes (in the example switch 'S' is off) in order to avoid an overload.

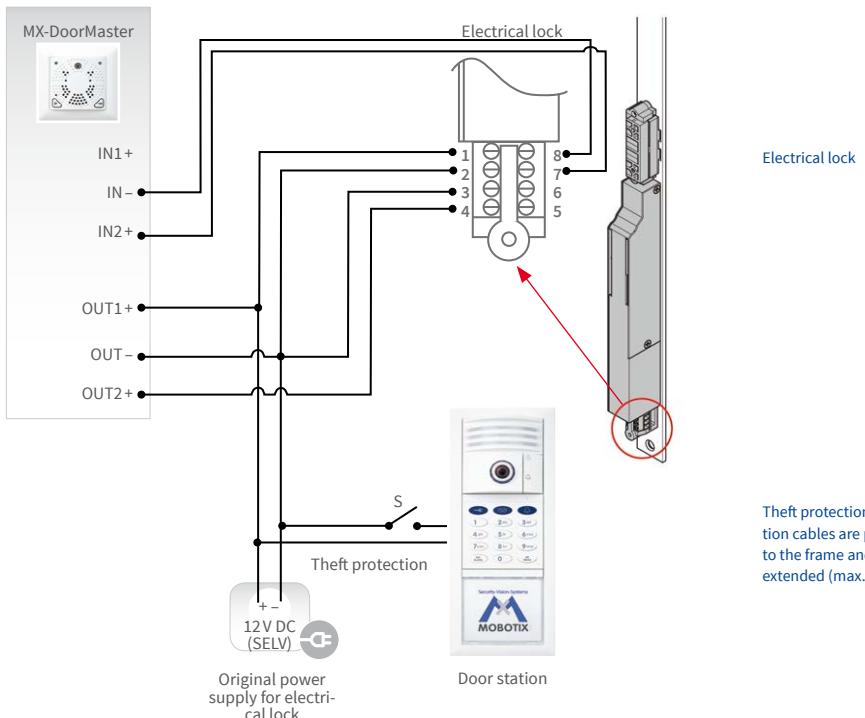

Theft protection connection cables are pre-fitted to the frame and can be extended (max. 50 m)

2.5.3 Mounting Instructions

Solid Concrete or Stone Wall

MOBOTIX recommends using a deep in-wall socket (more space for cables). Standard in-wall sockets with a depth of 43 mm are not suitable for the MX-DoorMaster.



Deep cavity wall socket
(ø 68 mm/2.68 in, depth 67 mm/2.64 in)

Drill hole for cavity
socket: ø 68 mm

Cavity Wall (e.g. Drywall, 7 mm to 35 mm)

Use the supplied 61 mm-deep cavity socket for the MX-DoorMaster.



Cavity socket (ø 68 mm, 61 mm in depth)

Note

MOBOTIX offers two orange cavity sockets of different depths (48 mm and 61 mm). The 61 mm-deep socket is designed for the MX-DoorMaster, and the 48 mm-deep socket is intended for the Mx2wire+ indoor unit.

Determining the Installation Position

Maximum MxBus
cable length between
MX-DoorMaster and
door station: 50 m

The MX-DoorMaster must always be installed indoors protected from weather and moisture. If in doubt, use the normal installation conditions of a standard socket with no cover as a guide. The theft protection connection cables pre-fitted to the frame of the outdoor station do not need to be extended if the MX-DoorMaster is mounted on the same wall behind the outdoor station (next to the entrance door).

Installing the MX-DoorMaster

Preparing the In-Wall Socket (Solid Wall)

An in-wall socket must usually be fitted first. Make sure that the socket you use is as flush with the wall as possible to ensure proper installation. Also make sure that the socket and MX-DoorMaster are aligned correctly.

After connecting the cables, there are **two ways** to attach the door opener board to the in-wall socket:

1. Secure the housing and board **directly to the socket** by fastening two small screws in the a and b positions (see fig.) However, this requires that the socket is properly aligned in the wall. Thanks to the elongated shape of the screw holes, it is possible to make small adjustments to the left and to the right when tightening the screws.



2. Use four or two Torx screws/screw anchors (diagonally opposite one another) to tightly screw the housing and board **to the wall**. We recommend using this procedure if the installed in-wall socket is not properly aligned or is not flush with the wall, or if the MX-DoorMaster could easily be pulled out together with the in-wall socket.




The in-wall socket used must be flush with the wall.



Preparing the Cavity Socket (Cavity Wall)

Hint: Use a cavity socket cutter (countersink hole cutter)

The MX-DoorMaster can be mounted to a cavity wall (for example, plasterboard up to a thickness of 35 mm) using either the supplied cavity socket or an existing socket. Push the cavity socket into the prepared drill hole (68 mm) in the cavity wall and secure it by tightening the clamp screws. The metal claws automatically pop out and clamp the socket firmly.

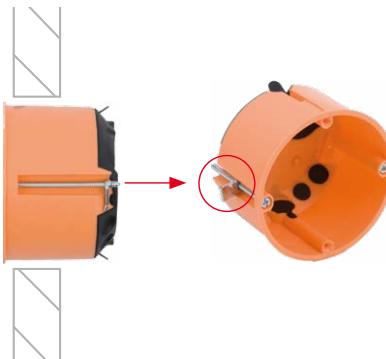

When the screws are tightened, the metal claws automatically pop out and clamp the socket to the cavity wall (made of wood or plasterboard, for example)

After connecting the cables, secure the housing and board directly to the cavity socket by fastening two small screws in the a and b positions (see fig.) This requires that the socket is properly installed in the wall.



As in the case of the in-wall socket, you can also use four or two screws/screw anchors (diagonally opposite one another) to tightly screw the housing to the wall.




Installing the MX-DoorMaster

2.5.4 Installation Using Cavity or In-Wall Socket

1. Prepare all the required cabling and the cavity or in-wall socket: See previous sections.

2. Remove the **battery pack**, connect the connector (A), guide the cable under the battery pack and replace the battery pack (B). The red LED indicates that the battery is low.

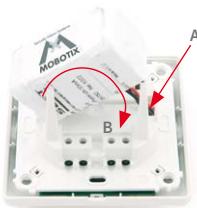

3. Screw on the **MxBus cable** (coming from the T26 door station):
 - Red wire to MX+ terminal
 - Blue wire to MX- terminal

When extending the MxBus cable, make sure the polarity is correct (+/-).



Remove approximately 5 mm of insulation from all the cables used

4. Screw on the **theft protection** (coming from the T26 door station):
 - First wire to OUT1+ terminal
 - Second wire to OUT- terminal

The device still functions properly if the wires are swapped.



5. Screw on the **electric door opener** (coming from the door):
 - First wire to OUT2+ terminal
 - Second wire also to OUT- terminal

The device still functions properly if the wires are swapped.

Important: See the connection options in Section 2.4.2



6. Screw on the 'door lock unlocked/locked' **door lock sensor** (coming from the door):

- First wire to IN2+ terminal
- Second wire to IN- terminal

The device still functions properly if the two wires used here (operating contact and changeover contact) are swapped.



7. Screw on the 'door opened/closed' **door sensor** (reed switch) coming from the door:

- First wire to IN1+ terminal
- Second wire also to IN- terminal

The device still functions properly if the two wires used here (operating contact and changeover contact) are swapped.



8. **Remove the front panel and frame:** In order to protect the board, the board is attached to the front panel and frame in the original packaging. To continue with the installation, however, you must first separate the housing and board from the panel and frame. Loosen the screw in the front panel and lift the panel forwards.

Now remove the attached frame from the board. Please note that you will need the stainless steel screw in the front panel again later.



9. **Insert the housing and circuit board into the socket:**

The two cable clamps on the rear of the housing are located at the top. When using a cavity socket, make sure you only use the stainless steel screws provided. Using different (larger) screws could damage the board.



Caution




Electrical systems and equipment may only be installed, modified and maintained by a qualified electrician or under the direction and supervision of a qualified electrician in accordance with the applicable electrical guidelines.

Installing the MX-DoorMaster

10. **Attach the frame:** Place the selected frame (concave, convex or flat) onto the board and press down gently until it automatically snaps into place. MOBOTIX is printed on the bottom of the frame.

Select the type of frame required

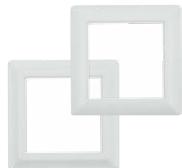

11. **Insert the panel:** Hook the front panel onto the bottom of the frame, as shown in the figure, and then press it down.



12. **Screw the panel on tightly:** Secure the front panel using the panel's stainless steel screw.



Notes

Make sure not to block the holes in the front panel (air circulation).

Following installation and initial operation, the MX-DoorMaster batteries should be charged continuously for the first 12 hours. This takes place automatically via the PoE-powered T26 door station using the MxBus two-wire cable. During this time, the electric door opening function should not be used (except for a short functional test). This will maximize and extend the battery life of the high-quality NiMH battery (industry standard) to several years at normal use.

When a battery is almost completely discharged, a functional test can only be carried out after the red LED has gone out (after approximately 15 minutes)

When replacing the batteries, always be sure to use original batteries. You can purchase these directly from MOBOTIX or your MOBOTIX partner.



2.6 Installing the Mx2wire+ Indoor Unit

2.6.1 Overview of Mx2wire+ Technology and Connectors

The Mx2wire+ technology that is optionally available with the T26 is used to connect the door station to the network via a simple two-wire cable such as the connection cable of an existing doorbell. An Mx2wire+ set always consists of two devices that communicate with one another: the Info Module Mx2wire+ in the outdoor station and the compact Mx2wire+ indoor unit.

In addition to data, power is also supplied via the two-wire cable to the Info Module Mx2wire+, which (connected to the camera module via a patch cable) becomes a PoE injector for the entire outdoor station and the MX-DoorMaster.


Network Connection and Power Supply (Data and Power)

The Mx2wire+ indoor unit has an RJ45 port and is connected by patch cable to a switch or router, and thus also to the local network and the remote stations. In order for Mx2wire+ to power the T26, a voltage source is required. **There are two ways to achieve this:**

1. Power supply from a **PoE+** switch (Class 4, IEEE 802.3at, max. 30 W)

Connection: via patch cable on the Mx2wire+ indoor unit.

With Info Module Mx2wire+

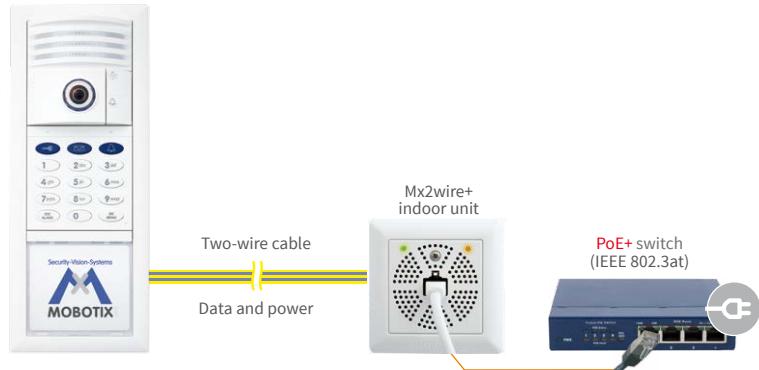


Advantage: The PoE+ switch directly connects the T26 remote stations as well, and depending on the number of available ports, it can also power further PoE devices (door stations, IP cameras).

Installing the Mx2wire+ Indoor Unit

2. Power supply from an external 48 V DC power supply unit

Connection: via two contact terminals either on the Info Module Mx2wire+ or on the Mx2wire+ indoor unit.

With
Info Module Mx2wire+

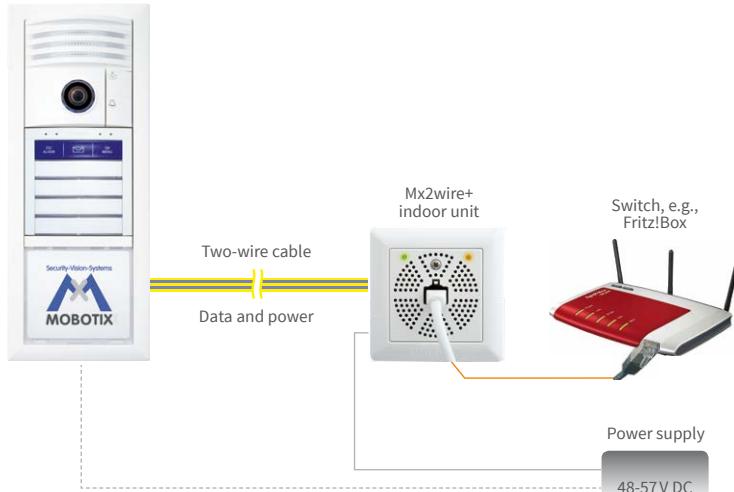

Advantage: flexible voltage connection option and direct connection of a router/switch for connecting remote stations (for example, Fritz!Box WLAN).

Extending the Range

A further advantage of Mx2wire+ is that it allows the range of a connection to be extended considerably using a two-wire cable up to 500 m long (a T26 connection using a network cable is limited to 100 m). For detailed technical information on the T26 version with Mx2wire+ technology, see Section 1.1.6, «Info Module Mx2wire+ (With Mx2wire+ Indoor Unit)».

2.6.2 Mounting Instructions

Mounting Options

In addition to an **on-wall installation** using the supplied surface-mounted socket, you can also choose to install the Mx2wire+ indoor unit using a **standard in-wall socket** or a **cavity socket (for wood or plasterboard, for example)**. Included in the delivery is a cavity socket of very high quality with soft rubber gaskets on the rear that needs to be punctured by the two wires that feed in. The tight seal provided here is far superior to that offered by standard cavity sockets without this feature.



Surface-mounted socket



In-wall socket



Cavity socket

Please follow the installation instructions in Section 2.5.3. They also apply to the Mx2wire+ indoor unit.

Preparing and Testing the Two-Wire Cable

In general, Mx2wire+ is used with existing cables (bell wire). When cables have more than two wires, make sure (color coding) that the same cable pair is used for both Mx2wire+ units (see figure). **Approximately 5 mm of insulation** must be stripped from both ends of the two-wire cable.

Cable with wire-end sleeves
(for flexible cores)



Prior to installation, test the cable connection to ensure that it is functioning properly (if necessary, draw up a test chart).

Installing the Mx2wire+ Indoor Unit

2.6.3 Installation Using Cavity or In-Wall Socket

1. Prepare the cavity or in-wall socket: see Section 2.5.3
2. Screw the two-wire cable to terminals 1 and 2: The cable does not necessarily need to be attached to the terminal with the same number on both Info Module Mx2wire+ units. The device continues to function if connectors 1 and 2 are swapped.

Connectors 3 and 4 are only assigned if an external voltage source (48-57 V DC) is used.



3. Remove the front panel and frame: In order to protect the circuit board, the board is attached to the front panel and frame in the original packaging. To continue with the installation, however, you must first separate the housing and board from the panel and frame. Loosen the screw in the front panel and lift the panel forwards.



Now remove the attached frame from the circuit board. Please note that you will need the stainless steel screw in the front panel again later.



Safety Warning

Use this product in compliance with the applicable legal regulations. Electrical systems and equipment may only be installed, modified and maintained by a qualified electrician or under the direction and supervision of a qualified electrician in accordance with the applicable electrical guidelines.



The board is attached directly to the socket using two screws (see figure) or to the wall using the Torx screws

4. **Insert the housing and circuit board into the socket:** The two cable clamps on the rear of the housing are located at the top. For a cavity socket, make sure you only use the stainless steel screws provided. Using different (larger) screws could damage the circuit board.

MOBOTIX printed
at the bottom

5. **Attach the frame:** Place the selected frame (concave, convex or flat) onto the board and press down gently until it automatically snaps into place. MOBOTIX is printed on the bottom of the frame.



6. **Insert the panel:** Hook the front panel onto the frame, as shown in the figure, and then press it down.




7. **Screw the panel on tightly:** Secure the front panel using the panel's stainless steel screw.



Installing the Mx2wire+ Indoor Unit

2.6.4 Installation With Surface-Mounted Socket

1. Prepare the surface-mounted socket: Preparation: Please refer to the figure on the right and use the surface-mounted socket as a template to mark the drill holes. Make sure that the alignment and position of the socket in relation to the two-wire cable are correct (TOP/OBEN arrows).

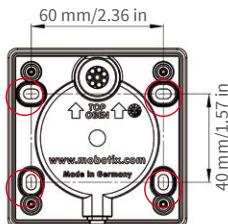

Supplied rubber plug for sealing the two-wire cable:



For cables with 3 to 5 mm diam.



For cables with 5 to 7 mm diam.



For cables with a maximum of eight wires



The screw does not need to be removed completely from the front panel



3. Remove the front panel and frame: In order to protect the circuit board, the board is attached to the front panel and frame in the original packaging. To continue with the installation, however, you must first separate the board and housing from the panel and frame. Loosen the screw in the front panel and lift the panel forwards.

Now remove the attached frame from the circuit board. Please note that you will need the stainless steel screw in the front panel again later.



The device continues to function if connectors 1 and 2 are swapped



4. **Screw the two-wire cable to terminals 1 and 2:** The cable does not necessarily need to be attached to the terminal with the same number on both Info Module Mx2wire+ units. The device continues to function if connectors 1 and 2 are swapped.
Connectors 3 and 4 are only assigned if an external voltage source (48 V DC) is used.

5. **Insert the housing and circuit board into the surface-mounted socket:** The two cable clamps on the rear of the housing are located at the top. Attach the housing and board to the surface-mounted socket by fastening the four stainless steel screws in the four existing drill holes.



6. **Attach the frame:** Place the selected frame (concave, convex or flat) onto the board and press down gently until it automatically snaps into place. MOBOTIX is printed on the bottom of the frame.



7. **Insert the panel:** First insert bottom of front panel into the frame as shown in the figure, then push against top.

Insert panel bottom first, then press the top into place




8. **Screw the panel on tightly:** Secure the front panel using the panel's stainless steel screw.



Installing the Mx2wire+ Indoor Unit

2.6.5 Function of Mx2wire+ Status LEDs

Each Mx2wire+ unit has two status LEDs (green and orange), which provide information on the current state of the PoE power supply and on the transfer of data. The LEDs can either light up continuously (ON) or they can flash (FLASHES).

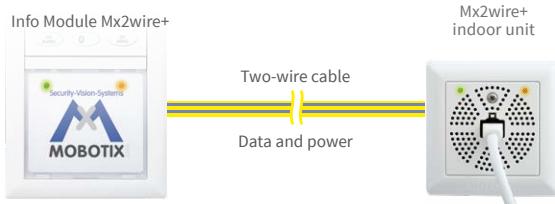

Green LED	Orange LED	Green LED	Orange LED
ON	ON	ON	ON
Power is supplied to the outdoor station	Network connection to the outdoor station has been established	Power is supplied to the indoor unit	Network connection to the switch has been established
FLASHES	FLASHES	FLASHES	FLASHES
Never	Data is transferred to the outdoor station	Outdoor station is receiving power (if connected)	Data is transferred from the indoor unit

Note

The two **status LEDs (orange, green)** in the **outdoor station's Info Module Mx2wire+** are only active for test purposes for the first 15 minutes after the power supply has been established. After the LEDs have gone out, they can be reactivated by interrupting the power supply for a short time.

2.7 Connecting External Devices to the Door Station

A power relay can be connected to the door station via an external power supply (max. 24VAC/DC) for the purpose of switching different types of devices (for example, outside lights, garage doors, alarm systems, additional doorbells and so on). Connection is established either via the MOBOTIX IO Module (accessory) or the access module (KeypadRFID/BellRFID).

The T26 camera software is used to configure the switching of external devices and can be accessed via a standard web browser such as Internet Explorer. For additional information on this topic, see the T26 Systemhandbuch Teil 2.


2.7.1 Using the IO Module



Connect the IO Module to the camera module T26-CamCore via MxBus, which connects it to the network. It has eight physical signal inputs that allow it to distinguish between a pending full-wave and half-wave if an external AC voltage source has been connected. This makes it possible to connect two switches to each signal input terminal so that 16 button inputs are made available. The inputs can be used for, e.g., bell buttons. The outputs can be used for external devices such as a doorbell, or for outdoor lights or garage door openers (via a power relay).

Installing the board and
Ethernet connector:
see Section 2.3.5

IO Module circuit diagram
with 16 button inputs and
3 signal outputs (con-
nected with a relay here)

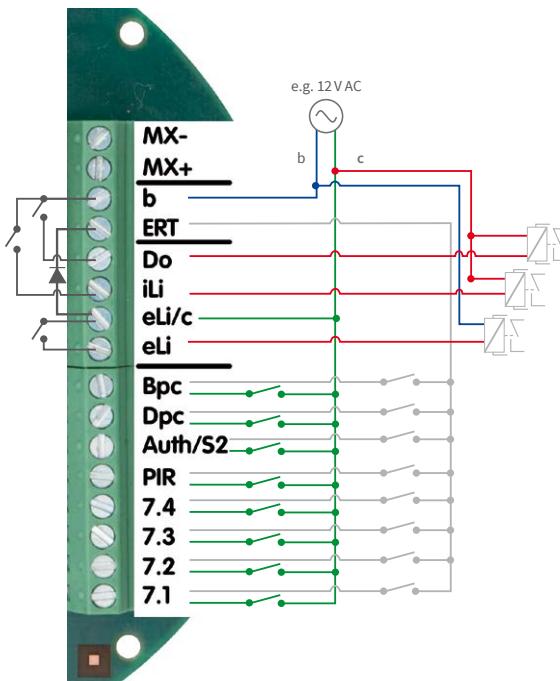


Connecting External Devices to the Door Station

Terminal Connector Functions (External Devices and Third-Party System)

In addition to general technical specifications for the signal inputs and outputs, the table also shows the precise layout of the 16-wire terminal connector when the external devices are modules from a third-party system.

Board	General Function	Function of Third-Party System	Comment
MX-	MxBus-	MxBus	Direct connection to camera module
MX+	MxBus+		
b	Gnd	Ground	Reference potential
3 signal outputs	ERT	HW	Signal from eLi/c (half-wave rectified)
	Do	Door opener	Relay switches b (door opener still connected to c)
	iLi	Internal lights of third-party modules	Relay switches b (modules each still connected to c)
	eLi/c	Control for external light (e.g., over the entrance door)	Isolated relay (NO type)
	eLi		
8 signal inputs	Bpc	Door lock sensor (Bolt Position Contact)	Contact switches c
	Dpc	Door sensor (Door Position Contact)	Contact switches c
	Auth/S2	Transponder/Fingerprint	Module switches c
	PIR	PIR module/motion sensor	Module switches c
	7.4	Bell button 4	Bell switches c (full-wave) floor call switches ERT (half-wave)
	7.3	Bell button 3	
	7.2	Bell button 2	
	7.1	Bell button 1	

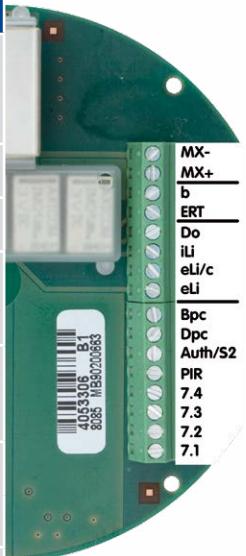

MX-	MX+
b	ERT
Do	iLi
eLi/c	eLi
Bpc	Dpc
Auth/S2	PIR
7.4	7.3
7.2	7.1

Example: Connecting a Lamp Supplied With 230 V

Connect power relay (for lamp):

- First wire to eLi terminal
- Second wire to power supply
- Third wire to lamp
- Fourth wire to 230 V




Connect external power supply (for relay, e.g. 12 V AC):

- First wire to eLi/c terminal
- Second wire to power relay

Connect lamp:

- First wire to power relay
- Second wire to 230 V

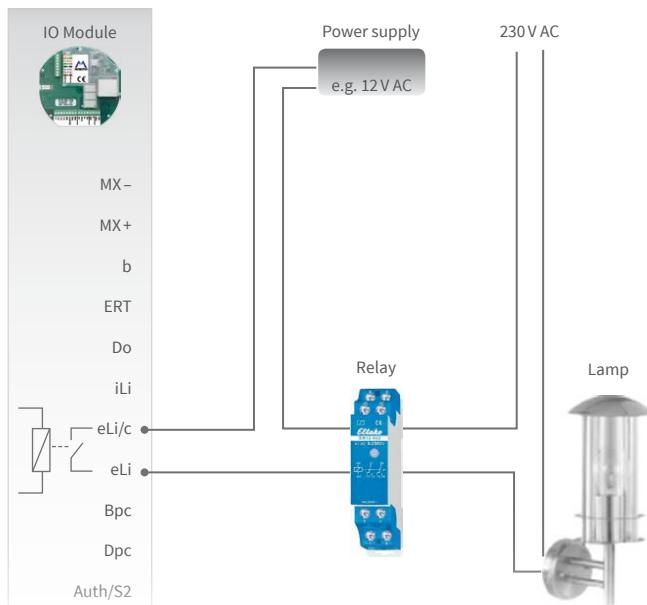

Caution



Electrical systems and equipment may only be installed, modified and maintained by a qualified electrician or under the direction and supervision of a qualified electrician in accordance with the applicable electrical guidelines.

Connecting External Devices to the Door Station


Example: Connecting Up to Four Bell Buttons

Connect bell buttons:

- First wire to terminals 7.1 to 7.4 (1 to 4 bell buttons)
- Second wire to power supply

Connect power supply:

- First wire to terminal b
- Second wire to bell buttons

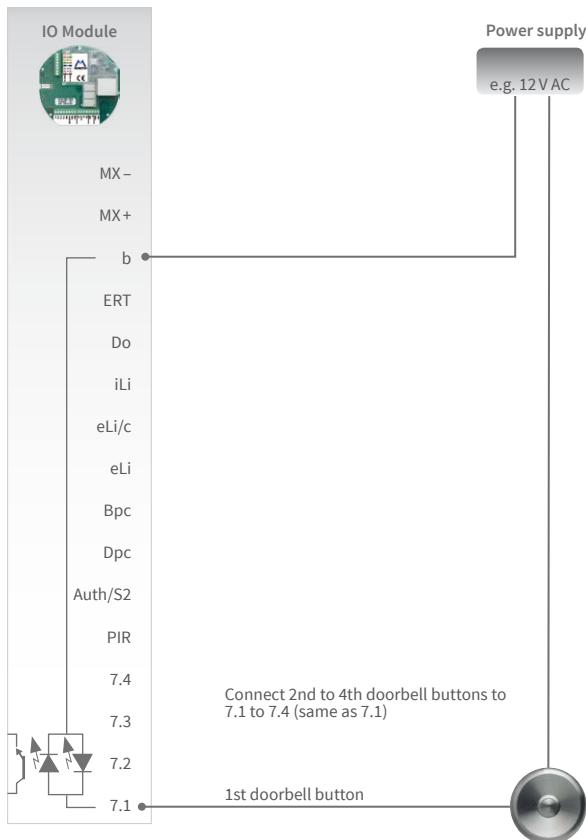

2.7.2 Using the Signal Outputs of the Access Module (KeypadRFID/BellRFID)



T26 with KeypadRFID

If the T26 door station is used with the MX-DoorMaster and a standard door opener, all the access module connectors apart from the MxBus connector remain unused (see Section 2.5.2, Version 1).

Example: Connecting a Lamp Supplied With 230 V (KeypadRFID/BellRFID)

Connect power relay (for lamp):


- First wire of control circuit (A1 terminal of relay) to COM terminal
- Second wire of control circuit (A2 terminal of relay) to OUT A terminal
- Power circuit for lamp (to be connected only by a qualified electrician)

Connect external power supply (for relay control voltage, e.g. 12 V AC):

- First wire to OUT B terminal
- Second wire to COM terminal

Connect lamp:

- First wire to power relay
- Second wire to 230 V

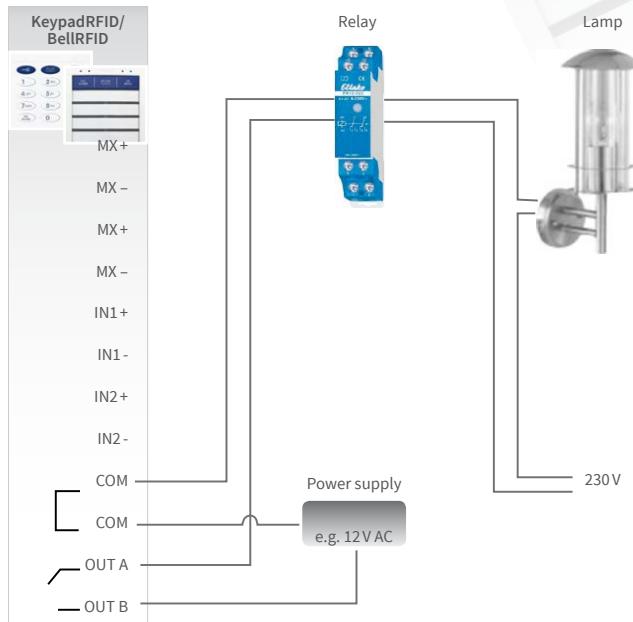

T26 with BellRFID

Please note that you can currently attach **only one** access module (i.e., either KeypadRFID or BellRFID) to an DoorStation.

Connecting External Devices to the Door Station

Example: Connecting Up to Two Bell Buttons to KeypadRFID

Connect first bell button:


- First wire to IN1+ terminal
- Second wire to IN1- terminal

Connect second bell button:

- First wire to IN2+ terminal
- Second wire to IN2- terminal

Note

The voltage required by the bell buttons (low voltage) is supplied by the access module.
No additional power supply is necessary.

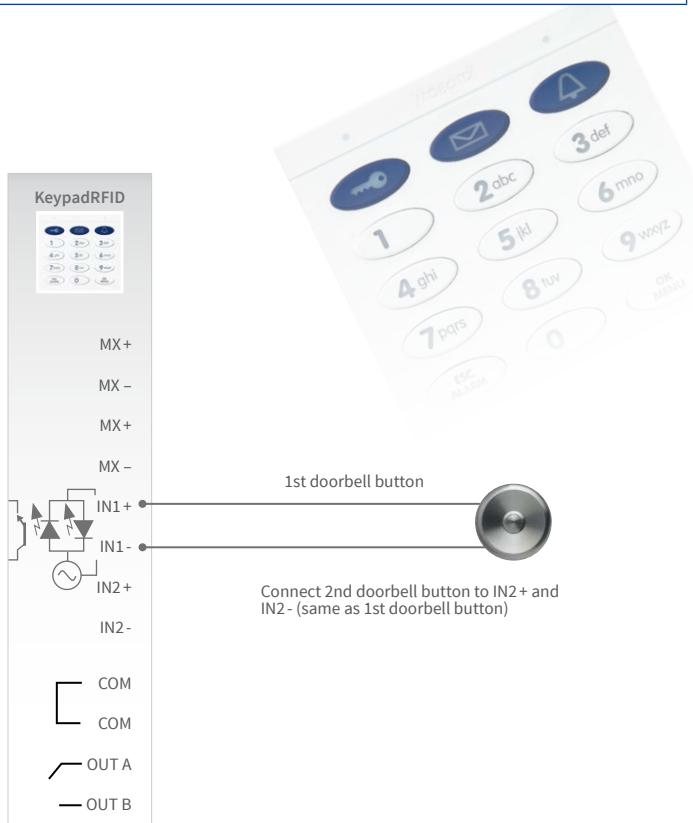

2.8 Finishing the Installation

2.8.1 Checking the Wiring and Activating Theft Protection

After installing and connecting the door station, you will need to test the power supply to the individual modules and the MX-DoorMaster.

Connect all the installed components (T26 outdoor station, MX-DoorMaster, door opener/electronic lock, door sensors, light and so on) and **connect the power supply** (switch on PoE switch/router and all power supply units used). The MOBOTIX DoorStation starts up after the power supply is connected. The entire system starts up.

The buttons on the T26-CamCore light up for four seconds. Without pressing a button, wait until the lights go out after a few minutes and then light up again.




Notes

The **flashing of the green LED on the access module and MX-DoorMaster** indicates that data is communicated between the individual modules via Mx-Bus but the data communication is still unencrypted. After the system is started up (see the T26 Systemhandbuch Teil 2), the green LED lights up continuously (MxBus data communication is encrypted).

The **LED on the access module lights up red** when the communication of data via MxBus is interrupted (for example, if the camera module stops working).

Finishing the Installation

Checking the Wiring

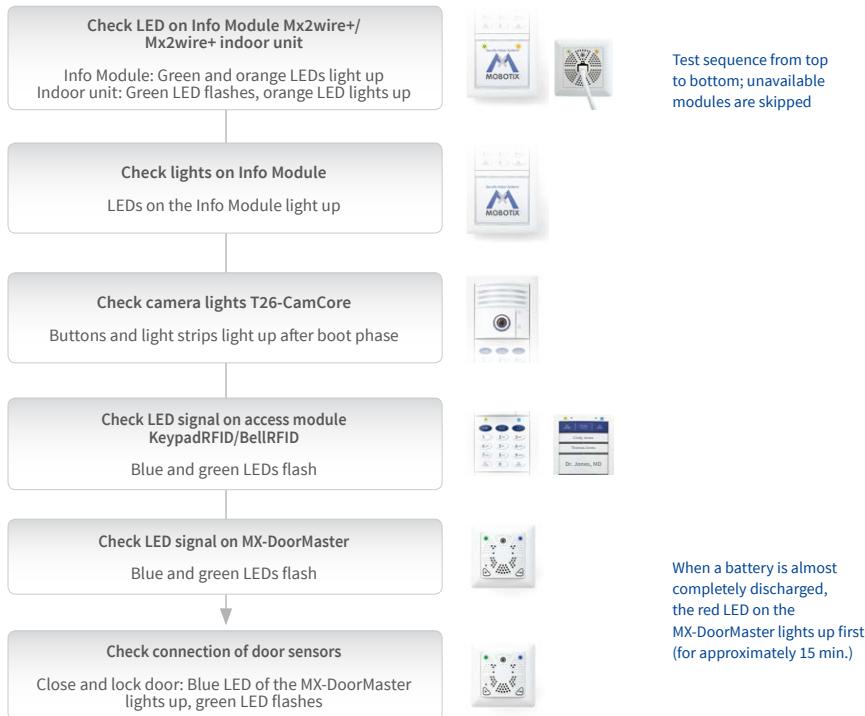

Activating Theft Protection

Test the theft protection module by pressing and holding down the two buttons on the MX-DoorMaster until the blue LED flashes. This deactivates the theft protection in the frame for 90 seconds (see Section 2.4.7).

Use the special key to release the module above the mechanical theft protection lock and turn the red button to the 'closed lock' symbol (see Section 2.3.7). Insert all the modules securely back into the frame. The modules can only be removed now after deactivating the theft protection.



Before operating the door station, the batteries in the MX-DoorMaster must be fully charged (maximum charging time: 12 hours). Finish the installation with Section 2.8.2, «Configuring the MX-DoorMaster».

2.8.2 Configuring the MX-DoorMaster

Before using the MX-DoorMaster, it is essential to configure the signal output option to be used (see Section 2.5.2, «Connection Diagrams for Door Opener Versions»).

Three Options Are Available

Self-powered (standard version)

Option 1: Power Supply From MX-DoorMaster Battery (Self-Powered)

The door opener is supplied with a pulsed 12 V voltage (max. 10 W) from the battery. This state is signaled by a green LED in configuration mode. As this is the factory default setting, no further configuration is required for this connection option.

Internal relay function

Option 2: Power Supply From External Power Supply Unit (Internal Relay Function)

The relay integrated into the MX-DoorMaster switches an external voltage that powers the connected door opener. This is signaled by a red LED in configuration mode. Configuration is required here (see below).

Electronic lock ("Mediator")

Option 3: Self-Locking Electronic Door Lock Including UPS Via Battery Pack

A DC control signal is switched to the control input of the electronic lock (special door opener that keeps the door permanently locked). This is signaled by a blue LED in configuration mode. Configuration is required here (see below).



Finishing the Installation

The signal output option is set on the MX-DoorMaster in three steps as part of the initial setup.

Step 1: Press both buttons at the same time for 5 seconds (until double beep)


You are now in administration mode (red LED turns off shortly every 3 seconds).



Step 2: Press door opener button (right) to configure the signal output option

You can switch between signal output options 1 to 3 by pressing the right button repeatedly. The flashing pattern of the blue LED signals the currently selected setting.

- Blue flashing 1x every 3 seconds: Self-powered
- Blue flashing 2x every 3 seconds: Relay
- Blue flashing 3x every 3 seconds: electronic lock ("Mediator")

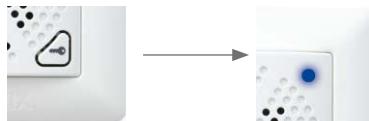

Step 3: Press both buttons at the same time for 5 seconds (until double beep)

The setting has been saved and you are exiting administration mode.



Notes

To test the proper functioning of the MX-DoorMaster, press and hold the door opener button for three seconds. It should now be possible to open the door from the outside.

Notes

MOBOTIX

BeyondHumanVision

Manufacturer

MOBOTIX AG
Kaiserstrasse
67722 Langmeil
Germany

Phone: +49 6302 9816-103

Fax: +49 6302 9816-190

www.mobotix.com

sales@mobotix.com

Registration Office: Kaiserslautern Local Court

Registration Number: HRB 3724

Tax Office: Worms-Kirchheimbolanden, Germany

Tax Code: 44/676/0700/4

VAT ID: DE202203501

You can find the latest version of this and other documents (e.g., declarations of conformity) at www.mobotix.com in the **Support > Download Center > Documentation** section.



Technical specifications subject to change without notice!

System Manual Part 1

System Overview and Installation

DoorStation T26

