

Guideline

Vaxtor LPR incl. Vehicle Make, Model, Color and Class App

© 2022 MOBOTIX AG

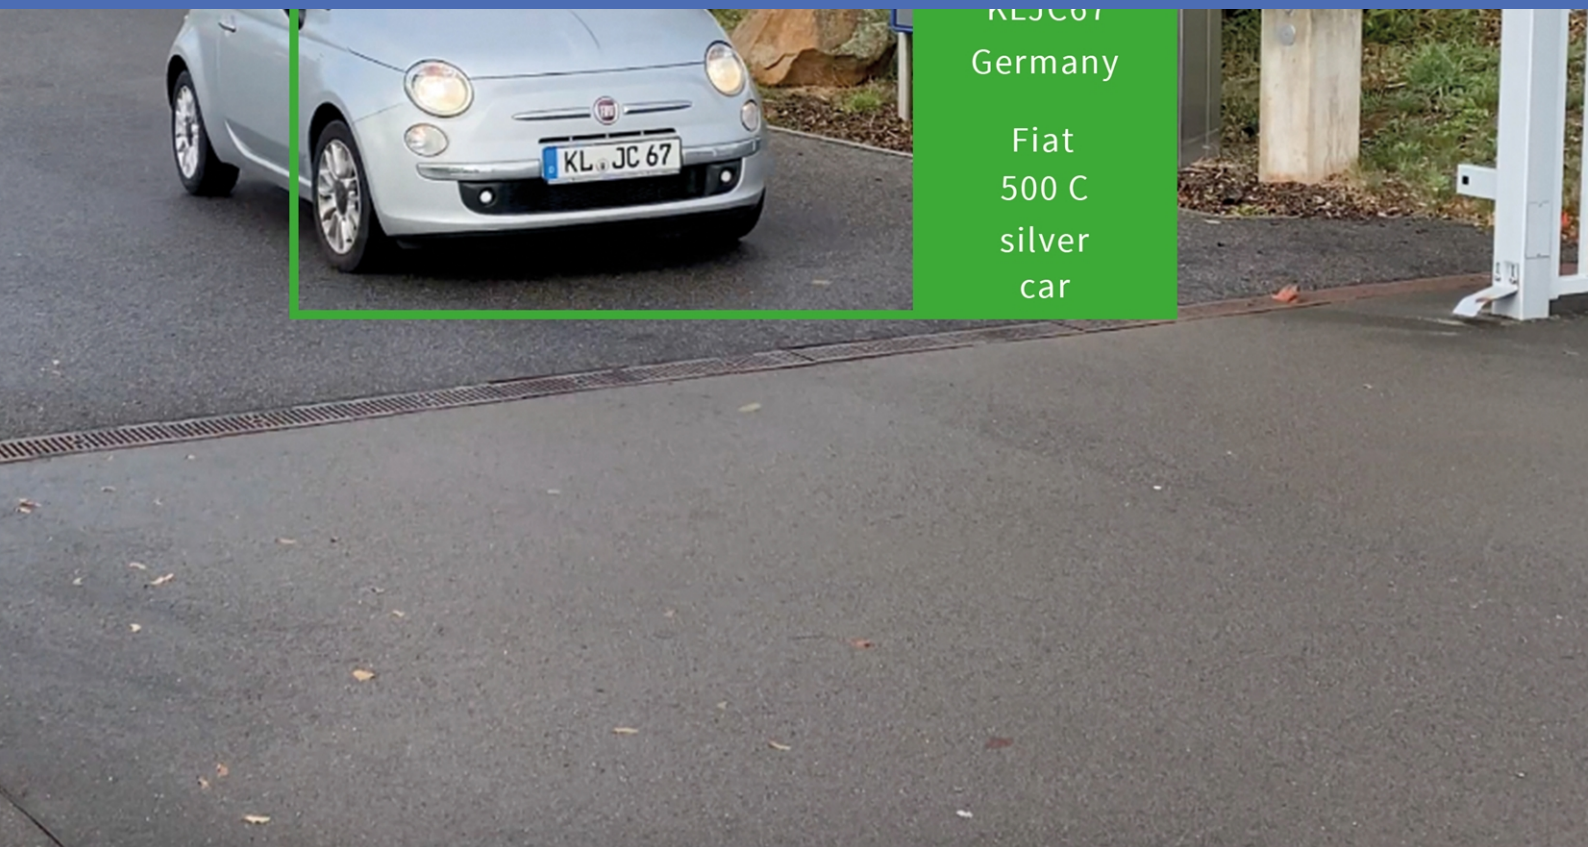


Table of Contents

Table of Contents	2
Before You Start	5
Support	6
Safety Notes	6
Legal Notes	7
About Vaxtor LPR incl. Vehicle Make, Model, Color and Class App	8
Smart Data Interface to MxManagementCenter	8
Technical Specifications	10
Licensing Certified Apps	13
License Activation of Certified Apps in MxManagementCenter	13
Managing Licenses in MxManagementCenter	17
Camera, image and scene requirements	20
Recommendations on mounting and adjusting.	23
Activation of the Certified App Interface	25
Configuration of Vaxtor LPR incl. Vehicle Make, Model, Color and Class App	26
Basic Settings	27
Recognition Areas	28
List Management	30
Video	31
License Plates	32
Environment	33
OCR	34
MMC	35
Reporting	36
Variables / Template fields	38

Advanced	40
Storing the Configuration	41
MxMessageSystem	42
What is MxMessageSystem?	42
Facts about MxMessages	42
MxMessageSystem: Processing the automatically generated app event	43
Checking automatically generated app events	43
Action handling - Configuration of an action group	48
Action settings - Configuration of the camera recordings	50
Advanced Configuration: Processing the meta data transmitted by apps	52
Meta data transferred within the MxMessageSystem	52
Creating a Custom Message Event	53
Examples for message names and filter values of the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App ..	55

Before You Start

Support	6
Safety Notes	6
Legal Notes	7

Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates. Please visit:

www.mobotix.com > [Support](#) > [Help Desk](#)



Safety Notes

- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- This equipment is not suitable for use in locations where children are likely to be present.
- When using a Class I adapter, the power cord shall be connected to a socket-outlet with proper ground connection.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.
- This equipment is to be connected only to PoE networks without routing to other networks.

NOTE! Observe the [MOBOTIX MOVE Installation Hints](#) document to ensure optimum performance of the camera features.

Legal Notes

Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on www.mobotix.com under **Support > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EC) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see www.mobotix.com, **Support > Download Center > Marketing & Documentation > Brochures & Guides > Certificates**).

Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at www.mobotix.com by clicking on the corresponding link at the bottom of every page.

About Vaxtor LPR incl. Vehicle Make, Model, Color and Class App

Worldwide usable vehicle identification

Based on deep learning processes the certified Vaxtor LPR incl. Vehicle Make, Model, Color and Class App recognizes license plates as well as vehicle's make, model, color and class (MMC). The app can be used at maximum speeds of up to 160 km/h (LPR only) and 100 km/h (plus MMC) on two lanes and by an extremely high hit probability of over 99 percent.

Via blocking or permission lists, authorized, blocked or searched vehicles can be defined specifically. For example, a gate or barrier in an access road can open or be blocked automatically.

- Subject to license, single payment for unlimited use
- Recognition of license plates with global country coverage
- Recognition of make, model, color and class
- Over 99% accuracy and high-speed performance
- Use of blocking and permission lists possible
- App-integrated Smart Data Data Interface for data retrieval with MxManagementCenter version 2.4 or higher

CAUTION! Thermal sensors are not supported by this app.

Smart Data Interface to MxManagementCenter

This app has a Smart Data interface to MxManagementCenter.

With the MOBOTIX Smart Data System, transaction data can be linked to the video recordings made at the time of the transactions. Smart Data source can be e.g. MOBOTIX Certified Apps (no license required) or general Smart Data sources (license required) like POS systems or license plate recognition systems.

The Smart Data System in MxManagementCenter enables you to quickly find and review any suspicious activities. The Smart Data Bar and the Smart Data View are available for searching and analyzing transactions. The Smart Data Bar provides a direct overview of the most recent transactions (from the last 24 hours) and for this reason it is convenient to use it for reviews and searches.

NOTE! For information on how to use the Smart Data System, see the corresponding online help of the camera software and MxManagementCenter.

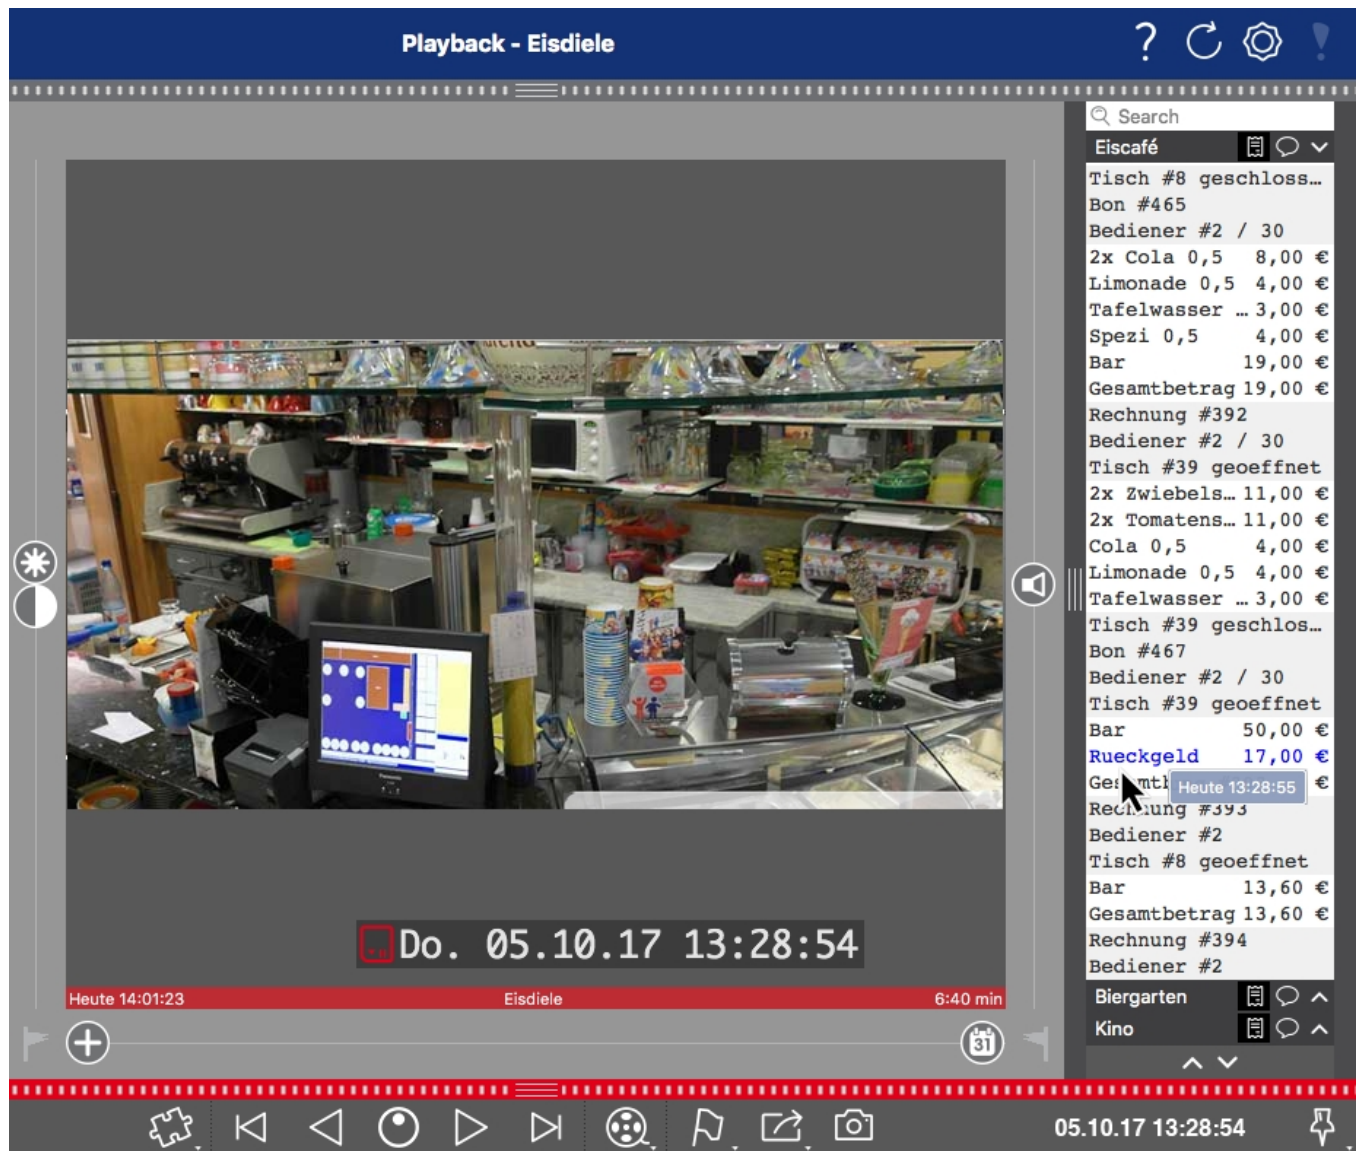


Fig. 1: : Smart Data Bar in MxManagementCenter (Example: POS System)

Technical Specifications

Product Information

Product Name	Vaxtor LPR incl. Vehicle Make, Model, Color and Class App
Order Code	Mx-APP-VX-MMC
Supported MOBOTIX Cameras	Mx-M73A, Mx-S74A
Minimum Camera Firmware	V7.1.3.15
MxManagementCenter Integration	<ul style="list-style-type: none">min. MxMC v2.4.4Configuration: Advanced Config license requiredRecognition Log & Forensic Search: Smart Data Interface license included

Product Features

App Features	<ul style="list-style-type: none">License plate recognition of one- and two-line license platesSupport of latin, hebrew and arabic characters for global applicationAdditional recognition of vehicle make, model, color and classRecognition log (Smart Data / Event Search via MxManagementCenter)MOBOTIX events via MxMessageSystemTwo lists for individual actions (e.g. access granted/denied, alarm, etc.)Free flow and Signaled mode
Maximum number of lanes	2
Maximum number of enrolled license plates	1000 per list
Meta Data / Statistic formats	JSON
Trial License	30-day trial license pre-installed
MxMessageSystem supported	Yes

Interfaces	<ul style="list-style-type: none"> ■ MxMC Smart Data ■ IP Notification ■ Milestone X-Protect ■ Vaxtor Helix ■ generic 3rd party integration via XML ■ compare supported camera's interfaces
MOBOTIX Events	Yes
ONVIF Events	Yes (Generic Message event)

Supported Vehicles

No. of supported Car Makes	> 470
No. of supported Car Models	> 7500
Supported Vehicle Colors	Black, White, Grey, Blue, Red, Green, Brown, Beige, Gold, Yellow, Violet, Orange
Supported Vehicle Classes	Car, Van, Truck, Bus, Motorcycle

Supported Countries

Supported license plates / countries	https://community.mobotix.com/t/vaxtor-lpr-app-supported-license-plates-countries
--------------------------------------	---

Scene Requirements

Character Height	20px - 50px (depending on the plate type)
Maximum Vertical Angle	30°
Maximum Horizontal Angle	< 25°
Maximum Tilt Angle	< 25°

Technical App Specifications

Synchronous / Asynchronous App	Asynchronous
Simultaneous execution of other apps	Yes (considering performance requirements)

Technical Specifications

Smart Data Interface to MxManagementCenter

Accuracy	Min. 99% (considering scene requirements)
Processed number of frames per second	Typ. 10 fps
LPR Detection time	Typ. 100 – 120 ms
Classification time	Typ. 100 - 120 ms
Classification & MMC	Typ. 250 ms

Licensing Certified Apps

The following licenses are available for the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App:

- **30-day test license** pre-installed
- **permanent commercial license**

The usage period begins with activation of the app interface (see [Activation of the Certified App Interface](#), p. 25)

NOTE! For buying or renewing a license, contact your MOBOTIX Partner.

NOTE! Apps are usually pre-installed with the firmware. In rare cases, apps must be downloaded from the website and installed. In this case see www.mobotix.com > **Support** > **Download Center** > **Marketing & Documentation**, download and install the app.

License Activation of Certified Apps in MxManagementCenter

After a test period commercial licenses must be activated for use with a valid license key.

Online-Activation

After receiving the activation IDs, activate them in MxMC as follows:

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

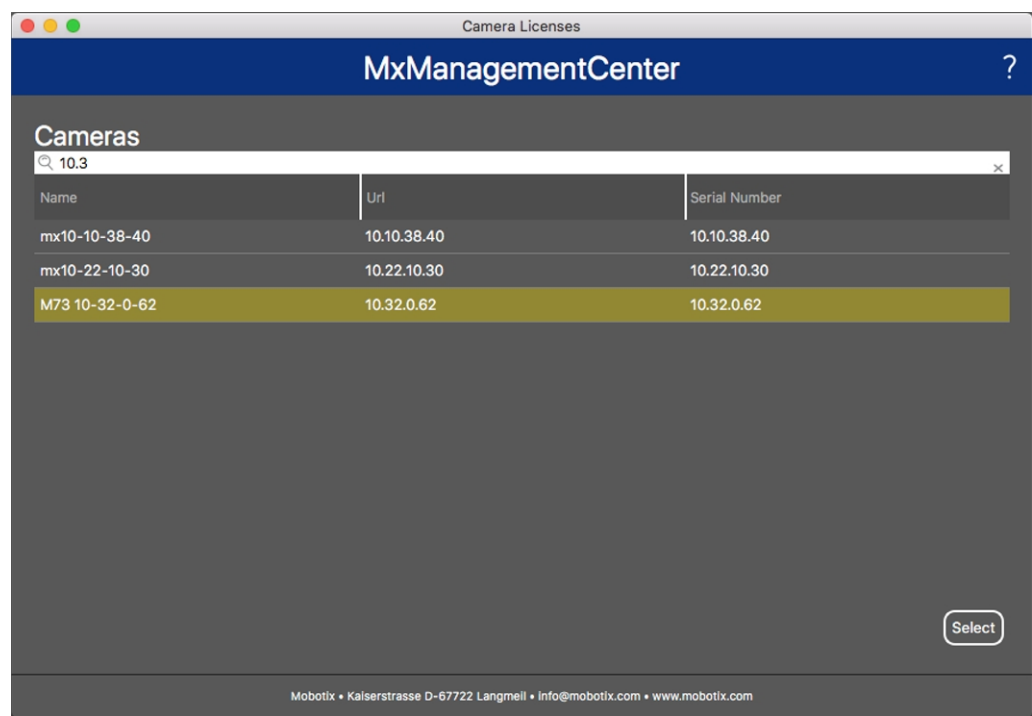


Fig. 2: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

1. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

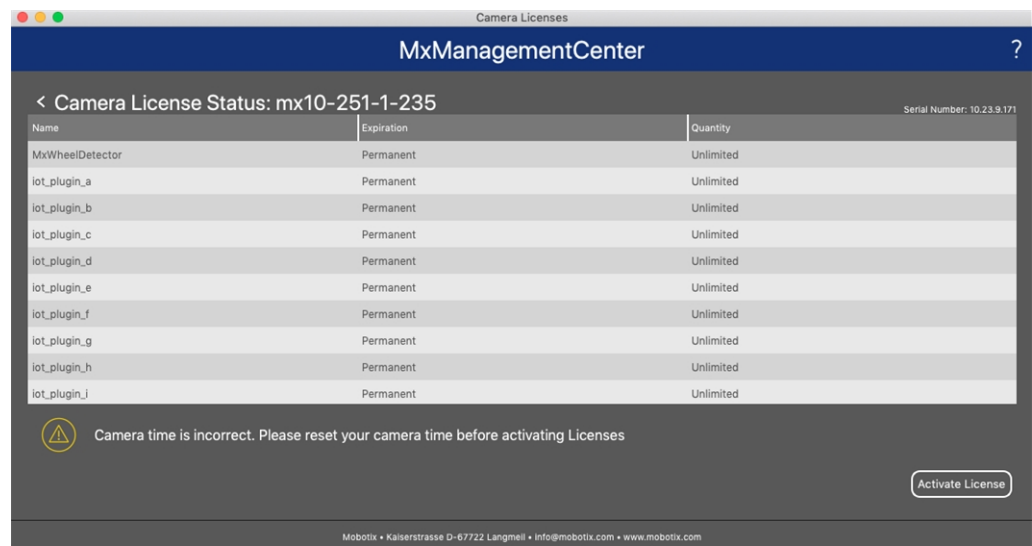



Fig. 3: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

2. Enter a valid Activation ID and specify the number of licenses to install on this computer.
3. If you want to license another product, click on . In the new row, enter the appropriate Activation ID and the number of licenses you want.

4. To remove a line click .
5. When you have entered all Activation IDs, click **Activate License Online**. During activation, **MxMC** connects to the license server. This requires an Internet connection.

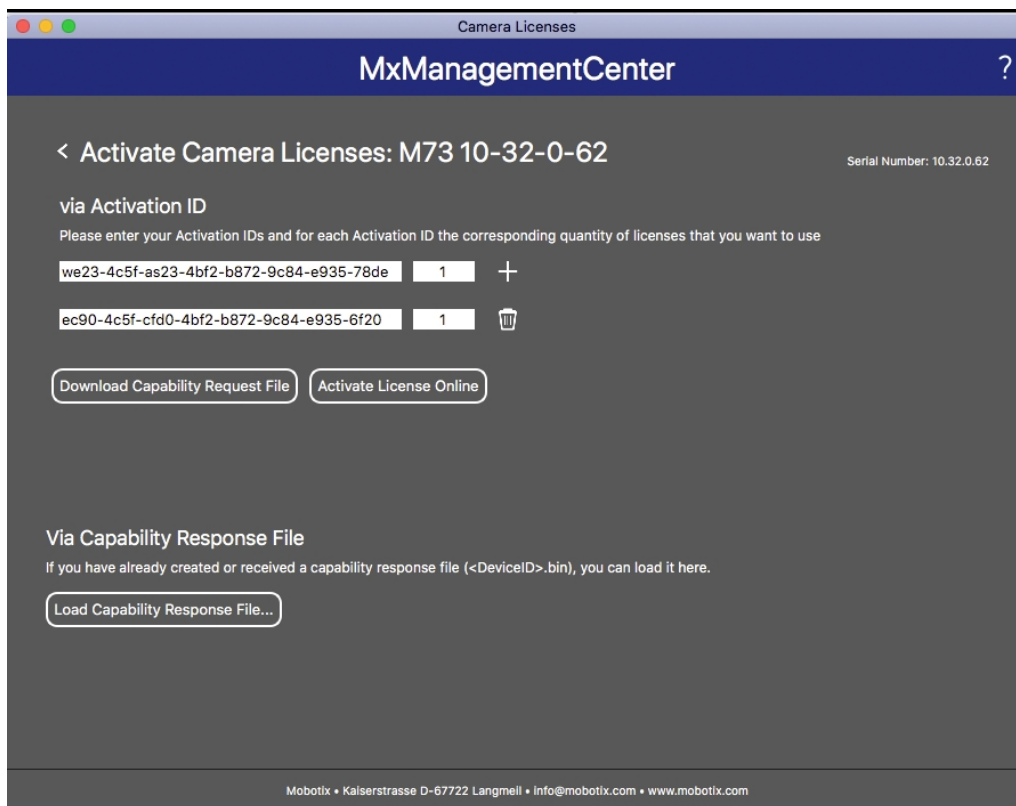


Fig. 4: Adding licenses

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Failed activation (missing internet connection)

If the license server cannot be reached, e.g. due to a missing internet connection, apps can also be activated offline. (see [Offline Activation](#), p. 15).

Offline Activation

For offline activation, the partner/installer from whom you purchased the licenses can generate a capability response (.bin file) on the license server to activate their licenses.

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

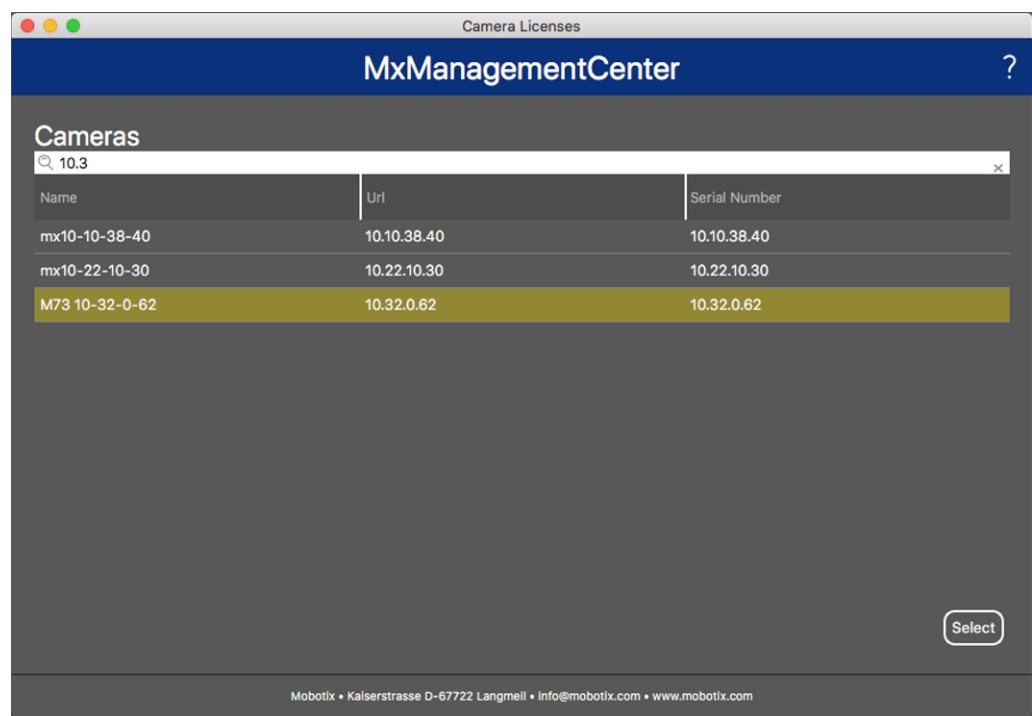


Fig. 5: Overview of Camera App Licenses in MxManagementCenter

NOTE! If necessary, correct the time set on the camera.

3. An overview of the licenses installed on the camera may be displayed. Click **Activate License**.

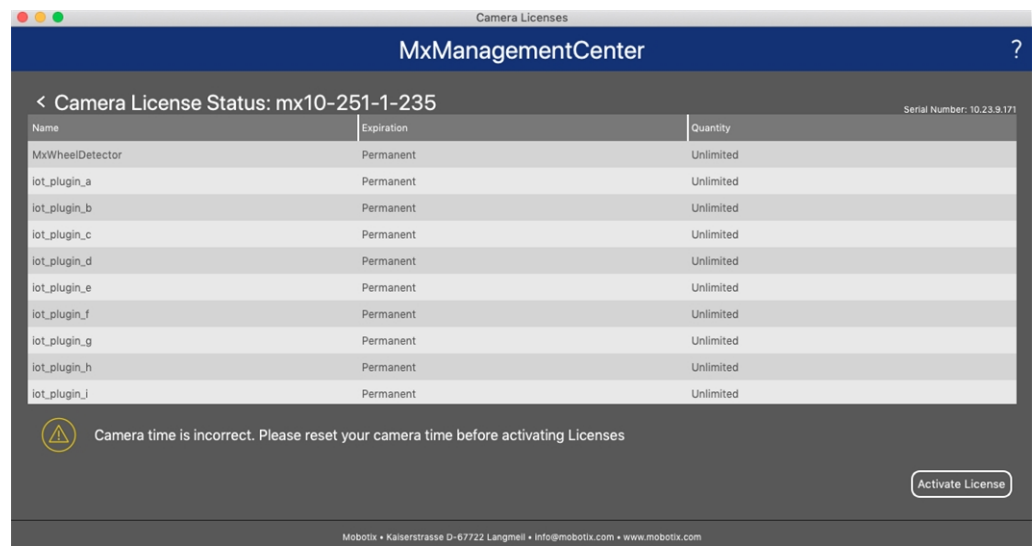




Fig. 6: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

4. Enter a valid Activation ID and specify the number of licenses to install on this computer.
5. If you want to license another product, click on . In the new row, enter the appropriate **Activation ID** and the number of licenses you want.
6. If necessary, click  to remove a line.
7. When you have entered all Activation IDs, click **Download Capability Request File (.lic)** and send it to your partner/installer.

NOTE! This file allows the partner / installer from whom you purchased the licenses to generate a capability response file (.bin) on the license server.

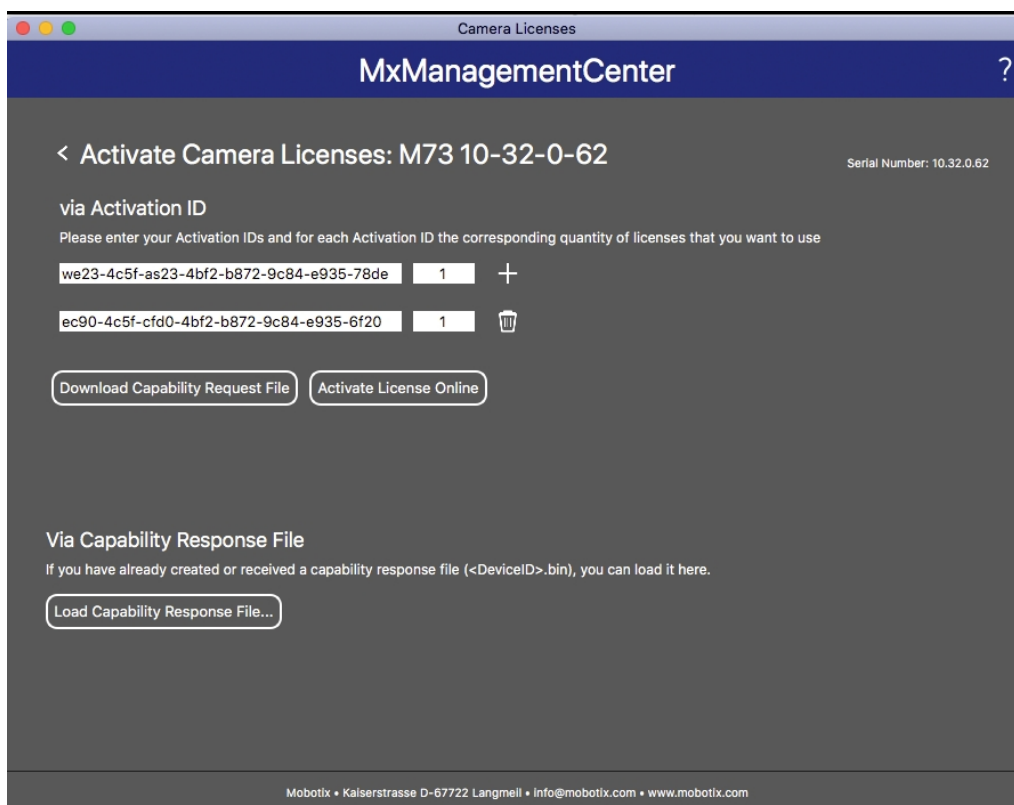


Fig. 7: Adding licenses

8. Click Load Capability Response File and follow the instructions.

Successful activation

After successful activation, a new log in is required to apply the changes. Alternatively, you can return to license management.

Managing Licenses in MxManagementCenter

In MxManagementCenter you can comfortably manage all licenses that have been activated for a camera.

1. Select from the menu **Window > Camera App Licenses**.
2. Select the camera on which you want to license apps and click **Select**.

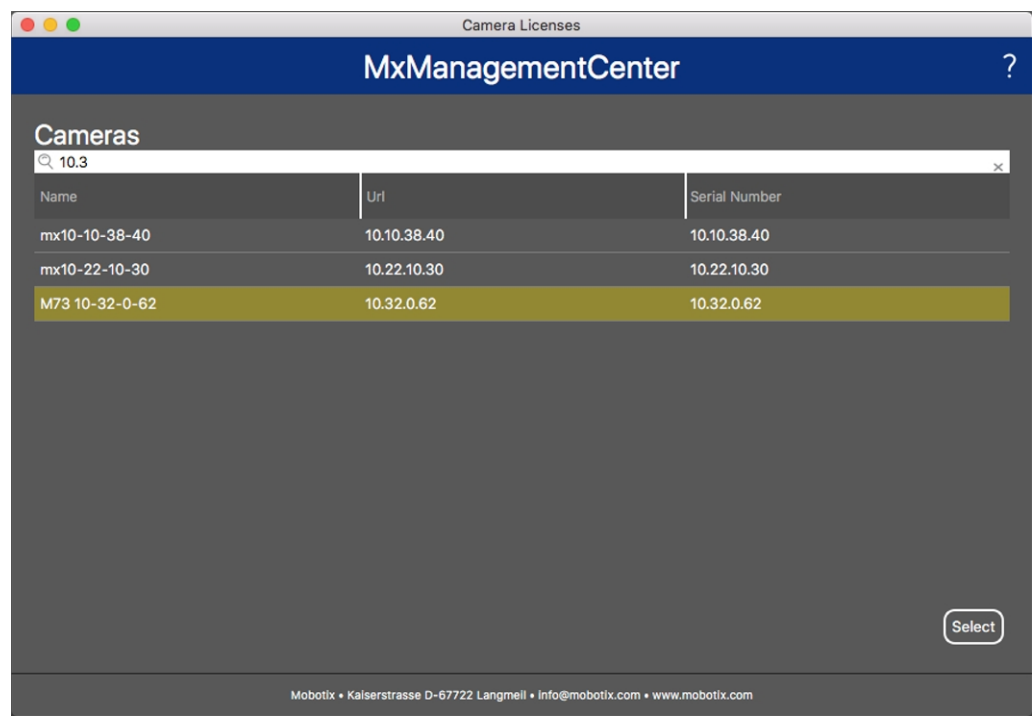


Fig. 8: Overview of Camera App Licenses in MxManagementCenter

An overview of the licenses installed on the camera may be displayed.

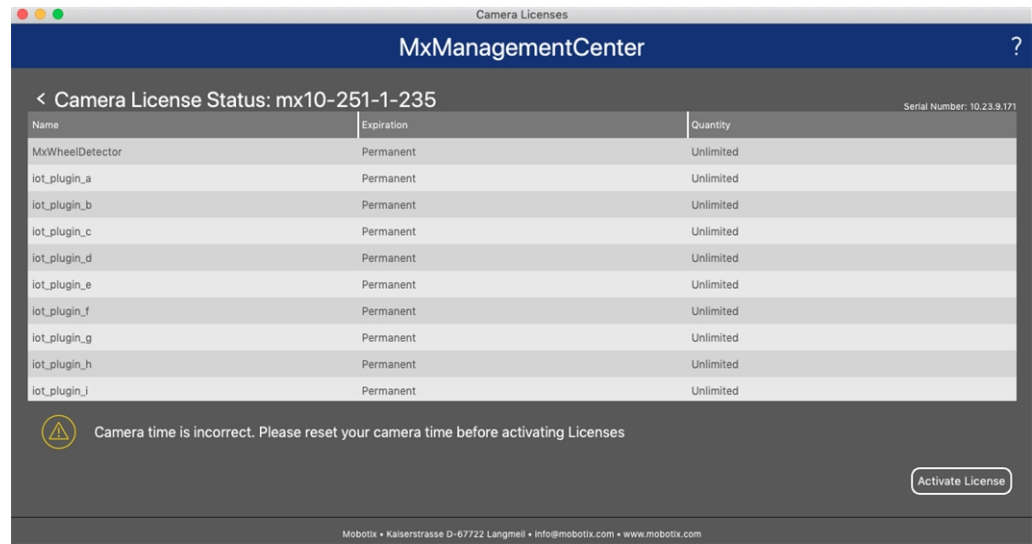


Fig. 9: Overview of the licenses installed on the camera

NOTE! If necessary, correct the time set on the camera.

Column	Explanation
Name	Name of the licensed app
Expiration	the time limit of the license
Quantity	Number of licenses purchased for a product.
Serial Number	Unique identification determined by MxMC for the device used. If problems occur during licensing, please have the device ID ready.

Synchronize licenses with server

When the program starts, there is no automatic comparison of the licenses between the computer and the license server. Therefore, click **Update** to reload the licenses from the server.

Update licenses

To update temporary licenses, click **Activate Licenses**. The dialog for updating/activating licenses opens.

NOTE! You need administrator rights to synchronize and update licenses.

Camera, image and scene requirements

The camera should be setup so that the combination of the distance, the lens's focal length and the camera's resolution provide an image that can be accurately analyzed by the OCR. Therefore the following pre-requisites must be fulfilled for the scene:

Quality of the license plate to be captured in the image

- The license plate must be high-contrast and clearly legible, i.e. as clean as possible, without dents or holes and well illuminated.
- The license plate should be rectangular
- Minimum character height
 - The objective of an ALPR system is to capture an image with a good readable plate. In order to achieve this the characters on the plate should have a height between 20 and 30 pixels for larger plate formats (e.g. EU 50cm plates) and about 25-35 pixels for USA-style plates which are physically smaller and have a narrow character stroke width in many states.)
 - Certain Middle East and Arabic plates are smaller still and will need an even greater character pixel height of say 30-40 pixels. For example, in Abu Dhabi the small characters next to or above the main characters are only 3cm high and may require a much higher camera resolution.

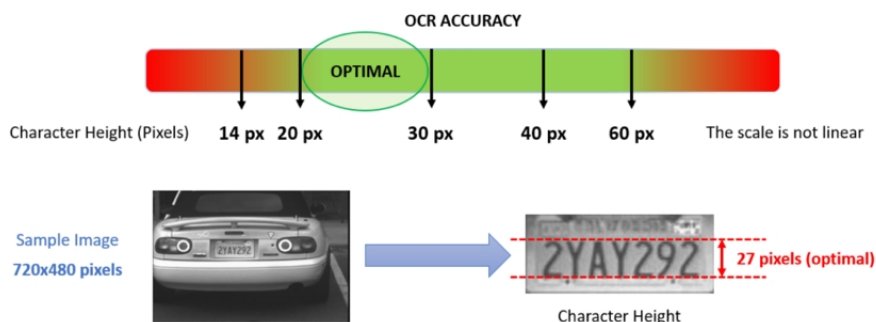


Fig. 10: Minimum character height

- Maximum rotation angle:

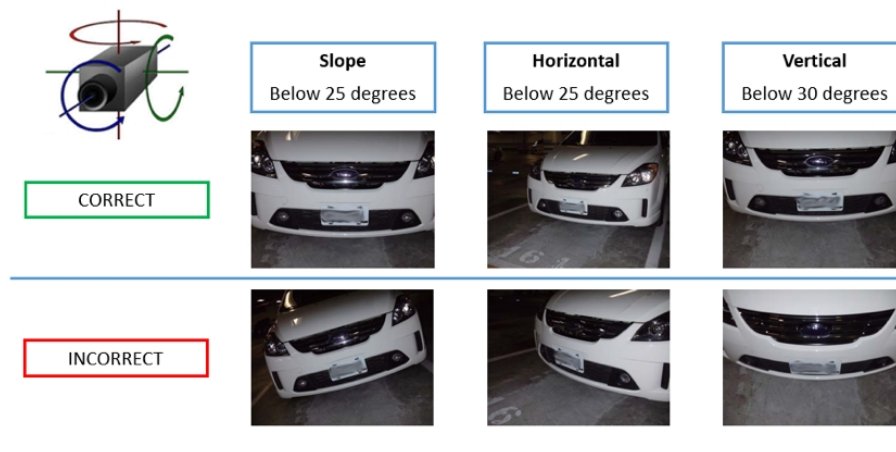


Fig. 11: Maximum rotation angle

- Vertical: $< 30^\circ$
- Slope: $< 25^\circ$
- Horizontal: $< 25^\circ$

Frame rate

The selection of the correct frame rate influences the recognition quality significantly. For ALPR cameras, the following frame rates are recommended:

Examples for recommended frame rates

Scene (Street type)	minimum frame rate (fps)
Barrier or Gate	5
Normal city street	15
Fast city streets	20
Freeway	25

Shutter Speed (Exposure time)

Shutter speed, also known as the “exposure time”, is the length of time a camera shutter is open for in order to expose light onto the camera sensor. The shutter speed is measured in seconds, or fractions of a second. The bigger the denominator, the faster the speed. For example, 1/250th means one two-hundred-and-fiftieth of a second or four milliseconds.

(1 second = 1000 milliseconds)

Examples for recommended exposure times

Scene (Street type)	minimum exposure time (sec)
Barrier or Gate	1/250 th (4 milliseconds)
Normal city street	1/500 th (2 milliseconds)
Fast city streets	1/1000 th (1 milliseconds)
Freeway	1/1000 th (1 milliseconds)

NOTE! he exposure time must be adjusted according to the light conditions.

Resolution

The resolution of the camera determines the amount of detail that can be captured. The smaller the object detail, the higher the resolution that is required. There are several factors that determine the detail captured:

- The resolution (pixel size) of the camera sensor. This sensor (normally CMOS) where the light eventually falls and a typical IP camera has a sensor resolution of 2 or 4 Megapixels.
- The resolution of the camera's electronics. Most CCTV cameras can support a minimum of 1920 x 1080 – but may be set to a lower resolution if not needed.
- The quality and focal length of the lens. The quality of the optics can play a part in challenging circumstances. The focal length (zoom factor) determines the field of view that can be seen.
- The quality of the images can be influenced by factors such as the type of lighting used.

Examples for recommend resolutions

Scene (Street type)	minimum resolution
Barrier or Gate	800 x 600 px
Roadside Deployment	1280 x 720

Focal length

The focal length of the lens determines how “zoomed in” the image is. It is usually expressed in millimeters (e.g., 6 mm, 25 mm, or 50 mm).

The focal length defines the angle of view (how much of the scene will be captured) and the magnification (how large individual elements will be). The longer the focal length, the narrower the angle of view and the higher the magnification. The shorter the focal length, the wider the angle of view and the lower the magnification.

In the case of zoom lenses, both the minimum and maximum focal lengths are stated, for example 10–40 mm.

Examples for recommended focal length

Scene (Street type)	Distance between camera and license plate (m)	recommended lens
Barrier or Gate	2 - 6 m	2 - 8 mm or similar
Highway, road or street	15 - 30 m	15 - 50 mm or similar

NOTE! The lens should be **IR corrected** to avoid out of focus images. IR Corrected lenses should be used on both day/night and monochrome cameras in all lighting conditions in order to achieve a crisp sharp image.

Infrared illumination

Infrared (or IR) illuminators are designed to provide additional illumination that the camera can see but humans normally cannot. In low light conditions, an IR illuminator is used as a spotlight to facilitate 24-hour recognition. It can penetrate darkness and to a lesser extent fog, rain and snow and it eliminates the inconsistency of ambient light.

Infrared illuminators add light across the camera's field of view to produce the desired image quality, lighting up the area and reflecting the plate.

For ALPR, it is recommended that the camera always has an infrared illuminator. This can be built into the camera or added as an external unit providing that it is placed very close to the camera lens.

Recommendations on mounting and adjusting.

- If you want to recognize license plates on multiple lanes it is generally recommended to mount the camera on a crossbar.
- Use an IR Led to recognize license plates at night or under low light conditions.
- Shutter speed must be high enough to cut the light from car's headlights at night (usually it's about 1/1000). Keep in mind, that too high shutter speed may obscure the edges of the lines (especially shadows).
- Depth of focus is a very important parameter. If you are using a camera with a CS-mount lens, use a fixed lens. Fixed lens are better for license plate recognition due to greater depth of focus. Megapixel lens is also strongly recommended.
- Respect changing light conditions (e. g. due to sunrises and sunset) when choosing the place of mounting. Direct sunlight beams can distort a picture. If the cars facing a direct sunlight consider using a lens with auto iris mode.
- If mounting a camera on a roadside pole check how the pole reacts to heavy cars or a convoy of cars. Some poles have tangible tremor, this could make license plate recognition almost impossible.

Camera, image and scene requirements

Recommendations on mounting and adjusting.

- It is recommended to turn down WDR and BLC. In most cases, they will make the picture more pretty, but at the cost of smudging details like an edges of letters in the license plate. For the same reason keep digital noise reduction as low as possible.
- On certain rare conditions there may be a cases of false detections e. g. because of recognizing image parts that structurally or semantically look similar to a license plate(e. g. fences or ads). To minimize this:
 - Adjust the region of interest accordingly. It may be a good idea to make it smaller, or change it's shape, omitting the parts, which potentially may be false detected.
 - Adjust the min and max license plate settings according to upper instructions do not leave a default 130 - 300.
 - There may be cases, when the best performance will occur by changing angle of lens or moving the camera. In some cases, shooting a front license plate is better.

Activation of the Certified App Interface

CAUTION!

The Vaxtor LPR incl. Vehicle Make, Model, Color and Class App does not consider obscure areas defined for the live image. Therefore there is no pixelation in obscure areas while configuring the app and during image analysis by the app.

NOTE!

The user must have access to the setup menu ([http\(s\)://<Camera IP address>/control](http(s)://<Camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<Camera IP address>/control/app_config](http(s)://<Camera IP address>/control/app_config)).

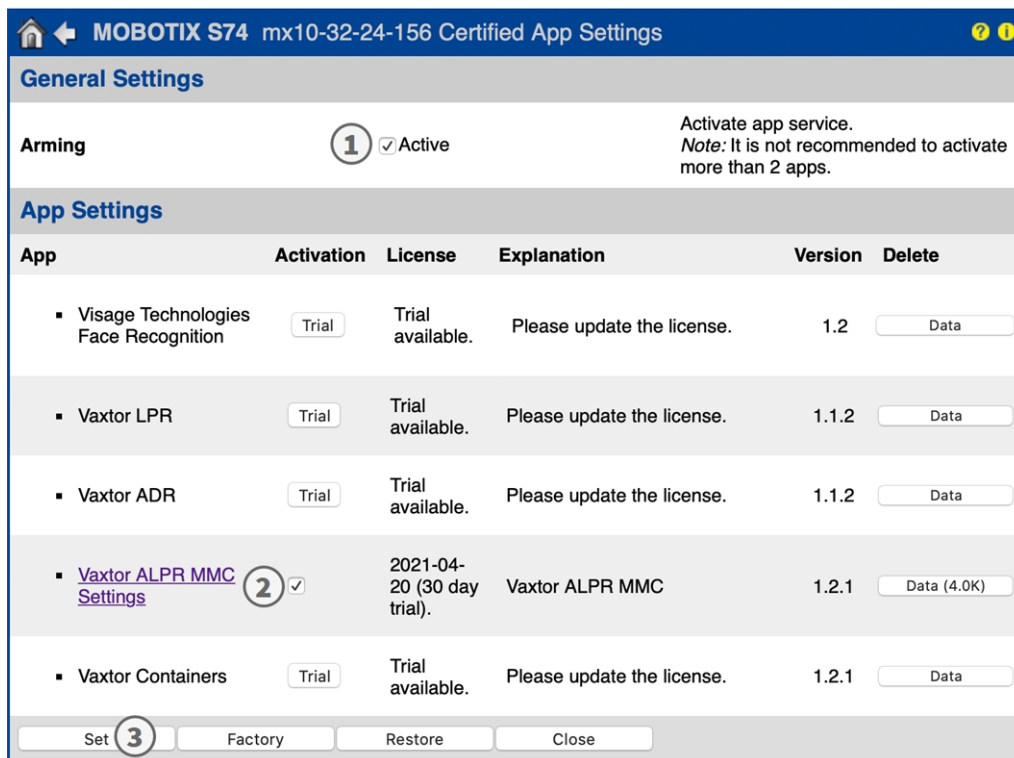


Fig. 12: Activation of Certified Apps

2. Under **General Settings** activate the **Arming** ① of the app service (see screenshot).
3. Under **App Settings** check the **Activation** ② option and click **Set** ③.
4. Click on the name of the App to be configured to open the Apps user interface.
5. For configuration of the App see [Configuration of Vaxtor LPR incl. Vehicle Make, Model, Color and Class App](#), p. 26

Configuration of Vaxtor LPR incl. Vehicle Make, Model, Color and Class App

NOTE! For best performance and results in LPR and ADR processing make sure to have scene set up to meet the [Camera, image and scene requirements, p. 20](#).

CAUTION! The user must have access to the setup menu ([http\(s\)://<Camera IP address>/control](http(s)://<Camera IP address>/control)). Therefore check the user rights of the camera.

1. In the camera web interface, open: **Setup Menu / Certified App Settings** ([http\(s\)://<Camera IP address>/control/app_config](http(s)://<Camera IP address>/control/app_config)).
2. Click on the name of the **Vaxtor LPR incl. Vehicle Make, Model, Color and Class App**.

The configuration window of the app appears with the following options:

Basic Settings

Multiple countries can be selected from more to less probability of occurrence. Therefore the following configurations should be taken into account:

Vaxtor ALPR MMC		
Countries	<div>Spain</div> <div>×</div> <div>+</div>	Choose countries from more to less probability of occurrence (up to 10)
States	<div>Alabama</div> <div>×</div> <div>+</div>	Choose states from more to less probability of occurrence. This will be used only if United States is selected
Grammar Strict	<input checked="" type="checkbox"/>	Read only plates that match a country grammar
Multi-country Balance	<input type="checkbox"/>	If the flag is OFF the OCR will select the first country matching the plate grammar, otherwise it will compare candidates with all the countries in the list selecting the best option according to its internal algorithms
Working Mode	<div>Freeflow</div> <div>×</div> <div>+</div>	Signaled: The application will only attempt to read a license plate number when the signal is activated. Freeflow: The application continuously captures license plate numbers. Enter & Exit: Vehicle is reported when it stop and when it leaves the slot.
Enable MxMessage	<input checked="" type="checkbox"/>	Send a mxmessage when a plate is read
Enable Overlay	<input checked="" type="checkbox"/>	Display an overlay on all the sensors when a plate is read

Fig. 13: Recognition zones

Countries: Select at least one country and ensure that you select in the more to less probability of occurrence.

To add country select it and click the + button.

To remove a country click on the x button beside it.

States: *This will be used only if United States is selected!* Select at least one country and ensure that you select in the more to less probability of occurrence.

NOTE! The same neural engine (used for matching character shapes) is used for all of the Americas Selecting the state simple loads the possible syntax (grammar) for those states to help with the letter O and zero for example. Other states not in the list will still be recognized.

Grammar strict: Check to force the Engine to only use the syntax from countries or states that you have selected. Plates that do not match these rules will not be reported. This is the recommended option for using ALPR for access control where exact matches are required

NOTE! In the USA, the same license plates of various other states can be on the road in one state and thus be detected. The recommended setting is OFF.

Multi country balance: This option only applies when more than one country is defined in the selected countries list. If the flag is OFF (default) the OCR will select the first country matching the plate grammar, otherwise it will compare candidates with all the countries in the list selecting the best option according to its internal algorithms.

NOTE! Keep this set to OFF unless there is a high probability of having plates from different countries in equal numbers. e.g. on the border between two countries.

Working mode: The following modes are available:

Free flow: The application continuously captures license plate numbers.

Signaled: The application will only attempt to read a license plate number when the signal (trigger) is activated.

NOTE! In signaled mode an signal ID will be sent with the signal event.

MxMessage: Check to enable the processing of LPR (MMC) events in the MxMessageSystem.

Enable Overlay: Check to enable the display of the license plate recognition result in the live view.

Recognition Areas

A Recognition Area, an area within the video frame where the OCR analytics takes place. You can draw a polygon and choose whether the area to look for plates in Inside or Outside this region. You can set multiple areas to respect complex situations.

NOTE! Using Recognition Area can decrease OCR processing time and also reduce false positives. The whole license plate must be in or out the Recognition Area to pass the test.

Recognition Areas

Recognition Area Type

inclusion

Show Recognition Area

☐

Edit Recognition Area


Position


599 x 275

Size

265 x 388

Edit Rectangle

 2

 1

Recognition Area Type. Inclusion: only the usdots inside the recognition area will be detected. Exclusion: only the usdots outside the recognition area will be detected

Show the recognition area on the USDOT sensor

Define multiple detection zones as a rectangle. To do this, press the "Edit Rectangle" button. You can draw a rectangle in the camera image with the mouse. The corners are moved using the large handles.

Fig. 14: Recognition Areas

Recognition Area Type: Check to activate the sending of events according to the following configuration

Inclusion: only the plates inside the recognition area will be detected.

Exclusion: only the plates outside the recognition area will be detected.

Show Recognition Area: Check to display the recognition area on the LPR sensor.

Drawing a Recognition Area

1. Click the **plus** icon ① to switch into the live image.
2. In the live view simply click and drag a rectangular recognition area.
3. Drag the corner points to refine the recognition area.
4. In the top right corner of the live view click **Submit** to adopt the coordinates of the rectangle.
5. Optionally click the **bin** icon ② to delete the recognition area.

List Management

You can define a black list and a white list with up to 1000 license plates per list. If a license plate from one of the lists is recognized, a corresponding event is .sent within the MxMessageSystem of the camera.

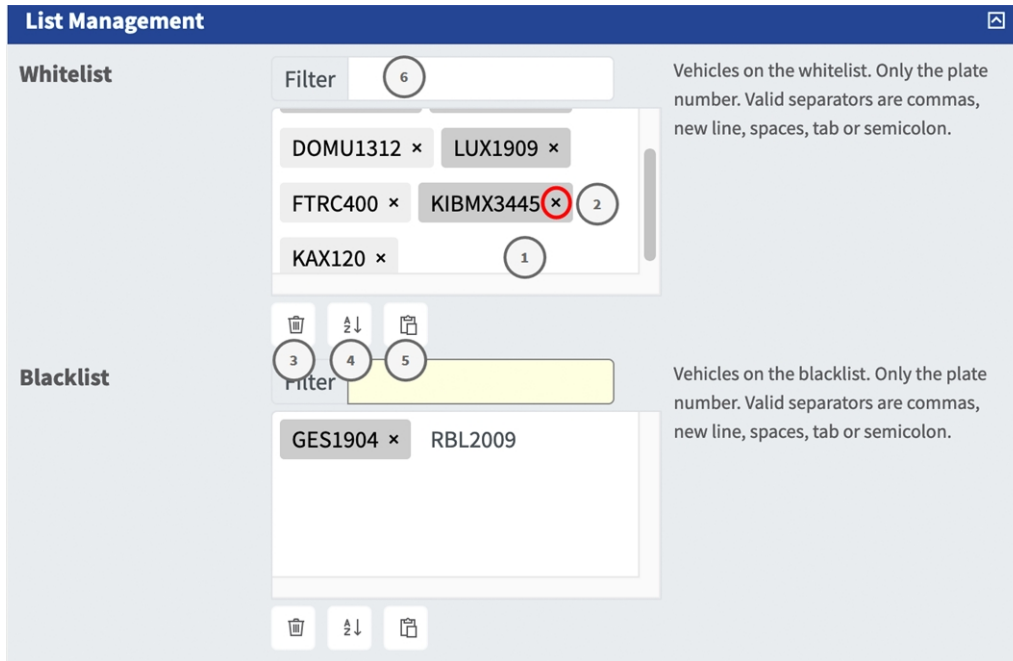


Fig. 15: Black and white lists

Adding a license plate to a list

1. Enter the license plate text into the text field ① and click **Enter**.

Adding multiple license plates from a text file

1. Make sure that your text file contains one license plate per line.
2. Copy the relevant license plates from the text file and paste them into the text field ① .

Deleting a license plate from a list

1. Click on the small x ② to the right of the license plate number.

Deleting all license plates from a list

1. Click the trash icon ③ .

Sorting all license plates from a list alphabetically

1. Click the sort icon ④ .

Copy all license plates from a list to the clip board

1. Click the copy to clipboard icon ⑤ .

Filtering license plates

1. Enter the license plate or parts of it into the filter text field ⑥ . Only license plates containing the filter text are displayed accordingly.

Video

In the video tab you can specify video quality of the video to be analyzed.

Video		
LPR Sensor	Right sensor	Sensor used to recognize license plates
Overview Sensor	None	Sensor used to capture overview images when a plate is detected
Resolution	1920x1080	Working resolution. Adjust the resolution and the camera zoom to capture the plates on the optimum range. Changing this option will require a camera reboot
Minimum Character Height	18	Minimum character height in pixels (14-70). Tip: optimal reading size is 25 pixels height
Maximum Character Height	42	Maximum character height in pixels (14-70). Tip: optimal reading size is 25 pixels height

Fig. 16: Video

LPR sensor: Select the camera sensor to be used for License plate recognition.

NOTE! Changing this option requires a camera reboot.

Overview Sensor: Optionally select a sensor used to capture overview images when a plate is detected.

Resolution: Set the working resolution (current max = 1080p). Adjust the resolution and the camera zoom to capture the plates on the optimum range.

NOTE! Changing this option requires a camera reboot.

Minimum Character Height: the minimum height that a license plate’s characters should be before being read. The characters should be about 20-30 pixels high.

NOTE! For small license plates, e. g most Arabic plates or plates with additional small characters e.g. Costa Rica a minimum character height of 30 pixels is recommended.
The recommended difference between the min and max heights is about 10 pixels

Maximum Character Height: the maximum height is about 20-30 pixels.

NOTE! The recommended difference between the min and max heights is about 10 pixels.

License Plates

In the License Plates tab you can refine the settings for the license plates to be analyzed.

License Plates

Minimum Plate Characters

5

Minimum number of characters that the license plate may have (4-12)

Maximum Plate Characters

9

Maximum number of characters that the license plate may have (4-12)

Multiline Reading

☒

Read plates with 2 lines

License Plate Color Contrast

Dark font on light background

Plate color contrast. 1:dark font on light background, 2:light font on dark background, 3: both. Tip: do not use both unless it is really necessary

Fig. 17: License Plates

Minimum Plate Characters: Minimum number of characters that the license plate may have (4-12).

Maximum Plate Characters: Maximum number of characters that the license plate may have (4-12).

Multiline Reading: set if license plates with 2 lines should be read.

Maximum Character Height: the maximum height is about 20-30 pixels.

License Plate Color Contrast: The following options are available:

- dark font on light background
- light font on dark background
- both

NOTE! Do not use both unless it is really necessary.

Environment

In the Environment tab you can set parameters in respect the environmental situation the license plates are to be analyzed.

Environment		
Same Plate Delay	60	Minimum elapsed time to report the same plate twice (seconds)
Same Plate Character Distance	2	Maximum difference between two plates to be considered as the same (Levenshtein distance)
Maximum Slope Angle	20	License plate maximum slope angle (0-30)
Maximum Recognition Period	500	Maximum time the OCR can spend reading one or more times the same plate (multiple samples) until making its final decision (ms)
Minimum Plates Occurrences	1	Minimum number of times the plate should be read within the "Max Recognition Period"
Maximum Plates Occurrences	5	Maximum number of times the plate should be read within the "Max Recognition Period". If the OCR reaches this number before the maximum recognition period expires, it will force out the plate result
Reported Image	First	Define which image from the pool is returned with the metadata

Fig. 18: Environment

Same Plate Delay: Minimum elapsed time in seconds to report the same plate twice. This is to prevent multiple reporting of the same plate in situations when the traffic is slow or stationary.

NOTE! If a vehicle stops at a barrier and the plate is reported but the car doesn't move for 30 seconds, then this delay should be set to say 60 seconds or more to prevent a duplicate read.

NOTE! When using triggered mode, it is recommended that you set the delay to 0 seconds.

Same Plate Character Distance: Set the number of characters that two readings of the same license plate must differ by to be considered different. The camera is capable of reading a plate several times as it passes through the field of view. If one character is misread on one of the reads, then by setting this value to 2 then both reads will contribute towards the reported plate text.

Maximum Slope Angle: Set the angle of slope of a plate that the engine should attempt to read up to (0-30°).

Maximum Recognition Period: Maximum time the OCR can spend reading one or more times the same plate (multiple samples) until making its final decision (ms)

Minimum Plates Occurrences: Minimum number of times the plate should be read within the "Max Recognition Period" before being reported.

Maximum Plates Occurrences: Set the maximum number of times that a plate should be read before being reported (this may happen before the timeout).

Reported Image: Define which image from the pool is returned with the meta data. A plate is normally read several times as it passes through the camera’s field of view. You may want to use the latest (last) image for oncoming traffic and the first image for vehicles moving away from the camera.

OCR

In the OCR (Optical Character Recognition) tab you can set parameters to ensure the best possible recognition results.

OCR

Minimum Global Confidence

80

Minimum global confidence 1-100, plates under this confidence will be discarded

Minimum Character Confidence

70

Minimum character confidence 1-100, characters under this confidence will be discarded

Analytics Complexity

Medium

Tip: Set low if you're losing plates because lack of performance, Medium: default/normal scenario conditions, High: low quality video

Find Plate Complexity

Low

Tip: Set Low for normal scenarios with one or two lanes, Medium: if you notice missing plates on a normal scenario, High: low quality video with stopped vehicles only (heavy processing)

Fig. 19: OCR

Minimum Global Confidence: Set the minimum confidence level that the whole license plate read must meet in order to be accepted. The global confidence is the average of all individual characters’ confidences. The recommended value is 70. Set lower if you see some plates in very bad condition but want to read them.

NOTE! Setting the Minimum Global Confidence too low will cause the OCR engine attempt to read other items such as vehicle signage etc.

Minimum character Confidence: Set the minimum confidence level that a single character must meet in order to be accepted. The recommended value is 50.

NOTE! In regions with open grammars such as the USA keep these two values high, e.g. 90-80 respectively. Higher values mean a lower probability of false positives and a lower probability of missing plates.

Analytics Complexity: This is the complexity of the analytics to be applied during the ALPR Engine's stage of plate reading. Set this according to the OCR mode and type of traffic expected. There are three options.

Low: Recommended for very high-speed traffic where the OCR needs to work faster and your preference is for plate detection over perfect recognition.

Medium (Default) Recommended when the OCR mode is set to free-flow.

High: Recommended when the OCR mode is set to signal (triggered).

CAUTION! Higher complexities give more accurate reading but make the ALPR engine run slower.

Find Plate Complexity: This is the complexity of the analytics to be applied during the ALPR Engine's stage of plate finding. Set this to one of the following three values:

Low: apply up to 3 levels

Medium: apply up to 8 levels

High: apply up to 12 levels

CAUTION! Higher complexities give more accurate reading but make the ALPR engine run slower.

MMC

In the MMC (Make, Model, Color) tab you can set parameters to define the detection results.

MMC	
Analytic	<div>Both</div> <div>MMC: Enable Make, Model and Color detection. Classification: Enable classification (Car, Truck, Van, Motorbike)</div>
Confidence	<div>50</div> <div>Minimum confidence</div>

Fig. 20: OCR

Analytic: The following options are available

None: Select to disable MMC and Classification

MMC: Select to enable Make, Model and Color detection.

Classification: Select to enable classification (Car, Truck, Van, Motorbike)

Both(Default) Select to enable enable MMC and Classification

Confidence: Set the minimum confidence level that the MMC and Classification analysis must meet in order to be accepted. The recommended value is 50 (default). Set lower if you see some vehicles in bad environment conditions but want to read them.

Reporting

Vaxtor LPR incl. Vehicle Make, Model, Color and Class App is able to output all plate reads in real time using a variety of standard protocols so that the plate reads can be accepted remotely by a variety of programs including Vaxtor's powerful Back Office - Helix, which can accept and store plate reads in real time from hundreds cameras.

By selecting one of the listed protocols, a sub-menu will appear with fields for setting up parameters such as remote IP addresses etc.


Reporting 		
Retry Notifications	<input checked="" type="checkbox"/>	Retry failed notifications (Helix-6 and JSON only)
Retry Period	<input type="text" value="1"/>	Amount of seconds between notification retries
Send Test	<input type="checkbox"/>	Send a fake read (TEST) when settings are stored or when the camera is started
Text Overlay		
Overlay Template	<input type="text" value="\$date\$ - \$plateutf8\$"/>	Template to use on the overlay, check the manual for available keywords
Fade out timer	<input type="text" value="0"/>	Amount of seconds that the overlay will be visible or 0 to make it perpetual
Show plate image	<input type="checkbox"/>	Display a small image with the plate number detected
Image position (x)	<input type="text" value="5"/>	Coordinate position for the image (x)
Image position (y)	<input type="text" value="50"/>	Coordinate position for the image (y)
MxMessage		
MxMessage Template	<input type="text" value=""/> {"area": "\$roid\$", "direction": "\$direc"}}	Defines the template of customized part of the MxMessage. Check the manual for available keywords
Subpath	<input type="text"/>	
MOBOTIX HUB Analytic Event		
Enable	<input type="checkbox"/>	Enable MOBOTIX HUB Analytic Event reporting
MOBOTIX HUB Transaction		
Enable	<input type="checkbox"/>	Enable MOBOTIX HUB Transaction reporting
Vaxtor Helix-6		
Enable	<input type="checkbox"/>	Send all results to the configured Helix-6 server
JSON		
Enable	<input type="checkbox"/>	Enable JSON HTTP/HTTPS POST reporting
XML		
Enable	<input type="checkbox"/>	Enable XML HTTP/HTTPS POST reporting
Milestone Analytic Event		
Enable	<input type="checkbox"/>	Enable analytic event reporting
TCP Server		
Enable	<input type="checkbox"/>	Enable TCP server reporting
FTP		
Enable	<input type="checkbox"/>	Enable FTP reporting
Network Optix		
Enable	<input type="checkbox"/>	Enable Network Optix reporting
Genetec Security Center		
Enable	<input type="checkbox"/>	Enable Genetec reporting
Genetec LPR Plugin		
Enable	<input type="checkbox"/>	Enable Genetec LPR Plugin reporting
UTMC		
Enable	<input type="checkbox"/>	Enable UTMC reporting

Fig. 21: Reporting

Retry notifications: Check to retry failed notifications (Helix-6 and JSON only).

Send test: Check to send a fake read (TEST) when settings are stored or when the camera is started.

Text Overlay

Overlay Template: Define template to use on the overlay. Check the [Template Fields](#) for available keywords.

MxMessage

MxMessage Template: Define template of customized part of the MxMessage . Check the [Template Fields](#) for available keywords.

Subpath: Define a subpath for the MxMessage. Check the [Template Fields](#) for available keywords.

Vaxtor Helix-6 : Helix-6 protocol is an encrypted version of the Vaxtor protocol.

Enable : Check to send all results to the configured Helix-6 server.

JSON : JSON is a compact data format in an easy-to-read text form for data exchange between applications.

Enable : Check to enable JSON HTTP/HTTPS POST reporting.

Variables / Template fields

Vaxtor LPR incl. Vehicle Make, Model, Color and Class App only reserved variables

Variable	Explanation
\$category\$	License plate category for countries that support it
\$country\$:	3 letter country code
\$direction\$	Enumerate with the vehicle direction (0: Unknown, 1: Towards, 2: Away, 3: Stopped)
\$multiplate\$	Amount of times that the license plate has been read before reporting
\$plate\$:	License plate text / number
\$plateimage\$	Plate crop JPEG image encoded in base64
\$platejpegsize\$	JPEG size in bytes
\$plateutf8\$:	License plate text / number in UTF8 format
\$processingtime\$	Processing time in milliseconds
\$roiid\$	Recognition Area ID where the license plate number is found
\$state\$	License plate state (for US license plates only)


Shared reserved variables

Variable	Description
\$absolutebottom\$	Absolute bottom position of the code 0..1 with 2 decimal places
\$absoluteleft\$	Absolute left position of the code 0..1 with 2 decimal places
\$absoluteright\$	Absolute right position of the code 0..1 with 2 decimal places
\$absolutetop\$	Absolute top position of the code 0..1 with 2 decimal places
\$blacklist\$	If the code is on the black list, the text in the 'if clause' will be displayed
\$bottom\$	Bottom coordinate for the code on the image (pixels)
\$charheight\$	Average charheight (pixels)
\$codeimage\$	Code cropped image
\$codeimagesize\$	Code cropped image size in bytes
\$confidence\$	Global confidence (0-100)
\$date\$	Timestamp in ISO8601 format
\$etx\$	
\$country\$:	3 letter country code
\$day\$	UTC day
\$height\$	OCR image height
\$hour\$	UTC hour
\$image\$	JPEG encoded in base64
\$imagesize\$	Size of saved complete image
\$ip\$	Camera IP address
\$left\$	Left coordinate for the code on the image (pixels)
\$localday\$	Camera local time day
\$locahour\$	Camera local time hours
\$localmin\$	Camera local time minutes
\$localmonth\$	Camera local time month
\$localsec\$	Camera local time seconds
\$localyear\$	Camera local time year
\$min\$	UTC minute

Variable	Description
\$month\$	UTC month
\$nolist\$	If the code is not on a list, the test in the 'if clause' will be displayed
\$ocrtime\$	OCR analytic time in milliseconds
\$overviewimage\$	Overview JPEG image encoded in base64\$month\$
\$overviewimagesize\$	Overview image size in bytes
\$patch\$	JPEG of the plate crop image encoded in base64
\$patchsizeinbytes\$	Size of the image of recognised text (the patch image)
\$processingtime\$	Processing time in milliseconds
\$readconfidence\$	Global confidence value
\$right\$	Right coordinate for the code on the image (pixels)
\$sec\$	UTC seconds
\$sensor\$	Sensor (0, 1)
\$signalid\$	ID string specified when a read is triggered via http request
\$stx\$	Character control STX in HEX for Start of Text (02)
\$timestamp\$	yyyy-MM-ddTHH:mm:sszzz
\$top\$	Top coordinate for the code on the image (pixels)
\$width\$	OCR image width
\$whitelist\$	If the code is on the white list, the text in the 'if clause' will be displayed
\$year\$	UTC year

Advanced

In this section you find useful tools for calibration and trouble shooting.

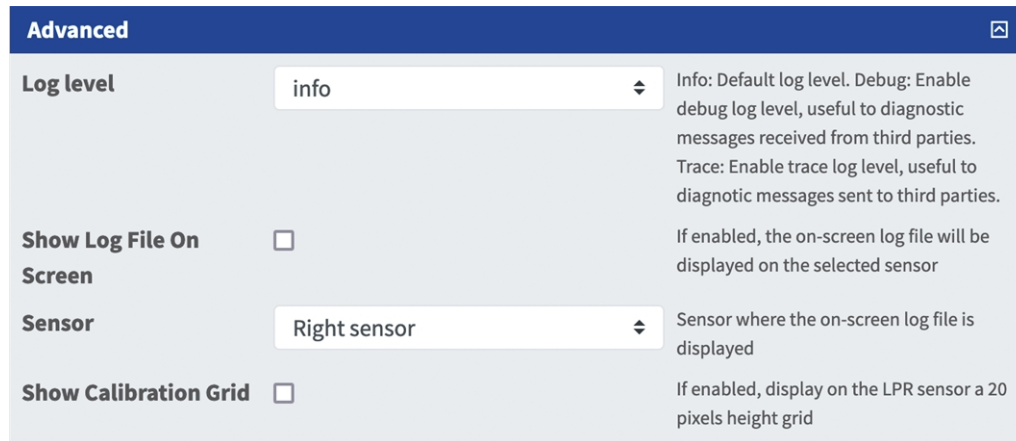

The image shows a configuration dialog box titled "Advanced" with a close button in the top right corner. It contains four settings:

- Log level:** A dropdown menu currently set to "info". To its right is explanatory text: "Info: Default log level. Debug: Enable debug log level, useful to diagnostic messages received from third parties. Trace: Enable trace log level, useful to diagnostic messages sent to third parties."
- Show Log File On Screen:** A checkbox that is currently unchecked. To its right is the text: "If enabled, the on-screen log file will be displayed on the selected sensor".
- Sensor:** A dropdown menu currently set to "Right sensor". To its right is the text: "Sensor where the on-screen log file is displayed".
- Show Calibration Grid:** A checkbox that is currently unchecked. To its right is the text: "If enabled, display on the LPR sensor a 20 pixels height grid".

Fig. 22: Advanced

Log level: Select a debug level to generate a log file, which can be helpful e.g. for trouble shooting.

Info: Default log level

Trace: Select e. g. for diagnostic messages received from third parties

Debug: Select for complete log files for debug purposes

Show log file on screen: Check to display the on-screen log file on the selected sensor

Sensor: Select the sensor on which the on-screen log file is displayed.

Storing the Configuration

To store the configuration you have the following options:



Fig. 23: Storing the configuration

- Click on the **Set** button to activate your settings and to save them until the next reboot of the camera.
- Click on the **Factory** button to load the factory defaults for this dialog (this button may not be present in all dialogs).
- Click on the **Restore** button to undo your most recent changes that have not been stored in the camera permanently.
- Click on the **Close** button to close the dialog. While closing the dialog, the system checks the entire configuration for changes. If changes are detected, you will be asked if you would like to store the entire configuration permanently.

After successfully saving the configuration, the event and meta data are automatically sent to the camera in case of an event.

MxMessageSystem

What is MxMessageSystem?

MxMessageSystem is a communication system based on name oriented messages. This means that a message must have a unique name with a maximum length of 32 bytes.

Each participant can send and receive messages. MOBOTIX cameras can also forward messages within the local network. This way, MxMessages can be distributed over the entire local network (see Message Area: Global).

For example, a MOBOTIX 7 series camera can exchange a MxMessage generated by a camera app with an Mx6 camera that does not support certified MOBOTIX apps.

Facts about MxMessages

- 128-bit encryption ensures privacy and security of message content.
- MxMessages can be distributed from any camera of the Mx6 and 7 series.
- The message range can be defined individually for each MxMessage.
 - **Local:** Camera expects a MxMessage within its own camera system (e.g. through a Certified App).
 - **Global:** the camera expects a MxMessage that is distributed in the local network by another MxMessage device (e.g. another camera of the 7 series equipped with a certified MOBOTIX app).
- Actions that the recipients are to perform are configured individually for each participant of the MxMessageSystem.

MxMessageSystem: Processing the automatically generated app event

Checking automatically generated app events

NOTE! After successfully activating the app (see [Activation of the Certified App Interface, p. 25](#)), a generic message event for this specific app is automatically generated in the camera.

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. VaxALPRMMC).

Environment Events		<input checked="" type="checkbox"/>
Image Analysis Events		<input checked="" type="checkbox"/>
Internal Events		<input checked="" type="checkbox"/>
Message Events		<input checked="" type="checkbox"/>
ColorRecognition	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete Edit... 1
FFLPR_MMCR	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
MxActivitySensor	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
MxAnalytics	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
ObjRec	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
VaxALPR	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
VaxALPRMMC	MxMessageSystem	<input type="checkbox"/> Inactive <input type="checkbox"/> Delete
Meta Events		<input checked="" type="checkbox"/>
Signal Events		<input checked="" type="checkbox"/>
Time Events		<input checked="" type="checkbox"/>

Fig. 24: Example: Generic message event from Vaxtor LPR incl. Vehicle Make, Model, Color and Class App

2. Click **Edit** to display a selection of all configured message events.

VaxALPRMMC

☐ Inactive ☐ Delete

5

Event Dead Time:
Time to wait [0..3600 s] before the event can trigger anew.

Event Sensor Type

☐ IP Receive ☒ MxMessageSystem

Event Sensor Type:
Choose the message sensor.

Event on receiving a message from the MxMessageSystem.

VaxALPRMMC

Message Name:
Defines an MxMessageSystem name to wait for.

Local

Message Range:
There are two different ranges of message distribution:
Global: across all cameras within the current LAN.
Local: camera internal.

No Filter

Filter Message Content:
Optionally choose how to ignore messages containing *Filter Value*. Select *No Filter* to trigger on any message with defined *Message Name*.

Add new profile

Fig. 25: Example: Generic message event details - no filter

Action handling - Configuration of an action group

CAUTION!

To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)://<Camera IP address>/control/settings](http(s)://<Camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<Camera IP address>/control/actions](http(s)://<Camera IP address>/control/actions)).

The screenshot shows a configuration window for 'VaxALPRMMC'. At the top, there are buttons for 'Inactive' and 'Delete'. Below this, a dropdown menu is set to '5'. To the right, the 'Event Dead Time' is explained as 'Time to wait [0..3600 s] before the event can trigger anew.' The 'Event Sensor Type' section has two radio buttons: 'IP Receive' and 'MxMessageSystem' (which is selected). To the right, it says 'Event Sensor Type: Choose the message sensor.' A blue box contains the text 'Event on receiving a message from the MxMessageSystem.' Below this, there are three more dropdown menus: 'VaxALPRMMC' for 'Message Name' (defined as 'Defines an MxMessageSystem name to wait for.'), 'Local' for 'Message Range' (with a note: 'There are two different ranges of message distribution: Global: across all cameras within the current LAN. Local: camera internal.'), and 'No Filter' for 'Filter Message Content' (with a note: 'Optionally choose how to ignore messages containing Filter Value. Select No Filter to trigger on any message with defined Message Name.'). At the bottom left is a button 'Add new profile'.

Fig. 26: Defining Action Groups

- Click **Add new group** and give a meaningful name.
- Click **Edit**, to configure the group.

The screenshot shows the 'Action Group Overview' for 'D71 mx10-32-75-149'. At the top, there are icons for help, info, add, and remove. Below this, there are two entries: 'VisualAlarm' and 'VxLPRMMC'. The 'VxLPRMMC' entry is highlighted in blue and has a 'Delete' button. Below the entries, there are three columns: 'Arming', 'Events & Actions', and 'Edit'. Under 'Arming', there are two dropdown menus: 'Enabled' and '(No time table)'. Under 'Events & Actions', there is a minus sign. Under 'Edit', there is an 'Edit...' button. At the bottom left is a button 'Add new group'.

Fig. 27: Configuring an Action Group

1. Enable **Arming** of the Action Group.
2. Select your message event in the **Event selection** list. To select multiple events, press the shift key.
3. Click **Add new Action**.
4. Select a proper action from list **Action Type and Profile**.

Actions	Value	Explanation
Action 1	Play Sound: StandardSounds	Action Type and Profile: Select the Action Profile to be executed.
<input type="checkbox"/> Delete	0	Action Timeout or Duration: If this action runs longer than the time specified [0..3600 s], it is aborted and returns an error; 0 to deactivate. For <i>Image Profile</i> action, this is the duration and no error returns.
<div>Add new action</div>		

Fig. 28: Select Action Type- and Profile

NOTE!

If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

NOTE!

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

- 5. Click on the **Set** button at the end of the dialog box to confirm the settings.

Action settings - Configuration of the camera recordings

- 1. In the camera web interface, open: **Setup Menu / Event Control / Recording**([http\(s\)/<Camera IP address>/control/recording](http(s)/<Camera IP address>/control/recording)).

General Settings	Value	Explanation
Arming	Enabled	Arm Recording: Controls camera recording. <i>Enabled:</i> activate recording. <i>Off:</i> deactivate recording. <i>SI:</i> recording armed by signal input. <i>CS:</i> recording armed by custom signal as defined in General Event Settings . <i>From Master:</i> copies recording arming state from master camera.
	(No time table)	Time Table Profile: Time table profile for time-controlled recording (Time Tables).
Storage Settings	Value	Explanation
Recording (REC)	Event Recording	Recording Mode: Type of event and story recording. <i>Snap Shot Recording:</i> stores single JPEG pictures. <i>Event Recording:</i> stores stream files for every event using MxPEG codec. <i>Continuous Recording:</i> continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using <i>Start Recording</i> , <i>Retrigger Recording</i> and <i>Stop Recording</i> .
Start Recording	(Image Analysis: VM2) Message: MxAnalytics Message: VaxALPRMMC (Signal: SI) Signal: UC	Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be <i>activated</i> first.
	Max fps	Event Frame Rate: Recording speed if an event is detected, in frames per second.
	0	Recording Time Before Event: Additional recording time before an event in seconds.
	10 s	Recording Time: Time to include in recorded stream after an event has occurred.

Buttons: Set, Factory, Restore, Close, More

Fig. 29: Configuration of camera recording settings

2. Activate **Arm Recording**.
3. Under **Storage Settings / Recording (REC)** select a **Recording mode**. The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
4. In list **Start recording** select the message event just created.
5. Click on the **Set** button at the end of the dialog box to confirm the settings.
6. Click on **Close** to save your settings permanently.

NOTE!

Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Action handling - Configuration of an action group

CAUTION! To use events, trigger action groups or record images the general arming of the camera must be enabled ([http\(s\)://<Camera IP address>/control/settings](http(s)://<Camera IP address>/control/settings))

An action group defines which action(s) is (are) triggered by the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App event.

1. In the camera web interface, open: **Setup Menu / Action Group Overview** ([http\(s\)://<Camera IP address>/control/actions](http(s)://<Camera IP address>/control/actions)).

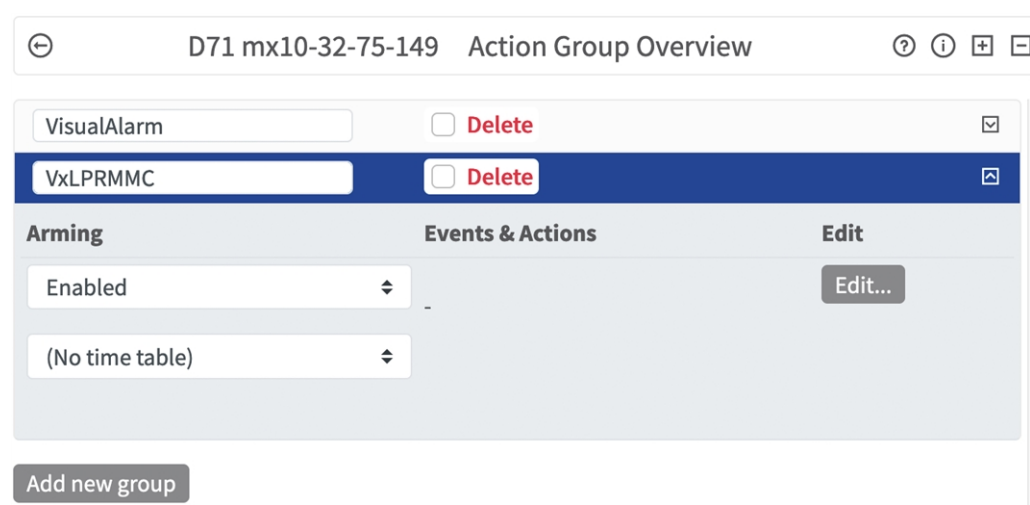


Fig. 30: Defining Action Groups

2. Click **Add new group**① and give a meaningful name.
3. Click **Edit**② , to configure the group.

⊖

D71 mx10-32-75-149 Action Group Details

ⓘ ⓘ

General Settings	Value	Explanation
Action Group	VxLPRMMC	Name: The name is purely informational.
	Enabled ⓘ	Arming: Controls this action group: <i>Enabled:</i> activate the group. <i>Off:</i> deactivate the group. <i>SI:</i> group armed by signal input. <i>CS:</i> group armed by custom signal as defined in General Event Settings .
	(No time table)	Time Table: Time table for this action profile (Time Tables).
Event Selection	<div> <div>Message: MxAnalytics</div> <div>Message: ObjRec</div> <div>Message: VaxALPR</div> <div>Message: VaxALPRMMC ⓘ</div> <div>(Signal: SI)</div> </div>	Event Selection: Select the events which will trigger the actions below. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first.
Action Details	5	Action Deadtime: Time to wait [0..3600 s] before a new action can take place.
	Simultaneously	Action Chaining: Choose how the status of each subaction influences the execution of all others. <i>Simultaneously:</i> All actions are executed simultaneously. <i>Simultaneously until first success:</i> Simultaneous execution, but as soon as one action succeeds (i.e. has been completed or the phone is picked up), all others are terminated. <i>Consecutively:</i> All actions are executed in the specified order. <i>Consecutively until first success:</i> Consecutive execution, but as soon as one action succeeds, the following actions are not executed. <i>Consecutively until first failure:</i> Consecutive execution, but as soon as one action fails, the following actions are not executed.
Actions	Value	Explanation
Add new action ⓘ		

Fig. 31: Configuring an Action Group

4. Enable **Arming** ⓘ of the Action Group.
5. Select your message event in the **Event Selection** list ⓘ . To select multiple events, hold the shift key.
6. Click **Add new Action** ⓘ .
7. Select a proper action from list **Action Type and Profile** ⓘ .

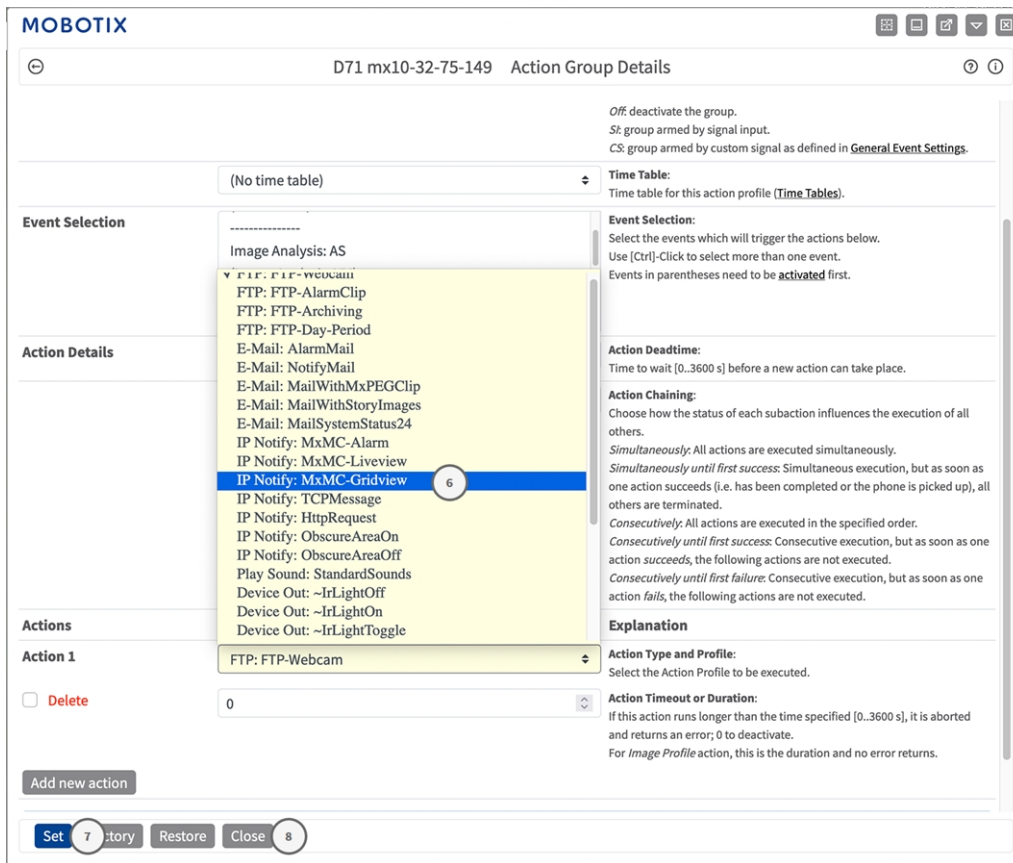


Fig. 32: Select Action Type- and Profile

NOTE! If the required action profile is not yet available, you can create a new profile in the Admin Menu sections "MxMessageSystem", "Transfer Profiles" and "Audio and VoIP Telephony".

If necessary, you can add further actions by clicking the button again. In this case, please make sure that the "action chaining" is configured correctly (e.g. at the same time).

8. Click on the **Set** ⑦ button at the end of the dialog box to confirm the settings.
9. Click on **Close** ⑧ to save your settings permanently.

Action settings - Configuration of the camera recordings

1. Go to **Setup Menu / Event Control / Recording** ([http\(s\)/<Camera IP address>/control/recording](http(s)/<Camera IP address>/control/recording)).

Value	Explanation
Arming: Enabled (1)	Arm Recording: Controls camera recording. <i>Enabled:</i> activate recording. <i>Off:</i> deactivate recording. <i>St:</i> recording armed by signal input. <i>CS:</i> recording armed by custom signal as defined in General Event Settings . <i>From Master:</i> copies recording arming state from master camera.
Time Table Profile: (No time table)	Time Table Profile: Time table profile for time-controlled recording (Time Tables).
Storage Settings: Recording (REC): Event Recording (2)	Recording Mode: Type of event and story recording. <i>Snap Shot Recording:</i> stores single JPEG pictures. <i>Event Recording:</i> stores stream files for every event using MxPEG codec. <i>Continuous Recording:</i> continuously streams video data to stream files using MxPEG codec. Events can be recorded with a higher frame rate using <i>Start Recording</i> , <i>Retrigger Recording</i> and <i>Stop Recording</i> .
Include audio	Record Audio Data: Store audio data in stream file if available. Enable and configure microphone .
Start Recording: Message: VaxALPRMMC (3)	Start Recording: Select the events which will start recording. Use [Ctrl]-Click to select more than one event. Events in parentheses need to be activated first.
Max fps: 0	Event Frame Rate: Recording speed if an event is detected, in frames per second.
Recording Time Before Event: 10 s	Recording Time Before Event: Additional recording time before an event in seconds.

Fig. 33: Configuration of camera recording settings


2. Activate **Arm Recording** (1) .
3. Under **Storage Settings / Recording (REC)** select a **Recording mode** (2) . The following modes are available:
 - Snap Shot Recording
 - Event Recording
 - Continuous Recording
4. In list **Start recording** (3) select the message event just created.
5. Click on the **Set** (4) button at the end of the dialog box to confirm the settings.
6. Click on **Close** (5) to save your settings permanently.

NOTE! Alternatively, you can save your settings in the Admin menu under Configuration / Save current configuration to permanent memory.

Advanced Configuration: Processing the meta data transmitted by apps

Meta data transferred within the MxMessageSystem

For each event, the app also transfers meta data to the camera. This data is sent in the form of a JSON schema within a MxMessage.

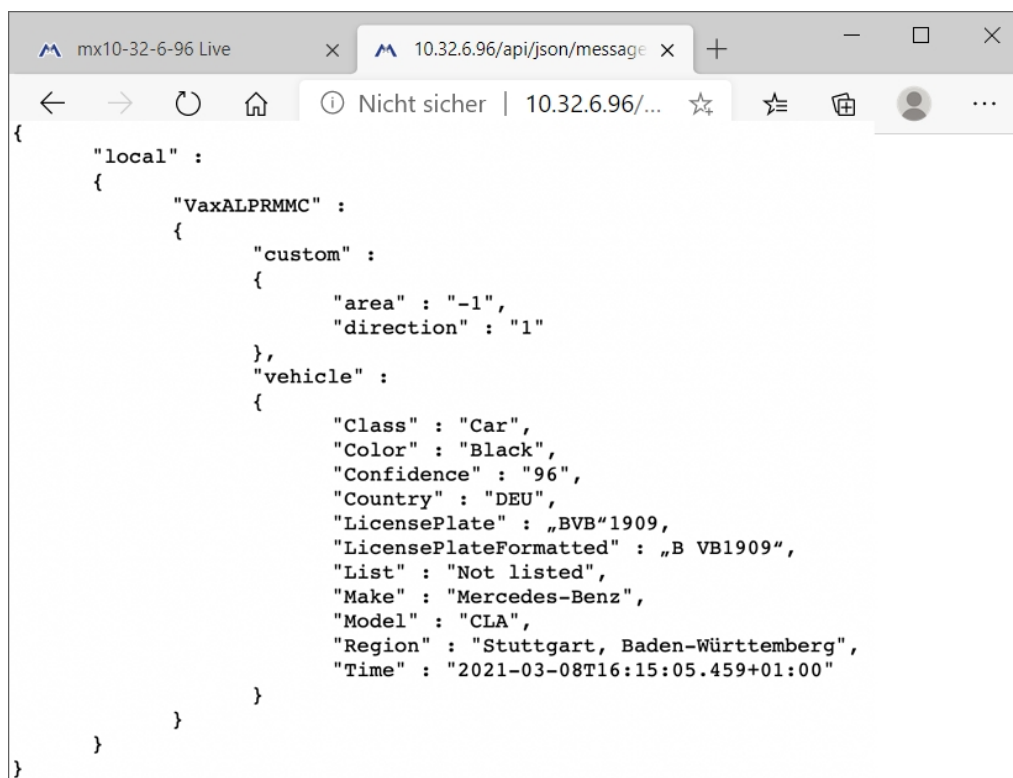A screenshot of a web browser window. The address bar shows the URL '10.32.6.96/api/json/message'. The page content displays a JSON object representing a message. The JSON structure is as follows:

```
{  "local": {    "VaxALPRMMC": {      "custom": {        "area": "-1",        "direction": "1"      },      "vehicle": {        "Class": "Car",        "Color": "Black",        "Confidence": "96",        "Country": "DEU",        "LicensePlate": "„BVB“1909",        "LicensePlateFormatted": "„B VB1909“,",        "List": "Not listed",        "Make": "Mercedes-Benz",        "Model": "CLA",        "Region": "Stuttgart, Baden-Württemberg",        "Time": "2021-03-08T16:15:05.459+01:00"      }    }  }
```

Fig. 34: Example: Meta data transmitted within a MxMessage of the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App

NOTE! To view the meta data structure of the last App event, enter the following URL in the address bar of your browser: [http\(s\)/IPAdresseOfYourCamera/api/json/messages](http(s)/IPAdresseOfYourCamera/api/json/messages)

Creating a Custom Message Event

1. Go to **Setup-Menu / Event Control / Event Overview**. In section **Message Events** the automatically generated message event profile is named after the application (e. g. VaxLPRMMC).

Environment Events				<input checked="" type="checkbox"/>
Image Analysis Events				<input checked="" type="checkbox"/>
Internal Events				<input checked="" type="checkbox"/>
Message Events				<input checked="" type="checkbox"/>
ColorRecognition	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete	Edit... 1
FFLPR_MMCR	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete	
MxActivitySensor	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete	
MxAnalytics	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete	
ObjRec	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete	
VaxALPR	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete	
VaxALPRMMC	MxMessageSystem	<input type="checkbox"/> Inactive	<input type="checkbox"/> Delete	
Meta Events				<input checked="" type="checkbox"/>
Signal Events				<input checked="" type="checkbox"/>
Time Events				<input checked="" type="checkbox"/>

Fig. 35: Example: Generic message event from Vaxtor LPR incl. Vehicle Make, Model, Color and Class App

- Click **Edit** ① to display a selection of all configured message events.

MOBOTIX S74 mx10-32-24-156 Message Events

VaxALPR ① Inactive Delete

5

Event Sensor Type

☐ IP Receive

☒ MxMessageSystem

Event on receiving a message from the MxMessageSystem.

VaxALPR.plate.LicensePlate ②

Local

JSON Comparison

"BVB1909" ③

Event Dead Time:
Time to wait [0..3600 s] before the event can trigger anew.

Event Sensor Type:
Choose the message sensor.

Message Name:
Defines an MxMessageSystem name to wait for.

Message Range:
There are two different ranges of message distribution:
Global: across all cameras within the current LAN.
Local: camera internal.

Filter Message Content:
Optionally choose how to ignore messages containing *Filter Value*. Select *No Filter* to trigger on any message with defined *Message Name*.

Filter Value:
Define either a valid reference value as a string (in JSON format) without line breaks, or an extended regular expression. Open help for examples. This parameter allows using [variables](#).

FFLPRAM Inactive Delete

5

Event Sensor Type

☐ IP Receive

☒ MxMessageSystem

Event on receiving a message from the MxMessageSystem

Set ④ Factory Restore Close

Fig. 36: Example: Unique license plate event

- Click on the event (e. g. VaxALPRMMC) s to open the event settings.
- Configure the parameters of the event profile as follows:
 - **Profile Name:** Enter a meaningful profile name that illustrates the purpose of the profile.
 - **Message Name:** Enter the "Message Name" according to the event documentation of the corresponding app (see [Examples for message names and filter values of the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App](#), p. 55).
 - **Message Range:**
 - Local: Default settings for the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App
 - Global: (MxMessage is forwarded from another MOBOTIX camera in the local network.
 - **Filter Message Content:**
 - **No Filter:** Trigger on any message according to the defined **Message Name**.
 - **JSON Comparison:** Select if filter values are to be defined in JSON format.
 - **Regular Expression:** Select if filter values are to be defined as regular expression.
 - **Filter Value:** see [Examples for message names and filter values of the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App](#), p. 55

CAUTION! “Filter Value“ is used to differentiate the MxMessages of an app / bundle. Use this entry to benefit from individual event types of the apps (if available).

Choose “No Filter” if you want to use all incoming MxMessages as generic event of the related app.

- Click on the **Set** button at the end of the dialog box to confirm the settings.

Examples for message names and filter values of the Vaxtor LPR incl. Vehicle Make, Model, Color and Class App

	MxMessage-Name	Filter value
Generic Event	VaxALPRMMC	
LPR White list Event	VaxALPRMMC.vehicle.List	“White list”
LPR Black list Event	VaxALPRMMC.vehicle.List	“Black list”
LPR Not listed Event	VaxALPRMMC.vehicle.List	“Not listed”
Unique license plate event	VaxALPRMMC.plate.LicensePlate	License plate code as “STRING”; e.g. “BVB1909” (compare Meta data transferred within the MxMessageSystem , p. 52)
Country Event	VaxALPRMMC.vehicle.Country	Country Code e.g. “DEU” for Germany
Incoming Vehicle Event	VaxALPRMMC.custom.direction	“1”
Outgoing Vehicle Event	VaxALPRMMC.custom.direction	“2”



[EN_11/22](#)

MOBOTIX AG • Kaiserstrasse • D-67722 Langmeil • Tel.: +49 6302 9816-103 • sales@mobotix.com • www.mobotix.com

MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX AG 2021