


Quick Installation

MOBOTIX M73

© 2026 MOBOTIX AG

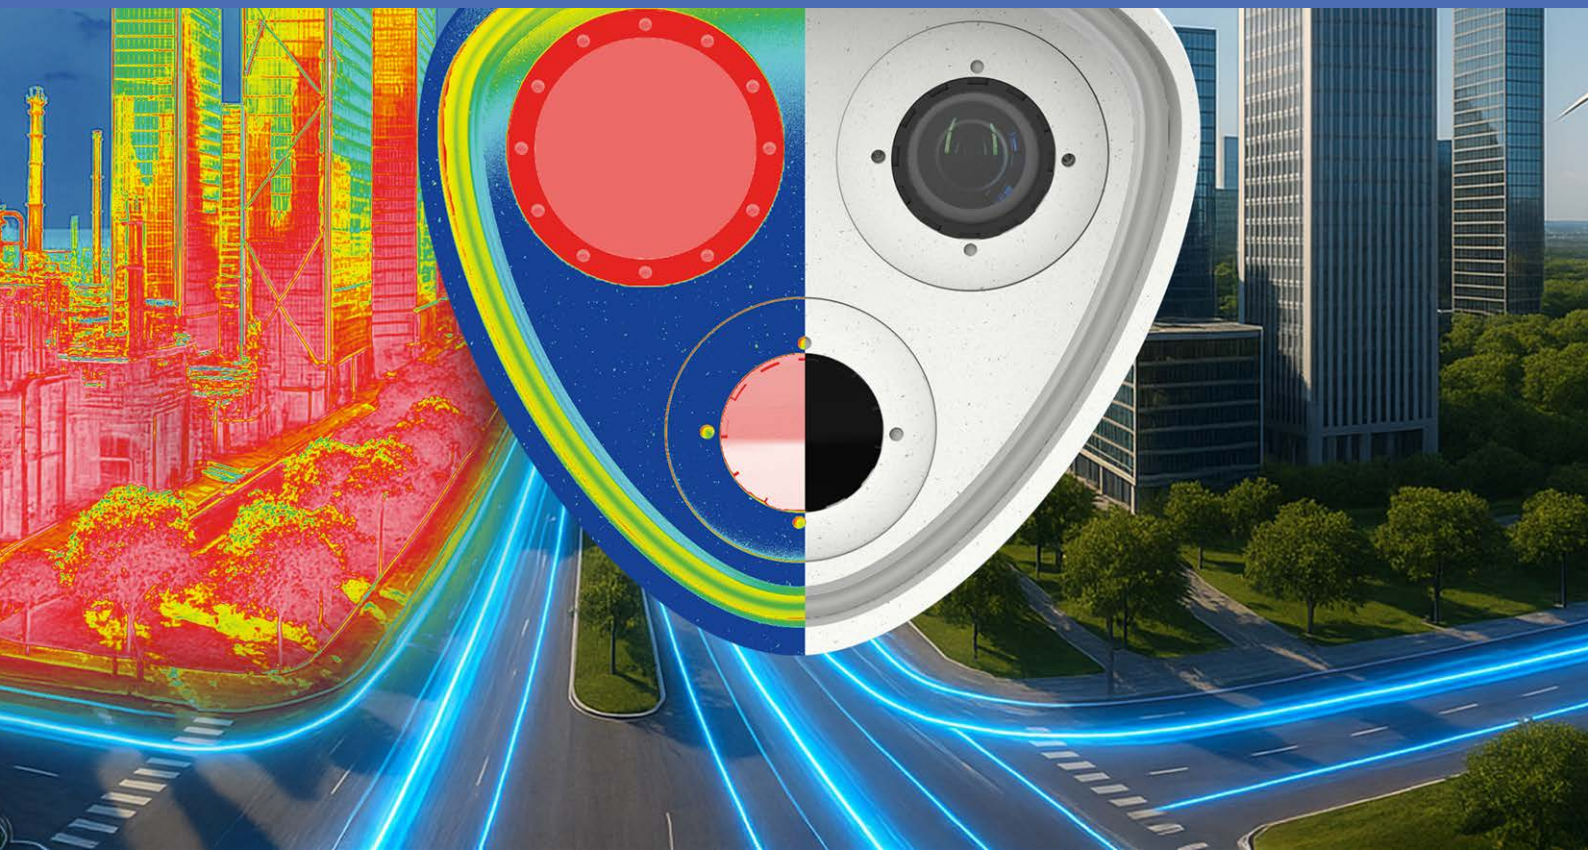

BeyondHumanVision

MOBOTIX

V8.27, 4/23/2026, Order Code: Mx-M73(A/B)

Table of Contents

Table of Contents	2
Before You Start	5
Support	6
MOBOTIX Support	6
MOBOTIX eCampus	6
MOBOTIX Community	6
Safety Notes	7
Legal Notes	8
Notes on System Security	11
Drilling Template	13
Drilling Template PDF	14
Scope of Delivery	17
M73: Scope of Delivery	18
Connector Box RJ45: Scope of Delivery	19
Connector Box LSA: Scope of Delivery	20
Mounting Supplies: Scope of Delivery	21
Technical Specifications	23
Order Information	24
Hardware	24
Power Consumption	26
Image and Video Properties	28
General Software Features	28
Video Analysis	29
Video Management Software	30
Sensor Modules	30
Dimensions of Sensor Modules	30
Supported Image Sensor Modules	31
Supported Thermal Sensor Modules (Pre-mounted on Thermal Front Plate)	32
Features Thermal Image Sensors – B Models	33
Features Thermal Image Sensors – C Models	35
Features Thermal Image Sensors - ECO Models	36
Functional Modules	36
Connector Box LSA/Connector Box RJ45	37
Dimensions	39
Mounting	41
Before Mounting the Camera	42
Protective Measures	43
Installing Sensor Modules	44
Opening the Module Housing	49
Installing the Security Clips	51
Closing the Module Housing	52
Installing a Thermal Front Plate	54

Removing the Security Clips	55
Removing Installed Sensor Modules	56
Installing the Sensor Modules to the Thermal Front Plate	59
Installing Security Screws	62
Mounting Options	64
Tiltability when mounted	64
Mounting to a Wall	64
Mounting to a Pole	68
Connecting the camera	73
Connecting the Camera to the Network	74
Terminal Connectors	83
Finishing the Installation of the Camera	85
Operating the Camera	91
Getting Started	91
LED states	92
Boot Options of the Camera	93
Initial Camera Setup	95
Check the Preconditions	95
Access the Camera	95
Find the "Real" IP Address of the Camera	98
Network Settings on the Camera in MxMC	98
Focusing the TELE 15° Sensor Module	100
Camera Software in the Browser	103
Access the Camera in the Web Browser	104
Basic Settings	105
Configuring Sensor Modules	106
Maintenance	109
Opening the Camera Body	109
Replacing the microSD card	112
Cleaning the Camera and Lenses	113

Before You Start

This section contains the following information:

Support	6
Safety Notes	7
Legal Notes	8

Support

MOBOTIX Support

If you need technical support, please contact your MOBOTIX dealer. If your dealer cannot help you, he will contact the support channel to get an answer for you as quickly as possible.

If you have internet access, you can open the MOBOTIX help desk to find additional information and software updates.

Please visit www.mobotix.com > [Services](#) > [Help Desk](#).



MOBOTIX eCampus

The MOBOTIX eCampus is a complete e-learning platform. It lets you decide when and where you want to view and process your training seminar content. Simply open the site in your browser and select the desired training seminar.

Please visit www.mobotix.com/ecampus-mobotix.



MOBOTIX Community

The MOBOTIX community is another valuable source of information. MOBOTIX staff and other users are sharing their information, and so can you.

Please visit community.mobotix.com.



Safety Notes

- This product must be installed by qualified personnel and the installation should conform to all local codes.
- This product must not be used in locations exposed to the dangers of explosion.
- Do not use this product in a dusty environment.
- Protect this product from moisture or water entering the housing.
- Install this product as outlined in this document. A faulty installation can damage the product!
- Do not replace batteries of the device. If a battery is replaced by an incorrect type, the battery can explode.
- External power supplies must comply with the Limited Power Source (LPS) requirements and share the same power specifications with the camera.
- To comply with the requirements of EN 50130-4 regarding the power supply of alarm systems for 24/7 operation, it is highly recommended to use an uninterruptible power supply (UPS) for backing up the power supply of this product.

Legal Notes

Copyright Notice!

© 2019 MOBOTIX AG. All rights reserved.

This document and its contents are the property of MOBOTIX AG and are protected by applicable copyright laws. Any reproduction, distribution, modification, or use of this document, in whole or in part, without prior written permission of MOBOTIX AG is strictly prohibited.

All product names, trademarks, logos, and brands referenced in this document are the property of their respective owners. These may include, but are not limited to, trademarks and certification marks of third-party organizations. The use of such marks is for identification and informational purposes only and does not imply any affiliation with or endorsement by the respective trademark owners. MOBOTIX AG acknowledges the rights of all trademark holders and makes no claim to trademarks owned by third parties.

Special Export Regulations!

Cameras with thermal image sensors ("thermal cameras") are subject to the special export regulations of the U.S. and including the ITAR (International Traffic in Arms Regulation):

- According to current U.S. export control regulations, including the International Traffic in Arms Regulations (ITAR) and the Export Administration Regulations (EAR), thermal imaging cameras, sensors, and related components may be subject to export restrictions or licensing requirements depending on their technical characteristics and classification.
- Exports, re-exports, or transfers to comprehensively embargoed or sanctioned destinations are generally prohibited unless authorized by the relevant U.S. authorities. As of now, this includes, in particular: Crimea, Donetsk and Luhansk regions of Ukraine, Cuba, Iran, North Korea, and Syria.
- In addition, exports to certain countries such as Russia and Belarus are subject to extensive restrictions and, for many controlled items, are effectively prohibited.
- Furthermore, exports to any persons, entities, or organizations listed on U.S. government restricted party lists are prohibited. These include, but are not limited to, the Denied Persons List (DPL), the Entity List, and the Specially Designated Nationals (SDN) List, as maintained by the U.S. Department of Commerce and the U.S. Department of the Treasury.
- All exports must be reviewed on a case-by-case basis to ensure compliance with applicable U.S. export control laws and regulations.

- Under no circumstances must the camera itself or its thermal image sensors be used in the design, the development or in the production of nuclear, biological or chemical weapons or in the weapons themselves.

Legal Aspects of Video and Sound Recording

You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX AG products. Depending on national laws and the installation location of the cameras, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.

Declaration of Conformity

The products of MOBOTIX AG are certified according to the applicable regulations of the EC and other countries. You can find the declarations of conformity for the products of MOBOTIX AG on www.mobotix.com under **Services > Download Center > Marketing & Documentation > Certificates & Declarations of Conformity**.

RoHS Declaration

The products of MOBOTIX AG are in full compliance with European Unions Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive 2011/65/EU) as far as they are subject to these regulations (for the RoHS Declaration of MOBOTIX, please see www.mobotix.com, **Services > Download Center > Marketing & Documentation > Brochures & Guides > Certificates**).

Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).

Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our General Terms and Conditions apply. You can download the current version of the **General Terms and Conditions** from our website at www.mobotix.com by clicking on the corresponding link at the bottom of every page.

Before You Start

Legal Notes

It is the User's responsibility to comply with all applicable local, state, national and foreign laws, rules, treaties and regulations in connection with the use of the Software and Product, including those related to data privacy, the Health Insurance Portability and Accountability Act of 1996 (HIPPA), international communications and the transmission of technical or personal data.

FCC Disclaimer

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Notes on System Security

To protect the camera against security risks in data technology, the following measures are recommended after the installation has been completed:

MxManagementCenter:

- Menu **View > Wizards & Tools > Secure System:**
 - **Change camera factory default password:** ✓
 - **Enable encrypted HTTPS:** ✓
 - **Disable public access:** ✓
 - **User Management** (for all users):
 - **Force Complex Password:** ✓
 - **Log out on Inactivity:** After 5 min

User interface of the camera in the browser:


- **Admin Menu > Network Setup > Web Server:**
 - **Enable intrusion detection:** ✓
 - **Notification threshold:** 10
 - **Timeout:** 60 minutes
 - **Block IP Address:** ✓

For more information on this new feature, please read the «Cyber Protection Guide» on www.mobotix.com (under **Services > Download Center > Documentation > Brochures & Guides > Cyber Security**).


Drilling Template

Open this file in a PDF viewer (Acrobat Reader, Foxit Reader, or similar) and print the file **without scaling (original size)**.

NOTE! Drilling template: www.mobotix.com > [Services](#) > [Download Center](#) > [Marketing & Documentation](#) > [Drilling Templates](#).

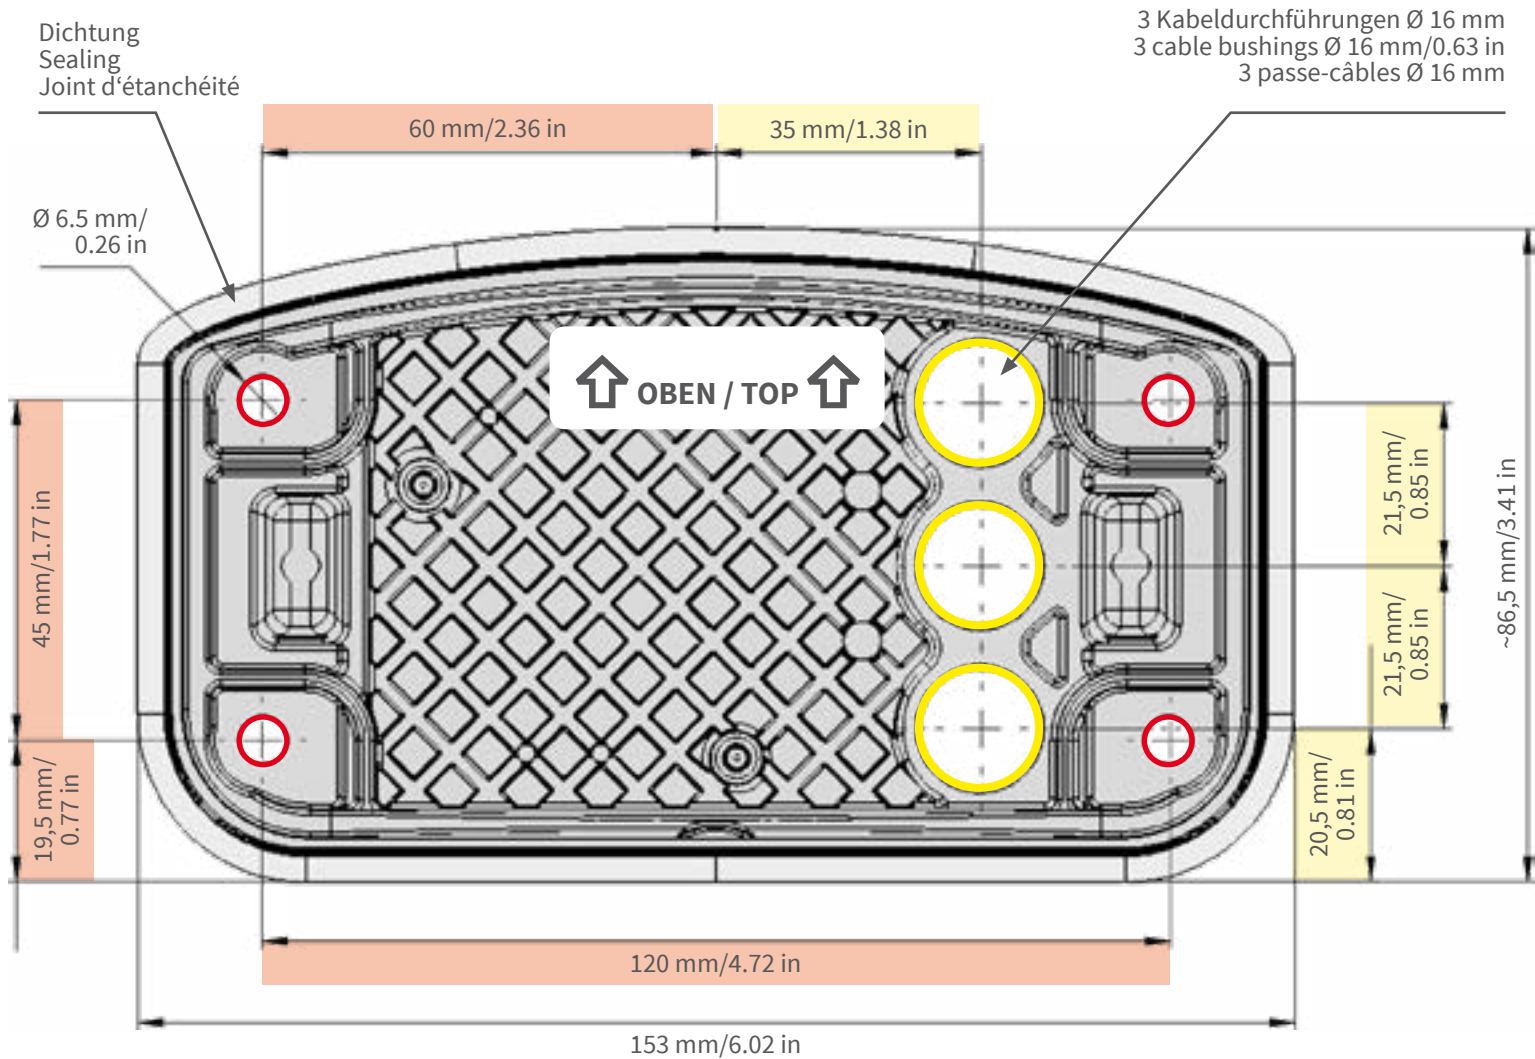

- Bohrungen für Befestigungsschrauben Ø 5 mm
- Holes for mounting screws 5 mm diameter
- Trous pour les vis de montage de 5 mm diamètre

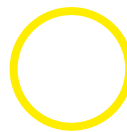

- Kabeldurchführungen Ø 16 mm
- Cable bushings 16 mm/0.63 in diameter
- Passe-câbles de 16 mm diamètre

Installation nur auf ebener Fläche! Unebenheiten dürfen 0,5 mm nicht überschreiten!

Installation only on level surface! Unevenness must not exceed 0.5 mm/0.02 in!


Montage uniquement sur une surface plane ! Les inégalités ne doivent pas dépasser 0,5 mm !



Nur in Originalgröße kopieren oder ausdrucken!

Always copy or print at 100% of original size!

Copier ou imprimer uniquement aux dimensions d'origine !

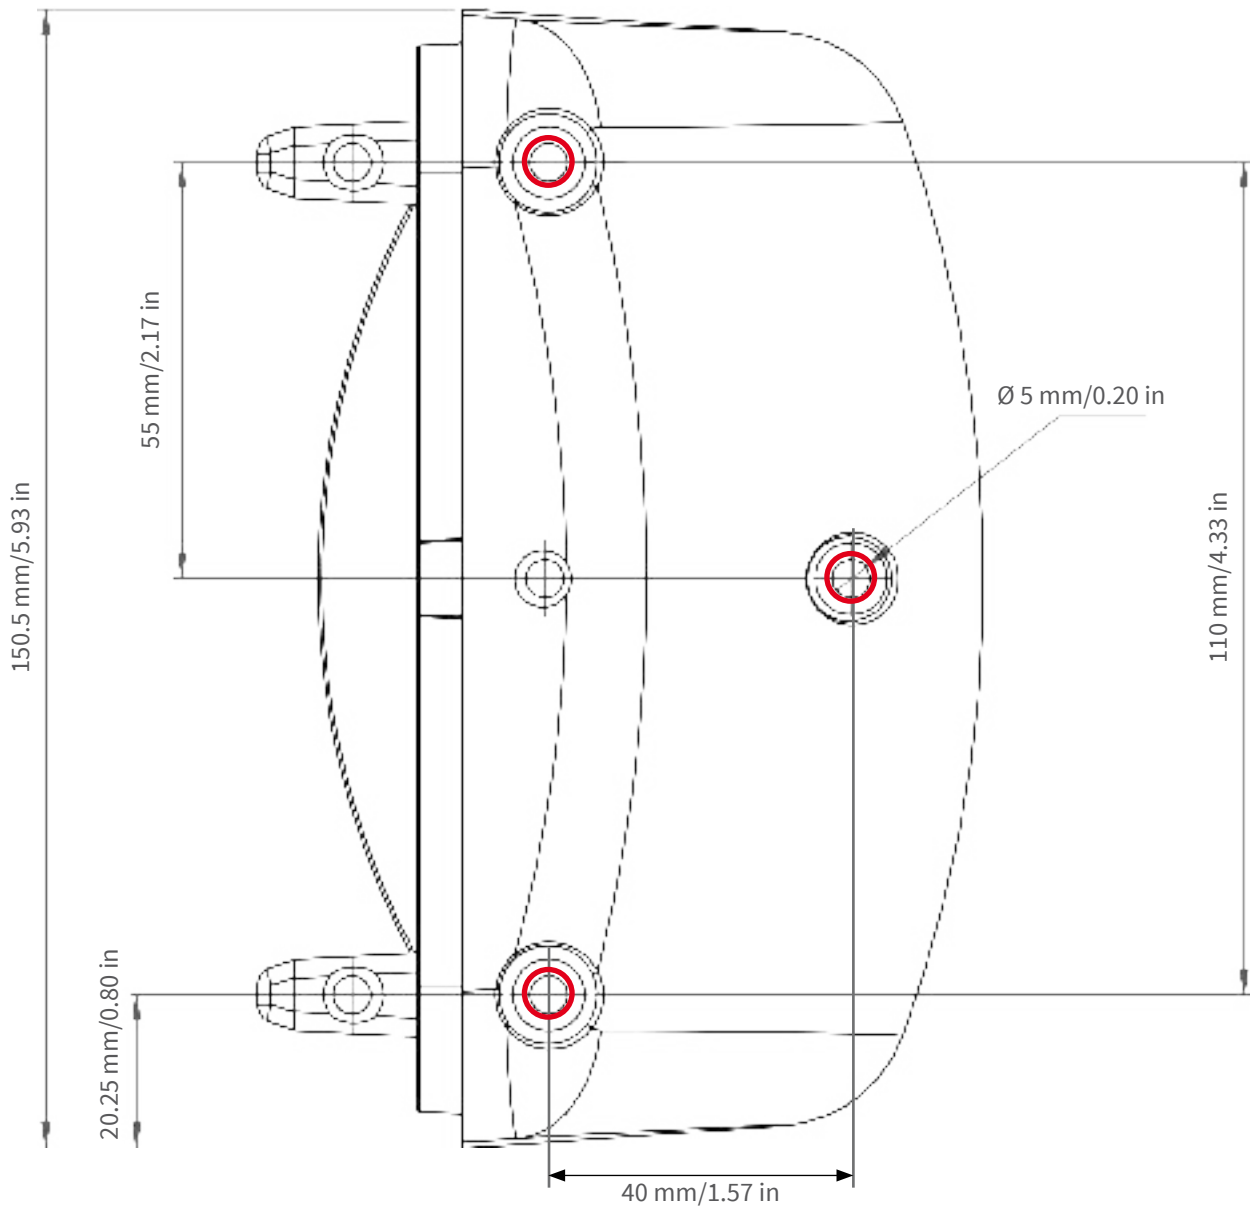

- Bohrungen für Befestigungsschrauben Ø 5 mm
- Holes for mounting screws 5 mm diameter
- Trous pour les vis de montage de 5 mm diamètre



Nur in Originalgröße kopieren oder ausdrucken!

Always copy or print at 100% of original size!

Copier ou imprimer uniquement aux dimensions d'origine !

Scope of Delivery

This section contains the following information:

M73: Scope of Delivery	18
Connector Box RJ45: Scope of Delivery	19
Connector Box LSA: Scope of Delivery	20
Mounting Supplies: Scope of Delivery	21

M73: Scope of Delivery



Fig. 1: Scope of delivery MOBOTIX M73 Body


Scope of delivery M73 Body

Item	Count	Description
1.1	1	M73 Body with module housing, front plate and transport plugs, complete
1.2	1	Module housing
1.3	1	Front plate
1.4	3	Transport plug
1.5	1	Blind module (must be installed when using only two sensor modules)

Scope of delivery M73 Body

Item	Count	Description
1.6	1	Mounting plate with wall sealing (installed), two standard plugs (installed), and inserted connector box.
1.7	1	MOBOTIX Ethernet patch cable, 50 cm/19.7 in with sealing
1.8	1	SD card 8 GB (installed)
1.9	1	Mounting supplies (see Scope of Delivery MOBOTIX M73 Mounting Supplies, p. 21)
1.10	1	Important Safety Information

Connector Box RJ45: Scope of Delivery

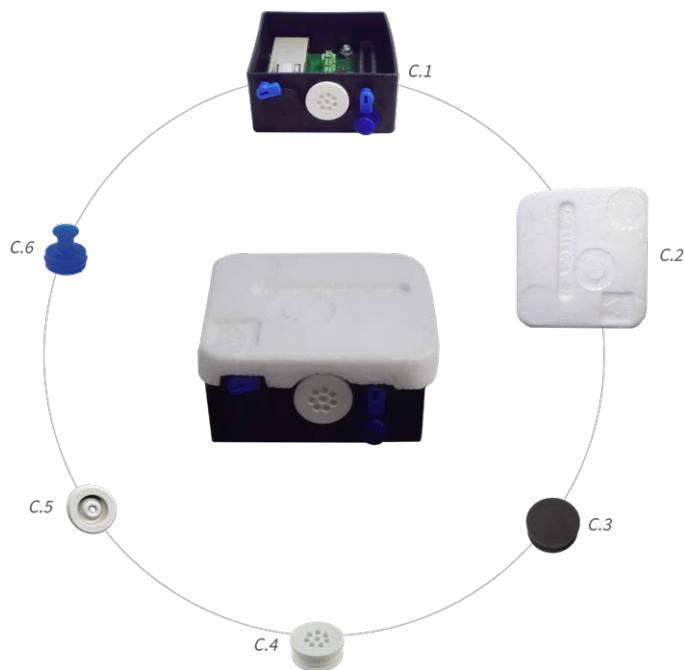

Scope of Delivery M73 Connector Box RJ45

Item	Count	Description
C.1	1	Connector box RJ45 black with rubber plug black, rubber plug single-wire white, USB plug blue (installed)
C.2	1	Protective cover for connector box polystyrene white (installed)
C.3	1	Rubber plug black (installed)
C.4	1	Rubber plug single-wire white (installed)
C.5	1	Rubber plug cable dia. 3.5 mm white (to replace C.5)
C.6	1	USB plug connector box blue (installed)

Connector Box LSA: Scope of Delivery



Fig. 2: Scope of Delivery MOBOTIX M73 Connector Box LSA

Scope of Delivery M73 Connector Box LSA

Item	Count	Description
C.1	1	Connector Box LSA black with rubber plug black, rubber plug single-wire white, USB plug blue (installed)
C.2	1	Protective cover for connector box polystyrene white (installed)
C.3	1	Rubber plug black (installed)
C.4	1	Rubber plug single-wire white (installed)
C.5	1	Rubber plug cable dia. 3.5 mm white (to replace C.5)
C.6	1	USB plug connector box blue (installed)
C.7	1	Ground wire (for overvoltage protection functionality)

Mounting Supplies: Scope of Delivery

Fig. 3: Scope of Delivery MOBOTIX M73 Mounting Supplies

Scope of Delivery M73 Mounting Supplies

Item	Count	Description
M.1	1	Module wrench
M.2	1	Lens wrench
M.3	3	Housing plug silicone white
M.4	3	Security clips plastic red
M.5	2	Cable tie black
M.6	1	Allen wrench 5 mm
M.7	1	Allen wrench 2.5 mm
M.8	1	TORX wrench TX20
M.9	1	TORX wrench TX10
M.10	1	Screwdriver yellow

Scope of Delivery

Mounting Supplies: Scope of Delivery

Scope of Delivery M73 Mounting Supplies

Item	Count	Description
M.11	4	Washer dia. 6.4 mm plastic white
M.12	4	Wood screw 4.5x60 mm
M.13	4	Dowel S8
M.14	3	Oval head screw with shank 2.5x6.5 mm stainless steel black (pre-assembled)
M.15	2	Cover for screw plastic white

Technical Specifications

This section contains the following information:

Order Information	24
Hardware	24
Image and Video Properties	28
General Software Features	28
Video Analysis	29
Video Management Software	30
Sensor Modules	30
Functional Modules	36
Connector Box LSA/Connector Box RJ45	37
Dimensions	39

Order Information

Name	MOBOTIX M73
Order Code:	Mx-M73(A/B)

Hardware

Feature	Properties
Image sensor (color or B&W)	Up to 4K UHD 3840x2160, 16:9, 1/1,8"
Light sensitivity	<ul style="list-style-type: none"> ▪ Color sensor (day): 0,1 lx @ 1/60s; 0,005 lx @ 1s ▪ BW sensor (night): 0,02 lx @ 1/60s; 0,001 lx @ 1s
Exposure control	Manual and automatic mode 1 s to 1/16,000 s
IK protection class	IK10 (housing)
IP / NEMA protection class	IP66 / NEMA 4X
Operating temperature range	-40 to 65 °C/-40 to 149 °F
Min. cold start temperature	-30 °C/-22 °F
Relative Humidity	95 % non-condensing
Internal DVR Storage	Internal microSD card (SDHC/SDXC), 8 GB out-of-the-box, max. 2 TB.
I/Os	See Connector Box LSA/Connector Box RJ45, p. 37
Microphone/Speaker	<ul style="list-style-type: none"> ▪ Functional audio module, max. 4.5 Watt (see Functional Modules, p. 36) ▪ Microphone Sensitivity: -35 +/-4 dB (0 dB = 1 V/pa, 1 kHz) ▪ Speaker: 0.9 W at 8 Ohm
Passive infrared sensor (PIR)	Available with functional module, max. 4.5 Watt (see Functional Modules, p. 36)
Infrared illumination	Three functional modules for wide-angle, standard, and tele lenses
Range of infrared illumination	Up to 30 m/100 ft (may be more depending on scene)

Feature	Properties
Shock detector (tamper detection)	Yes
Max. power consumption	<ul style="list-style-type: none"> ■ Max. 25 W/521 mA at 48 VDC ■ Max. 25 W/1042 mA at 24 VDC
Electrical surge protection	Integrated with MOBOTIX Connector Box LSA (not part of the scope of delivery)
PoE standard	PoE Plus (802.3at-2009)/Class 4
Interfaces	<ul style="list-style-type: none"> ■ Ethernet 1000BaseT ■ miniUSB / USB2.0 High-Speed ($V_{out} = 5.1V$, $I_{out} = 0.9A$, $P_{out} = 4.5W$)
Mounting Options	Wall- or pole-mountable (with Pole Mount accessory)
Dimensions (height x width x depth)	228 x 153 x 232 mm
Weight without sensor modules	Approx. 2.5 kg/5.5 lb
Housing	Aluminum, PBT-30GF
Standard accessories	See M73: Scope of Delivery, p. 18
Tiltability of camera	Horizontal: 2 x 180 degrees Vertical: 110 degrees
Detailed technical documentation	www.mobotix.com > Services > Download Center > Marketing & Documentation
MTBF	80,000 hours
Certificates	EN 50121-4, EN 55032, EN 55035, EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 61000-6-4, EN 62368-1, EN 63000, AS/NZS CISPR32, 47 CFR Part 15b, NRTL
Protocols	DHCP (client and server), DNS, ICMP, IGMP v3, IPv4, IPv6, HTTP, HTTPS, FTP, FTPS, MQTT, NFS, NTP (client and server), RTP, RTCP, RTSP, SFTP, SIP (client and server), SMB/CIFS, SNMP, SMTP, SSL/TLS 1.3, TCP, UDP, VLAN, VPN, Zero-conf/mDNS
Manufacturer warranty	5 years

Power Consumption

CAUTION!

To comply with the requirements of EN 54-4, the entire fire detection system (cameras, alarm systems, etc.) must be protected by uninterruptible power supplies (UPS) or batteries that can bridge power outages of up to 72 hours!

M73 - Body

Components	Average Power Consumption	Max. Power Consumption
<ul style="list-style-type: none"> ■ M73 	<ul style="list-style-type: none"> ■ 8.5 W/177 mA at 48 VDC ■ 8.5 W/354 mA at 24 VDC 	<ul style="list-style-type: none"> ■ Max. 25 W/521 mA at 48 VDC ■ Max. 25 W/1042 mA at 24 VDC

M73 - D/N, IR, Audio

Components	Average Power Consumption	Max. Power Consumption
<ul style="list-style-type: none"> ■ M73 ■ M1: IR 850nm wide-angle ■ M2: ULL Day/Night DN280 ■ M3: Audio 	<ul style="list-style-type: none"> ■ 15.4 W/321 mA at 48 VDC ■ 15.4 W/642 mA at 24 VDC 	<ul style="list-style-type: none"> ■ Max. 25 W/521 mA at 48 VDC ■ Max. 25 W/1042 mA at 24 VDC

M73 - D/N, IR, Multisense

Components	Average Power Consumption	Max. Power Consumption
<ul style="list-style-type: none"> ■ M73 ■ M1: IR 850nm wide-angle ■ M2: ULL Day/Night DN280 ■ M3: Multisense 	<ul style="list-style-type: none"> ■ 14.1 W/294 mA at 48 VDC ■ 14.1 W/588 mA at 24 VDC 	<ul style="list-style-type: none"> ■ Max. 25 W/521 mA at 48 VDC ■ Max. 25 W/1042 mA at 24 VDC

M73 - D/N, Thermal, Audio

Components	Average Power Consumption	Max. Power Consumption
<ul style="list-style-type: none"> ■ M73 ■ M1: Thermal Image Sensor ■ M2: ULL Day/Night ■ M3: Audio 	<ul style="list-style-type: none"> ■ 12.2 W/254 mA at 48 VDC ■ 12.2 W/508 mA at 24 VDC 	<ul style="list-style-type: none"> ■ Max. 25 W/521 mA at 48 VDC ■ Max. 25 W/1042 mA at 24 VDC

NOTE!

Thermal overlay used as Live view.

M73 With Thermal, Multisense, D/N Modules

Components	Average Power Consumption	Max. Power Consumption
<ul style="list-style-type: none"> ■ M73 ■ M1: Thermal Image Sensor ■ M2: Day/Night sensor module ■ M3: Multisense 	<ul style="list-style-type: none"> ■ 11.5 W/240 mA at 48 VDC ■ 11.5 W/480 mA at 24 VDC 	<ul style="list-style-type: none"> ■ Max. 25 W/521 mA at 48 VDC ■ Max. 25 W/1042 mA at 24 VDC

M73 - D/N, Thermal, IR

Components	Average Power Consumption	Max. Power Consumption
<ul style="list-style-type: none"> ■ M73 ■ M1: Thermal Image Sensor ■ M2: ULL Day/Night ■ M3: IR 850nm 	<ul style="list-style-type: none"> ■ 16.5 W/344 mA at 48 VDC ■ 16.5 W/688 mA at 24 VDC 	<ul style="list-style-type: none"> ■ Max. 25 W/521 mA at 48 VDC ■ Max. 25 W/1042 mA at 24 VDC

NOTE!

Thermal overlay used as Live view.

Image and Video Properties

Feature	Properties
Available video codecs	<ul style="list-style-type: none"> ▪ H.264, H.265 ▪ MxPEG+ ▪ MJPEG
Image resolutions	CIF 320x240, VGA 640x360, XGA 1024x576, HD 1280x720, FullHD 1920x1080, QHD 2560x1440, 4K UHD 3840x2160
Multi streaming	H.264, H.265 with triple streaming
Multicast stream via RTSP	Yes
Max. image resolution H.264	<ul style="list-style-type: none"> ▪ One sensor: 4K UHD 3840x2160 (8MP) ▪ Both sensors (dual image): 2x 4K UHD 7680x2160 (16MP)
Max. frame rate	MxPEG: 20@4K, H.264: 30@4K, H.265: 30@4K

General Software Features

Feature	Properties
WDR	Up to 120 dB
Software features	<ul style="list-style-type: none"> ▪ H.264, H.265 Multistreaming ▪ Multicast stream via RTSP ▪ Digital pan, tilt, zoom/vPTZ (up to 8x zoom) ▪ Genetec protocol integration ▪ Programmable exposure zones ▪ Snapshot recording (pre/post-alarm images) ▪ Continuous recording ▪ Event recording ▪ Time-controlled flexible event logic ▪ Weekly schedules for recordings and actions ▪ Event video and image transfer via FTP and email ▪ Playback and QuadView via web browser ▪ Animated logos on the image

Feature	Properties
	<ul style="list-style-type: none"> ▪ Master/Slave functionality ▪ Privacy zone scheduling ▪ Remote alarm notification (network message) ▪ Programming interface (HTTP API) ▪ MxMessageSystem
ONVIF compatibility	Profile G, S, T, (M with later firmware release)
Master/Slave functionality	Yes
Remote alarm notification	Email, network message (HTTP/HTTPS), SNMP, MxMessageSystem, MQTT
DVR/image storage management	<ul style="list-style-type: none"> ▪ On internal microSD card ▪ On external USB and NAS devices ▪ Different streams for live image and recording ▪ MxPEG+ only ▪ MxFFS with buffered archive, pre- and post-alarm images, storage monitoring with error reporting
Camera and data security	User and group management, SSL connections, IP-based access control, IEEE 802.1X, intrusion detection, digital image signature
Digitally signed firmware	Yes (to prevent firmware file tampering)

Video Analysis

Feature	Properties
Video motion detection	Yes
MxActivitySensor	Version 1.0, 2.1, 3.0 and object-based MxAnalytics AI
MxAnalytics	Yes
MOBOTIX App support	Yes

Video Management Software

Feature	Properties
MOBOTIX HUB	Yes Services > Download Center > Software Downloads">www.mobotix.com > Services > Download Center > Software Downloads
MxManagementCenter	Yes (latest version recommended) Services > Download Center > Software Downloads">www.mobotix.com > Services > Download Center > Software Downloads
MOBOTIX LIVE App	Yes (available in Google Play Store (Android) and Apple App Store (iOS)).
3rd Party VMS Software	See ONVIF Profile S, T and G specification

Sensor Modules

Dimensions of Sensor Modules

Height x Width	58 x 42,5 (50 mm)	
Weight	Standard Sensor Modules	max. 150g
	Functional Modules	max. 150g
	Thermal Sensor Module B-Models	max. 380g
	Thermal Sensor Module C-Models	max. 220g

Supported Image Sensor Modules

Sensor Module	Order Code
Sensor module with standard 45° lens	Mx-O-M7SA-8DN100*
	Mx-O-M7SA-8D100
	Mx-O-M7SA-8N100*
	Mx-O-M7SA-4DN100
Sensor module with tele lens 30°	Mx-O-M7SA-8DN150*
	Mx-O-M7SA-8D150
	Mx-O-M7SA-8N150*
	Mx-O-M7SA-4DN150
	Mx-O-M7SA-8L150
Sensor module with tele lens 15°	Mx-O-M7SA-8DN280*
	Mx-O-M7SA-8D280
	Mx-O-M7SA-8N280*
	Mx-O-M7SA-4DN280
	Mx-O-M7SA-8L280
Sensor module with tele lens 8°	Mx-O-M7SA-8D500
	Mx-O-M7SA-8N500
	Mx-O-M7SA-8L500
Sensor module with wide angle lens 60°	Mx-O-M7SA-8DN080*
	Mx-O-M7SA-8D080
	Mx-O-M7SA-8N080*
	Mx-O-M7SA-4DN080
Sensor module with super wide angle lens 95°	Mx-O-M7SA-8DN050*
	Mx-O-M7SA-8D050
	Mx-O-M7SA-8N050*
	Mx-O-M7SA-4DN050

Technical Specifications

Sensor Modules

Sensor Module	Order Code
Sensor module with ultra wide angle lens 120° 4K	Mx-O-M7SA-8DN040*
	Mx-O-M7SA-8D040
	Mx-O-M7SA-8N040*
	Mx-O-M7SA-4DN040
	Mx-O-M7SA-8L040
Sensor module with hemispheric lens 180° 12MP	Mx-O-M7SA-12DN016*

*also available in black.

NOTE!

Please consider any lens-related restrictions. For example, license plate recognition is not possible with a hemispheric lens.

For a complete list of lenses for MOBOTIX cameras, please see the Lens Table document for MOBOTIX 7 models on www.mobotix.com > [Services](#) > [Download Center](#) > [Marketing & Documentation](#) > [Lens Table](#).

Supported Thermal Sensor Modules (Pre-mounted on Thermal Front Plate)

Sensor Module	Order Code
CIF Thermal 25° x 19°	Mx-O-M73TB-336T150
CIF Thermal Radiometry 45° x 35°	Mx-O-M73TB-336R100
CIF Thermal Radiometry 25° x 19°	Mx-O-M73TB-336R150
CIF Thermal Radiometry 17° x 13°	Mx-O-M73TB-336R280
CIF Thermal Radiometry 9.3 x 7.1	Mx-O-M73TB-336R500 (BTO)
VGA Thermal 90° x 69°	Mx-O-M73TB-640T050
VGA Thermal 69° x 56°	Mx-O-M73TB-640T080
VGA Thermal 45° x 37°	Mx-O-M73TB-640T100

Sensor Module	Order Code
VGA Thermal 32° x 26°	Mx-O-M73TB-640T150
VGA Thermal Radiometry 69° x 56°	Mx-O-M73TB-640R080
VGA Thermal Radiometry 32° x 26°	Mx-OM73TB-640R150
VGA Thermal Radiometry 18° x 14°	Mx-O-M73TB-640R280 (BTO)

Sensor Module	Order Code
QVGA/CIF Thermal Radiometry 50° x 40°	Mx-O-M73TC-320R100
QVGA/CIF, 12° x 10°	Mx-O-M73TC-320T280
VGA Thermal Radiometry 95° x 76°	Mx-O-M73TC-640R050
VGA Thermal Radiometry 50° x 40°	Mx-O-M73TC-640R100
VGA Thermal, 18° x 14.4	Mx-O-M73TC-640T280

The **Thermal Radiometry (TR)** variants can automatically trigger alarms if the temperature exceeds or falls below defined limits. This is crucial for the detection of fire or heat sources. Up to 20 different temperature events can be configured simultaneously in TR windows or covering the full sensor image over a temperature range of High Sensitivity: -40 to 170 °C/-40 to 320 °F -- Low Sensivity: -40 to 550 °C/-40 to 1022 °F .

The **Thermal (non-TR)** variants only measure in the center of the image (Thermal spot, 2x2 pixel).

Features Thermal Image Sensors – B Models

Feature	Properties
Thermal sensitivity	Typ. 50 mK
Thermal image sensor	Uncooled microbolometer, CIF: 336 x 256 px / VGA: 640 x 480 px
IR range	7.5 to 13.5 µm
Temperature measurement range (adjustable)	High Sensitivity: -40 to 170°C/-40 to 320°F Low Sensivity: -40 to 550°C/-40 to 1022°F

Technical Specifications

Sensor Modules

Feature	Properties												
	Default: Automatic (switches between High and Low depending on highest temperatures in FoV)												
Dimensions	336/640 px: 48.5x48 mm/48.5x70 mm; 170 g without front plate / 265 g with front plate												
Dimensions	PT mount Thermal 336/640 px: 98.5 mm x 106 mm diam; 620 g (including PT Mount) Sensor module alone: 73 mm (+4.4 mm front glass) x 57 mm diam (63 mm front glass); 310 g												
Max. image size	Can be scaled up to 3072 x 2048 (6MP), automatically scaled to size of MX sensor module												
Max. frame rate	9 fps (fast version 25/30 fps on request)												
Pixel pitch	17 μ m												
Field of view	<table><thead><tr><th>Sensor Module</th><th>FoV</th></tr></thead><tbody><tr><td>336R/T100</td><td>45° x 35°; 2.27 mrad; focal length 7.5 mm, f/1.25</td></tr><tr><td>336R/T150</td><td>25° x 19°; 1.31 mrad; focal length 13 mm, f/1.25</td></tr><tr><td>640R/T050</td><td>90° x 69°; 2.27 mrad; focal length 7.5 mm, f/1.4</td></tr><tr><td>640R/T100</td><td>45° x 37°; 1.31 mrad; focal length 13 mm, f/1.25</td></tr><tr><td>640R/T150</td><td>32° x 26°; 0.90 mrad; focal length 19 mm, f/1.25</td></tr></tbody></table>	Sensor Module	FoV	336R/T100	45° x 35°; 2.27 mrad; focal length 7.5 mm, f/1.25	336R/T150	25° x 19°; 1.31 mrad; focal length 13 mm, f/1.25	640R/T050	90° x 69°; 2.27 mrad; focal length 7.5 mm, f/1.4	640R/T100	45° x 37°; 1.31 mrad; focal length 13 mm, f/1.25	640R/T150	32° x 26°; 0.90 mrad; focal length 19 mm, f/1.25
Sensor Module	FoV												
336R/T100	45° x 35°; 2.27 mrad; focal length 7.5 mm, f/1.25												
336R/T150	25° x 19°; 1.31 mrad; focal length 13 mm, f/1.25												
640R/T050	90° x 69°; 2.27 mrad; focal length 7.5 mm, f/1.4												
640R/T100	45° x 37°; 1.31 mrad; focal length 13 mm, f/1.25												
640R/T150	32° x 26°; 0.90 mrad; focal length 19 mm, f/1.25												
Operating temperature range	-40 to 65 °C/-40 to 149 °F												
Relative Humidity	95 % non-condensing												
Power consumption	max. 1.2 W												
MTBF	80,000 hours												
IP rating	IP67												
IK rating	IK04												
Material	PBT-30GF (housing); Germanium (lens)												

Features Thermal Image Sensors – C Models

Feature	Properties												
Thermal sensitivity	Typ. 30 mK												
IR range	7.5 to 13.5µm												
Temperature measurement range (adjustable)	High Sensitivity: -40 to 150°C/-40 to 302°F Low Sensivity: -40 to 350°C/-40 to 662°F Default: Automatic (switches between High and Low depending on highest temperatures in FoV)												
Max. image size	Can be scaled up to 3072 x 2048 (6MP), automatically scaled to size of MX sensor module												
Max. frame rate	30 fps												
Pixel pitch	12 µm												
Field of view	<table border="1"> <thead> <tr> <th>Sensor Module</th> <th>FoV (H x V)</th> </tr> </thead> <tbody> <tr> <td>320R100</td> <td>50° x 40°; focal length 9.2 mm; f/1.0</td> </tr> <tr> <td>320T280</td> <td>12° x 9.6°; focal length 18 mm; f/1.0</td> </tr> <tr> <td>640R050</td> <td>95° x 76°; focal length 4.9 mm; f/1.1</td> </tr> <tr> <td>640R100</td> <td>50° x 40°; focal length 4.5 mm; f/1.2</td> </tr> <tr> <td>640T280</td> <td>18° x 14.4°; focal length 24.9 mm; f/1.0</td> </tr> </tbody> </table>	Sensor Module	FoV (H x V)	320R100	50° x 40°; focal length 9.2 mm; f/1.0	320T280	12° x 9.6°; focal length 18 mm; f/1.0	640R050	95° x 76°; focal length 4.9 mm; f/1.1	640R100	50° x 40°; focal length 4.5 mm; f/1.2	640T280	18° x 14.4°; focal length 24.9 mm; f/1.0
Sensor Module	FoV (H x V)												
320R100	50° x 40°; focal length 9.2 mm; f/1.0												
320T280	12° x 9.6°; focal length 18 mm; f/1.0												
640R050	95° x 76°; focal length 4.9 mm; f/1.1												
640R100	50° x 40°; focal length 4.5 mm; f/1.2												
640T280	18° x 14.4°; focal length 24.9 mm; f/1.0												
Operating temperature range	-40 to 65 °C/-40 to 149 °F												
Relative Humidity	95 % non-condensing												
Power consumption	1.5 W												
MTBF	80,000 hours												
IP rating	IP67												
IK rating	IK04												
Material	PBT-30GF (housing); Germanium (lens)												

Features Thermal Image Sensors - ECO Models

Feature	Properties
Thermal sensitivity	Typ. 65 mK, IR range 7.8 to 14 μ m
Temperature measurement range	-40 to 330°C/ -40 to 626 °F
Field of view	T040: 105 x 75°; 5.23mrad, focal length 2.2mm, f/1.05 T080: 56 x 42°; 3.00mrad, focal length 4.0mm, f/1.00 T150: 24 x 18°; 1.32mrad, focal length 9.1mm, f/1.00
Thermal image sensor	Uncooled microbolometer, CIF 320x240
Dimensions	58 x 42.5 mm (dia. 50 mm), 65g
Pixel pitch	12 μ m
Max. image size	Can be scaled up to 3072 x 2048 (6MP) (6MP), automatically scaled to size of MX Sensor module
Max. frame rate	9 fps (when displaying an Mx Sensor module and a thermal sensor module, the overall frame rate of the camera is reduced to 9 fps)
Operating temperature	-40° to +65°C / 40° to 149°F; 5% to 95% non-condensing
Power consumption	600mW
IP rating	IP66
IK rating	IK04
Material	PBT-30GF (housing); Chalcogenide (lens)
Software (included)	Video management software MxManagementCenter

Functional Modules

Functional Module	Order Code	Remark
Audio module	Mx-F-AUDA	Audio module with microphone and speaker
MultiSense	Mx-F-MSA	With PIR sensor, temperature sensor, illu-

Functional Module	Order Code	Remark
module		mination sensor
IR Light modules	Mx-F-IRA-W	For Super Wide-Angle Lens Sensor Modules 95°
	Mx-F-IRA-S	For Standard & Wide-Angle Lens Sensor Modules 45° and 60°
	Mx-F-IRA-T	For Tele Lens Sensor Modules 15° and 30°
		Power consumption IR Light Modules: 4.2 W at 100% brightness.
White Light Modules	Mx-F-WLA-W	For Super Wide-Angle Lens Sensor Modules 95°
	Mx-F-WLA-S	For Standard & Wide-Angle Lens Sensor Modules 45° and 60°
	Mx-F-WLA-T	For Tele Lens Sensor Modules 15° and 30°
		Power consumption White Light Modules: 3.2 W at 100% brightness.

Connector Box LSA/Connector Box RJ45

Interface	Properties	
Network	100/1000 Mbps	
Overvoltage Protection (only Connector Box LSA)	max. 4 kV on the PoE network cabling	
Allowed cable dimensions for cables connected to the PCB terminals	<i>Conductor cross section</i>	
	AWG	20 - 26
	Rigid	0.14mm ² - 0.8mm ²
	Flexible	0.14mm ² - 0.5mm ²
	Flexible with ferrule	0.25mm ² - 0.34mm ²
Line In	Standard Line In: (0dB) Vrms=1V	
Line Out	Headphones with 20mW @ 16 Ohm or 32 Ohm. Audio inputs as a Line Out function to 10k Ohm impedance of receiver. Audio	

Technical Specifications

Connector Box LSA/Connector Box RJ45

Interface

Properties

level while connected to 10k Ohm equals -10dbV

Input

Contact Closure (no galvanic isolation necessary) or max. 30 Vrms AC / 50V DC

Switching thresholds:

- Input > 1.6V leads to a detected HIGH
- Input < 0.9V leads to a detected LOW (after a high)

max. length for cables: 50m

Output

M73-A

requires pull-up resistor and external power supply (10mA / max 30 Vrms AC / max. 50V DC)

Output may be loaded with max. 50mA

max. length for cables: depends on loop impedance of the connected cable.

M73-B

Dry contact, form A (max 30 Vrms AC / max, 50V DC/ 60 W/ 2A DC)

Dimensions

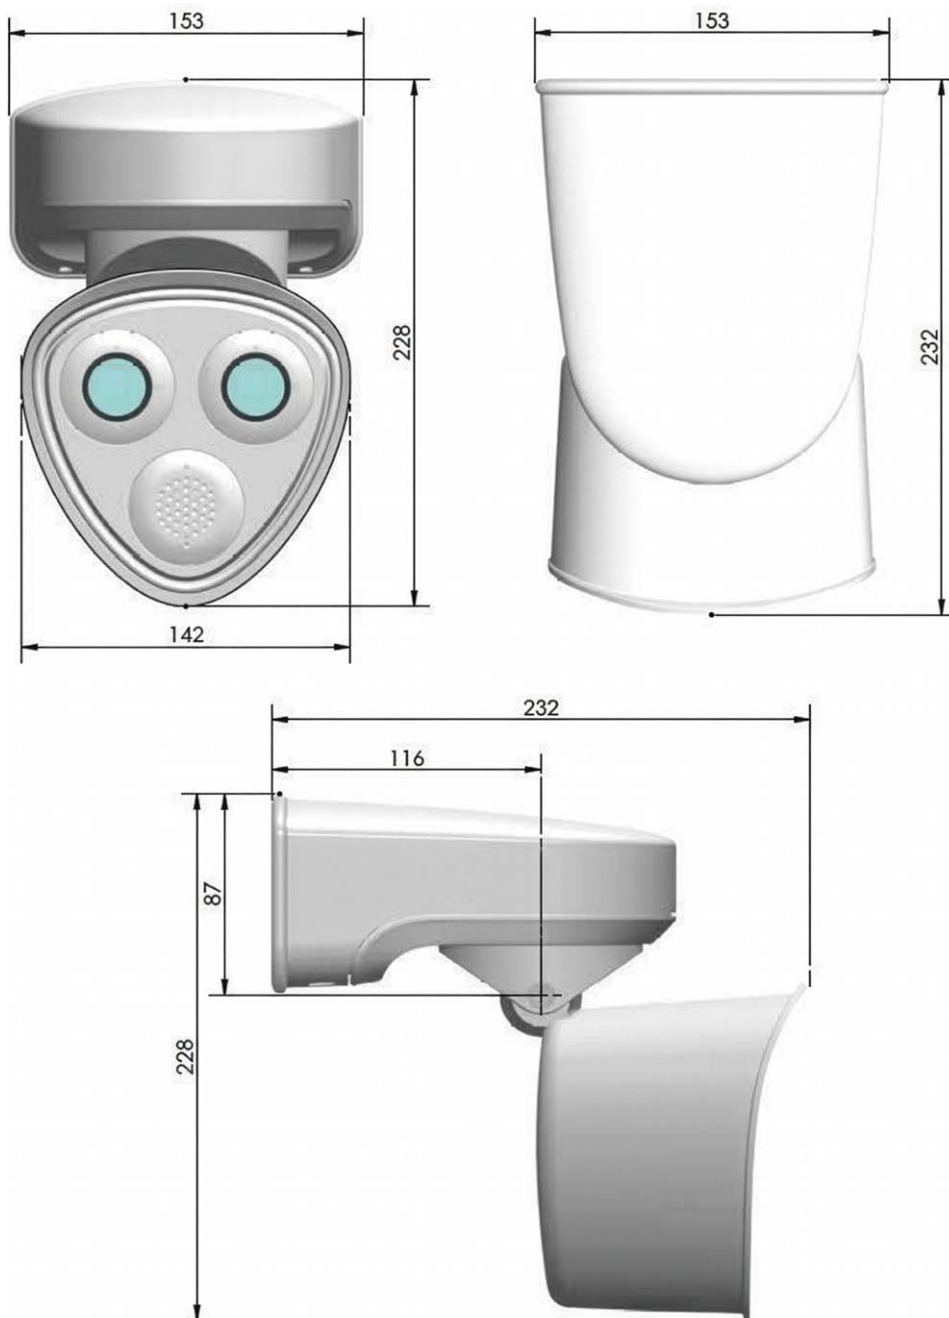


Fig. 4: MOBOTIX M73: All measurements in mm

NOTE! Drilling template: www.mobotix.com > Services > Download Center > Marketing & Documentation > Drilling Templates.

Mounting

This section contains the following information:

Before Mounting the Camera	42
Installing Sensor Modules	44
Installing a Thermal Front Plate	54
Installing Security Screws	62
Mounting Options	64
Connecting the camera	73
Finishing the Installation of the Camera	85

Before Mounting the Camera

CAUTION!

Before mounting the camera make sure to copy the IP address ① on the back of the camera housing or on the camera packaging. You will need this address to configure the camera in the browser later on (see [Camera Software in the Browser](#), p. 103).



Fig. 5: IP address on the back of the camera housing

The MOBOTIX M73 has been designed for wall mounting. Using the pole mount accessory, you can also install the camera on a pole (see [Mounting Options](#), p. 64).

NOTE! Drilling template: www.mobotix.com > [Services](#) > [Download Center](#) > [Marketing & Documentation](#) > [Drilling Templates](#).

Before mounting the MOBOTIX M73, the following questions should be answered:

- Where and how will the camera be mounted?
- How is the mounting surface level?
- Which other mounting options are available?
- Which accessories might be needed?
- How is the camera connected to the network and how is the power supplied?
- How are the connections furnished from the building?
- What cabling considerations are necessary?
- Do you want to use a larger SD card (see [Replacing the microSD card](#), p. 112)?

The following sections will answer these questions. If you have further questions, please ask your MOBOTIX partner or contact the MOBOTIX support under www.mobotix.com > [Services](#) > [Help Desk](#).

Protective Measures

WARNING!

When laying cables indoors and outdoors, the current regulations for cable laying, lightning and fire protection must always be observed.

MOBOTIX cameras and devices are protected against the effects of minor over voltages by a number of measures. However, these measures cannot prevent larger surge voltages from causing damage to the camera. When installing the cameras outdoors, special attention should therefore be paid to lightning protection and the associated dangers for the building and network infrastructure.

In general, you should only have MOBOTIX cameras and devices installed by certified specialist companies that are familiar with the installation and safe operation of network devices and the underlying regulations for lightning and fire protection as well as the current technology for preventing damage from surge voltages.

Notes on Cable Laying

- **Data cable:** Only double-shielded CAT5 cable or better (S/STP) may be used as data cable for the Ethernet interface.

NOTE!

For outdoor use, special requirements apply for the cables to be used and the lightning protection.

- **Cable length:** The individual cable sections must not exceed the maximum permissible lengths in order to ensure perfect data transmission.
- **Avoidance of induction:** Data cables may only be laid parallel to power or high-voltage lines if the prescribed minimum distances are observed.
- Only use MOBOTIX cables and connectors to ensure IP66 weather resistance.

Fire Protection

When laying cables for the power supply, the relevant country-specific regulations (e.g. VDE in Germany) and the fire protection regulations valid at the installation site must be observed.

Lightning and Surge Protection

Measures should always be taken to protect this device from electrical surge damage.

NOTE!

Electrical surge protection is integrated in the Connector Box LSA (see [Network connection with the Connector Box LSA, p. 74](#)), which is available as an accessory.

Further information on how to avoid damage caused by lightning and over voltage is available from manufacturers of lightning and over voltage protection devices.

Installing Sensor Modules

WARNING!

- Always power down the camera before installing or replacing sensor modules.
Unplugging or connecting sensor modules of a powered-on camera can irreparably damage the sensor modules and the camera!
- When installing the sensor modules or closing the camera housing, make sure that the sensor module cables are not damaged or bent sharply.

CAUTION!

Do not operate the camera until all three module seats have been closed using either sensor modules or blind modules.

NOTE!

Upon delivery, the sensor module sockets in the front plate [1.3, p. 18](#) are fitted with transport plugs [1.4, p. 18](#). When operating the camera, it needs to be fitted either with sensor or blind modules [1.5, p. 18](#). This closes off the front plate and protects the camera against foreign objects, animals and water.

Procedure


1. **Prepare the sensor module:** Remove the bayonet catch by rotating it counter-clockwise, then remove the blue rubber plug.



NOTE!

If the plastic nut has been installed, remove it.
This nut will **not** be used any more in the mounting process.

2. **Remove the transport plugs:** Gently pull the transport plugs out of the sensor module seats and disconnect the sensor module cables.

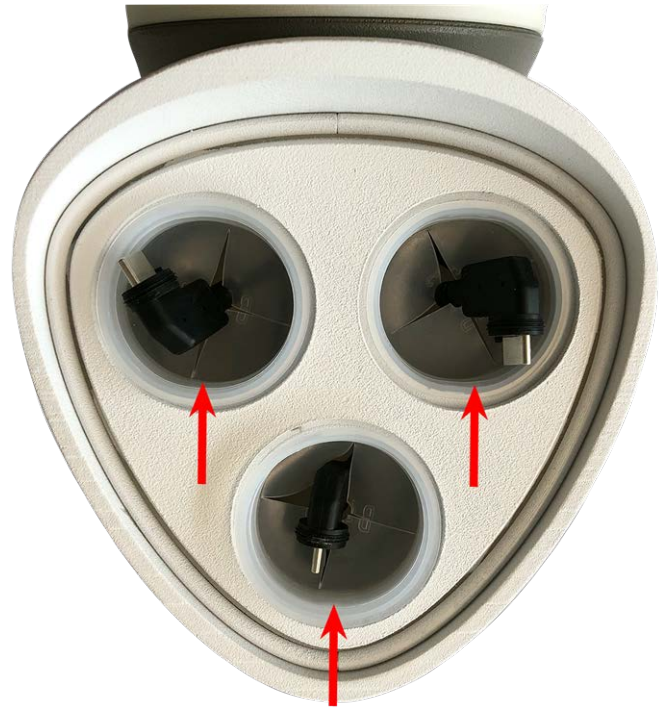

CAUTION!

In order to avoid damage cautiously pull the sensor module cables out of the housing until you feel the stop!

3. Properly assign the sensor module cables.

The sensor module cables are numbered (small colored rings next to the connectors).



CAUTION!

When attaching sensor modules, make sure that these rules are followed:

- The MOBOTIX M73 can be equipped with these types of modules:
 - A maximum of two optical modules can be used.
 - A maximum of two functional modules can be used.
 - One thermal module can be used instead of one **optical** module (see [Installing the Sensor Modules to the Thermal Front Plate, p. 59](#)).

Applicable to newer thermal sensor module types Mx-O-M7SB-640R050, Mx-O-M7SB-640T050, Mx-O-M7SB-336R100, MX-O-M7SB-336T100 (see [Technical Specifications, p. 23](#)):

- Use the following sensor module cables for these types of modules:
 - **Cables ① and ②** : Optical, functional or thermal modules. **No audio module.**
 - **Cable ③** : Functional or thermal modules. **No optical modules.**

Applicable to other thermal sensor module types (see [Technical Specifications, p. 23](#)):

- Use the following sensor module cables for these types of modules:
 - **Cables ① and ②** : Optical or functional modules. **No thermal modules, no audio module.**
 - **Cable ③** : Functional or thermal modules. **No optical modules.**

When positioning the modules, you are free to choose the individual module positions (with the exception of the thermal sensor module, since it is pre-installed on a special front plate).

4. **Properly connect the sensor module cables:**

Push the plug of each sensor module cable **firmly** into the connector at the back of the module until the connector is fully inserted into its seat.



CAUTION!

The lug of the plug must point to the inside of the sensor module when plugged in. If the module cable is not plugged in correctly, the sensor will not be recognized by the camera.

NOTE!

When using blind modules, also insert the connector into the receptacle as shown below.



Mounting

Installing Sensor Modules

5. **Lock sensor module cable:** Apply the blue bayonet catch onto the connector of the sensor module as shown and turn it clockwise until it gently snaps shut.



6. **Insert sensor module:** Push the sensor module into its seat. The arrow on the back of the module points to 9 o'clock when looking at the module as shown.



7. **Lock the sensor module:** Using the module wrench [M.1, p. 21](#), turn the sensor module clockwise until it stops.



CAUTION!

If you cannot turn the sensor module, it has been inserted the wrong way! Remove the sensor module, rotate it by 180 degrees and insert it again.

8. Repeat steps 3 to 6 for the remaining sensor modules or the blind module [1.5, p. 18](#), respectively.

CAUTION!

The sensor modules are not yet protected against theft and unwanted rotation (e.g. due to vibration). It is thus highly recommended to install the security clips [M.4, p. 21](#). Proceed as outlined in the following:



- [Opening the Module Housing, p. 49](#)
- [Installing the Security Clips, p. 51](#)
- [Closing the Module Housing, p. 52](#)

If you do **not** want to install the security clips, proceed by selecting the [Mounting Options, p. 64](#).

Opening the Module Housing

The following tasks require opening the module housing:

- Inserting security clips at the sensor module or the blind module, respectively.
- Exchanging a sensor or blind module when secured with security clips.
- Replacing the default front plate [1.3, p. 18](#) with a thermal front plate or vice versa.

Mounting

Installing Sensor Modules

1. Remove the rubber plug at the back of the module housing (e.g., by using a small screwdriver).



2. Using the supplied 5 mm Allen wrench [M.6, p. 21](#), release the bolt at the back of the module housing. Leave the bolt and washer in the module housing.



3. Using the Allen wrench, **cautiously** push from behind onto the bolt and push the front plate out of the front of the housing.



Installing the Security Clips

CAUTION!

To prevent module rotation or removal it is highly recommended to install the security clips.



The security clips [M.4, p. 21](#) are protecting the sensor modules or the blind module in the front plate of the MOBOTIX M73 against theft and unwanted rotation (e.g., due to vibration when mounted on a pole or in an automotive scenario).

CAUTION!

Do not use the plastic nuts delivered with the sensor modules to lock the modules in place!



Mounting

Installing Sensor Modules

1. **Open the module housing** (see [Opening the Module Housing, p. 49](#)).
2. **Insert the security clips:** Insert a security clip into the groove between the inner and the outer thread of the sensor module. Press it all the way into the groove and make sure it snaps in under the head of the pre-assembled screw ① .



3. **Repeat step 2** to apply security clips to all modules.
4. **Close the module housing:** (see [Closing the Module Housing, p. 52](#)).

Closing the Module Housing

Insert the front plate of the MOBOTIX M73 to close the module housing.

1. Make sure that the arrow of the front plate (red circle in figure) points upwards when inserting the front plate into the module housing (figure shows front plate with cables removed).



2. Push the front plate into the module housing until it stops.

CAUTION!

When pushing the front plate into the module housing, make sure that the sensor module cables are not damaged or bent sharply!



Mounting

Installing a Thermal Front Plate

3. Using the supplied 5 mm Allen wrench [Mounting Supplies: Scope of Delivery, p. 21](#), tighten the bolt at the back of the camera housing.
4. Push the rubber plug back into the opening of the screw to prevent humidity and dirt from entering the camera.



Installing a Thermal Front Plate

Since the thermal sensor module is permanently attached to the Thermal Front Plate, you need to replace the entire standard front plate.

Upon delivery, two of three available sensor module sockets in the thermal front plate are fitted with transport plugs [1.4, p. 18](#). When operating the camera, they need to be fitted either with sensor or blind modules [1.5, p. 18](#). This closes off the front plate and protects the camera against foreign objects, animals and water.



Front plate with regular MOBOTIX Thermal Sensor Module



Front plate with MOBOTIX Radiometry+ Thermal Sensor Module

WARNING!

- Always power down the camera before installing or replacing sensor modules. Unplugging or connecting sensor modules of a powered-on camera can irreparably damage the sensor modules and the camera!
- When installing the sensor modules or closing the camera housing, make sure that the sensor module cables are not damaged or bent sharply.

CAUTION!

Do not operate the camera until all three openings have been closed using either sensor or blind modules.

Open the Module Housing

To remove the factory-installed front plate, open the camera housing as outlined in [Opening the Module Housing](#), p. 49.

Removing the Security Clips

NOTE!

The procedure below only applies if you are adding a thermal front plate to a “regular” M73. If this is not the case, you can proceed to [Installing the Sensor Modules to the Thermal Front Plate](#), p. 59.



The security clips are protecting the sensor modules or the blind module in the front plate of the MOBOTIX M73 against theft and unwanted rotation (e.g., due to vibration when mounted on a pole or in an automotive scenario). If they are installed, you need to remove them before you can remove the sensor modules.

Procedure

1. **Open the module housing** (see [Opening the Module Housing, p. 49](#)).
2. **Remove the security clips:** Push the security clip slightly towards the sensor module ① and pull it out of its seat ② .

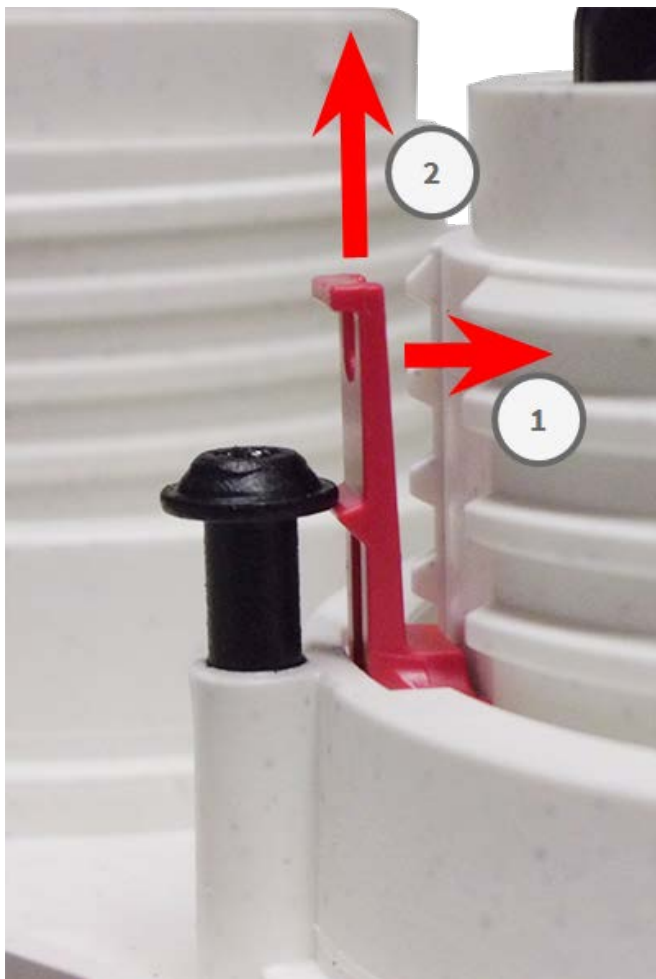


Fig. 6: Remove a security clip

3. Repeat steps 1 and 2 to remove the other security clips.

Proceed by [Removing Installed Sensor Modules, p. 56](#).

Removing Installed Sensor Modules

In some cases, e.g., when replacing modules, you need to remove the sensor modules. It's the same procedure for both, the default front plate and the thermal front plate.

Procedure

1. **Remove security clips:** If any security clips are installed, remove them (see [Removing the Security Clips](#), p. 55).
2. **Unlock sensor module cable:** Turn the blue bayonet catch counterclockwise from the connector of the sensor module until it releases and remove it.



Fig. 7: Unlock sensor module cable

Mounting

Installing a Thermal Front Plate

3. **Remove sensor module cable:** Pull the plug of the sensor module cable from the connector at the back of the sensor module.



Fig. 8: Remove the sensor module cable

4. **Unlock the sensor module:** Using the module wrench [M.1](#), turn the sensor module counter-clockwise until it stops.



Fig. 9: Unlock the sensor module

5. **Remove sensor module:** Pull the sensor module from its seat.



Fig. 10: Remove sensor module from the module housing

6. Repeat steps 1 to 3 for the remaining sensor modules.

Installing the Sensor Modules to the Thermal Front Plate

Since the Thermal module is pre-installed, you only need to install additional sensor modules (functional or optical).

1. **Prepare the sensor module:** Remove the bayonet catch by rotating it counter-clockwise, then remove the blue rubber plug.

CAUTION!

If the plastic nut has been installed, remove it.
This nut will **not** be used any more in the mounting process.



Mounting

Installing a Thermal Front Plate

2. **Insert sensor/functional modules into Thermal front plate:** Push the sensor module into its seat. The arrow on the back of the module points to 9 o'clock when looking at the module as shown.



3. **Lock the sensor module:** Using the module wrench [M.1, p. 21](#), turn the sensor module clockwise until it stops.



CAUTION!

If you cannot turn the sensor module, it has been inserted the wrong way! Remove the sensor module, rotate it by 180 degrees and insert it again.

4. Properly connect the sensor module cables:

The sensor module cables are numbered (small colored rings next to the connectors, see figure below).

CAUTION!

When attaching sensor modules, make sure that these rules are followed:

- The MOBOTIX MOBOTIX M73 can be equipped with these types of modules:
 - A maximum of two optical modules can be used.
 - A maximum of two functional modules can be used.
 - One thermal module can be used instead of one **optical** module (see [Installing the Sensor Modules to the Thermal Front Plate, p. 59](#)).

Applicable to newer thermal sensor module types Mx-O-M7SB-640R050, Mx-O-M7SB-640T050, Mx-O-M7SB-336R100, MX-O-M7SB-336T100 (see [Technical Specifications, p. 23](#)):

- Use the following sensor module cables for these types of modules:
 - **Cables ① and ②** : Optical, functional or thermal modules. **No audio module.**
 - **Cable ③** : Functional or thermal modules. **No optical modules.**

Applicable to other thermal sensor module types (see [Technical Specifications, p. 23](#)):

- Use the following sensor module cables for these types of modules:
 - **Cables ① and ②** : Optical or functional modules. **No thermal modules, no audio module.**
 - **Cable ③** : Functional or thermal modules. **No optical modules.**

When positioning the modules, you are free to choose the individual module positions (with the exception of the thermal sensor module, since it is pre-installed on a special front plate).

Push the plug of each sensor module cable **firmly** into the connector at the back of the module until the connector is fully inserted into its seat.

If this is not the case, again push the connector firmly into its seat until it doesn't go in any further.



Mounting

Installing Security Screws

5. **Lock sensor module cable:** Apply the blue bayonet catch onto the connector of the sensor module as shown and turn it clockwise until it gently snaps shut.



6. Repeat steps 3 to 6 for the remaining sensor modules or the blind module [1.5, p. 18](#), respectively.

CAUTION!

The sensor modules are not yet protected against theft and unwanted rotation (e.g., due to vibration). It is thus highly recommended to install the security clips [M.4, p. 21](#). Proceed as outlined in [Installing the Security Clips, p. 51](#).

7. Proceed with [Closing the Module Housing, p. 52](#).

CAUTION!

Do not operate the camera until all three openings have been closed using either sensor or blind modules.

Installing Security Screws

For theft protection, the standard housing screws can be replaced by security screws.

NOTE!

The security screws are not included in the standard scope of delivery and can be ordered separately (order number: Mx-M-SEC-SCREWS-SET).

The set contains a total of 7 security screws with pin, a special tool to loosen the security screws to loosen the safety screws, and 4 cover caps (2 for direct installation and 2 as replacements).

WARNING!

Make sure the power supply to the camera is disconnected before installing or replacing the security screws.



NOTE!

To ensure basic stability of the camera during the replacement procedure, you should replace one screw at a time.

1. If applicable remove the rubber plug from the relevant housing screws (see figure above).
2. Using the supplied 5 mm Allen wrench [M.6, p. 21](#), remove the screw.
3. Using the special tool, replace the standard screw with a safety screw of the same size.
4. Repeat the steps for the remaining standard housing screws.
5. To prevent humidity and dirt from entering the camera, push the rubber plugs back into the openings of the screws ① , ⑥ and ⑦



6. Push the new plastic plugs into the openings of the screws ② and ③ .



Mounting Options

You can mount the MOBOTIX M73 to any even surface on a wall or to poles with up to 180 mm/7.1" diameter using the stainless steel pole mount that is available as accessory. The concealed cabling improves security of the installation.

CAUTION!

- Install only on a flat surface! Unevenness must not exceed 0.5 mm/0.02 in!
- Only use genuine MOBOTIX patch cables to guarantee the weatherproofness!


The mounting plate [1.6, p. 19](#) has been dimensioned to fully cover conventional flush-mounted sockets (without frame) or cavity sockets.

NOTE!

- Before mounting the camera, determine its ideal position and make sure that the field of view is not obstructed in any way. Once the camera has been mounted, you can fine-tune the image.
- If the monitored area changes or the camera has to be installed in a different location, you can simply exchange the sensor modules.

Tiltability when mounted

- horizontally: 2 x 180 degrees
- vertically: 110 degrees

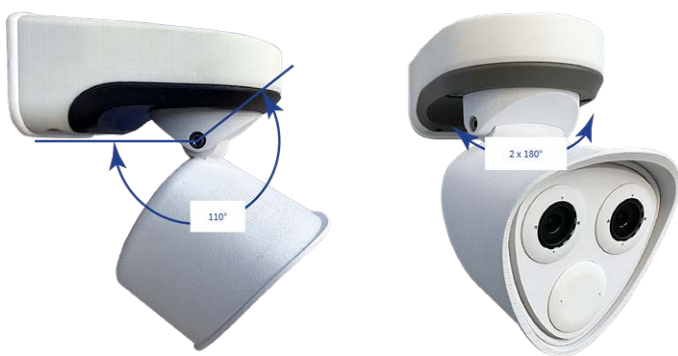

Mounting to a Wall

Before mounting the camera, make sure that a network connection with power supply according to the PoE Plus (802.3at-2009) standard is available at the mounting position (see [Connecting the Camera to the](#)

Network, p. 74).


NOTE! Drilling template: www.mobotix.com > Services > Download Center > Marketing & Documentation > Drilling Templates.

NOTE!

Do not use the dowels if the installation surface is wood. Only use the screws to fasten the mounting plate directly on the surface. In order to facilitate screwing in wood, the positions should first be pre-drilled using a 2 mm drill bit, for example (drilling depth just slightly less than screw length).

Preparing the Wall

1. Mark the holes for drilling using the drilling template (see [Drilling Template, p. 13](#)). When drilling, use a suitable 8 mm drill bit and drill holes with at least 60 mm/2.36 in depth.
2. Fully push the dowels [M.13, p. 22](#) into the holes you drilled.

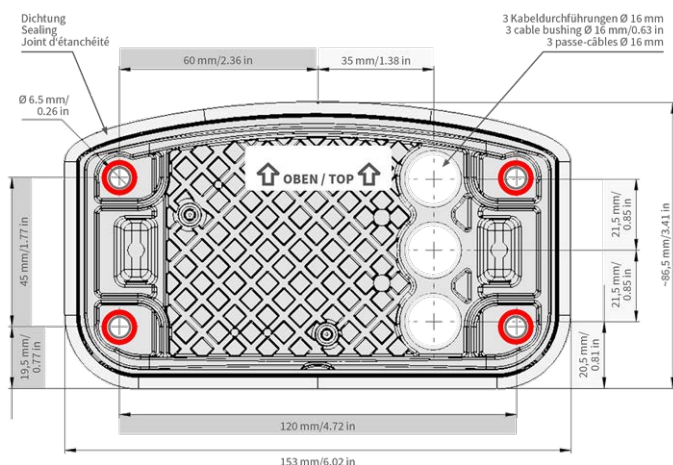

Prepare the Mounting Plate When Using the Connector Box RJ45

1. Connect the supplied patch cable [1.7, p. 19](#) of the camera with the network connection of the building (see [Connecting the Camera to the Network, p. 74](#)).

CAUTION!

To prevent damage from condensation, using supplied patch cable [1.7, p. 19](#) with sealing is mandatory.




2. The supplied network cable [1.7, p. 19](#) has an integrated rubber sealing. Push the network cable through the top hole of the mounting plate, so that the funnel of the rubber plug ① points toward the camera.




Prepare the Mounting Plate when using the Connector Box LSA

1. Cut the tip of the upper white plug in the mounting plate ① and two steps of the lower white plug in the mounting plate ② :

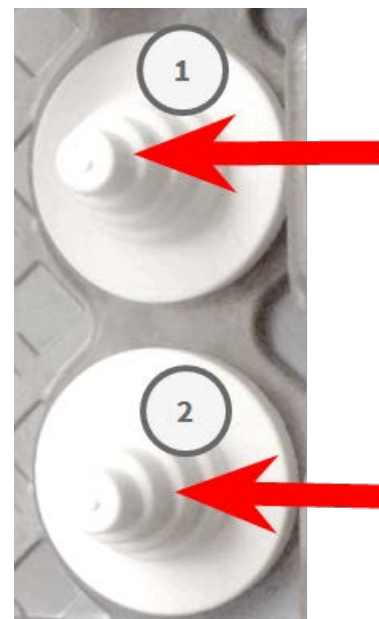

2. Rearrange the plugs in the mounting plate as required.
3. Guide the ground wire through the upper cable plug ① and the network cable through the lower cable plug ② of the mounting plate as shown:

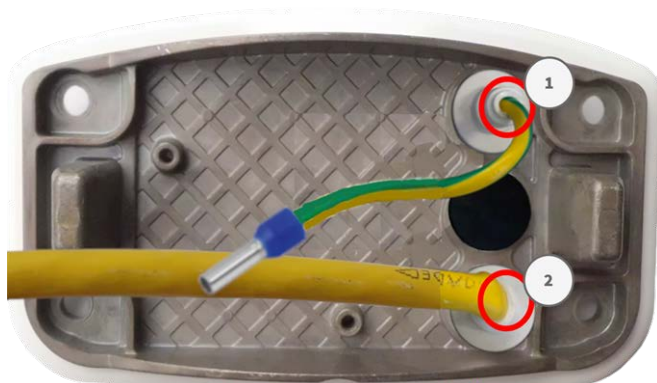

Installing the Mounting Plate

Place the mounting plate over the drilled holes (red circles in figures below) and use the four screws [M.12, p. 22](#) with one washer [M.11, p. 22](#) each and the TORX wrench TX20 [M.8, p. 21](#) to mount the plate to the wall.

CAUTION!

Install on flat surface only. Unevenness must not exceed 0.5 mm/0.02 in.

Connector Box RJ45



Fig. 11: Installed and ready for Connector Box RJ45

Connector Box LSA



Fig. 12: Installed and ready for Connector Box LSA

Mounting to a Pole

CAUTION!

Before mounting the camera, make sure that a network connection with power supply according to the PoE Plus (802.3at-2009) standard is available at the mounting position (see [Connecting the Camera to the Network](#), p. 74).

CAUTION!

The mounting pole should have a diameter between 60 and 180 mm.

Dimensions of the MOBOTIX M73 pole mount

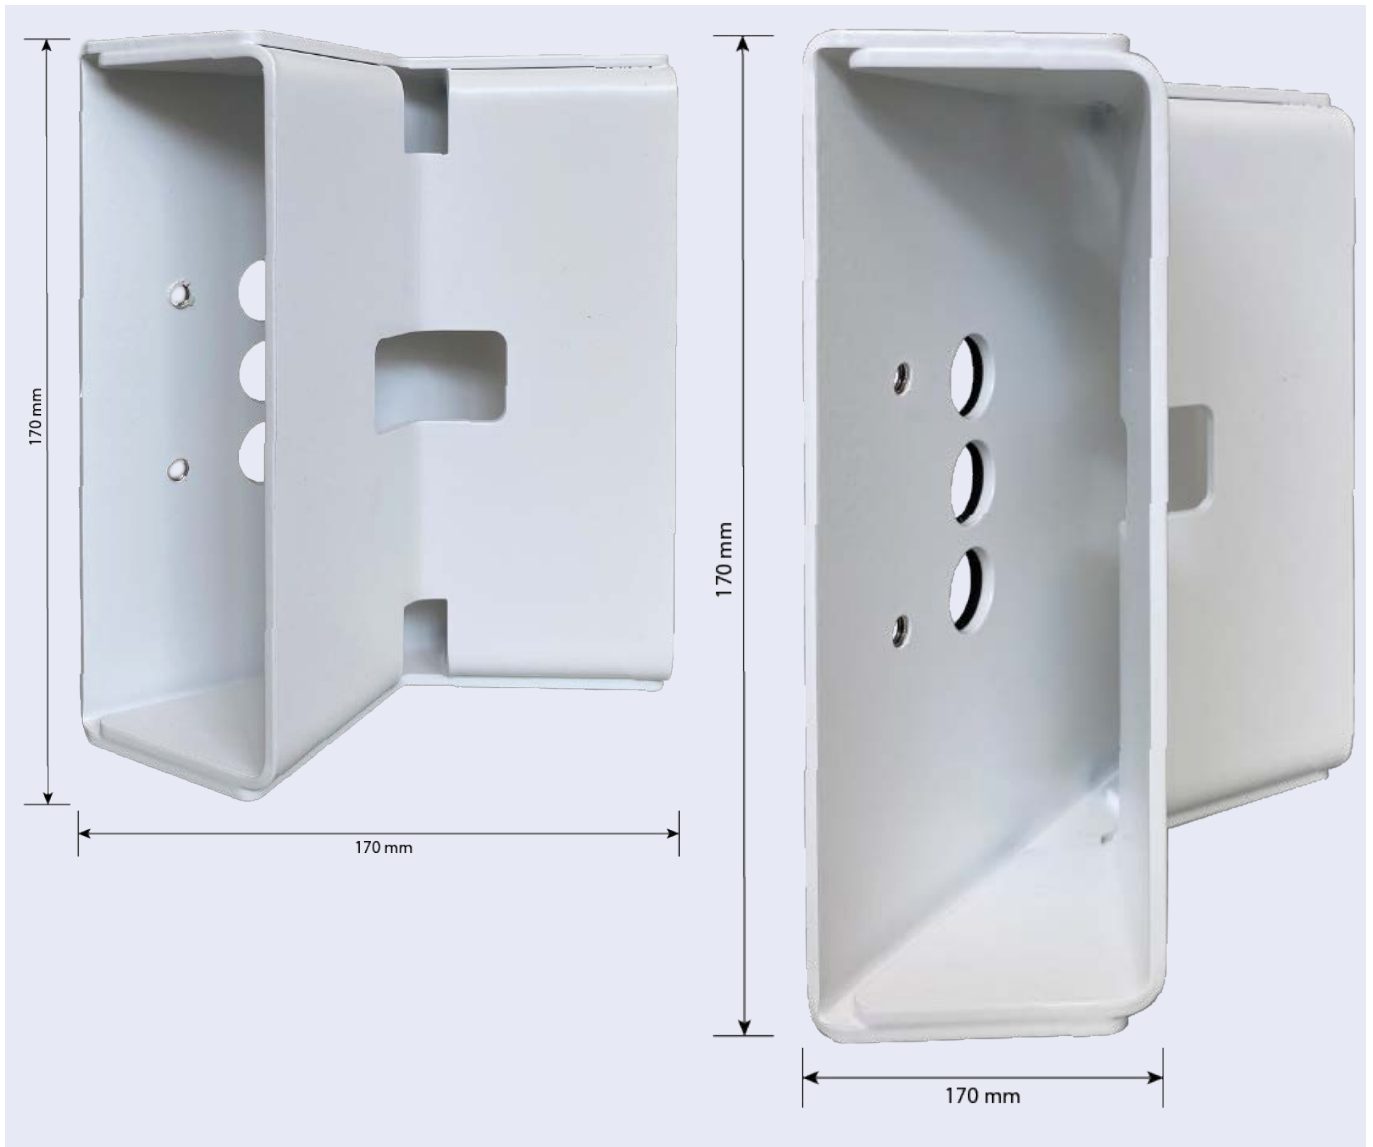


Fig. 13: Dimensions M73 pole mount – rear view

Fig. 14: Dimensions M73 pole mount – side view

Prepare the Pole Mount

1. Guide the supplied stainless steel straps along the cutouts in the Pole Mount as shown in the figure.



2. Tighten the stainless steel straps on the Pole Mount with a screwdriver. If necessary, the ends of the straps can be cut off.



3. Push the supplied network cable (Connector Box RJ45) through the upper hole ① or the yellow network cable (Connector Box LSA) through the lower hole ② of the mounting plate

Connector Box RJ45

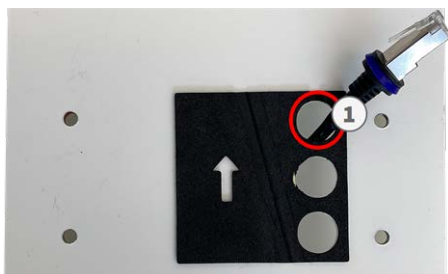


Fig. 15: Prepared for Connector Box RJ45

Connector Box LSA

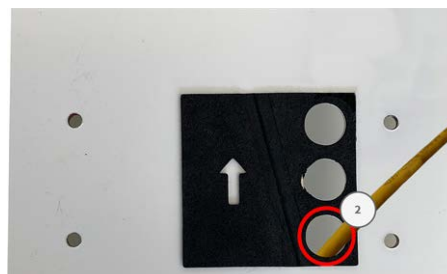


Fig. 16: Prepared for Connector Box LSA

Prepare the Mounting Plate When Using the Connector Box RJ45

1. Connect the supplied patch cable 1.7, p. 19 of the camera with the network connection of the building (see [Connecting the Camera to the Network, p. 74](#)).

CAUTION!

To prevent damage from condensation, using supplied patch cable 1.7, p. 19 with sealing is mandatory.



Mounting


Mounting Options

2. The supplied network cable [1.7, p. 19](#) has an integrated rubber sealing. Push the network cable through the top hole of the mounting plate, so that the funnel of the rubber plug ① points toward the camera.




Prepare the Mounting Plate when using the Connector Box LSA

1. Cut the tip of the upper white plug in the mounting plate ① and two steps of the lower white plug in the mounting plate ② :

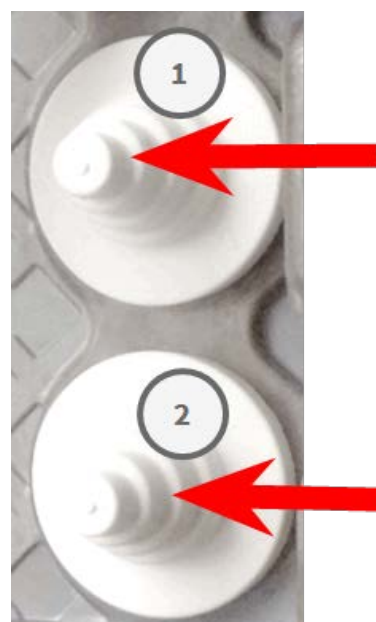

2. Rearrange the plugs in the mounting plate as required.

3. Guide the ground wire through the upper cable plug ① and the network cable through the lower cable plug ② of the mounting plate as shown:

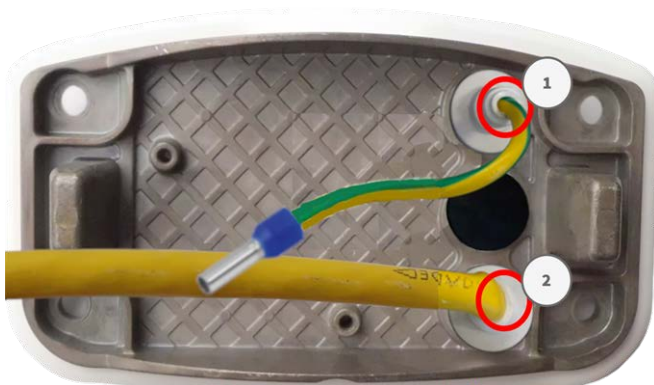

Installing the Mounting Plate

Place the mounting plate over the drilled holes (red circles in figures below) and use the four screws [M.12, p. 22](#) with one washer [M.11, p. 22](#) each and the TORX wrench TX20 [M.8, p. 21](#) to mount the plate to the wall.

CAUTION!

Install on flat surface only. Unevenness must not exceed 0.5 mm/0.02 in.

Connector Box RJ45



Fig. 17: Installed and ready for Connector Box RJ45

Connector Box LSA



Fig. 18: Installed and ready for Connector Box LSA

Connecting the camera

All connections to the camera (network, power supply, inputs/outputs) can be made on the camera's connector box. No further accessories are required for this. A PoE switch provides the camera's power supply.

Connecting the Camera to the Network

There are two ways to connect the camera to the network - with the Connector Box RJ45 or with the Connector Box LSA. A PoE switch provides the camera's power supply.

NOTE!

- An EN54-4 certified power supply must be used.
- The PoE switch must provide Class 4 according to PoE Plus (802.3at-2009) as well as the 100/1000 Mbps Ethernet interface of the camera.
- The maximum length of the network cable for remotely supplying power is 100 m (300 ft).



Fig. 19: Power supply using PoE switch according to PoE Plus (802.3at-2009).

Network connection with the Connector Box LSA

An Connector Box LSA is required to connect the camera to the network, to supply power via PoE and to protect the camera from electrical surge. The Connector Box LSA is not part of the scope of delivery (see [Delivered Parts and Dimensions](#)) and must be ordered separately.



Fig. 20: Connector Box LSA with rubber plug black C.3 ① , rubber plug single-wire C.4 ② , USB plug ③ and two blue locks

NOTE!


You will need an LSA+/Krone tool for this procedure:



Fig. 21: LSA+/Krone tool

Prepare Mounting Plate and Cables

1. Cut the tip of the upper white plug in the mounting plate ① and two steps of the lower white plug in the mounting plate ② :

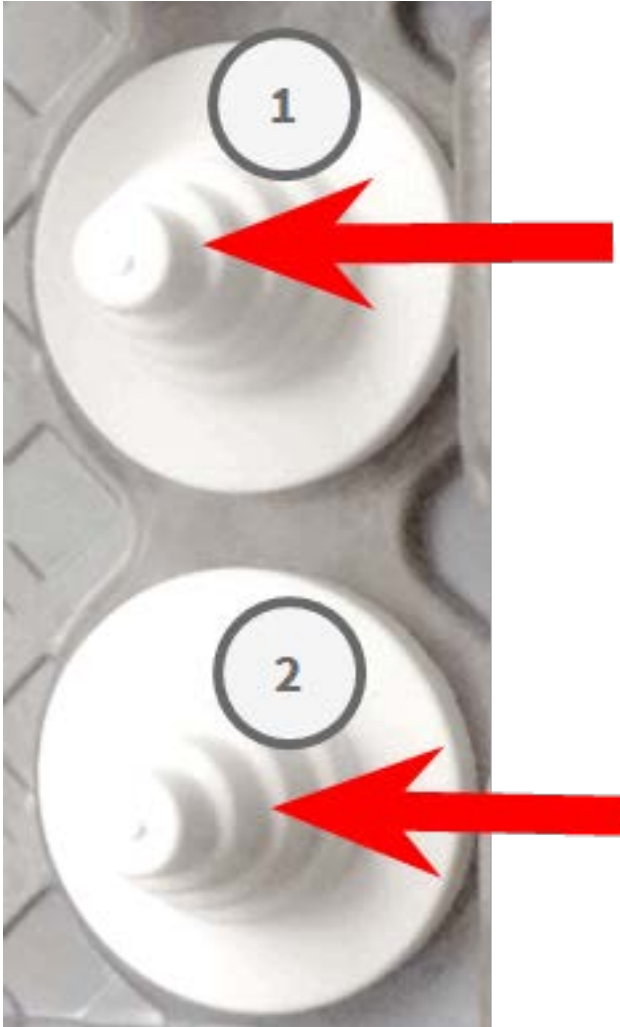

2. Rearrange the plugs in the mounting plate as required.

3. Guide the ground wire through the upper cable plug and the network cable through the lower cable plug of the mounting plate as shown:




Fig. 22: Mounting plate with ground wire and network cable

4. Insert the network cable into the white rubber plug C.5:



Fig. 23: Network cable with rubber plug C.5

5. Remove the insulation from the network cable as shown below:

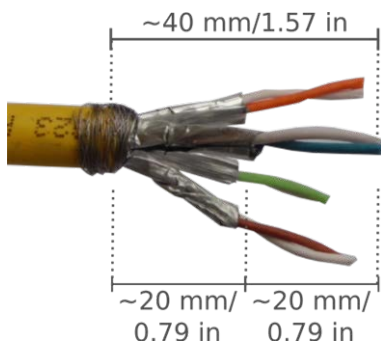

Attach the Network Cable to the Connector Box

1. Remove the black plug from the left-hand opening (plug ① in Connector Box LSA with rubber plug black C.3 ① , rubber plug single-wire C.4 ② , USB plug ③ and two blue locks, p. 75.

Mounting

Connecting the camera

2. Insert the network cable into the connector box and make sure the rubber plug is properly seated all around the opening:



Fig. 24: Network cable inserted, plug properly seated

3. Insert the cable tie into the blue guides and tie down the network cable onto the copper-colored ground plate:

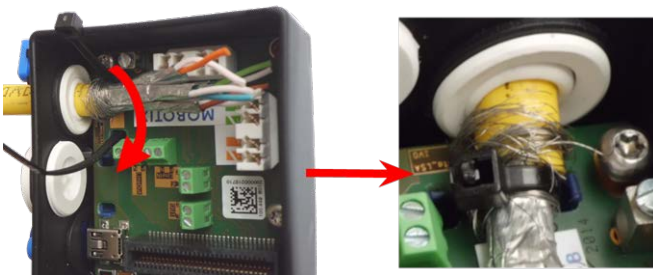


Fig. 25: Cable tie inserted beneath network cable

4. Prepare the LSA+/Krone tool:

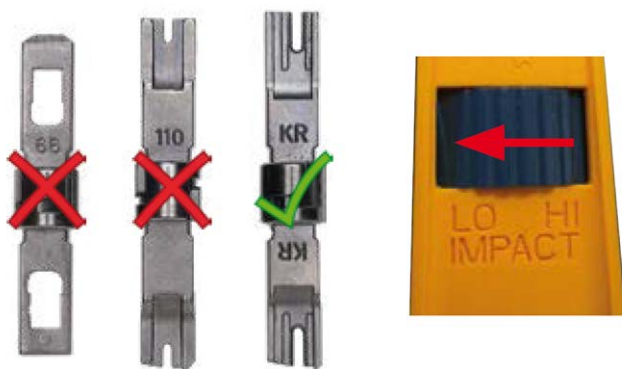


Fig. 26: LSA+/Krone tool set to LOW impact

CAUTION!

Always use the proper LSA+/Krone blade and **set the tool to LOW impact.**

5. Connect the wires of the network cable using the LSA+/Krone tool according to the color code sticker inside the box:



Fig. 27: Network wires connected using LSA+/Krone tool

CAUTION!

Remove all clipped wire ends to prevent short circuits!

Mounting

Connecting the camera

6. Insert the ground wire into the white single-wire rubber plug C.4:

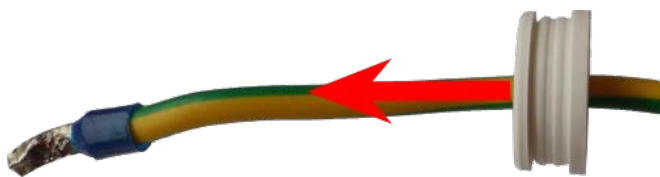


Fig. 28: Ground wire with single-wire rubber plug C.4

WARNING!

For surge protection it is strongly recommended to attach the ground wire!

The maximum length of the ground wire should be 1 m/3.28 ft to the ground potential (e.g. a potential equalization rail, a grounded pole or a grounding rod).

7. Insert the ground wire into the connector box and make sure the rubber plug is properly seated all around the opening:

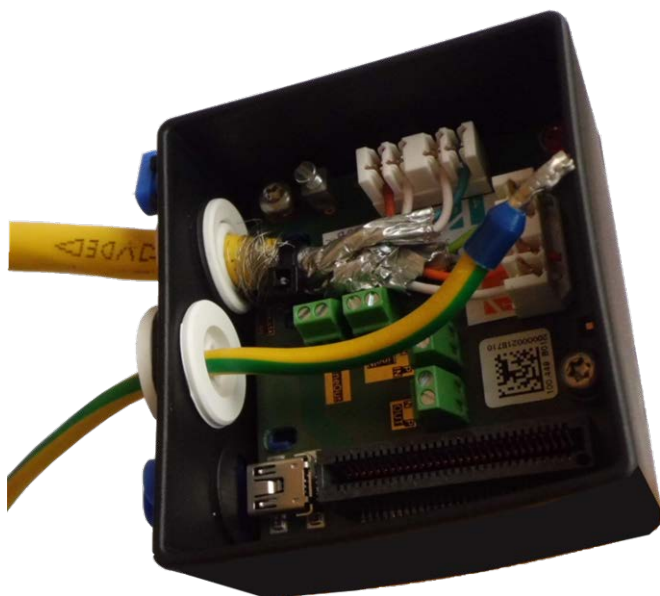


Fig. 29: Ground wire inserted, plug properly seated

- Loosen the screw of the ground wire terminal, insert the ground wire and properly fasten the screw of the terminal:



Fig. 30: Ground wire connected to terminal

- Using the TORX wrench TX10 [M.9](#), [p. 21](#) and the two pre-mounted screws (highlighted red in the figure), fixate the connector box on the mounting plate:

NOTE!

These are self-tapping screws. Make sure to properly tighten but do not over tighten them.



Fig. 31: Mount the Connector Box LSA (top view) using the two screws (highlighted red in the figure) on the mounting plate

CAUTION!

Make sure that the connector box is properly fastened on the mounting plate as shown above. Failing to do so could damage the mainboard of the camera!

Continue with [Finishing the Installation of the Camera](#), [p. 85](#).

Network connection with the Connector Box RJ45



1. Remove the black plug from the left-hand opening ① .
2. Plug the supplied network cable 1.4 into the network connector ① of the connector box.
3. Connect the other wires/cables as required (inputs/outputs, USB).
4. Secure the connector of the network cable by turning the blue lock clockwise as shown:



- Using the [Mounting Supplies: Scope of Delivery, p. 21](#) and the two pre-mounted screws (highlighted red in the figure), fixate the connector box on the mounting plate:

NOTE!

These are self-tapping screws. Make sure to properly tighten but do not over tighten them.




CAUTION!

Make sure the connector box is properly fastened on the mounting plate as shown above. Failing to do so could damage the main board of the camera!


Continue with [Finishing the Installation of the Camera, p. 85](#).

Terminal Connectors

All connections to the camera (network, power supply, inputs/outputs) can be made directly on the connector box which part of the camera. A PoE switch provides the camera's power supply (see [Connecting the Camera to the Network, p. 74](#)).

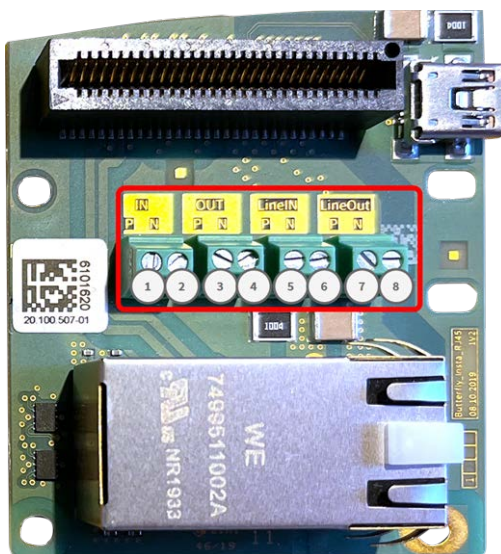

Terminal connectors Connector Box RJ45

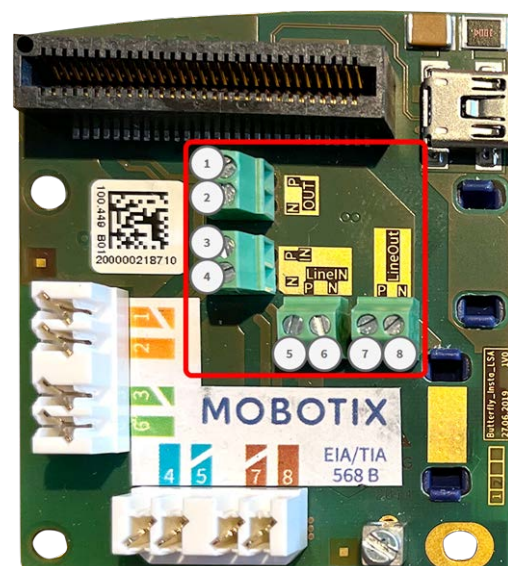

Terminal connectors Connector Box LSA

CAUTION!

Observe the technical specifications of the connector boxes (see [Connector Box LSA/Connector Box RJ45](#), p. 37).

Example: switching an LED light using the P7 outputs

The outputs in the M73 interface board are using an optocoupler with an open collector.


- The outputs will require the use of an external DC power supply up to 50 volts.
- The optimal output current of the optocoupler output is around 10mA.
- The maximum limit of the output current is 50mA.
- This must be maintained by an external pull-up resistor.

NOTE!

They outputs are not capable of dry connect closure or direct use with AC power

The example shows a simple low voltage low current application such as switching an LED light using the P7 outputs.

The value of the pullup resistor depends on the forward voltage of the LED at the specific current you want to run through it.

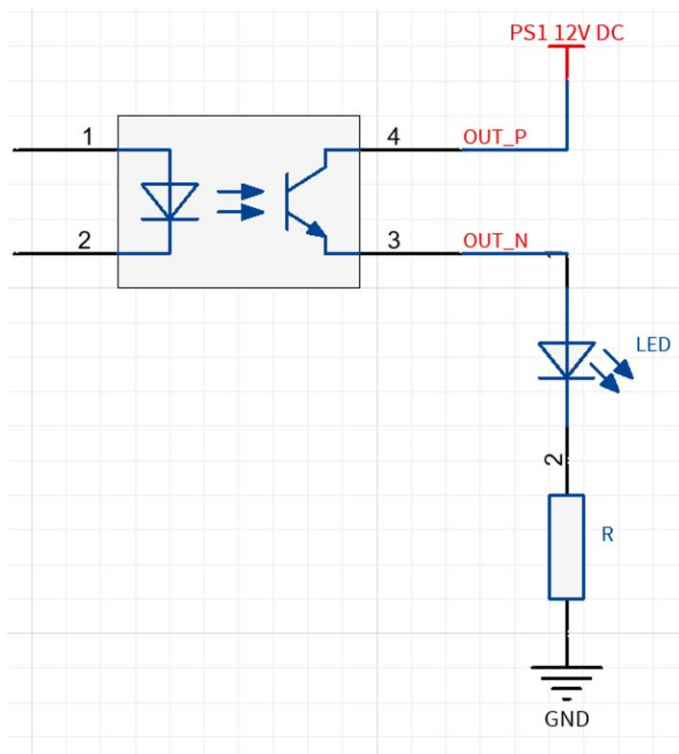

EXAMPLE:

- Amperage through LED: 10mA
- LED Forward Voltage @ 10mA: 2 V
- Power supply: 12V DC
- Resistor value = $(12V - 2V) / 10mA = 1 \text{ k}\Omega$

NOTE!

For further examples take a look at the MOBOTIX Online Community: <https://community.mobotix.com/>

Finishing the Installation of the Camera

To finish the installation of the MOBOTIX M73, the entire camera is mounted onto the mounting plate using the two lock screws. The connections of the camera are established automatically. The installation is finished by applying the remaining cover plugs to ensure the water-proofness of the housing.



You will need:

- Allen wrench 5 mm [M.6, p. 21](#)
- 2 housing plugs silicone white [M.3, p. 21](#)
- 2 caps for screw plastic white [M.15, p. 22](#)

Mounting

Finishing the Installation of the Camera

1. Press the camera body onto the installed mounting plate, so that the wall sealing snugly seals off the camera body.



2. Tighten the two Allen screws using the Allen wrench [Mounting Supplies: Scope of Delivery](#), p. 21.



Mounting

Finishing the Installation of the Camera

3. Insert the two housing plugs [M.3, p. 21](#) firmly into the holes of the fastening screws.



4. Roughly point the camera into its direction of view.
5. Fixate the camera by tightening the two Allen screws (① , panning) and the two Allen screws (② , tilting) of the center pivot.

NOTE!

To properly point the camera into the desired direction of view, read the section [Adjust the Camera](#).



6. Press the two covers [M.15, p. 22](#) onto the two Allen screws (② , upper figure) of the center pivot.



Operating the Camera

This section contains the following information:

Getting Started	91
Boot Options of the Camera	93
Initial Camera Setup	95
Focusing the TELE 15° Sensor Module	100

Getting Started

You can use the MOBOTIX M73 with any current browser – or with MxManagementCenter.

You can download MxManagementCenter free-of-charge from www.mobotix.com > [Services > Download Center > Software Downloads](#).

1. **Connect the camera to the network.** The network cable will also provide power to the camera (see [Connecting the Camera to the Network](#), p. 74).
 1. **Establish a connection to the camera and adjust the network settings if required:** By factory default, MOBOTIX cameras are booting as DHCP client with an additional fixed IP address in the 10.x.x.x range (e.g., 10.16.0.128). Local computer networks usually have IP addresses in the 172 or 192 ranges. Depending on whether a DHCP server is present on the local network or if the network has been set up to use fixed IP addresses, there are several possibilities for establishing a connection to the camera and to change its [Network Settings](#):
 - **Network with dynamic IP addresses**

Using a browser: If you know the IP address that the DHCP server assigned to the camera, simply enter that address in the browser address bar to directly connect to the camera


Using MxManagementCenter: With MxManagementCenter, you can show and integrate the camera without having to know its current IP address.
 - **Network with static IP addresses**

In order to access the camera, it must have an IP address within the range of the local network. To set the camera's network parameters, you can use one of these methods:

Manually using a web browser: You may have to adjust the network settings of your computer.
 - **Automatically using MxManagementCenter:** The camera is displayed in MxManagementCenter although the IP address is not part of the local network, allowing you to reconfigure its settings.
2. **Configure camera:** You can use the user interface of the camera in a browser or in MxManagementCenter.

LED states

Camera LED on top of the camera body displays the following states by default:

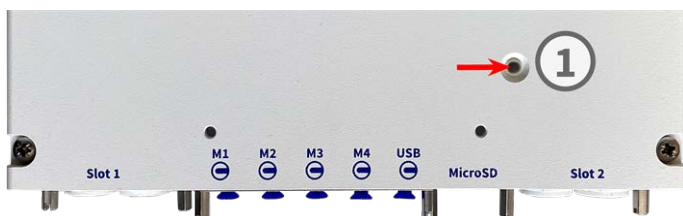

LED status

Meaning

green steady on	normal operation
green steady flashing	technical error or misconfiguration

Boot Options of the Camera

By default, the camera starts as DHCP client and automatically tries to get an IP address from a DHCP server. To start the camera in a mode different from the default mode, you can activate the boot menu of the camera.

NOTE!

Pressing the key of the camera will let the camera announce the current IP address of the camera on the speaker.

1. Disconnect the camera's power supply.
2. Remove the Allen screw ② using the Allen wrench 2.5 mm [M73: Scope of Delivery, p. 18](#). Take care not to loose the plastic washer.
3. Take a suitable tool for operating the boot menu (e.g. the enclosed screwdriver [M73: Scope of Delivery, p. 18](#) or the Allen wrench 2.5 mm [M73: Scope of Delivery, p. 18](#)), **but do not use a paper clip or pointed objects!**
4. Reconnect the power supply of the camera.
5. **Activate the boot menu:** The red LED ① lights up 5 to 10 seconds after establishing the power supply and will stay on for 10 seconds. Press the key by inserting the tool into the hole ②. The camera enters the boot menu, ready for selecting one of the boot options. The LED will flash once. The flash signal will be repeated every second.



NOTE!

The number of flashes corresponds to the current boot option.

6. **Switch the boot option:** Briefly press the key (< 1 sec). After the last boot option, the camera returns to the first boot option (LED flashes once).

Operating the Camera

Boot Options of the Camera

7. **Select a boot option:** Press the key longer (> 2 sec). The camera confirms the selection by flashing the LED rapidly for 3 seconds. After 20 sec, the camera will play a sound according to the table below.

LED Flashes	Boot Option	Meaning	Audio Confirmation
1x	•/•	This option is not supported on this camera model.	•/•
2x	Factory Defaults	Starts the camera with factory defaults (factory default IP address, users and passwords will not be reset).	Boing
3x	Automatic IP Address	Starts the camera as DHCP client and tries to obtain an IP address from a DHCP server. If a DHCP server cannot be found or no IP address can be obtained, the camera starts with its factory default address.	Boing-Boing
4x	Backup Operating System	Starts the camera with the recovery system, e.g., in order to recover from a failed update of the camera software.	Alarm Sound

8. Insert the Allen screws and the plastic washer using the Allen wrench 2.5 mm M.7 and take care not to over-tighten the screw.

NOTE!

If you do not select a boot option, the camera will resume its normal boot process after a certain time.

CAUTION!

- Note that you can restore specific parts of the camera configuration afterwards by using "Restore" to re-apply the settings still stored in the camera.
- As opposed to resetting the camera using **Admin Menu > Reset configuration to factory defaults**, the user information will not be reset if the camera is booted using the factory defaults.
- When starting the camera with DHCP support (option 2), make sure that the network has a properly functioning DHCP server. If this is not the case, the camera cannot obtain a valid IP address and will fall back to its last IP address.
- You should also make sure that the cameras always get the same IP addresses by mapping the MAC addresses of the cameras to the desired IP addresses.

Initial Camera Setup


Check the Preconditions

- Is the camera running (check camera power LED)?
- Is the camera accessible using my current network connection?
- Do I have the necessary information for successfully running the camera on the network?
 - IP address of NTP (*Network Time Protocol*) server.
 - IP address of network gateway (if required).

Access the Camera

1. Start your web browser.
2. Access the camera using its zeroconf address:
 - Look for the factory IP address such as `10.x.y.z` on the sticker on the camera body or the packaging.
 - Enter this address in the address bar of your browser using the following syntax: `mx10-x-y-z.local`.


EXAMPLE: Taking a factory IP address of `10.32.24.129` as an example, you would enter `mx10-32-24-129.local` in the address bar of your browser.

 - Click on **Admin Menu** and enter the default access credentials (`admin/meinSM`).
3. In the **Quick Installation** dialog, select your language, then click on .



Operating the Camera

Initial Camera Setup


4. Continue clicking on  and do not change any settings until you reach the **Security** dialog. Set a password for the admin user of the camera. Make sure you keep the password in a safe place.


Security

Access to the camera is managed using a *user name* and *password*. The factory-preset administrator of the camera has the name **admin** and the password **meinsm**.

You **must** change the default password of the administrative account for security reasons!

Set a new password for the **admin** user:


Password: 

Retype Password: 

Make sure you write down the password and store it in a safe place!

Note: If the administrator password is no longer available, you will have to send the camera back to MOBOTIX for a factory reset!



NOTE! Make sure to record the new password in the system documentation!

5. Continue clicking on  and do not change any settings until you reach the **Country Settings** dialog. Check the time zone and adjust it, if necessary.

Country Settings

Select the timezone that is applicable to the location of the camera.

Timezone:

Europe  Berlin 

Current camera time: 2026-02-12 12:29:07 CET

Hint: you can set the camera time in **Admin Menu > Time and Date**.

6. Click on  and in the **Audio Settings** dialog, activate the devices that are available for this camera.

Audio Settings


The camera has a built-in microphone and speaker. If you press the camera's **R** key, the camera will announce its network data over the speaker.


Activate the following devices:

Microphone


Speaker


Note: if you need to permanently deactivate the microphone, open **Admin Menu > Speaker and Microphone**, click on **More**, and then on the **disable** link.

- Click on  and in the **Camera Name** dialog, enter a descriptive camera name.

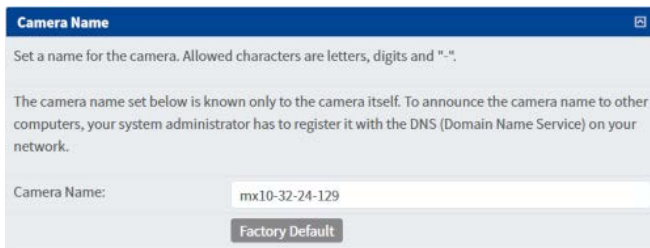


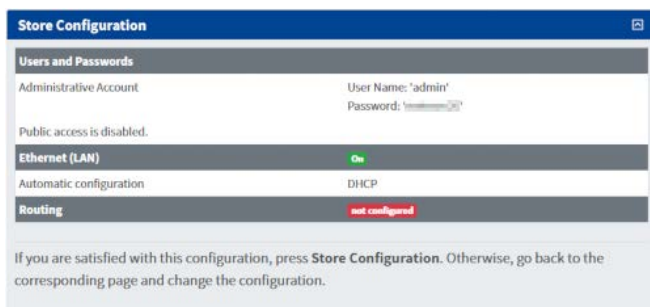
NOTE! Make sure to record this camera name in the system documentation!

- Continue clicking on  and do not change any settings until you reach the **Time Server** dialog. Enter the IP address of your network time servers as provided by your network administrator (e.g. 192.168.1.1 ptbtime1.ptb.de; use spaces to separate multiple addresses).

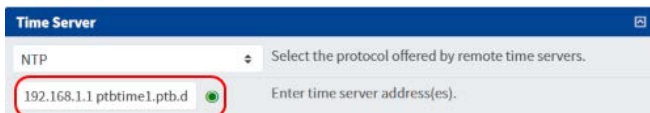


If the time server is working properly, the LED to the right of the field turns green. A red LED indicates that the server does not work properly.

- Click on  and review the information in the **Store Configuration** dialog. If everything is correct, print the page and include it in the system documentation.



- Click on **Store Configuration** and then on **Reboot**.

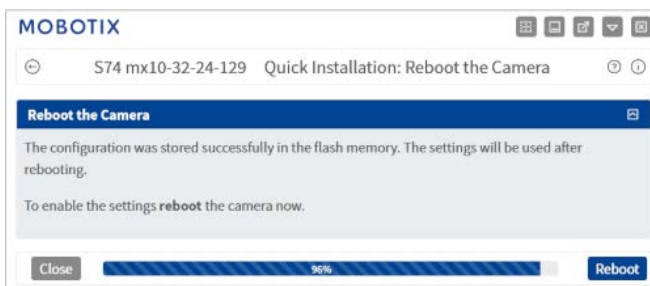


11. Enter the new password you entered in the **Security** dialog when prompted by the camera.
The camera will now reboot; once it is working again, you will see its live image.

Find the "Real" IP Address of the Camera

Since you are still using the `mx10-32-24-129.local` zeroconf address, you need to find out the actual IP address of the camera.

1. Click on the **Show Camera Status** icon ⓘ.
2. In the **Camera Status** dialog, click on **Networking**.
 - The **Camera Name** entry shows the camera's current fully qualified domain name.
 - The **BOOTP/DHCP** status *Client running, got a lease* shows that the camera properly received an IP address.
 - The **IP Address** entry shows the camera's current address.
3. You can use either the **Camera Name** (e.g. `mx10-32-24-129.fritz.box`) or the IP address (e.g. `192.168.1.210`) to access the camera from now on.
4. Open a new browser tab and enter the address (e.g. `mx10-32-24-129.fritz.box` or `192.168.1.210`), then enter the access credentials (`admin/<your new password>`).

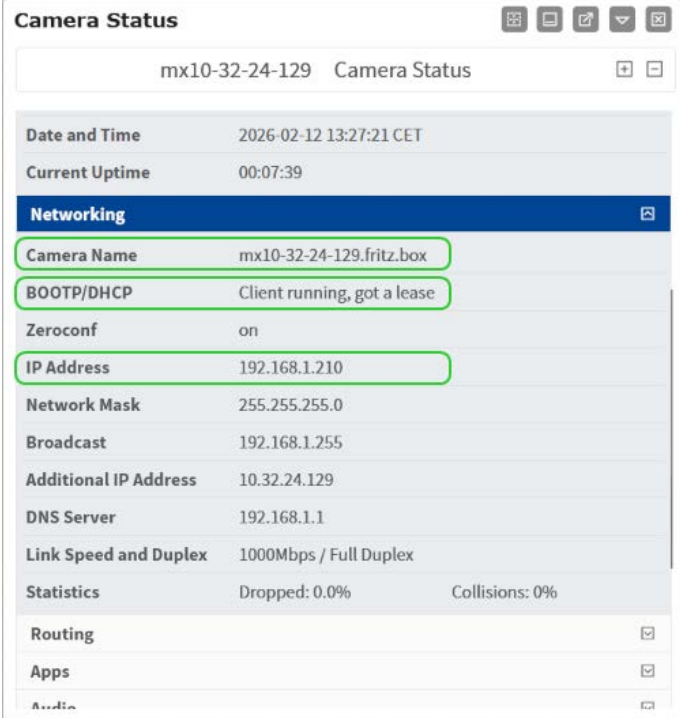

The screenshot shows the 'Camera Status' dialog box for a camera with ID 'mx10-32-24-129'. The 'Networking' section is expanded and highlighted in blue. Several entries in the Networking section are circled in green: 'Camera Name' (mx10-32-24-129.fritz.box), 'BOOTP/DHCP' (Client running, got a lease), and 'IP Address' (192.168.1.210). Other visible settings include Date and Time (2026-02-12 13:27:21 CET), Current Uptime (00:07:39), Zeroconf (on), Network Mask (255.255.255.0), Broadcast (192.168.1.255), Additional IP Address (10.32.24.129), DNS Server (192.168.1.1), Link Speed and Duplex (1000Mbps / Full Duplex), and Statistics (Dropped: 0.0%, Collisions: 0%).

Camera Status	
mx10-32-24-129 Camera Status	
Date and Time	2026-02-12 13:27:21 CET
Current Uptime	00:07:39
Networking	
Camera Name	mx10-32-24-129.fritz.box
BOOTP/DHCP	Client running, got a lease
Zeroconf	on
IP Address	192.168.1.210
Network Mask	255.255.255.0
Broadcast	192.168.1.255
Additional IP Address	10.32.24.129
DNS Server	192.168.1.1
Link Speed and Duplex	1000Mbps / Full Duplex
Statistics	Dropped: 0.0% Collisions: 0%
Routing	
Apps	
Audio	

NOTE! Make sure to record this address in the system documentation together with the camera name!

Network Settings on the Camera in MxMC

MxManagementCenter is a video management software for setting up and using the entire video surveillance system that provides a range of functions for different tasks and user groups. You can download the newest release of MxManagementCenter from the MOBOTIX website (www.mobotix.com > Services > Download Center > Software Downloads, MxManagementCenter section).


When starting MxManagementCenter for the first time, the configuration wizard opens and automatically starts searching for MOBOTIX cameras. The number of found cameras is shown as a counter next to the **Add**

Devices icon. This number is updated automatically if the number of MOBOTIX cameras on the network has changed (i.e., by connecting new/disconnecting existing cameras).

1. Click on **Add Devices**. The cameras are displayed either in a list or as tiles. Use the List and Tile buttons to change the display mode.



The application automatically monitors and displays the operating status of all cameras using corresponding icons.

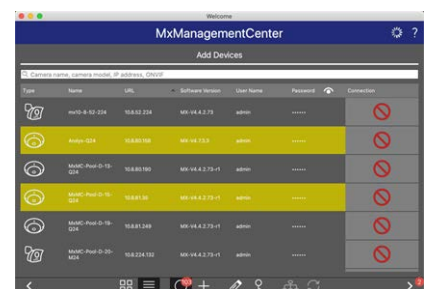

EXAMPLE:

- The camera is not in the same subnet as the computer.
- The user name and password of the camera are not known.

NOTE!

Using the Bonjour service ([en.wikipedia.org/wiki/Bonjour_\(software\)](https://en.wikipedia.org/wiki/Bonjour_(software))), the application finds not only MOBOTIX cameras on the same subnet, but also in other subnets. Normally, you would not be able to establish any connection to cameras in a different network or subnet.


NOTE!

This is the case, for example, if you are integrating cameras into a network without DHCP server (i.e. with fixed IP addresses) and the IP address range is different from the 10.x.x.x range supported by the cameras in addition to DHCP.

MxManagementCenter can automatically configure such a camera so that it is "integrated" into your existing network.

Operating the Camera

Focusing the TELE 15° Sensor Module

2. Select the camera you want to set up and click on **Edit Network Settings**  at the bottom of the program window. The **Change Network Settings for Selected Devices** dialog opens.
3. Enter the IP address and the subnet mask of the selected camera.



NOTE!

The IP addresses of the other cameras are automatically incremented by 1.


4. Click on **Apply** to apply the settings.

NOTE!

For more information on this feature, please read the MxManagementCenter online help or the Tutorial (see www.mobotix.com > Services > Download Center > Documentation > Brochures & Guides > Tutorials).

Focusing the TELE 15° Sensor Module

Once the camera has been mounted, the **TELE 15° sensor module** should be checked for proper sharpness. You will need the **lens wrench M.2** and the **module wrench M.1** that are part of the [M73: Scope of Delivery](#), p. 18.

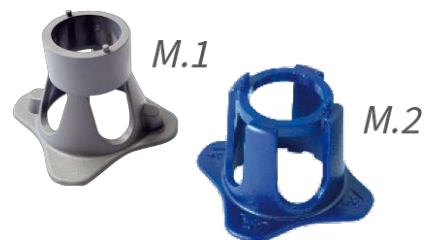


CAUTION!

When adjusting the image focus or the field of view of the camera, always make sure that you can see the live image of the camera on your monitor.

To correct image sharpness, you can also make use of the visual **focusing aid** of the camera (see the **Camera Reference Manual**, section **The Live View of the MOBOTIX Camera**)

1. Show the live image of the camera on your monitor.
2. Insert the lens wrench into the notches of the sensor module.


3. Turn the wrench counter-clockwise until it stops.

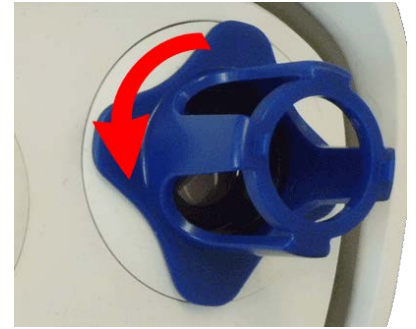

CAUTION!

If the red security clips M.14 have not been installed, the sensor module will also rotate! If this happens, keep on turning until the sensor module stops in its position for removal.

4. Rotate the wrench to the left until the lens protection glass slides out of the sensor module.
5. Insert the module wrench (with its two small pins) into the holes of the lens and cautiously turn to the left and to the right. Adjust the image sharpness according to the live image on the computer monitor:

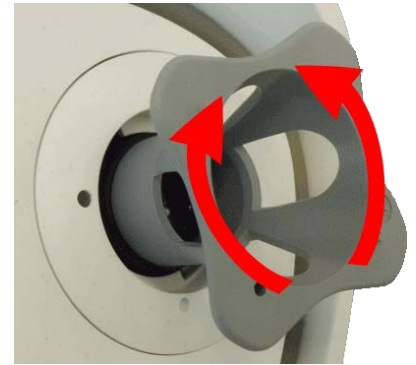

CAUTION!

Never apply force when turning the lens and never screw the lens too deep into the thread since this could damage the image sensor! If in doubt, keep turning the lens counter-clockwise, then turn clockwise to focus the lens.


6. If required, clean the inside of the lens protection glass with a clean, lint-free cloth.



Operating the Camera

Focusing the TELE 15° Sensor Module

7. Set the lens protection glass onto the notches of the lens wrench and position the protection glass with its two prongs over the corresponding receptacles of the sensor module:

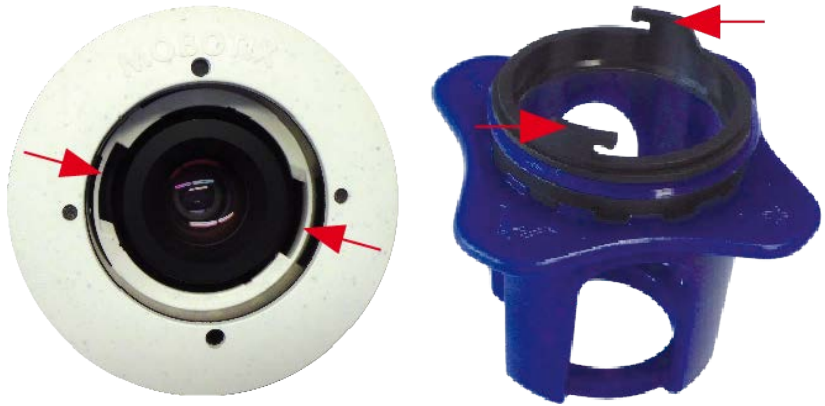

8. Using the lens wrench, press the lens protection glass firmly into the sensor module, until the glass fits flush with the sensor module housing.



9. Turn the lens protection glass clockwise using the lens wrench until it locks in place.
10. If required, clean the outside of the lens protection glass with a clean, lint-free cloth.

CAUTION!

After adjusting the focus, make sure that the sensor module is aligned properly and that it is locked in place (use the module wrench to turn the sensor module clockwise until it stops).

Camera Software in the Browser

This section contains the following information:

Access the Camera in the Web Browser	104
Basic Settings	105
Configuring Sensor Modules	106

Camera Software in the Browser

Access the Camera in the Web Browser


The integrated software of the MOBOTIX M73 features a multitude of functions, such as video motion detection, long-term recording, alarm messaging and video IP telephony. Especially remarkable are the AI-based analytics features and the possibility to install third-party apps on the camera. Thanks to the virtual PTZ features, you can continuously zoom into or out of the live image using either the mouse wheel or a joystick.

When recording images or video sequences, you can choose to store either the visible image area of the live image or the full sensor image. This also allows examining the parts of an image or video that had not been visible in the real-time image section on display at the time of the recording.

Instead of using a web browser, you can also download the free MxManagementCenter from the MOBOTIX website (www.mobotix.com > Support), which allows displaying multiple cameras on one monitor, allows for comfortably searching and evaluating the alarm video clips with audio and provides alerting features. For mobile iOS and Android devices, the free-of-charge MOBOTIX MOBOTIX LIVE App is available.

Access the Camera in the Web Browser

Once the power and network connection of the MOBOTIX have been established, you can access the interface of the camera software in a web browser.

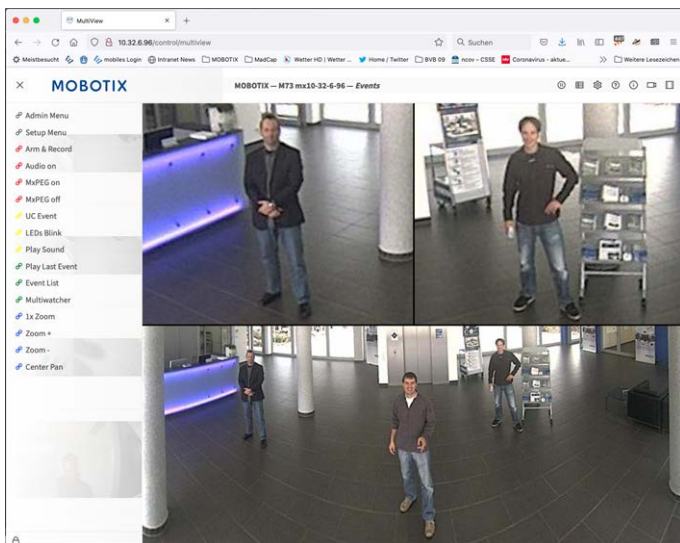

- Enter the camera's IP address in the address field of a web browser.

NOTE!

You can find the IP address of the camera, for example, in the camera housing or on the sticker on the packaging.

Basic Settings

NOTE!

You must change the password when logging in for the first time.

CAUTION!

Make sure that you store information on user names and passwords in a secure place.

If you lose the administrator password and cannot access the Administration menu, the password can only be reset at the factory. This service is subject to a service charge.

The Quick Installation Wizard will appear automatically when accessing the Administration Menu for the first time. It provides an easy method to adjust the basic camera settings to the current application scenario. For security reasons, it is highly recommended to change the default administrator password after the camera has been configured properly.


Administering the camera: You can modify the camera configuration in the Administration Menu or the Setup Menu:

- **Admin Menu:** This menu contains the basic configuration dialogs of the camera (e.g. passwords, interfaces, software update).
- **Setup Menu:** This menu contains the dialogs for configuring the image, event and recording parameters. Some of these settings can be changed using the corresponding Quick Controls in the Live screen.

NOTE!

For more information, consult the Reference Manual of the camera (see www.mobotix.com > [Services](#) > [Download Center](#) > [Marketing & Documentation](#) > [User Manuals](#)).

Configuring Sensor Modules

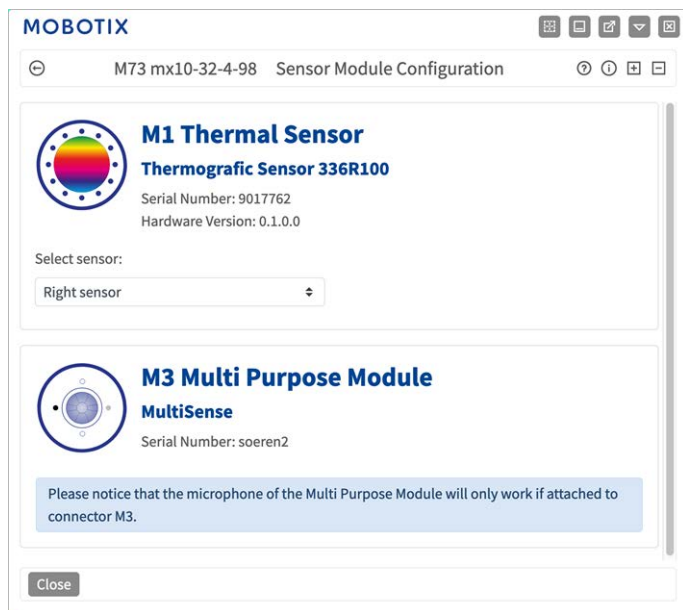

Using different combinations of sensor modules of the MOBOTIX M73 will have an influence on the display modes and configuration variants that are available.

An MOBOTIX M73 will automatically check and verify the installed sensor modules upon its first start and at every reboot thereafter (e.g., focal length, Day or Night variant). Please note the following:

- A Thermal Sensor Module (see [Installing a Thermal Front Plate, p. 54](#)), must be attached to connector **M1 (Thermal Sensor)**.
- If only one sensor module is attached, the camera will behave like a mono camera (i.e., there is no automatic Day/Night switching).
- If the modules are not exchanged within the first 12 operating hours, the camera will store the information of new sensor modules in the camera configuration.
- The camera will check the configuration on every reboot to see if the stored sensor modules are still present. If changes of the sensor module configuration have been detected (e.g., if a sensor module had to be replaced), the camera will show a corresponding message in the live image.

If required, the module configuration can be adjusted, e.g. you can define in which camera image (left or right) the sensor module should be displayed in a double image display.

1. Got to **Admin Menu > Hardware Configuration > Sensor Module Configuration**
2. Select the corresponding sensor module types

Do the **Sensor Module Configuration** in the following cases:

- **Switching the displayed camera images:** You want to show the left-hand camera image on the right (and vice versa), without having to physically swap the module connectors at the camera itself.

NOTE!

Thermal sensor cannot be swapped, because they are pre-installed on a custom thermal front plate.

- **Exchanging sensor modules:** In this case, the MOBOTIX M73 will display a message box and will log a system message to inform you that sensor modules have been exchanged (see also [Installing the Sensor Modules to the Thermal Front Plate, p. 59](#)) .
- **Adding/activating sensor modules:** You can activate modules that had been deactivated before.
- **Switching off/removing sensor modules:** If required, you can deactivate connected modules in this dialog.

For more information, consult the Reference Manual of the camera (see www.mobotix.com > [Services](#) > [Download Center](#) > [Marketing & Documentation](#) > [User Manuals](#)).

Maintenance

Opening the Camera Body	109
Replacing the microSD card	112
Cleaning the Camera and Lenses	113

Opening the Camera Body

E. g. to replace the microSD card of the MOBOTIX M73, it is necessary to open the camera body.

The entire camera is mounted onto the mounting plate using the two lock screws.

Maintenance

Opening the Camera Body



You will need:

- Allen wrench 5 mm [M.6, p. 21](#)

Procedure

1. Remove the two housing rubber plugs [1.3, p. 18](#) from the holes of the fastening screws.



2. Open the two Allen screws using the Allen wrench [M.6, p. 21](#).



3. Carefully pull the camera body off the mounting plate.



Replacing the microSD card

CAUTION!

To remove, insert or exchange the microSD card, the camera must be disassembled.


Before removing the microSD card, deactivate the recording function and restart the camera. Non-observance can lead to data loss!

The microSD card must not be write-protected!

Do not touch the circuit board when exchanging the microSD card!

Step by step

1. **Deactivate storage:** If storage on microSD card is still activated deactivate it in the cameras web interface: **Admin Menu > Storage on external file server / flash media**, then reboot the camera .
2. **Open the camera body:** see [Opening the Camera Body](#), p. 109.

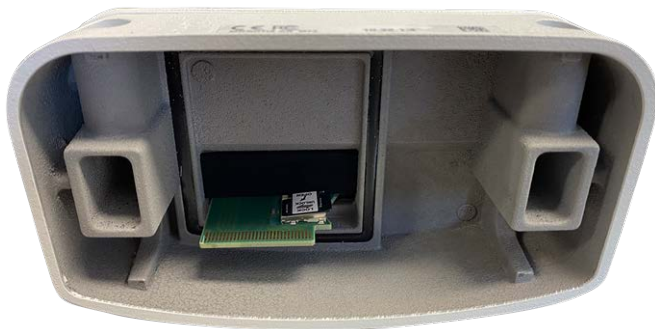

3. **Unlock the microSD card holder:** Carefully flip up the metal cover of microSD card (e.g. with a fingernail).



4. **Remove the microSD card.**

5. **Insert microSD card:** Insert the new microSD card in the holder and close the metal cover with light pressure until it snaps in.
6. **Close the camera body:** (see [Finishing the Installation of the Camera, p. 85](#)).
7. **Activate storage:** If the microSD card already is formatted with MxFFS has been inserted, storage can be activated in Admin Menu > Storage on External File Server/Flash Device. After rebooting the camera, recording is activated automatically. .

Cleaning the Camera and Lenses

Clean the camera housing using a mild alcohol-free detergent without abrasive particles.

To protect the lens protection glass, only use the supplied mounting supplies (see [Mounting Supplies: Scope of Delivery, p. 21](#)).

Cleaning the lens protection glass

- Use the wide end of the module wrench [M.1, p. 21](#) to remove/install the lens protection glass. The narrow side of the wrench is used to adjust the sharpness (focal length) of the tele lenses.
- You should clean the lens protection glasses and domes regularly using a clean, lint-free cotton cloth. If the dirt is more persistent, add a mild alcohol-free detergent without abrasive particles.
- Make sure you instruct cleaning personnel on how to clean the camera.

MOBOTIX

BeyondHumanVision

[EN_04/26](#)

MOBOTIX AG • Kaiserstrasse • D-67722 Langmeil • Tel.: +49 6302 9816-103 • sales@mobotix.com • www.mobotix.com

MOBOTIX is a trademark of MOBOTIX AG registered in the European Union, the U.S.A., and in other countries. Subject to change without notice. MOBOTIX do not assume any liability for technical or editorial errors or omissions contained herein. All rights reserved. © MOBOTIX AG 2019